

SIEMENS

SINUMERIK 840D sl/ SINAMICS S120 SINUMERIK Safety Integrated

Function Manual

Valid for

Control

SINUMERIK 840D sl

SINUMERIK 840D sl (export version)

Drive

SINAMICS S120

Software version

NCU system software 1.5

NCU system software 2.5

HMI Advanced 7.5

05/08 Edition

Regulations and Standards	1
Brief Description	2
System Features	3
Safety Functions Integrated in the Drive	4
Basic Information on Safety Functions Integrated in the System/Drive	5
Safety Functions Integrated in the System/Drive	6
Sensor/Actuator Connection	7
Data Descriptions	8
Commissioning	9
Diagnostics	10
Interaction with Other Functions	11
Appendix	A
Index	I

SINUMERIK® documentation

Printing history

Brief details of this edition and previous editions are listed below.

The status of each edition is shown by the code in the "Remarks" column.

Status code in the "Remarks" column:

A New documentation.

B Unrevised reprint with new Order No.

C Revised edition with new status.

If factual changes have been made on the page since the last edition, this is indicated by a new edition coding in the header on that page.

Edition	Order No.	Remarks
03/06	6FC5 397-4BP10-0BA0	A
03/07	6FC5 397-4BP10-1BA0	C
05/08	6FC5 397-4BP10-2BA0	C

Trademarks

All product designations may be trademarks or product names of Siemens AG or supplier companies whose use by third parties for their own purposes could violate the rights of the owners.

We have checked that the contents of this publication agree with the hardware and software described here. Nevertheless, differences might exist and therefore we cannot guarantee that they are completely identical. The data in this document is regularly checked and the necessary corrections are included in subsequent editions. Suggestions for improvement are also welcome.

© Siemens AG 2008 All rights reserved.

Subject to change without prior notice.

Preface

SINUMERIK documentation

The SINUMERIK documentation is organized in 3 parts:

- General documentation
- User documentation
- Manufacturer/Service documentation

An overview of publications, which is updated monthly and provides information about the language versions available, can be found on the Internet at:

<http://www.siemens.com/motioncontrol>

Follow menu items – "Support" –> "Technical documentation" –> "Ordering documentation" – > "Printed documentation".

The Internet version of DOConCD (DOConWEB) is available at:

<http://www.automation.siemens.com/doconweb>

Information about training courses and FAQs (frequently asked questions) is available on the Internet under:

<http://www.siemens.com/motioncontrol> and there under the menu item "Support"

Target group

This documentation is intended for manufacturers/end users of machine tools and production machines who use SINUMERIK 840D sl and SINAMICS S120 and the integrated safety functions (SINUMERIK Safety Integrated®).

Standard scope

This documentation describes the functionality of the standard scope. Extensions or changes made by the machine manufacturer are documented by the machine manufacturer.

Other functions not described in this documentation might be executable in the control. However, no claim can be made regarding the availability of these functions when the equipment is first supplied or in the event of servicing.

For the sake of simplicity, this documentation does not contain all detailed information about all types of the product and cannot cover every conceivable case of installation, operation, or maintenance.

Technical support

If you have any technical questions, please contact our hotline:

	Europe/Africa
Phone	+49 180 / 5050 - 222
Fax	+49 180 / 5050 - 223
Internet	http://www.siemens.com/automation/support-request

	America
Phone	+1 423 262 2522
Fax	+1 423 262 2200
E-mail	mailto:techsupport.sea@siemens.com

	Asia/Australia
Phone	+86 1064 719 990
Fax	+86 1064 747 474
E-mail	mailto:adsupport.asia@siemens.com

Note

National phone numbers for technical support are provided under the following Internet address: <http://www.siemens.com/automation/service&support>

Calls from the German fixed line network are charged (e.g. at 0.14 €/min). Charges of other phone services may be different and may vary.

Questions about this documentation

If you have any queries (suggestions, corrections) regarding this documentation, please send a fax or e-mail to the following address:

Fax	+49 9131 98 63315
E-mail	mailto:docu.motioncontrol@siemens.com

A fax form is available at the end of this document.

SINUMERIK Internet address

<http://www.siemens.com/sinumerik>

Standard scope

The main areas covered by this description of functions are as follows:

- Regulations and Standards
- Brief Description
- System Features
- Safety Functions Integrated in the Drive
- Basics on the Safety Functions Integrated in the System/Drive
- Safety Functions Integrated in the System/Drive
- Connecting Sensors/Actuators
- Data Description
- Commissioning
- Diagnostics
- Interaction with other Functions

Separate documents are available for the user-oriented activities. These include, for example, the creation of part programs and operation of the control systems.

Separate information is also available for operations that the machine tool manufacturer must carry out. These include, for example, configuring/engineering, installation and programming the PLC.

Notes on how to use this manual

The following help functions are available with this description of functions:

- Overall table of contents
- Appendix with abbreviations and references, glossary
- Index

If you require information about a certain term, please look for this particular term under the chapter Index in the Appendix. Both the chapter number and the page number, where you will find this particular information are listed there.

Documentation, 05/08 Edition

Note

The 05/08 Edition of the documentation describes the functionality for the following products and software release:

SINUMERIK 840D sl with NCU software release 1.5/2.5, HMI Advanced 7.5

Note

Not all of the HMI functions shown are available in all of the HMI versions (HMI Embedded, HMI sl, HMI Advanced).

Safety instructions

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. Depending on the hazard level, warnings are displayed in a descending order as follows:



Danger

indicates that death or severe personal injury **will** result if proper precautions are not taken.



Warning

indicates that death or severe personal injury **may** result if proper precautions are not taken.



Caution

with a warning triangle indicates that minor personal injury can result if proper precautions are not taken.

Caution

without warning triangle indicates that material damage can result if proper precautions are not taken.

Notice

indicates that an unintended event or situation can occur if the corresponding information is not taken into account.

In the event of a number of levels of danger prevailing simultaneously, the warning corresponding to the highest level of danger is always used. A warning with a warning triangle indicating risk of physical injury may also include a warning of the risk of damage to property.

Qualified personnel

The device/system may only be set up and used in conjunction with this documentation. Commissioning and operation of a device/system may only be performed by **qualified personnel**. Qualified persons are defined as persons who are authorized to commission, to ground, and to tag circuits, equipment, and systems in accordance with established safety practices and standards.

Intended purpose

Please note the following:



Warning

This equipment is only allowed to be used for the applications described in the catalog and in the technical description, and only in conjunction with non-Siemens equipment and components recommended by Siemens. Correct, reliable operation of the product requires proper transport, storage, positioning and assembly, as well as careful operation and maintenance.

Additional information

Note

This symbol always appears in this documentation where further, explanatory information is provided.

Test certificates

The attachments to the following test certificates with the certified software and hardware releases are not included in this documentation. If you require the appropriate attachments, then please use the address specified on the corrections/suggestions sheet (last page).

A list of the certified software releases and hardware versions is provided with each "Certificate of Licence (CoL)" of the SINUMERIK Safety Integrated options. If you have any questions relating to current certifications, please contact your local Siemens office.

EC type-examination certificate of the BGIA (BG Institute for Occupational Safety & Health) acc. to DIN EN ISO 13849-1/DIN EN 61508

Bescheinigung
Nr. **BGIA 0706003**
vom **03.09.2007**




Institut für Arbeitsschutz der
Deutschen Gesetzlichen Unfallversicherung
Prüf- und Zertifizierungsstelle im BG-PRÜFZERT

Baumusterprüfbescheinigung

Name und Anschrift des Bescheinigungsinhabers: (Auftraggeber)	Siemens AG, A&D MC RD1 Frauenauracher Straße 80 91056 Erlangen
Name und Anschrift des Herstellers:	Siemens AG, A&D MC Frauenauracher Straße 80 91056 Erlangen
Produktbezeichnung:	Antriebssteuerung für Maschinen mit Sicherheitsfunktionen
Typ:	SINUMERIK Safety Integrated mit SINUMERIK 840D sl / SINUMERIK 840DE sl mit SINAMICS S120 (genaue Bezeichnung der Hard- und Softwarestände siehe Anlage)
Bestimmungsgemäße Verwendung:	Maschinensteuerung mit integrierten Sicherheitsfunktionen für die Realisierung der sicheren Maschinenfunktionen Halt, Stops A-E, Bremsenansteuerung, Betriebsstopp, reduzierte Geschwindigkeit, Software Nocken, Software Endschräger, „n<nx“ und Überwachung auf Beschleunigung. Ebenso sind in sicherer Technik die Funktionen Ein-/Ausgangssignale (PROFIsafe-Master), programmierbare Logik und Bremsentest realisiert.
Prüfgrundlage:	DIN EN 61508, Teil 0-7:2002/2005, DIN EN ISO 13849-1:2007 und Teil -2:2003-12, E DIN EN 61800-5-1:2006-05 und Teil-5-2:2005-12, DIN EN 61800-3:2005- 07, DIN EN 60204-1:2007, Prüfgrundsatzentwurf „Anforderungen an die Prüfung von Antriebssteuerungen gegenüber Umgebungsbedingungen und im Hinblick auf elektrische Sicherheit“ BGIA von 11/2004 und Prüfgrundsatzentwurf „EMV und Funktionale Sicherheit für Leistungsantriebssysteme mit integrierten Sicherheitsfunktionen“ BGIA von 02/2007
Zugehöriges Prüfzeugnis:	2005 23925-1 vom 03.09.2007
Bemerkungen:	Die Sicherheitsfunktionen und die Funktionen in sicherer Technik erfüllen die grundsätzlichen Sicherheitsanforderungen nach DIN EN 61508 für den Einsatz bis einschließlich SIL2 in der Betriebsart mit hoher Anforderungsrate und die Kategorie 3 sowie PL d nach DIN EN ISO 13849-1:2007. Die MTTF _d / PFH _d ist abhängig vom Ausbaugrad des Systems. Die Funktion Bremsentest erfüllt die Kategorie 2 nach DIN EN ISO 13849-1:2007. In Tabelle 2 des Prüfzeugnisses werden die Bezeichnungen der Sicherheitsfunktionen denen aus der Produktnorm E DIN IEC 61800-5-2:2005-12 gegenübergestellt. Diese Baumusterbescheinigung ersetzt die Baumusterbescheinigung mit gleicher Nummer vom 06.06.2007

Das geprüfte Baumuster entspricht den einschlägigen Bestimmungen der Richtlinie 98/37/EG (**Maschinen**).
Diese Bescheinigung wird spätestens ungültig am: 28.12.2009

Weiteres über die Gültigkeit, eine Gültigkeitsverlängerung und andere Bedingungen regelt die Prüf- und
Zertifizierungsordnung vom April 2004.

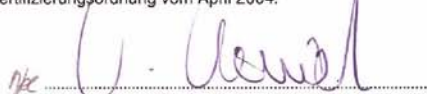
Leiter der Zertifizierungsstelle
Prof. Dr. Dietmar Reinert


Fachzertifizierer
Dipl.-Ing. Ralf Apfeld

Postadresse: • 53757 Sankt Augustin • Hausadresse: Alte Heerstraße 111 • 53757 Sankt Augustin
Telefon 02241 231- 02 • Telefax 02241 231 – 2234 • E-Mail bgia@dguv.de • www.dguv.de/bgia
Zeichen der Prüf- und Zertifizierungsstelle

PZB100
09.07

PRÜFZERT symbol

When the "SINUMERIK Safety Integrated" option is ordered, in addition to the Certificate of license, an adhesive label that may be used for certified software releases and hardware versions is included in the supplementary pack.

PRÜFZERT symbol for certification acc. to DIN EN ISO 13849-1/DIN EN 61508



Symbol of the BGIA
[BG Institute for
Occupational Safety
and Health]

[illegible]

Table of Contents

1	Regulations and Standards	1-17
1.1	General information	1-17
1.1.1	Objectives	1-17
1.1.2	Functional safety	1-18
1.2	Safety of machinery in Europe	1-18
1.2.1	Machinery Directive (98/37/EC)	1-19
1.2.2	Harmonized European Standards	1-19
1.2.3	Standards to implement safety-related controls	1-21
1.2.4	EN ISO 13849-1 (previously EN 954-1)	1-22
1.2.5	EN 62061	1-23
1.2.6	Series of Standards EN 61508 (VDE 0803)	1-25
1.2.7	Risk analysis/assessment	1-26
1.2.8	Risk reduction	1-28
1.2.9	Residual risk	1-28
1.3	Machine safety in the US	1-29
1.3.1	Minimum requirements of the OSHA	1-29
1.3.2	NRTL Listing	1-30
1.3.3	NFPA 79	1-30
1.3.4	ANSI B11	1-31
1.4	Machine safety in Japan	1-32
1.5	Equipment regulations	1-32
1.6	Other safety-related subjects and issues	1-33
1.6.1	Information sheets from the various regulatory bodies	1-33
1.6.2	Additional references	1-33
2	Brief Description	2-35
2.1	Control/drive system	2-35
2.2	System integrated safety technology	2-37
2.2.1	Overview of the system-integrated safety functions	2-38
2.3	Safety technology integrated in the drive	2-40
2.3.1	Overview of the safety functions integrated in the drive	2-41
2.4	Comparison of the function names for SINUMERIK Safety Integrated and acc. to EN 61800-5-2	2-42
3	System Features	3-43
3.1	System requirements	3-43
3.2	Latest information	3-45
3.3	Certification	3-46
3.4	Probability of failure	3-46
3.5	Safety information & instructions and residual risks	3-47
3.5.1	General residual risks for PDS (Power Drive Systems)	3-47
3.5.2	Additional safety information & instructions and residual risks for Safety Integrated	3-49

4	Safety Functions Integrated in the Drive	4-53
4.1	General information about SINAMICS Safety Integrated	4-53
4.1.1	Explanations and terminology	4-53
4.1.2	Supported functions	4-55
4.1.3	Parameter, checksum, version, password	4-55
4.1.4	Forced checking procedure	4-58
4.2	Safe Torque Off (STO)	4-59
4.3	Safe Stop 1 (SS1, time-controlled)	4-61
4.4	Safe Brake Control (SBC)	4-63
4.5	Control via terminals on the Control Unit and the power unit	4-65
4.6	Commissioning the STO, SBC and SS1 functions	4-69
4.6.1	General information about commissioning safety functions	4-69
4.6.2	Procedure for commissioning STO, SBC and SS1	4-70
4.6.3	Safety faults	4-74
4.7	Overview of parameters and function diagrams	4-77
4.8	Acceptance test and acceptance report	4-79
4.8.1	General information about acceptance	4-79
4.8.2	Documentation	4-81
4.8.3	Acceptance test for Safe Torque Off (STO)	4-84
4.8.4	Acceptance test for Safe Stop 1, time-controlled (SS1)	4-85
4.8.5	Acceptance test for Safe Brake Control (SBC)	4-87
4.8.6	Completing the log	4-88
5	Basics on the Safety Functions Integrated in the System/Drive	5-91
5.1	Monitoring cycle	5-91
5.2	Crosswise data comparison	5-93
5.3	Forced checking procedure	5-94
5.4	Actual value conditioning	5-96
5.4.1	Encoder types	5-96
5.4.2	Encoder adjustment, calibrating the axes	5-99
5.4.3	Axis states	5-100
5.4.4	User acknowledgement	5-103
5.4.5	Taking into account control gears	5-105
5.4.6	Actual value synchronization (slip for 2-encoder systems)	5-107
5.4.7	Encoder limit frequency	5-108
5.5	Enabling the safety-related functions	5-109
5.6	Switching the system on/off	5-111
6	Safety Functions Integrated in the System/Drive	6-113
6.1	Safe stop (SH)	6-113
6.1.1	Shutdown paths	6-115
6.1.2	Testing the shutdown paths	6-116
6.2	Safe operating stop (SBH)	6-118
6.2.1	Selecting/deselecting the safe operating stop	6-119
6.2.2	Effects when the limit is exceeded for SBH	6-122

6.3	Safe Stops A–F	6-125
6.3.1	General information	6-125
6.3.2	Description of STOP A	6-132
6.3.3	Description of STOP B	6-134
6.3.4	Description of STOP C	6-135
6.3.5	Description of STOP D	6-136
6.3.6	Description of STOP E	6-137
6.3.7	Description of STOP F	6-139
6.3.8	Forced checking procedure of the external STOPs	6-142
6.4	Safe acceleration monitoring (SBR)	6-144
6.5	Safely reduced speed (SG)	6-148
6.5.1	Speed monitoring, encoder limit frequency	6-149
6.5.2	Selecting/deselecting safely reduced speed	6-150
6.5.3	Effects when the limit value is exceeded for SG	6-153
6.5.4	Override for safely reduced speed	6-156
6.5.5	Example: Override for safely reduced speed	6-159
6.6	Safety-related output "n<nx"	6-161
6.7	Safe software limit switches (SE)	6-163
6.7.1	Effects when an SE responds	6-164
6.8	Safety software cams and safety cam track (SN)	6-167
6.8.1	Safe software cams (4 cam pairs)	6-168
6.8.2	Safe cam track (SN)	6-172
7	Connecting Sensors/Actuators	7-181
7.1	Safety-related input/output signals	7-181
7.1.1	Overview of the SGEs/SGAs and their structure	7-181
7.1.2	Forced checking procedure of SPL signals	7-188
7.1.3	Connecting sensors – actuators using the 3-terminal concept	7-190
7.1.4	Sensor connection using the 4-terminal concept	7-193
7.1.5	Multiple distribution and multiple interlocking	7-195
7.2	Connecting I/O via PROFIsafe	7-198
7.2.1	Description of Functions	7-198
7.2.2	System structure	7-200
7.2.3	Configuring and parameterizing the PROFIsafe I/O	7-202
7.2.4	Parameterizing the F master (NCK)	7-208
7.2.5	Parameterizing the PROFIsafe communication (NCK)	7-208
7.2.6	Parameterizing the SPL–SGE interface	7-210
7.2.7	Parameterizing the SPL–SGA interface	7-214
7.2.8	Module type (NCK)	7-217
7.2.9	Parameterizing the F master (PLC)	7-217
7.2.10	Response times	7-218
7.2.11	Functional boundary conditions	7-221
7.3	Safe programmable logic (SPL)	7-223
7.3.1	Basic principles	7-223
7.3.2	Synchronized actions for Safety Integrated	7-227
7.3.3	NCK–SPL program	7-228
7.3.4	Starting the SPL	7-230
7.3.5	Starting the NCK–SPL using the PROG_EVENT mechanism	7-231
7.3.6	Starting the NCK–SPL from the PLC user program	7-234
7.3.7	Diagnostics/commissioning	7-235

7.3.8	Safe software relay	7-236
7.3.9	System variables for SINUMERIK 840D sl	7-244
7.3.10	Behavior after power on/mode change/reset	7-246
7.3.11	SPL data on the PLC side	7-247
7.3.12	Direct communications between NCK and PLC–SPL	7-249
7.4	Safe brake test (SBT)	7-250
7.4.1	Field of application	7-250
7.4.2	Parameter assignment	7-250
7.4.3	Procedure	7-255
7.4.4	Limitations	7-259
7.4.5	Activating	7-259
7.4.6	Example	7-260
8	Data Description	8-261
8.1	Machine data for SINUMERIK 840D sl	8-261
8.1.1	Overview of the machine data	8-261
8.1.2	Description of machine data	8-266
8.2	Parameters for SINAMICS S120	8-313
8.2.1	Parameter overview	8-314
8.2.2	Description of parameters	8-318
8.3	Interface signals	8-359
8.3.1	Interface signals for SINUMERIK 840D sl	8-360
8.3.2	Description of the interface signal	8-361
8.3.3	PLC data block (DB 18)	8-370
8.4	System variables	8-378
8.4.1	System variable for SINUMERIK 840D sl	8-378
8.4.2	Description of the system variables	8-381
9	Commissioning	9-389
9.1	HMI screens and softkeys	9-391
9.2	Procedure when commissioning the drive for the first time	9-403
9.3	Series commissioning	9-409
9.4	Changing data	9-410
9.5	Acceptance test	9-412
9.5.1	General information	9-412
9.5.2	Conventional acceptance test	9-419
9.5.3	Acceptance test support	9-422
9.6	Replacing a motor or encoder	9-427
10	Diagnostics	10-435
10.1	Troubleshooting procedure	10-435
10.1.1	Service displays	10-436
10.1.2	Diagnostics support by configuring your own extended alarm text	10-443
10.1.3	Servo trace bit graphics for Safety Integrated	10-446
10.1.4	Bit graphics for SI signals in the servo trace	10-449
10.1.5	Servo trace signals	10-454
10.2	NCK safety alarms for SINUMERIK 840D sl	10-457

10.3	Safety messages for SINAMICS S120	10-538
10.3.1	General information	10-538
10.3.2	List of faults and alarms	10-541
10.4	Safety PLC alarms	10-571
10.5	Reducing the number of alarms	10-572
10.5.1	Alarm suppression	10-572
10.5.2	Assigning priorities to alarms	10-573
11	Interaction with Other Functions	11-577
11.1	Limiting the speed setpoint	11-577
11.2	Measuring system changeover	11-579
11.3	Gantry axes	11-579
11.4	Parking axis	11-579
11.5	OEM applications	11-580
11.6	Behavior of Safety Integrated when Profibus fails	11-581
A	Appendix	A-583
A.1	Customer Support	A-583
A.2	References	A-584
A.3	Abbreviations	A-587
A.4	Terms	A-592
	Index	I-595

[illegible]

Regulations and Standards

1.1 General information

1.1.1 Objectives

Manufacturers and operating companies of equipment, machines and products are responsible for ensuring the appropriate level of safety. This results in the requirement that plants, machines and other equipment should be made as safe as possible according to state-of-the-art technology. In this case, companies describe in the various Standards, state-of-the-art technology that is relevant for safety. When the relevant Standards are complied with, it can be ensured that state-of-the-art technology has been utilized and therefore the erector/builder of a plant or a manufacturer of a machine or a piece of equipment has fulfilled his appropriate responsibility.

Safety systems are intended to play their role in keeping potential hazards for both people and the environment as low as possible by using suitable technical equipment, without restricting, more than absolutely necessary, industrial production and the use of machines. The protection of man and environment has to be put on an equal footing in all countries by applying rules and regulations that have been internationally harmonized. At the same time, this is also intended to avoid that safety requirements in different countries have an impact on the competitive situation.

There are different concepts and requirements in the various regions and countries of the world when it comes to ensuring the appropriate degree of safety. The legislation and the requirements of how and when proof is to be given and whether there is an adequate level of safety are just as different as the assignment of responsibilities.

What is important for manufacturers of machines and companies that erect plants and systems is that always the local legislation and regulations apply where the machine or plant is being operated. For instance, the control system of a machine, that is to be used in the US, must fulfill the local US requirements even if the machine manufacturer (OEM) is based in the European Economic Area (EEA).

1.2 Safety of machinery in Europe

1.1.2 Functional safety

Safety, from the perspective of the object to be protected, cannot be split-up. The causes of hazards and therefore also the technical measures to avoid them can vary significantly. This is the reason that a differentiation is made between different types of safety – e.g. by specifying the cause of possible hazards. "Functional safety" is involved if safety depends on the correct function.

In order to achieve the functional safety of a machine or plant, it is necessary that the safety-related parts of the protection and control devices function correctly. And not only this, when faults develop, they must behave so that either the plant remains in a safe state or it is brought into a safe state.

In this case, it is necessary to use specially qualified technology that fulfills the requirements described in the associated Standards. The requirements to achieve functional safety are based on the following basic goals:

- Avoiding systematic faults
- Controlling systematic faults
- Controlling random faults or failures

The measure for the achieved functional safety is the probability of dangerous failures, the fault tolerance and the quality that should be guaranteed by minimizing systematic faults. This is expressed in the Standards using different terms. In EN 61508, EN 62061, EN 61800-5-2: "Safety Integrity Level" (SIL) and EN ISO 13849-1 "Categories" and "Performance Level" (PL).

1.2 Safety of machinery in Europe

The EC Directives, that apply to the implementation of products, based on Article 95 of the EU contract, that regulates the free exchange of goods. These are based on a new global concept ("new approach", "global approach"):

- EC Directives only specify generally valid safety goals and define basic safety requirements.
- Technical details can be defined in Standards by Standards Associations that have an appropriate mandate from the European Parliament and the Council (CEN, CENELEC). These Standards are harmonized under a specific Directive and are listed in the Official Journal of the Commission of the European Parliament and the Council. Legislation does not specify that certain standards have to be complied with. When the harmonized Standards are complied with, then it can be assumed that all of the applicable safety requirements and specifications of the Directives involved are fulfilled.

The EC Directives are equal. This means that if several Directives apply for a specific piece of equipment or device, then the requirements of all of the relevant Directives apply (e.g. for a machine with electrical equipment, then the Machinery Directive and the Low-Voltage Directive apply).

1.2.1 Machinery Directive (98/37/EC)

With the introduction of a European Economic Area, a decision was made that the domestic Standards and regulations of all of the EEA Member States – that are involved with the technical implementation of machines – would be harmonized. This means that the Machinery Directive had to be implemented – as an internal market Directive – as far as the content was concerned – in the domestic legislation of the individual Member States. For the Machinery Directive, this was realized with the objective to achieve standard protective goals thus removing trade barriers resulting from technical differences. Corresponding to its definition "a machine is an assembly of linked parts or components – at least one of which moves", this Directive is extremely extensive. The range of applications was subsequently expanded to include "safety-related components" and "exchangeable equipment" in the form of revision Directives.

The Machinery Directive involves the implementation of machines. It has 14 Articles and 7 Annexes. The basic safety and health requirements specified in Annex I of the Directive must be fulfilled for the safety of machines. The manufacturer must carefully observe the following principles when it comes to integrating safety (Annex I, Paragraph 1.1.2):

- a) "Machinery must be constructed that it is fitted for its functions, and can be adjusted and maintained without putting persons at risk when these operations are carried out under the conditions foreseen by the manufacturer."
"The measures must...eliminate...any risks of accidents...!"
- b) "When selecting the appropriate solutions, the manufacturer must apply the following basic principles – and more precisely, in the specified sequence:
 - Eliminate or minimize hazards (by integrating the safety concept into the development and construction of the machine);
 - Apply and use the necessary protective measures to protect against dangers that cannot be avoided;
 - Inform the user about the residual dangers due to the fact that the safety measures applied are not completely effective."

The protective goals must be responsibly implemented in order to fulfill the requirements for conformity with the Directive.

The manufacturer of a machine must provide proof that his machine is in compliance with the basic requirements. This proof is made more simple by applying harmonized Standards.

1.2.2 Harmonized European Standards

The two Standards Organizations CEN (Comité Européen de Normalisation) and CENELEC (Comité Européen de Normalisation Électrotechnique), mandated by the EU Commission, drew-up harmonized European Standards in order to precisely specify the requirements of the EC Directives for a specific product. These Standards (EN Standards) are published in the Official Journal of the European

1.2 Safety of machinery in Europe

Parliament and Council and must be included in domestic standards without any revisions. These are used to fulfill the basic health and safety requirements and the protective goals specified in Annex I of the Machinery Directive.

When the harmonized Standards are complied with, then there is an "automatic assumption" that the Directive is fulfilled. This means that the manufacturer may then assume that he has complied with the safety aspects of the Directive under the assumption that they are also handled in that particular Standard. However, not every European Standard is harmonized in this sense. The listing in the Official Journal of the European Parliament and Council is decisive.

The European Standards for Safety of Machines is hierarchically structured as follows:

- A Standards (Basic Standards)
- B Standards (Group Standards)
- C Standards (Product Standards)

Regarding Type A Standards/Basic Standards

A Standards include basic terminology and definitions that are applicable for all machines. This includes EN ISO 12100–1 (previously EN 292–1) "Safety of Machines, Basic Terminology, General Design Principles."

A Standards primarily address those bodies setting the B and C Standards. However, the techniques documented there regarding minimizing risks can also be helpful to manufacturers if there are no applicable C Standards.

Regarding Type B Standards/Group Standards

B Standards include all Standards with safety–related statements that can involve several machine types.

B Standards also primarily address those bodies setting C Standards. However, they can also be helpful for manufacturers when designing and constructing a machine if no C Standards apply.

For B Standards, an additional sub–division is made – and more precisely as follows:

- **Type B1 Standards** for higher–level safety aspects, e.g. basic ergonomic principles, safety clearances from hazards, minimum clearances to avoid crushing parts of the body.
- **Type B2 Standards** for protective safety devices are defined for various machine types – e.g. Emergency Stop devices, two–hand operating circuits, interlocking elements, contactless protective devices, safety–related parts of controls.

Regarding Type C Standards/Product Standards

C Standards are Standards for specific products – for instance, machine tools, wood–working machines, elevators, packaging machines, printing machines etc.

Product Standards list requirements for specific machines. The requirements can, under certain circumstances, deviate from the Basic and Group Standards. For the machine manufacturer, Type C Standards/Product Standards have the highest priority. The machine manufacturer can then assume that it fulfills the basic requirements of Attachment I of the Machinery Directive (automatic presumption of compliance).

If, for a particular machine, no Product Standard is available, then Type B Standards can be used as help when designing and constructing a machine.


All of the listed Standards as well as the mandated Draft Standards are provided in the Internet under:

<http://www.newapproach.org/>

Recommendation: Technical development is progressing at a tremendous pace and with it changes and modifications to machine concepts. This is the reason that especially when using C Standards, it should be carefully checked as to whether they are still up-to-date. It is presumed that if all of the applicable harmonized standards are fulfilled, then the protective goals of the corresponding Directive are fully complied with.

1.2.3 Standards to implement safety-related controls

If the functional safety of the machine depends on control functions, then the control must be implemented so that the probability of failure of the safety-related functions is sufficiently low. Standards EN ISO 13849-1 (previously EN 954-1) and EN 62061 define guiding principles to implement safety-related machine controls whose use guarantees that all of the protective goals of the EC Machinery Directive are fulfilled. The corresponding safety goals of the Machinery Directive can be fulfilled by applying these standards.

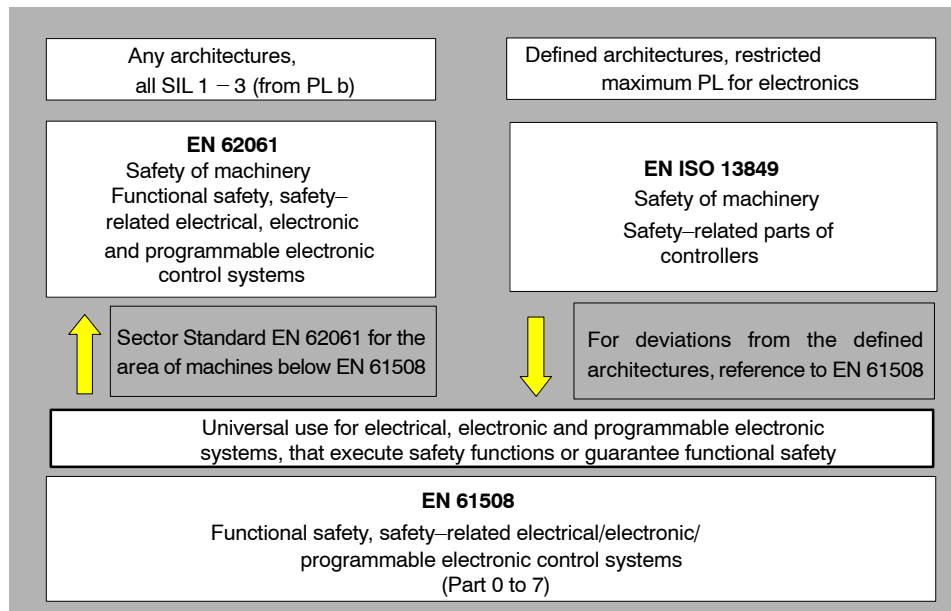

1.2 Safety of machinery in Europe

The areas of application of EN ISO 13849–1, EN 62061 and EN 61508 are very similar. In order to help users make a decision, the application areas of both Standards are listed in a common table in the introduction to the Standards. Either EN ISO 13849–1 or EN 62061 is applied depending on the particular technology (mechanical, hydraulic, pneumatic, electrical, electronic, programmable electronic), risk classification and architecture.

	Systems to execute safety-related control functions	EN ISO 13849–1	EN 62061
A	Non-electrical (e.g. hydraulic, pneumatic)	X	No covered
B	Electromechanical (e.g. relay and/or basic electronics)	Restricted to the designated architectures (see comment 1) and maximum, up to PL = e	All architectures and maximum, up to SIL 3
C	Complex electronics (e.g. programmable electronics)	Restricted to the designated architectures (see comment 1) and maximum, up to PL = d	All architectures and maximum, up to SIL 3
D	A combined with B	Restricted to the designated architectures (see comment 1) and maximum, up to PL = e	X See comment 3
E	C combined with B	Restricted to the designated architectures (see comment 1) and maximum, up to PL = d	All architectures and maximum, up to SIL 3
F	C combined with A or C combined with A and B	X See comment 2	X See comment 3
<p>"X" indicates that the point is covered by this Standard.</p> <p><u>Comment 1:</u> Designated architectures are described in Annex B of EN ISO 13849–1 and provide a simplified basis for the quantification</p> <p><u>Comment 2:</u> For complex electronics: Using designated architectures in compliance with EN ISO 13849–1 up to PL = d or every architecture in compliance with EN 62061</p> <p><u>Comment 3:</u> For non-electrical systems: Use parts/components, that correspond to EN ISO 13849–1 as subsystems</p>			

1.2.4 EN ISO 13849–1 (previously EN 954–1)

The qualitative approach acc. to EN 954–1 is not sufficient for state-of-the-art controls. EN 954–1 does not take into account, among other things, time behavior (e.g. test interval and/or cyclic test, lifetime). This results in the probabilistic basis in EN ISO 13849–1 (probability of failure per unit time).

EN ISO 13849–1 is based on the known categories of EN 954–1. It now takes into consideration complete safety functions with all of the devices involved in their execution. With EN ISO 13849–1, safety functions are investigated from a quantitative perspective going beyond the qualitative basis of EN 954–1. Performance levels (PL) are used, for this purpose, based on the various Categories. The following safety-related characteristic quantities are required for devices/equipment:

- Category (structural requirement)
- PL: Performance Level
- MTTF_d: Meantime time up to a dangerous failure
- DC: Diagnostics Coverage
- CCF: Common Cause Fault

The Standard describes the calculation of the Performance Level (PL) for safety-related parts of controls on the basis of designated architectures. For deviations from this, EN ISO 13849–1 refers to EN 61508.

When combining several safety-related parts to form a complete system, the Standard explains how to determine the resulting PL.

Note

Since May 2007, EN ISO 13849–1 has been harmonized under the Machinery Directive. EN 954–1 can still be applied up to Nov. 30, 2009.

1.2.5 EN 62061

EN 62061 (this is identical to IEC 62061) is a sector-specific standard below EN 61508. It describes the implementation of safety-related electrical control systems of machines and takes into account the complete lifecycle – from the conceptual phase to de-commissioning. Safety functions are considered from both quantitative and qualitative standpoints as basis.

In so doing, the Standard consequentially applies a top-down technique in implementing complex control systems – known as functional decomposition. Starting from the safety functions resulting from the risk analysis, a subdivision is made into sub-safety functions and these sub-safety functions are then assigned to real devices/equipment, subsystems and subsystem elements. Both the hardware as well as the software is taken into consideration. EN 62061 also describes the requirements placed on implementing application programs.

1.2 Safety of machinery in Europe

A safety-related control system comprises various subsystems. The subsystems are described from a safety-related perspective using the characteristic quantities (SIL claim limit and PFH_D).

Programmable electronic devices, e.g. PLCs or variable-speed drives must comply with EN 61508. They can then be integrated in the control as subsystems. The manufacturers of these devices must specify the following safety-related characteristic quantities for this purpose.

Safety-related characteristic quantities for subsystems:

- SIL CL: SIL claim limit
- PFH_D: probability of dangerous failures per hour
- T1: lifetime

Basic subsystems, e.g. sensors and actuators comprising electromechanical components, can, in turn, comprise different interconnected subsystem elements (devices) with the characteristic quantities to determine the corresponding PFH_D value of the subsystem.

Safety-related characteristic quantities for subsystem elements (devices):

- λ : failure rate
- B10 value: For elements that are subject to wear
- T1: lifetime

For electro-mechanical devices, a manufacturer specifies a failure rate λ referred to the number of operating cycles. The failure rate per unit time and the lifetime must be determined using the switching frequency for the particular application.

Parameters to be defined for the subsystem – comprising subsystem elements – when designing equipment:

- T2: diagnostic test interval
- β : susceptibility to common cause failure
- DC: diagnostic coverage

The PFH_D value of the safety-related control is determined by adding the individual PFH_D values for subsystems.

The user has the following possibilities when configuring a safety-related control:

- Using devices and subsystems that already comply with EN ISO13849-1 or EN 61508 and/or EN 62061. Information is provided in the Standard as to how qualified devices can be integrated when implementing safety-related functions.
- Develop their own subsystems.
 - Programmable, electronic systems and complex systems: Apply EN 61508 or EN 61800-5-2.
 - Simple devices and subsystems: Apply EN 62061.

Data on non-electrical systems is not included in EN 62061. The Standard represents an extensive system to implement safety-related electrical, electronic and programmable electronic control systems. EN 954-1/EN ISO 13849-1 should be applied for non-electrical systems.

Note

The implementation of basic subsystems and their integration have, in the meantime, been published as "function examples".

Note

In Europe, IEC 62061 is ratified as EN 62061 and harmonized under the Machinery Directive.

1.2.6 Series of Standards EN 61508 (VDE 0803)

The series of Standards defines state-of-the-art technology.

EN 61508 is not harmonized under a particular EC Directive. This means that it cannot be used as a basis for automatic presumption that the protective goals of a Directive are fulfilled. However, the manufacturer of a safety-related product can use EN 61508 to fulfill basic requirements from the European Directives according to the new concept. For instance in the following cases:

- If there is no harmonized Standard for the application involved. In this particular case, the manufacturer may use EN 61508. However, it has no presumption of conformity.

1.2 Safety of machinery in Europe

- A harmonized European Standard (e.g. EN 62061, EN 954 or EN ISO 13849, EN 60204–1) makes reference to EN 61508. This ensures that the appropriate requirements of the Directives are complied with ("standard that is also applicable"). If the manufacturer correctly applies EN 61508 in the sense of this reference and acts responsibly, then he uses the presumption of conformity of the referencing standard.

The series of Standards EN 61508 handles, from a universal basis, all aspects that must be taken into consideration if E/E/PES systems (**e**lectrical, **e**lectronic and **p**rogrammable **e**lectronic **s**ystems) are used in order to execute safety-related functions and to guarantee the appropriate level of functional safety. Other hazards, e.g. hazards as a result of electric shock are – similar to EN 954 – not included in the Standard.

A new aspect of EN 61508 is its international positioning as "International Basic Safety Publication", which makes it a framework for other sector-specific Standards (e.g. EN 62061). As a result of its international positioning, this Standard enjoys a high acceptance worldwide – especially in North America and in the Automobile industry. Today, many regulatory bodies already specify it, e.g. as basis for NRTL listing.

A new aspect of EN 61508 is also its system approach. This extends the technical requirements to the complete safety installation – from the sensor to the actuator – the quantification of the probability of dangerous failure due to random hardware failures and the generation of documentation associated with every phase of the complete safety-related lifecycle of the E/E/PES.

1.2.7 Risk analysis/assessment

As a result of their very design and functionality, machines and plants represent potential risks. This is the reason that the Machinery Directive specifies that a risk assessment is carried out for every machine and, where necessary, risks are then reduced until the residual risk is less than the tolerable risk. For the techniques to evaluate these risks, the following Standards should be applied:

- EN ISO 12100–1 "Safety of machinery – Basic concepts, general principles for design"
- EN ISO 13849–1 (previously EN 954–1) "Safety-related control of machines"
- EN ISO 14121–1 (previously EN 1050, Para. 5) "Safety of machinery, principles for risk assessment"

EN ISO 12100–1 mainly describes the risks to be considered and the design principles to minimize risks; EN ISO 14121–1 describes the iterative process when assessing and reducing risks to achieve the appropriate degree of safety.

The risk assessment is a sequence of steps that allows hazards, as a result of machines, to be systematically investigated. Where necessary, a risk reduction procedure follows risk assessment. When this procedure is repeated, an iterative process is obtained (see Fig. 1-1), which can then be used to eliminate hazards as far as possible and so that the appropriate protective measures can be taken.

The risk assessment involves the following

- Risk analysis
 - a) Determines the limits of the particular machine (EN ISO 12100–1, EN ISO 14121–1 Para. 5)
 - b) Identifies the hazards (EN ISO 12100–1, EN ISO 14121–1 Para. 6)
 - c) Techniques to estimate risk (EN 1050 Para. 7)
- Risk evaluation (EN ISO 14121–1 Para. 8)

As part of the iterative process to achieve the appropriate degree of safety, after the risk has been estimated, the risk is evaluated. In so doing, a decision must be made as to whether the residual risk must be reduced. If the risk is to be further reduced, suitable protective measures must be selected and also applied. The risk assessment should then be repeated.

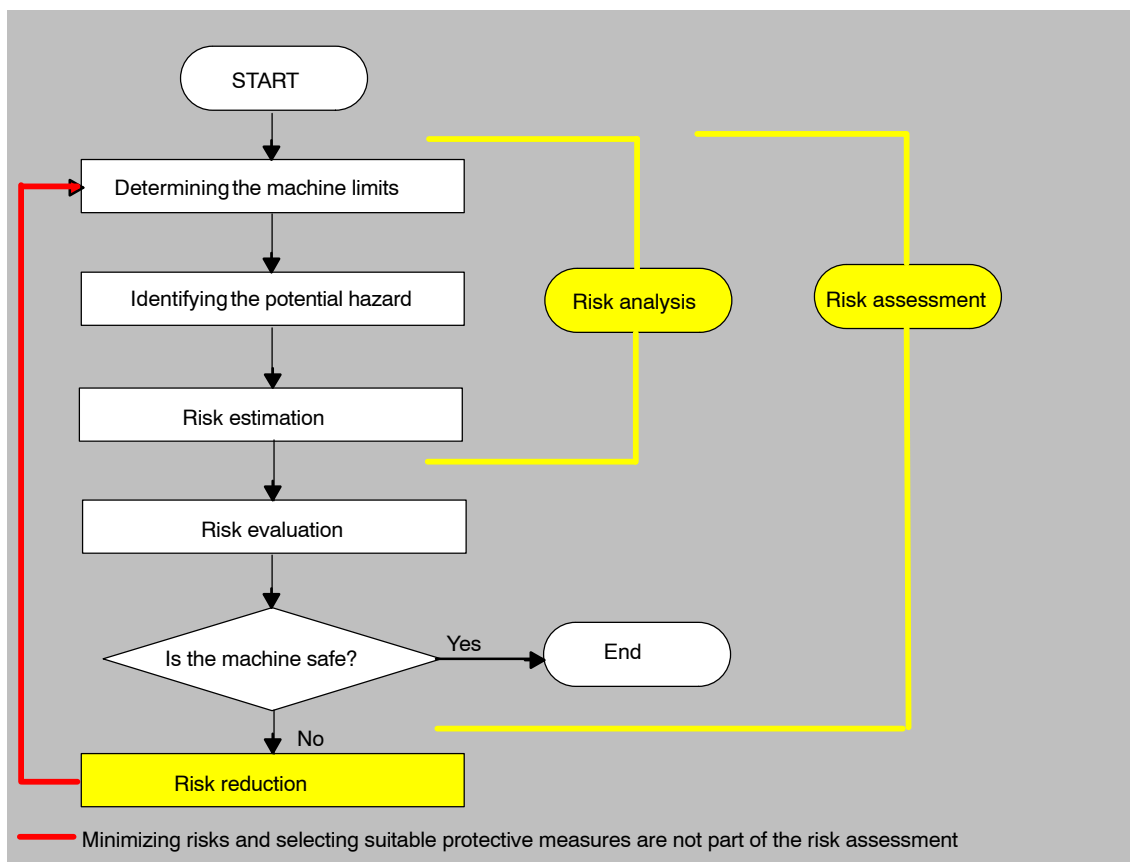


Fig. 1-1 Iterative process to achieve safety in compliance with ISO 14121–1

1.2 Safety of machinery in Europe

Risks must be reduced by suitably designing and implementing the machine. For instance a control system or protective measures suitable for the safety-related functions.

If the protective measures involve interlocking or control functions, then these must be designed and implemented acc. to EN ISO 13849-1. For electrical and electronic controls, EN 62061 can be used as an alternative to EN ISO 13849-1. Electronic controls and bus systems must also comply with EN 61508.

1.2.8 Risk reduction

Risk reduction for a machine can also be implemented using structural measurements and also safety-related control functions. To implement these control functions, special requirements must be taken into consideration – graduated according to the magnitude of the risk. These are described in EN 954-1 or EN ISO 13849-1 (previously EN 954-1) and, for electrical controls, especially with programmable electronics in EN 61508 or EN 62061.

The requirements placed on safety-related parts of controls are graduated and classified according to the magnitude of the risk and the necessity to reduce risk.

EN 954-1 defines "Categories" for this purpose. In its Annex B, it also describes a technique to select a suitable Category to design and implement the safety-related part of a control system.

EN ISO 13849-1 defines a risk flow chart that instead of categories results in hierarchically graduated Performance Levels (PL).

EN 62061 uses "Safety Integrity Level" (SIL) to make this type of classification. This is a quantified measure for the safety-related performance of a control. The necessary SIL is also determined using the principle of risk assessment according to ISO 14121 (EN 1050). A technique to determine the required Safety Integrity Level (SIL) is described in Annex A of the Standard.

It is always important, independent of which Standard is applied, that all parts of the machine control that are involved in executing safety-related functions fulfill these requirements.

1.2.9 Residual risk

In our technological world, safety is a relative term. In practice, safety cannot be implemented that guarantees a "zero risk" situation. The residual risk is defined as the risk that remains after implementing protective measures corresponding to state-of-the-art know-how and technology.

Residual risks must be clearly referred to in the machine/plant documentation (user information according to EN ISO 12100-2).

1.3 Machine safety in the US

An essential difference in the legal requirements regarding safety at work between the US and Europe is the fact that in the US there is no legislation regarding machinery safety that is applicable in all of the states and that defines the responsibility of the manufacturers/sales&marketing organizations. On the other hand, there is a general requirement that the employer must offer a safe workplace.

1.3.1 Minimum requirements of the OSHA

The Occupational Safety and Health Act (OSHA) from 1970 regulates the requirement that employers must offer a safe place of work. The core requirements of OSHA are in Section 5 "Duties".

The requirements of the OSH Act are administered by the Occupational Safety and Health Administration (also known as OSHA). OSHA employs regional inspectors that check whether workplaces are in compliance with the valid regulations.

The regulations of OSHA, relevant for safety at work, are described in OSHA 29 CFR 1910.xxx ("OSHA Regulations (29 CFR) PART 1910 Occupational Safety and Health"). (CFR: Code of Federal Regulations.)

<http://www.osha.gov>

The application and use of the Standards is regulated in 29 CFR 1910.5 "Applicability of standards". The concept is similar to that used in Europe. Standards for specific products have priority over general Standards if the relevant aspects are handled there. When the Standard is fulfilled, the employer can assume that he has fulfilled the core requirements of the OSM Act regarding the aspects handled by the Standards.

In conjunction with certain applications, OSHA specifies that all electrical equipment and devices that are used to protect workers must be authorized by an OSHA-certified, Nationally Recognized Testing Laboratory (NRTL) for the specific application.

In addition to the OSHA regulations, it is important that the current standards from organizations such as NFPA and ANSI are carefully observed as well as the extensive product liability legislation that exists in the US. As a result of the product liability legislation, manufacturing and operating companies are forced – in their own interest – to carefully comply with the applicable regulations and to fulfill state-of-the-art technology.

Third-party insurance companies generally demand that their customers fulfill the applicable standards of the Standards Organizations. Initially, self-insured companies do not have this requirement, but, in the case of an accident, they must prove that they have applied generally recognized safety principles.

1.3 Machine safety in the US

1.3.2 NRTL Listing

All electrical equipment and devices that are used in the US to protect workers must be certified for the particular application by a "Nationally Recognized Testing Laboratory" (NRTL) certified by OSHA. These "Nationally Recognized Testing Laboratories" are authorized to certify equipment and material in the form of listing, labeling or similar. Domestic Standards such as the NFPA 79 and also international Standards such as e.g. EN 61508 for E/E/PES systems form the basis for testing.

1.3.3 NFPA 79

NFPA 79 (Electrical Standard for Industrial Machinery) applies to electrical equipment on industrial machines with rated voltages of less than 600 V. (A group of machines that operate together in a coordinated fashion is also considered to be one machine.)

For programmable electronics and communication buses, NFPA 79 states as basic requirement, that these must be listed if they are to be used to implement and execute safety-related functions. If this requirement is fulfilled, then electronic controls and communication buses can also be used for Emergency Stop functions, Stop Categories 0 and 1 (refer to NFPA 79 9.2.5.4.1.4). Just the same as EN 60204-1, in the meantime, for Emergency Stop functions, NFPA 79 no longer specifies that the electrical energy has to be disconnected using electro-mechanical elements.

The core requirements placed on programmable electronics and communication buses include:

System requirements (refer to NFPA 79 9.4.3)

- Control systems that include software-based controllers, must,
 - (1) If an individual fault occurs,
 - bring the system into a safe state to shut it down
 - prevent restarting until the fault has been removed
 - prevent unexpected starting
 - (2) Provide protection comparable to hard-wired controls
 - (3) Be implemented corresponding to a recognized Standard that defines the requirements for such systems.
- EN 61508, EN 62061, ISO 13849-1/-2, EN 61800-5-2 are mentioned in a note that they are suitable Standards.

Underwriter Laboratories (UL) has defined a special Category for "Programmable Safety Controllers" for implementing this requirement (code NRGF). This category handles control devices that contain software and are used in safety-related functions.

The precise description of the Category and the list of devices that fulfill this requirement are listed in the Internet:

<http://www.ul.com> → certifications directory → UL Category code/Guide information → search for category "NRGF"

TUV Rheinland of North America, Inc. is also an NRTL for these applications.

1.3.4 ANSI B11

ANSI B11 Standards are joint Standards, that were developed by associations such as e.g. the Association for Manufacturing Technology (AMT) and the Robotic Industries Association (RIA).

The hazards of a machine are evaluated using a risk analysis/assessment. Risk analysis is an important requirement acc. to NFPA79, ANSI/RIA 15.06, ANSI B11.TR-3 and SEMI S10 (semiconductors). Using the documented results of a risk analysis, suitable safety systems can be selected based on the safety class obtained as a result of the particular application.

1.4 Machine safety in Japan

The situation in Japan is different than that in Europe and the US. Comparable legislation regarding functional safety such as in Europe does not exist. Further, product liability does not play a role such as it is in the US.

There are no legal requirements to apply Standards but an administrative recommendation to apply JIS (Japanese Industrial Standards):

Japan bases its approach on the European concept and uses basic Standards as its National Standards (see Table 1-1).

Table 1-1 Japanese Standards

ISO number	JIS number	Comment
ISO12100-1	JIS B 9700-1	Earlier designation TR B 0008
ISO12100-2	JIS B 9700-2	Earlier designation TR B 0009
ISO14121-1/EN1050	JIS B 9702	
ISO13849-1	JIS B 9705-1	
ISO13849-2	JIS B 9705-1	
EN 60204-1	JIS B 9960-1	Without Annex F or Route Map of the European Foreword
EN 61508-0 to -7	JIS C 0508	
EN 62061		A JIS number has still not been assigned

1.5 Equipment regulations

In addition to the requirements specified in Directives and Standards, company-specific requirements should also be carefully taken into account. Especially large corporations – e.g. automobile manufacturers – place high requirements on the automation components, that are then often listed in their own equipment specifications.

Safety-related subjects (e.g. operating modes, operator actions with access to hazardous areas, Emergency Stop concepts) should be clarified with customers at an early phase so that they can be integrated in the risk assessment/risk reduction.

1.6 Other safety-related subjects and issues

1.6.1 Information sheets from the various regulatory bodies

Safety-related measures to be implemented cannot always be derived from Directives, Standards and Regulations. In this case, supplementary information and explanations are required.

As part of their function, some regulatory bodies issue publications on an extremely wide range of subjects. Information sheets are, for example, available on the following subjects:

- Process monitoring in production environments
- Axes that can fall due to gravity
- Roller pressing machines
- Lathes and turning centers – purchasing/selling

These information sheets handling specific subjects and issues can be ordered from all parties interested – e.g. for providing support in operations, when drawing-up regulations or for implementing safety-related measures at machines, plants and systems. These information sheets provide support in machinery construction, production systems, steel construction.

The information sheets can be downloaded from the following Internet addresses:

<http://www.bgmetallsued.de/downloads>

There, the Category "Fachausschuß Infoblätter" should be selected.

1.6.2 Additional references

- Safety Integrated The safety program for the industries of the world (5th Edition and Supplement), Order No. 6ZB5 000-0AA01-0BA1
- Safety Integrated – Terms and Standards – Terminology in the Safety of Machinery (04/2007 Edition), Order No. E86060-T1813-A101-A1

Brief Description

2

2.1 Control/drive system

In order to implement safety-related measures, up until now, external equipment and devices were used – e.g. contactors, switches, cams and monitoring devices. If a hazardous situation is detected, these devices generally interrupt the power circuit thus stopping the motion, see Fig. 2-1.

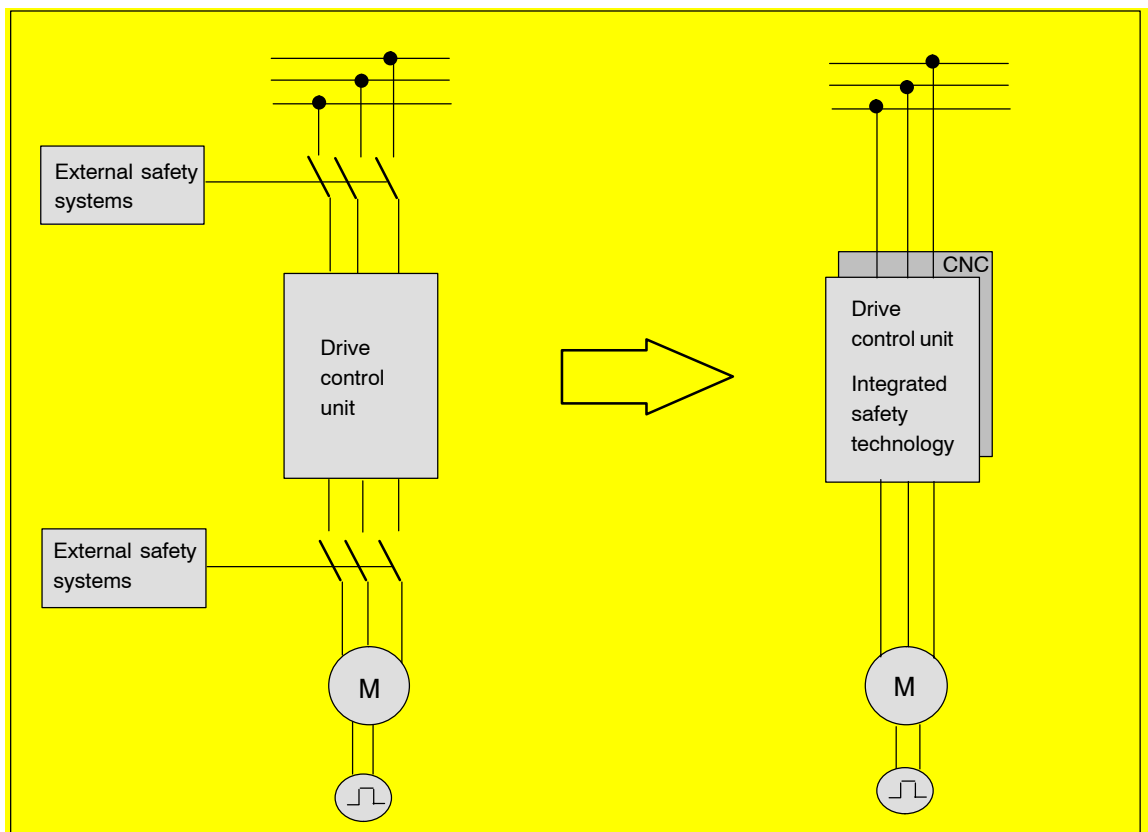


Fig. 2-1 Safety systems: External —> Integrated

With the integration of safety functions, drive systems and CNC controls perform safety functions in addition to their functional tasks. Very short response times can be achieved because of the short data paths from acquisition of the safety-related information – e.g. speed or position – up to evaluation.

2.1 Control/drive system

The systems with integrated safety technology generally respond very quickly when the permissible limit values are violated, e.g. position and velocity limit values. They can be of decisive importance for the required monitoring result. The integrated safety technology can directly access the power semiconductors in the drive controller without using electromechanical switching devices in the power circuit. This helps reduce the susceptibility to faults – and the integration also reduces the amount of cabling.

2.2 System integrated safety technology

SINUMERIK Safety Integrated

Using the SINUMERIK Safety Integrated function, for SINUMERIK 840D sl, for all power/performance classes, integrated safety functions are available in conjunction with the SINAMICS S120 drive system; these are used to monitor standstill (zero speed), velocity and position.

SINAMICS S120 is used in conjunction with 1FT6/1FK6/1FK7 three-phase servo-motors and 1FN linear motors for feed drives as well as 1FE and 1PH motors for main spindle drives.

The safety-related sensors and actuators are connected through distributed I/O via PROFIBUS-DP with the PROFIsafe profile, e.g. ET 200S, ET 200pro, ET 200eco, DP/AS-i F-Link.

This means that a complete digital system is available that is suitable for complex machining tasks.

A two-channel, diverse system structure is formed on the basis of an existing multi-processor structure.

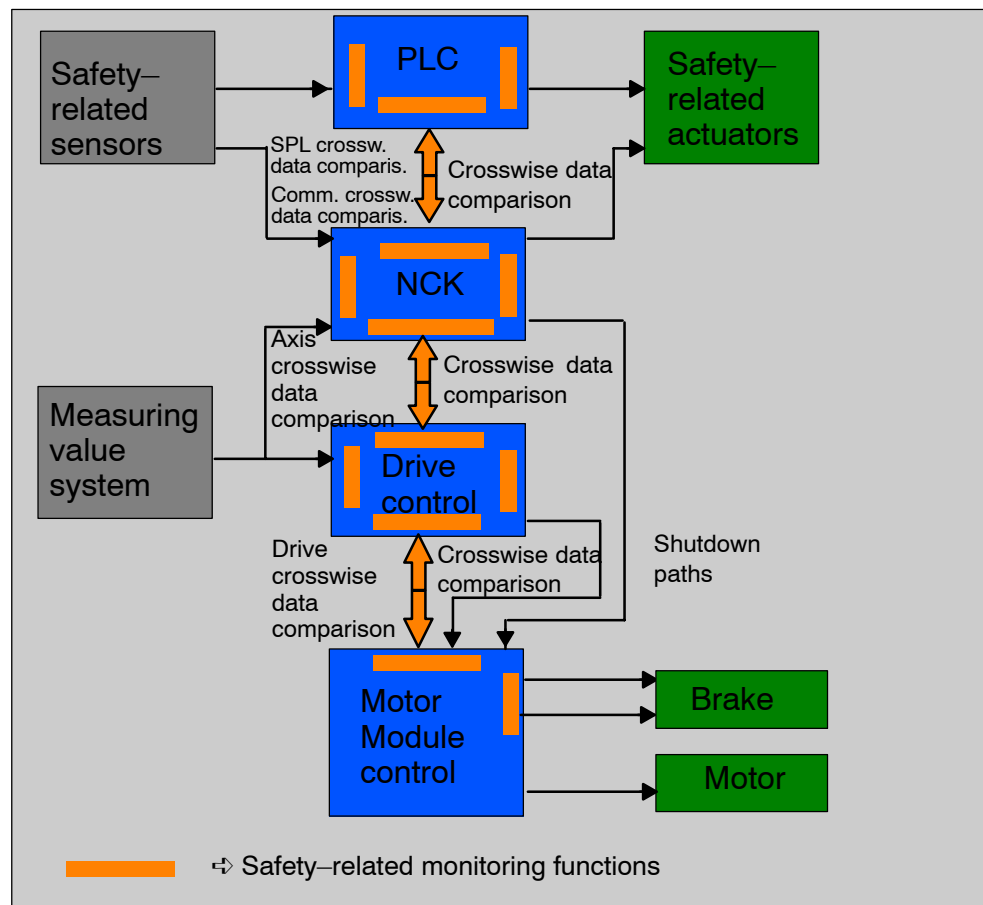


Fig. 2-2 Evaluation/logic with monitoring functions

2.2 System integrated safety technology

Features of the two-channel, diverse structure

A two-channel, diverse structure is characterized by the following features:

- Two-channel structure with at least 2 independent computers (i.e. computers with different hardware and software).
- Crosswise result and data comparison with forced checking procedure for the purpose of detecting internal errors even in functions that are not often used (dormant errors).
- The computers can access data, reaction-free and decoupled at the shared (common) interfaces (e.g. actual value input).

Acquiring

The actual values of the individual axes are sensed by the sensor modules through two channels and are provided to the drive and control.

In order to connect sensors and actuators in a safety-related fashion, their process signals must be connected-in for further processing.

Analyzing

The safety-related functions are executed independently of one another by the NCK-CPU, PLC-CPU and the drive CPUs. The CPUs cyclically and mutually compare their safety-related data and results (crosswise data comparison). A test can be carried out – initiated by the CPUs – to check the shutdown paths and actuators (forced checking procedure).

Responding

When the integrated safety-related functions respond, the drive processors, the PLC processor and/or the NCK processor can act on the connected actuators in a safety-related fashion in-line with the actual situation. For example, the appropriate stop responses for the drives can be initiated and the actuators shutdown via the shutdown paths.

2.2.1 Overview of the system-integrated safety functions

The safety-related functions are available in all of the operating modes and can communicate with the process via safety-related input/output signals. These can be implemented individually for each axis.

- **Safe stopping process**

When a monitoring function or a sensor responds (e.g. a light grid), the drives are safely controlled down to standstill, optimally adapted to the actual operating state of the machine.

- **Safe acceleration monitoring (SBR)**
Monitors the speed characteristic. The speed must be reduced after a stop request has been issued.
- **Safe stop (SH)**
The drive pulses are cancelled. The energy feed is safely and electronically disconnected.
- **Safe operating stop (SBH)**
Monitors the drives during standstill (to ensure that they remain stationary). The drives remain fully functional in closed-loop control.
- **Safely reduced speed (SG)**
Configured speed limits are monitored, e.g. when setting-up without using an agreement button.
- **Safety-related output " $n < n_x$ "**
This is used to detect the velocity range of a drive in a safety-related fashion.
- **Safe software limit switches (SE)**
Variable traversing range limits
- **Safety software cams and safety cam track (SN)**
To detect ranges
- **Safety-related input/output signals (SGE/SGA)**
Interface to the process
- **Safety-related communication via standard bus**
Distributed I/Os for process and safety signals are connected via PROFIBUS using the PROFIsafe profile.
- **Safe programmable logic (SPL)**
All of the safe signals and internal logic are directly connected.
- **Safe brake management (SBM)**
Safety-related two-channel brake control (SBC) and cyclic brake test (SBT).
- **Integrated acceptance test**
Partially automated acceptance test for all safety-related functions. Simple operation of the test process, automatic configuration of Trace functions and automatic generation of an acceptance report.

2.3 Safety technology integrated in the drive

SINAMICS Safety Integrated

The SINAMICS S120 drive system provides the Safety Integrated Basic Functions and the Safety Integrated Extended Functions.

Under certain limitations and constraints (refer to the system prerequisites, Chapter 3), the Safety Integrated Basic Functions can be used together with SINUMERIK 840D sl.

They can be activated via terminals on the power unit and at the NCU or on the NX module.

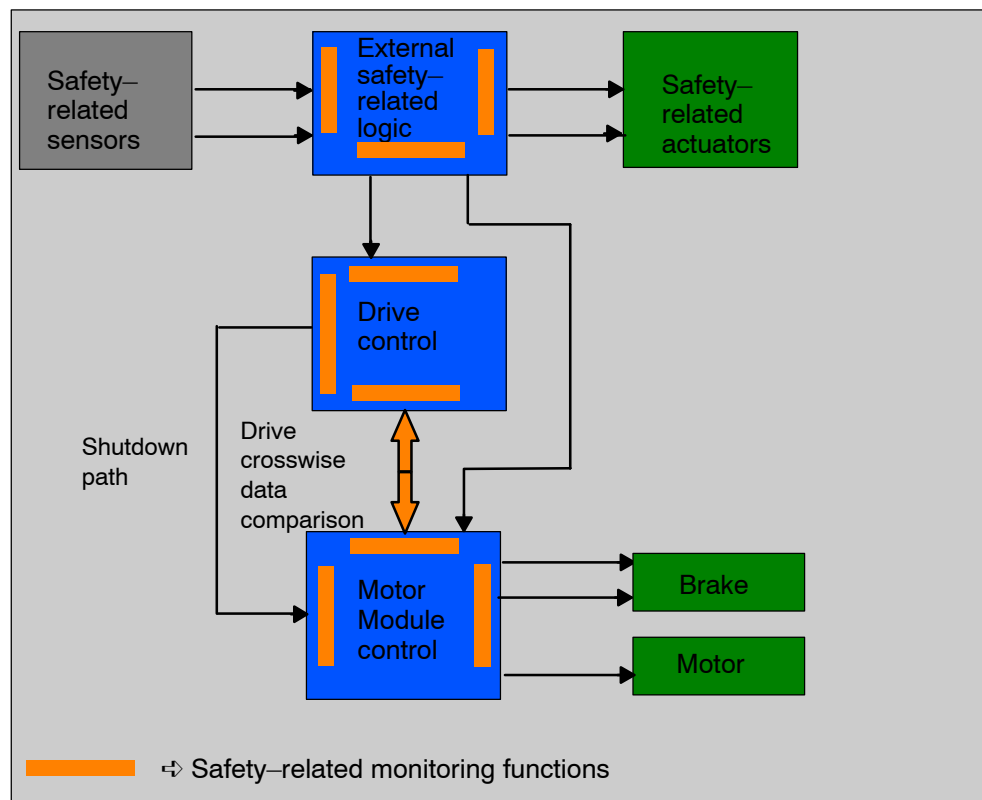


Fig. 2-3 Safety functions integrated in the drive in conjunction with SINUMERIK

Features of the two-channel, diverse structure

A two-channel, diverse structure is characterized by the following features:

- Two-channel structure with at least 2 independent computers (i.e. computers with different hardware and software).
- Crosswise result and data comparison with forced checking procedure for the purpose of detecting internal errors even in functions that are not often used (dormant errors).

Acquiring

In order to connect sensors and actuators in a safety-related fashion, their process signals must be connected-in for further processing.

Analyzing

The two drive CPUs independently execute the safety-related functions. The CPUs cyclically and mutually compare their safety-related data and results (cross-wise data comparison). A test can be carried out – initiated by the CPUs – to check the shutdown paths and actuators (forced checking procedure).

Responding

When the integrated safety-related functions respond, the drive processors can act on the connected actuators in a safety-related fashion in-line with the actual situation. For example, the appropriate stop responses for the drives can be initiated and/or the brakes activated.

2.3.1 Overview of the safety functions integrated in the drive

The safety-related functions are available in all of the operating modes and can communicate with the process via safety-related input/output signals. These can be implemented individually for each axis.

- **Safe Torque Off (STO)**
The drive pulses are cancelled and therefore the energy feed is safely and electronically disconnected
- **Safe Brake Control (SBC)**
The brake is directly controlled at the Motor Module → through two channels and monitored
- **Safe Stop 1 (SS1)**
Braking along the OFF3 ramp, monitoring the stopping time and transition into STO

2.4 Comparison of the function names for SINUMERIK Safety Integrated and acc. to EN 61800–5–2

2.4 Comparison of the function names for SINUMERIK Safety Integrated and acc. to EN 61800–5–2

Function name SINUMERIK Safety Integrated			Function name according to EN 61800–5–2		
German	English	Abbr.	German	English	Abbr.
Sicherer Halt (STOP A)	Safe standstill (STOP A)	SH	Sicher abgeschaltetes Moment	Safe torque off	STO
STOP B	STOP B	–	Sicherer Stop 1	Safe stop 1	SS1
STOP C	STOP C	–	Sicherer Stop 2	Safe stop 2	SS2
STOP D	STOP D	–	Sicherer Stop 2	Safe stop 2	SS2
STOP E	STOP E	–	Sicherer Stop 2	Safe stop 2	SS2
Sicherer Stop 1	Safe stop 1	SS1	Sicherer Stop 1	Safe stop 1	SS1
Sichere Überwachung auf Beschleunigung	Safe acceleration monitor	SBR	–	–	–
Sicherer Betriebshalt	Safe operating stop	SBH	Sicherer Betriebshalt	Safe operating stop	SOS
Sicher reduzierte Geschwindigkeit	Safely reduced speed	SG	Sicher begrenzte Geschwindigkeit	Safely limited speed	SLS
SG-spezifische Sollwertbegrenzung	Safely reduced speed – specific setpoint limiting	–	–	–	–
Sichere Software-Endschalter	Safe software limit switch	SE	Sicher begrenzte Lage	Safely limited position	SLP
Sicheres Bremsenmanagement	Safe brake management	SBM	–	–	–
Sichere Bremsen-ansteuerung	Safe brake control	SBC	Sichere Bremsen-ansteuerung	Safe brake control	SBC
Sicherer Bremsentest	Safe brake test	SBT	–	–	–
Sichere Software-Nocken bzw. Nockenspur	Safe software cam, Safe cam track	SN	Safe cams	Safe cams	SCA
$n < n_x$	$n < n_x$	–	Sichere Drehzahlüberwachung	Safe speed monitor	SSM
Sicherheitsgerichtete Ein-/Ausgabesignale	Safety-related I/O	SGE/SGA F-DI/F-DO	–	–	–
Sichere Programmierbare Logik	Safe programmable logic	SPL	–	–	–
Sicheres Software Relais	Safe software relays	–	–	–	–

System Features

3.1 System requirements

- Software option "SINUMERIK Safety Integrated"

SI-Basic (including 1 axis/spindle, up to 4 SPL I/Os)	6FC5800-0AM63-0YB0
SI-Comfort (including 1 axis/spindle, up to 64 SPL I/Os)	6FC5800-0AM64-0YB0
SI axis/spindle (in addition for each axis /spindle)	6FC5800-0AC70-0YB0
SI axis/spindle package (in addition, 15 axes/spindles)	6FC5800-0AC60-0YB0

- SINUMERIK 840D sl; software release:
From 1.3.1 for safety functions integrated in the drive (SH/SBC via terminals, Chapter 4)
From 1.3.2 for safety functions integrated in the system (Chapters 5 to 7)



Warning

From SINAMICS SW2.5 onwards, the following applies:

In a system configuration, the firmware versions of the DRIVE-CLiQ components can only differ from the versions on the CF card, if either

- a) the automatic upgrade/downgrade (parameter p7826) is deactivated, or
- b) components with a new firmware version can no longer be downgraded to the status of the version available on the CF card.

Scenario a) is not permitted when Safety Integrated is used. The automatic upgrade/downgrade must not be disabled when Safety Integrated is used. (automatic firmware update (p7826) must be equal to 1)

Scenario b) is only permissible if this combination has been explicitly approved by the manufacturer.

- SINUMERIK 840D sl; all NCU types can be used.
- The measuring circuit cables must comply with the specifications of the SINAMICS S120.

3.1 System requirements

- Safety-related devices/modules, that correspond to open-type devices according to UL 50, may only be operated in enclosure-type housings/cabinets that have as a minimum degree of protection IP54 in accordance with EN 60529. Further, chassis units with degree of protection IP20 and IPXXB should be operated corresponding to EN 60529 in higher-level enclosures.
- The state of a cleared safety-related input or output (i.e. the state logical "0" of an SGE/SGA and electrical "low" of an associated I/O terminal) or the state of a drive where the pulses are cancelled that can be achieved by the user as well by the fault response of the SINUMERIK Safety Integrated system, is defined as the so-called "fail-safe state". This is the reason that the system is only suitable for applications where this state corresponds to the safe state of the process controlled by SINUMERIK Safety Integrated.
- Drives with slip cannot be used for SE and SN.
- The SINUMERIK Safety Integrated functions are only permissible in conjunction with the SINAMICS booksize units.

The following applies specifically for safety functions integrated in the drive:

- The Safety Integrated Extended Functions of SINAMICS cannot be used in conjunction with SINUMERIK.
- The Safety Integrated Basic Functions with chassis units can only be used if SINUMERIK Safety Integrated is not used in the remaining drive group.
- A software option is not required when using the SINAMICS Safety Integrated Basic Functions.

The following specifically applies for fail-safe SIMATIC modules:

- STEP7 F configuration tool (F Configuration Pack) as supplement to STEP7
This F configuration tool is required so that ET 200 F modules or the DP/AS-i F-Link can be integrated into the HW configuration.
The F configuration tool can be downloaded from the A&D Service&Support pages under the **Subject F-Configuration-Pack**. Which F configuration tool can be used for which STEP7 version is also specified there.

<http://support.automation.siemens.com/WW/view/en/15208817>

When using ET 200 F modules or DP/AS-i F-Link it should be noted that a version of the F configuration tool should be used that the module already supports. Which modules can be configured with which versions that can be downloaded are also specified in the download area.

Note

Only the F-Configuration Pack is necessary to connect fail-safe SIMATIC modules to SINUMERIK. Neither SIMATIC S7 Distributed Safety nor SIMATIC S7 F systems are required.

3.2 Latest information

Important note for maintaining the operational safety of your system.



Warning

Systems with safety-related characteristics are subject to special operational safety requirements on the part of the operating company. The supplier is also obliged to comply with special product monitoring measures. For this reason, we publish a special newsletter containing information on product developments and features that are (or could be) relevant when operating safety-related systems. By subscribing to the appropriate newsletter, you will ensure that you are always up-to-date and able to make changes to your system, when necessary.

Go into the Internet under:

<http://www.automation.siemens.com>

To subscribe to the newsletter, please proceed as follows:

Click on the menu item "Support". You can now open the Internet page for our "Service & Support" by clicking on the "Service" menu item. By clicking on "Subscribe to our newsletter now" on this page, you can open an additional window in which you can subscribe to the individual newsletter. Under the "Product Support" heading on this page, you can see which newsletter is presently available. Please open the subject area/topic that is relevant for you. You will now be shown which newsletter is available for this particular subject area or topic. You can subscribe to the corresponding newsletter by clicking on the box. If you require more detailed information on the newsletters then please click on these. A small supplementary window is opened from where you take the corresponding information.

Your subscription should cover the following product areas:

- SINUMERIK Safety Integrated
- SINAMICS Safety Integrated
- SIMATIC S7-300
- Distributed I/O
- SIMATIC software

3.3 Certification

The safety functions fulfill the requirements according to DIN EN 61508 for use up to and including SIL2 in an operating mode with a high requirement rate and Category 3 as well as PL d acc. to DIN EN ISO 13849–1. The average time up to a hazardous failure $MTTF_d$ and the probability of hazardous failures per hour PFH_d depend on the degree of expansion of the system.

The "Safe brake test" function complies with Category 2 acc. to DIN EN ISO 13849–1.

The test certificates and test mark are listed in the Preface.

The attachments to the test certificates with the certified software and hardware releases are not included in this documentation. If you require the appropriate attachments, then please use the address specified in the corrections/suggestions sheet (last page).

Additional information on the certification (test certification, PRÜFZERT mark) is provided in the Preface.

3.4 Probability of failure

Please contact your local Siemens office on how to calculate PFH values.

3.5 Safety information & instructions and residual risks

Note

There are additional safety information & instructions and residual risks in other chapters, which are listed in the relevant locations in this documentation.

3.5.1 General residual risks for PDS (Power Drive Systems)



Danger

The control and drive components for a power drive system (PDS) are allowed for industrial and commercial use in industrial networks. Their use in public networks requires a different configuration and/or additional measures.

These components may only be operated in closed enclosures or in higher-level electrical cabinets and when all of the protective devices and protected covers are used.

These components may only be handled by qualified and trained technical personnel who are knowledgeable and observe all of the safety information and instructions on the components and in the associated technical user documentation.

When carrying out a risk assessment of the machine in accordance with the EC Machinery Directive, the machine manufacturer must consider the following residual risks associated with the control and drive components of a Power Drive System.

1. Unintentional movements of driven machine components during commissioning, operation, maintenance, and repairs caused by, for example:
 - Hardware defects and/or software errors in the sensors, controllers, actuators, and connection technology
 - Response times of the controller and drive
 - Operating and/or ambient conditions not within the scope of the specification
 - Parameterization, programming, cabling, and installation errors
 - Use of radio devices/cellular phones in the immediate vicinity of the controller
 - External influence/damage
 2. Exceptional temperatures as well as emissions of light, noise, particles, or gas caused by, for example:
 - Component malfunctions
 - Software errors
 - Operating and/or ambient conditions not within the scope of the specification
 - External influence/damage
-

3.5 Safety information & instructions and residual risks

**Danger**

3. Hazardous touch voltages, e.g. as a result of:

- Component malfunctions
- Influence of electrostatic charging
- Induction of voltages in moving motors
- Operating and/or ambient conditions not within the scope of the specification
- Condensation/conductive contamination
- External influence/damage

4. Electrical, magnetic, and electromagnetic fields that can pose a risk to people with a pacemaker and/or implants if they are too close.

5. Emission of pollutants if components or packaging are not disposed of properly.

An assessment of the residual risks of PDS components (see points 1 to 5 above) established that these risks do not exceed the specified limit values for these components. For more information about residual risks, refer to the relevant chapters in the technical user documentation.

3.5.2 Additional safety information & instructions and residual risks for Safety Integrated



Danger

Risks associated with machines and plants can be reduced using Safety Integrated.

Safe operation of the machine or plant with Safety Integrated is however only possible if the machine manufacturer

- precisely knows and observes this technical user documentation – including the documented limitations, safety information and residual risks;
- carefully executes the design and engineering of the machine or plant verified by qualified personnel that carefully perform and document an acceptance test;
- implements and validates all of the measures required, corresponding to the risk analysis of the machine or plant using the programmed and configured functions of Safety Integrated or other appropriate resources.

Depending on the risk assessment of the machine or plant, the safety information & instructions and residual risks listed in this documentation must also be assigned, when required, to a hazardous level other than that specified in this documentation.

The use of Safety Integrated does not replace the risk assessment of the machine or plant to be performed by the machine manufacturer as specified in the EC Machinery Directive.

In addition to using Safety Integrated, additional measures are required to minimize risk.

Risk assessment enables the machine manufacturer to determine the residual risk for his machine with respect to Safety Integrated. The following residual risks are known.



Warning

- Safety Integrated is only activated if all of the system components are powered-up and have been booted.
- Faults in the absolute track (C–D track), cyclically interchanged phases of motor connections (V–W–U instead of U–V–W) and a reversal in the control direction can cause an increase in the spindle speed or axis motion. Category 1 and 2 Stop functions according to EN 60204–1 (defined as Stop B to E in Safety Integrated) that are provided are however not effective due to the fault. Category 0 stop function according to EN 60204–1 (defined as Stop A in Safety Integrated) is not activated until the transition or delay time set via machine data has expired. When SBR is active, these errors are detected (STOP B/C) and the Category 0 stop function according to EN 60204–1 (STOP A in Safety Integrated) is activated as early as possible irrespective of this delay (see Chapter 6.4, "Safe Acceleration Monitor"). Electrical faults (defective components etc.) can also result in the response described above.
- When incremental encoders are used, the functions "safe software limit switches" (SE) and "safe software cams or cam tracks" (SN) can only be used after referencing has been successfully completed.
- When no user agreement has been given (see Chapter 5.4.4, "User agreement"), the safe software limit switches (SE) are not operative; the safe software cams or cam tracks (SN) are operative, but are not safe as defined by Safety Integrated.
- The simultaneous failure of two power transistors (one in the upper and the other offset in the lower inverter bridge) in the inverter may cause the axis to move briefly.

The maximum movement can be:

Synchronous rotary motors: Max. movement = 180° / number of pole pairs

Synchronous linear motors: Max. movement = pole width

Example: Synchronous motor:

For a 6-pole synchronous motor, the axis can move by a maximum of 30 degrees. With a ballscrew that is directly driven by, e.g. 20 mm per revolution, this corresponds to a maximum linear motion of approximately 1.6 mm.

Example, synchronous linear motor:

For a synchronous linear motor, the movement can be a maximum of one pole width. This corresponds to the following distances:

1FN1–07	27 mm
1FN1–12/–18/–24	36 mm
1FN3	20 mm



Warning

- The “Automatic restart” function of SINAMICS S120 must not be used in conjunction with safety functions since this is prohibited in Chapter 9.2.5.4.2 of IEC 60204, Part 1 (1998). (Deselecting a safety shutdown function alone must not result in machine restarting.)
- For a 1–encoder system, encoder faults are detected by various HW and SW monitoring functions. It is not permissible that these monitoring functions are deactivated and they must be parameterized carefully. Depending on the fault type and which monitor responds, a Category 0 or Category 1 stop function according to EN 60204–1 (defined as STOP A or B in SINUMERIK Safety Integrated) is activated.
- The Category 0 stop function according to EN 60204–1 (defined as STOP A in Safety Integrated) means that the spindles/axes are not braked to zero speed, but coast to a stop (this may take an appropriately long time depending on the level of kinetic energy involved). This must be included in the protective door locking mechanism logic (e.g. with the logic operation $n < n_x$).
- When a limit value is violated, the speed may exceed the set value briefly or the axis/spindle may overshoot the setpoint position to a greater or lesser degree during the period between error detection and system response. This depends on the dynamic response of the drive and the parameters/machine data settings that have been entered (see Chapter 6, “System/drive integrated safety functions”).
- A position–controlled axis may be forced out of the safe operating stop state (SBH) by mechanical forces that are greater than the max. axis torque. In such cases, a stop function, Category 1 according to EN 60204–1 (STOP B) is activated.
- Safety Integrated is not capable of detecting parameterization and programming errors made by the machine manufacturer. The required level of safety can only be assured by thorough and careful acceptance testing.
- Motor modules and motors must always be replaced with the same equipment type. If this is not the case, the parameters will no longer match the actual configuration – causing Safety Integrated to respond incorrectly. The axis involved must be re–commissioned if an encoder is replaced.
- If an internal or external fault occurs, none or only some of the parameterized safety functions are available during the STOP–F response triggered by the fault. This must be taken into account when a delay time between STOP F and STOP B is parameterized. This is especially true for vertical axes.
- An additional residual risk is obtained as a result of the possible random hardware faults for electronic systems, arising from their very principle, which is expressed using this PFH value.

**Warning**

- If, for a 1–encoder system,
 - a) an individual electrical fault in the encoder, or
 - b) an encoder shaft breakage (or the encoder shaft coupling slips) or the encoder housing becomes loosethe encoder signals remain at a steady–state (i.e. they no longer follow the motion, but have a correct signal level), then this fault is not detected when the axis is stationary (e.g. in SBH). Generally, the axis is held by the active closed–loop control. Especially for vertical (suspended) axes, from a closed–loop control–related perspective, it is conceivable that such an axis could move downwards without this being detected. The risk described under a) of an electrical fault in the encoder is only possible for a few encoder types due to the principle of operation (e.g. encoders with microprocessor–controlled signal generation, e.g. EQI from the Heidenhain company, HEAG 159/160 from the Hübner company, measuring systems from the AMO company with sin/cos output).

All of the faults described above must be included in the risk analysis of the machine manufacturer. This analysis will indicate that for hanging/vertical axes or loads that drive the motor, additional protective measures are required, e.g. to exclude the fault under a):

 - Use an encoder with analog signal generation or
 - Use a 2–encoder system

and to exclude the fault under b):

 - Carry out an FMEA regarding encoder shaft breakage (or the encoder shaft coupling slips) or if the encoder housing becomes loose and apply a fault exclusion process according to e.g. EN 61800–5–2 or
 - Use a 2–encoder system (in this case it is not permissible that the encoders are mounted on same shaft).
-

Safety Functions Integrated in the Drive

4

Note

This chapter describes the safety functions that are integrated in the drive – "Safe Torque Off" (STO), "Safe Brake Control" (SBC) and "Safe Stop 1" (SS1), which are controlled via the drive terminals. The safety functions SH and SBC from the context of the safety-related motion monitoring functions are described in Chapter 6 "System/drive-integrated safety functions". The SS1 safety function essentially corresponds there to STOP B. Control via terminals and from the motion monitoring functions is in parallel and can be used independently of one another.

4.1 General information about SINAMICS Safety Integrated

4.1.1 Explanations and terminology

Note

In this chapter, the NCU/NX is designated as "Control Unit".

Two-channel monitoring structure

All the main hardware and software functions for Safety Integrated are implemented in two independent monitoring channels (e.g. shutdown signal paths, data management, data comparison).

The two drive monitoring channels are implemented as follows:

- via the Control Unit
- via the Motor Module/Power Module belonging to a drive.

The monitoring functions in each monitoring channel work on the principle that a defined status must prevail before each action is carried out and a specific acknowledgement made after each action.

4.1 General information about SINAMICS Safety Integrated

If this expected response in a monitoring channel is not fulfilled, the drive coasts to a standstill (two channel) and an appropriate message is output.

Shutdown paths

Two independent switch-off signal paths are available. All switch-off signal paths are low active, thereby ensuring that the system is always switched to a safe status if a component fails or in the event of cable breakage.

If an error is discovered in the shutdown paths, the "safe standstill" (Safe Torque Off) function is activated and a system restart inhibited.

Monitoring cycle

The safety-related drive functions are executed cyclically in the monitoring cycle.

The safety monitoring clock cycle is a minimum of 4 ms. Increasing the basis DRIVE-CLiQ sampling time (p0110) also increases the safety monitoring clock cycle.

Parameter overview (refer to SINAMICS S List Manual)

- r9780 SI monitoring clock cycle (Control Unit)
- r9880 SI monitoring clock cycle (Motor Module)

Crosswise data comparison

A cyclic crosswise comparison of the safety-related data in the two monitoring channels is carried out.

In the event of inconsistencies, the following occurs:

1. Fault F01611 or F30611 (STOP F) is output and the time in p9658 or p9858 initiated.
2. Once the time has elapsed, a further fault (F01600 or F30600 (STOP A)) is output and the pulses are safely cancelled.

The stop response is transferred to the other monitoring channel so that two-channel stopping can be carried out.

Detailed information on the stop responses, see Chapter 6.3 "Safe Stops A–F".

4.1.2 Supported functions

The following Safety Integrated functions (SI functions) are in conformance with EN 61800–5–2:

- Safety Integrated basic functions

These functions are part of the standard scope of the drive.

- Safe Torque Off (STO)
STO is a safety function that prevents the drive from restarting unexpectedly, in accordance with EN 60204–1, Section 5.4.

Note

When a drive object that has Safety Integrated functions released is switched to "Parking" mode, the Safety Integrated software responds by activating STO without generating a separate message.

- Safe Stop 1 (SS1, time-controlled)
The SS1 function is based on the "Safe Torque Off" function. This means that a Category 1 stop in accordance with EN 60204–1 can be implemented.
- Safe Brake Control (SBC)
The SBC function permits the safe control of a holding brake. SBC is not supported by chassis components.

4.1.3 Parameter, checksum, version, password

Properties of Safety Integrated parameters

The following applies to Safety Integrated parameters:

- They are kept separate for each monitoring channel.
- During startup, a checksum (Cyclic Redundancy Check, CRC) over the safety parameters is generated and checked. The display parameters are not contained in the CRC.
- Data storage: The parameters are stored on the non-volatile CompactFlash card.
- Establish/restore the factory setting for safety parameters
You can only reset the safety parameters to the factory setting on a drive-specific basis using p0970 or p3900 when the safety functions are not enabled (p9601 = p9801 = 0).

All the factory settings can be restored (p0976 = 1 and p0009 = 30 on the Control Unit) even when the safety functions are enabled (p9601 = p9801 ≠ 0).

- They are password-protected against accidental or unauthorized changes.

4.1 General information about SINAMICS Safety Integrated

Checking the checksum

For each monitoring channel, the safety parameters include one parameter for the actual checksum for the safety parameters that have undergone a checksum check.

During commissioning, the actual checksum must be transferred in the corresponding parameters of the specified reference checksum. This can be done for all checksums of a drive object at the same time with parameter p9701.

Basic functions

- r9798 SI actual checksum SI parameters (Control Unit)
- p9799 SI reference checksum SI parameters (Control Unit)
- r9898 SI actual checksum SI parameters (Motor Module)
- p9899 SI reference checksum SI parameters (Motor Module)

Each time the system boots, the actual checksum is calculated using the safety parameters and then compared with the specified reference checksum.

If the actual and specified reference checksums are different, fault F01650 or F30650 is output and an acceptance test requested.

Safety Integrated versions

The safety software versions on the Control Units and on the Motor Modules have their own version ID.

For the basic functions:

- r9770 SI version, drive-autonomous safety functions (Control Unit)
- r9870 SI version (Motor Module)



Warning

From SINAMICS SW2.5 onwards, the following applies:

In a system configuration, the firmware versions of the DRIVE-CLiQ components can only differ from the versions on the CF card, if either

- a) the automatic upgrade/downgrade (parameter p7826) is deactivated, or
- b) components with a new firmware version can no longer be downgraded to the status of the version available on the CF card.

Scenario a) is not permitted when Safety Integrated is used. The automatic upgrade/downgrade must not be disabled when Safety Integrated is used. (automatic firmware update (p7826) must be equal to 1)

Scenario b) is only permissible if this combination has been explicitly approved by the manufacturer.

Password

Note

A password allocation is not relevant in the SINUMERIK environment. It is only used in conjunction with Starter (commissioning tool used for SINAMICS).

The safety password protects the safety parameters against unauthorized write access.

In commissioning mode for Safety Integrated (p0010 = 95), you cannot change safety parameters until you have entered the valid safety password in p9761 for the drives.

- When Safety Integrated is commissioned for the first time, the following applies:
 - Safety password = 0
 - Default setting for p9761 = 0

This means:

The safety password does not need to be set during initial commissioning.

- Change password for the drives
 - p0010 = 95 commissioning mode (refer to Chapter 4.6 "Commissioning the functions STO, SBC and SS1")
 - p9761 = Enter "old safety password"
 - p9762 = Enter "new password"
 - p9763 = Confirm "new password"
 - The new and confirmed safety password is valid immediately.

If you need to change safety parameters but you do not know the safety password, proceed as follows:

1. Restore the factory setting of the complete drive unit (Control Unit with all connected drives/components) (see SINUMERIK 840D sl/SINAMICS S120 Commissioning Manual).
2. Recommission the drive unit and drives
3. Recommission Safety Integrated

Parameter overview (see Chapter 8.2.2 "Description of the parameters")

- p9761 Enter SI password
- p9762 New SI password
- p9763 Confirm SI password

4.1.4 Forced checking procedure

Forced checking procedure and test of the shutdown paths

The forced checking procedure function at the switch-off signal paths is used to detect software/hardware faults at both monitoring channels in time and is automated by means of activation/deactivation of the "Safe Torque Off" function.

To fulfill the requirements of EN 954-1 regarding timely error detection, the two shutdown paths must be tested at least once within a defined time to ensure that they are functioning properly. For this purpose, the forced checking procedure must be either initiated manually by the user or automatically as part of the process.

A timer ensures that the forced checking procedure is carried out as quickly as possible.

- p9659 SI timer for the forced checking procedure

The forced checking procedure of the shutdown paths must be carried out at least once during the time set in this parameter.

After this time has expired, an appropriate alarm is issued (A01699 "SI CU: The shutdown paths must be tested") and remains until the forced checking procedure has been performed.

The timer is reset to the selected value each time the STO function is deactivated.

When the appropriate safety devices are implemented (e.g. protective doors), it can be assumed that running machinery will not pose any risk to personnel. For this reason, only an alarm is output to inform the user that a forced checking procedure is due and request that this be carried out at the next available opportunity. This alarm does not affect machine operation.

The user must set the time interval for carrying out the forced checking procedure to between 0.00 and 9000.00 hours depending on the application (factory setting: 8.00 hours).

The 9000 hours are only applicable for STO, SBC, SS1 functions that are integrated in the drive and controlled via local terminals.

When using the safety-related motion monitoring functions according to Chapter 6, the value should be set to 9000 hours so that the alarm to carry out the forced checking procedure is no longer output. After carrying out the forced checking procedure from STO, the forced checking procedure timer is also re-started by the motion monitoring functions.

Examples for carrying out the forced checking procedure:

- When the drives are at a standstill after the system has been powered-up.
- When the protective door is opened.
- In defined cycles (e.g. every 8 hours).
- In the automatic mode (time and event dependent).

4.2 Safe Torque Off (STO)

General description

In conjunction with a machine function or in the event of a fault, the "Safe Torque Off (STO)" function is used to safely disconnect the torque-generating motor power supply.

When the function is selected, the drive unit is in a "safe status". The closing lock-out function prevents the drive unit from being restarted.

The two-channel pulse cancellation integrated in the Motor Modules is the basis for this function.

Functional features of Safe Torque Off

- This function is integrated in the drive, i.e. a higher-level control is not required.
- The function is drive specific. This means that each drive has the function and it must be individually commissioned.
- The function must be enabled via parameter.
- When the Safe Torque Off function is selected:
 - The motor cannot be started accidentally.
 - The safety-related pulse cancellation interrupts the torque-generating power-feed to the motor.
 - The power unit and motor are not electrically isolated.



Warning

Appropriate measures must be taken to ensure that the motor does not move once the motor power supply has been disconnected ("coast down") (e.g. enable the "Safe brake control" function for a vertical axis).



Warning

If two power transistors in the Motor Module (one in the upper and one in the lower bridge) fail at the same time, this can cause a momentary movement.

The maximum movement can be:

- Synchronous rotary motors: Max. movement = 180° / number of pole pairs
 - Synchronous linear motors: Max. movement = pole width
-

- The status of the Safe Torque Off function is displayed using parameters.

4.2 Safe Torque Off (STO)

Enabling the Safe Torque Off function

The Safe Torque Off function is enabled via the following parameters:

- STO via terminals:
 - p9601.0 = 1, p9801.0 = 1

Selecting/deselecting "Safe Torque Off"

The following occurs when Safe Torque Off is selected:

- Every monitoring channel initiates safety-related pulse cancellation via its shut-down path.
- A motor holding brake (if connected and configured) is closed.

The following occurs when Safe Torque Off is deselected:

- Every monitoring channel withdraws (cancels) the safety-related pulse cancellation via its shutdown path.
- The safety prompt "Apply motor holding brake" is canceled.
- Any pending STOP F or STOP A commands are canceled.

Note

If the Safe Torque Off function is deselected and selected again through one channel within the time in p9650/p9850, the pulses are canceled but a signal is not output.

If you want a message to be displayed in this case, however, you must reconfigure N001620/N30620 via p2118 and p2119 as an alarm or fault.

Restart after the Safe Torque Off function has been selected

1. Deselect the function in each monitoring channel via the input terminals.
2. Issue drive enable signals.
3. Cancel the power-on inhibit and power-up again.
4. Move/traverse the drives again.

Status for Safe Torque Off

The status of the Safe Torque Off function is displayed using the following parameters:

- r9772 CO/BO: SI status (Control Unit)
- r9872 CO/BO: SI status (Motor Module)
- r9773 CO/BO: SI status (Control Unit + Motor Module)
- 9774 CO/BO: SI Status (Safe Torque Off group)

Response times for the Safe Torque Off function

The following values can be specified for the response times when the function is selected/deselected via the input terminals:

- Typical response time
2 x safety monitoring cycle CU (r9780) + inputs/outputs sampling time (p0799)
- Maximum response time that can occur when an error develops:
4 x safety monitoring cycle CU (r9780) + input/output time sampling time (p0799)

4.3 Safe Stop 1 (SS1, time-controlled)

General description

The Safe Stop 1 function can be used to stop the drive in accordance with EN 60204-1, Stop Category 1. After "Safe Stop 1" has been selected, the drive brakes along the OFF3 ramp (p1135), and after the delay time set in p9652/p9852, switches the pulses into the Safe Torque Off (STO) state.



Caution

When the SS1 (time-controlled) function has been activated through the parameterization of a delay in p9652/p9852, it is no longer possible to select STO via terminals.

Functional features of Safe Stop 1

- SS1 is activated by p9652 and p9852 (delay time) not equal to "0".
- The function can only be activated in conjunction with Safe Torque Off.
- When SS1 is selected, the drive is braked along the OFF3 ramp (p1135) and STO/SBC are automatically initiated after expiry of the delay time (p9652/9852).
After the function has been activated the delay time runs – even if the function is deselected during this time. In this case, after the delay time has expired, the STO/SBC function is selected and then again deselected immediately.
- The selection is realized through two channels – however braking along the OFF3 ramp, only through one channel.

Enabling the SS1 function

The function is enabled by entering the delay time in p9652 and p9852.

4.3 Safe Stop 1 (SS1, time-controlled)

Prerequisite

The Safe Torque Off function must be enabled.

In order that the drive can brake down to a standstill even when selected through one channel, the time in p9652/p9852 must be shorter than the sum of the times from the parameters for the crosswise data comparison (p9650/p9850 and p9658/9858).

The time in p9652/p9852 must be dimensioned so that after selection, the drive brakes down to a standstill.

Status for Safe Stop 1

The status of the Safe Stop 1 function is displayed using the following parameters:

- r9772 CO/BO: SI status (Control Unit)
- r9773 CO/BO: SI status (Control Unit + Motor Module)
- r9774 CO/BO: SI status (safe standstill group)
- r9872 CO/BO: SI status (Motor Module)

Alternatively, the status of the functions can be displayed using the configurable messages N01621 and N30621 (configured using p2118 and p2119).

Overview, important parameters (see Chapter 8.2.2 "Description of parameters")

- refer to the safe standstill function
- p1135 OFF3 ramp-down time
- p9652 SI Safe Stop 1 delay time (Control Unit)
- p9852 SI Safe Stop 1 delay time (Motor Module)

4.4 Safe Brake Control (SBC)

Description

Safe Brake Control is used to control actuators that function according to the closed-circuit principle (e.g. brake).



Warning

The Safe Brake Control function does not detect faults in the brake itself – such as e.g. brake winding short-circuit, worn brakes and similar.

If a cable breaks, this is only recognized by the Safe Brake Control function when the status changes, i.e. when the brake is applied/released.

Functional features of Safe Brake Control (SBC)

- When Safe Torque Off is selected or when safety monitors are triggered, "SBC" is performed with safe pulse cancelation.
- Unlike conventional brake control, SBC is implemented via p1215 through two channels.
- SBC is initiated independently of the brake control mode set in p1215. However, SBC is not recommended for p1215 = 0 or 3.
- The function must be enabled via parameter.
- Each time Safe Torque Off is selected, the holding brake is applied immediately with a forced checking procedure carried out.

Enabling the Safe Brake Control (SBC) function

The Safe Brake Control function is enabled via the following parameters:

- p9602 "SI enable safe brake control (Control Unit)"
- p9802 "SI enable safe brake control (Motor Module)"

The Safe Brake Control function only becomes active if at least one safety monitoring function is enabled (i.e. p9601 = p9801 \neq 0).

4.4 Safe Brake Control (SBC)

Two-channel brake control

The brake is controlled from the Control Unit. The brake can be closed through two signal paths.

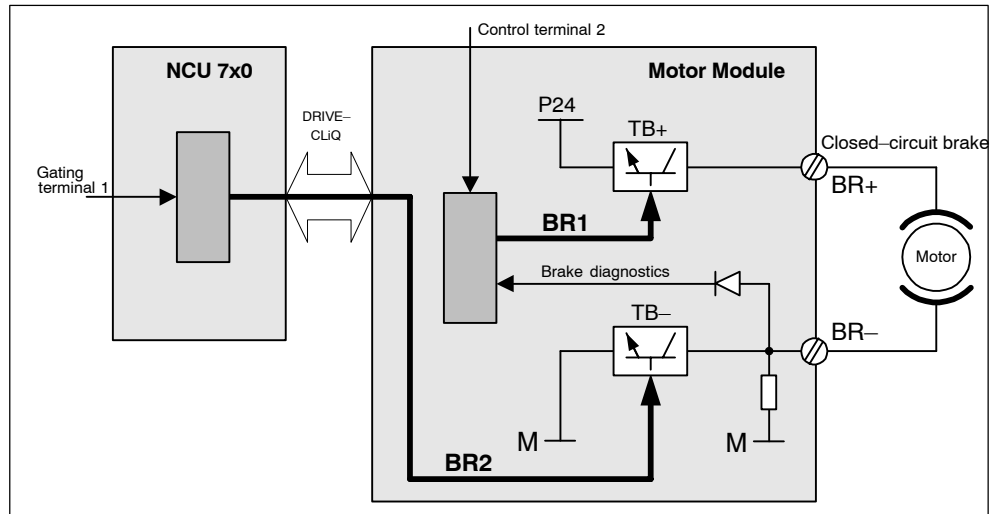


Fig. 4-1 Two-channel brake control, booksize

The Motor Module carries out a check to ensure that the Safe Brake Control function is working properly and ensures that, if the Control Unit fails or is faulty, the brake current is interrupted and the brake applied.

The brake diagnosis can only reliably detect a malfunction in either of the switches (TB+, TB-) when the status changes (when the brake is released or applied).

If the Motor Module or Control Unit detects a fault, the brake current is switched off and the safe status is reached.

Response time with the Safe Brake Control function

The following values can be specified for the response times when the function is selected/deselected via input terminals:

- Typical response time
4x safety monitoring clock cycle CU (r9780) + inputs/outputs, sampling time (p0799)
- Maximum response time that can occur when an error develops
8x safety monitoring clock cycle CU (r9780) + inputs/outputs, sampling time (p0799)

4.5 Control via terminals on the Control Unit and the power unit

Example:

Assumption

Safety monitoring clock cycle CU (r9780) = 4 ms and

Inputs/outputs sampling time (r0799) = 4 ms

$$t_{R_type} = 4 \times r9780 (4 \text{ ms}) + r0799 (4 \text{ ms}) = 20 \text{ ms}$$

$$t_{R_max} = 8 \times r9780 (4 \text{ ms}) + r0799 (4 \text{ ms}) = 36 \text{ ms}$$

Parameter overview (see Chapter 8.2.1 "Overview of parameters")

- p0799 "CU inputs/outputs, sampling time"
- r9780 "SI monitoring clock cycle (Control Unit)"
- r9880 "SI monitoring clock cycle (Motor Module)"

4.5 Control via terminals on the Control Unit and the power unit

Features

- Only for the STO, SS1 (time-controlled) and SBC functions
- Dual-channel structure via two digital inputs (Control Unit/power unit)
- Input filter for test signals with a dark period of less than 1 ms
- Different terminal strips depending on design
- Automatic ANDing of up to 8 digital inputs (p9620[0...7]) on the Control Unit with parallel configuration of power units in chassis format.

Terminals for STO, SS1 (time-controlled), SBC

The functions are separately selected/deselected for each drive using two terminals.

- 1. Control Unit shutdown path
The required input terminal for Safe Torque Off (STO) is selected via the BICO interconnection (BI: p9620[0]).
Digital input DI 0 ... DI 7 on the Control Unit can be used as a signal source (NCU). NX modules have DI 0 to DI 3.
- 2. Motor Module shutdown path
The input terminal is the "EP" ("Enable Pulses") terminal.

Both terminals must be simultaneously energized, otherwise a fault will be issued.

4.5 Control via terminals on the Control Unit and the power unit

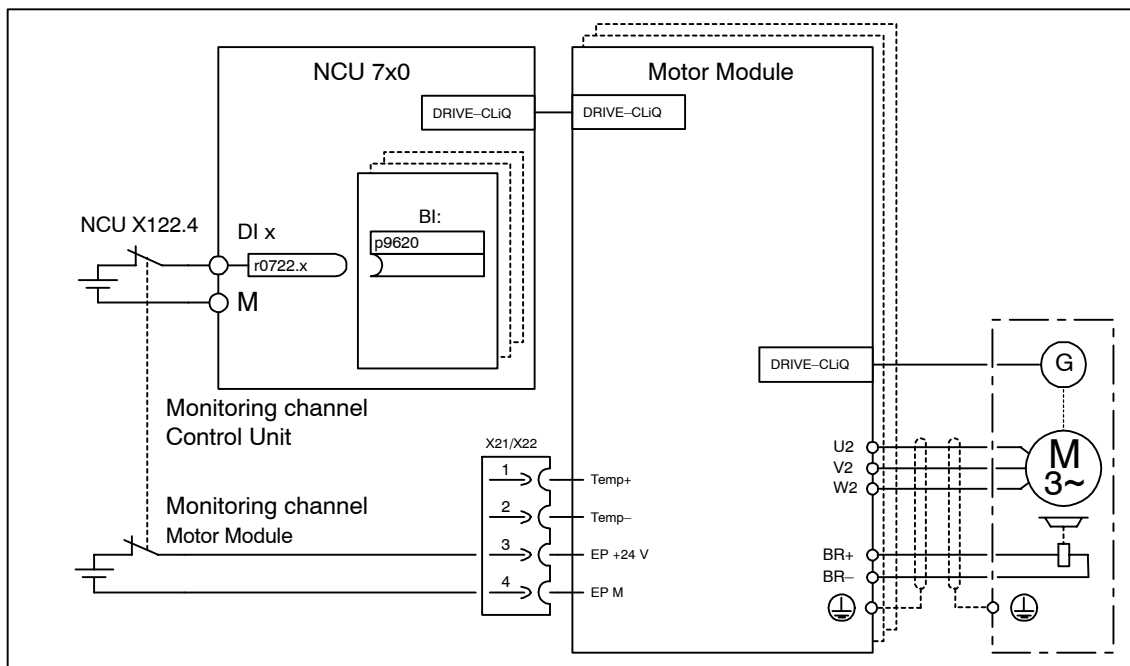


Fig. 4-2 Terminals for "Safe Torque Off": example for Motor Modules, booksize format

Grouping drives

If the function is to be simultaneously initiated for several drives, the terminals for the corresponding drives must be grouped together:

- 1st Control Unit shutdown path
By appropriately interconnecting the binector input to a joint input terminal for the drives to be combined to form a group.
- 2nd Motor Module shutdown path
By appropriately connecting terminal "EP" for the individual Motor Modules belonging to a group.

Note

The grouping must be identical in both monitoring channels.

If a fault in a drive results in a Safe Torque Off (STO), this does not automatically mean that the other drives in the same group also switch to Safe Torque Off (STO).

The assignment is checked while testing the shutdown paths. The operator selects Safe Torque Off for each group. The check is drive-specific.

Example: Terminal groups

It must be possible to select/deselect the Safe Torque Off function separately for group 1 (drive 1 and 2) and group 2 (drive 3 and 4).

In addition, the same grouping for safe standstill must be assigned on both the Control Unit and the Motor Modules.

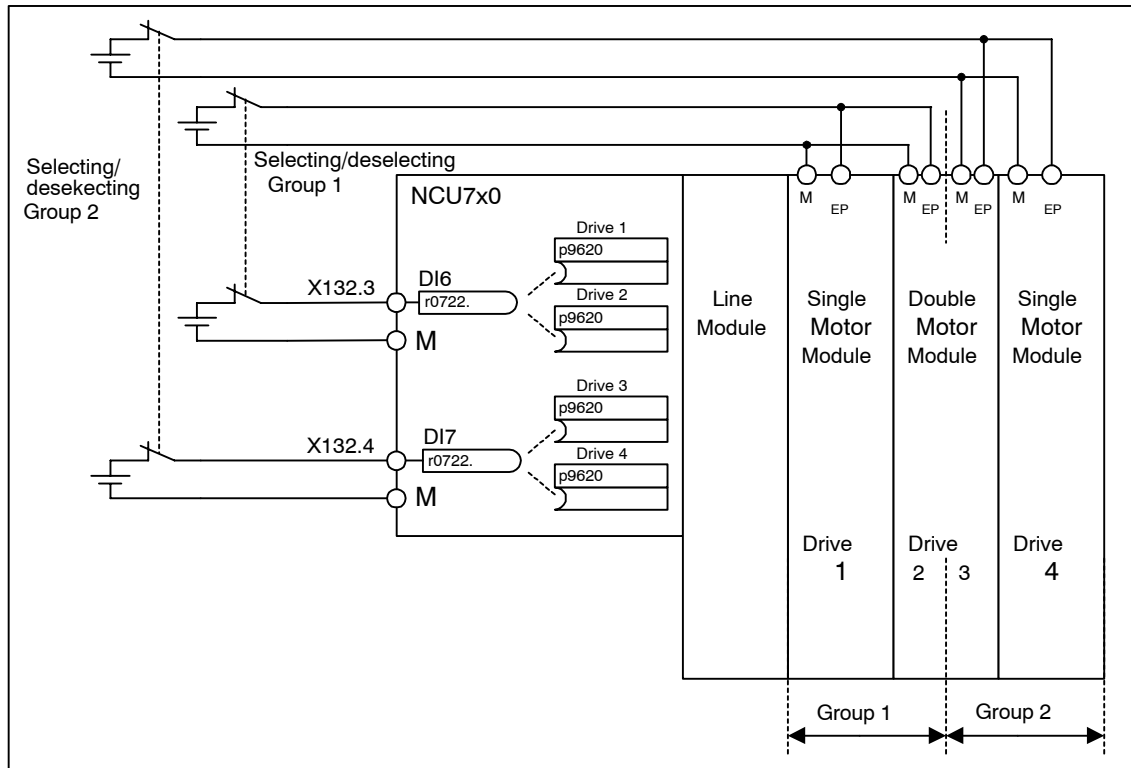


Fig. 4-3 Example: Terminal groups for Motor Modules, booksize format

Information on the parallel connection of Motor Modules in chassis format

When Motor Modules in chassis format are connected in parallel, a safe AND element is created on the parallel drive object. The number of indexes in p9620 corresponds to the number of parallel chassis components in p0120.

Simultaneity and tolerance time of the two monitoring channels

The functions must be selected/deselected simultaneously in both monitoring channels using the input terminals and act only on the associated drive.

1 signal: Deselecting the function

0 signal: Selecting the function

"Simultaneously" means:

The changeover must be completed in both monitoring channels within the parameterized tolerance time.

- p9650 SI tolerance time F–DI changeover (Control Unit)
- p9850 SI tolerance time F–DI changeover (Motor Module)

If the function is not selected/deselected within the tolerance time, this is detected by the crosswise data comparison and fault F01611 and F30611 (STOP F) is output. In this case, the pulses have already been canceled as a result of the selection through one channel.

4.6 Commissioning the STO, SBC and SS1 functions

4.6.1 General information about commissioning safety functions

Note

- The "STO", "SBC" and "SS1" functions are drive specific, which means that the functions must be commissioned individually for each drive.
 - To support the "STO" and "SBC" functions, the following (minimum) safety versions are required:
 Control Unit: V02.01.01 (r9770[0...2])
 Motor Module: V02.01.01 (r9870[0...2])
 - To support the SS1 function, the following (minimum) safety version is required:
 Control Unit: V02.04.01 (r9770[0...2])
 Motor Module: V02.04.01 (r9870[0...2])
 - If the version in the Motor Module is incompatible, the Control Unit responds as follows during the switchover to safety commissioning mode (p0010 = 95):
 - Fault F01655 (SI CU: Align the monitoring functions) is output. The fault initiates stop response OFF2.
 The fault cannot be acknowledged until the safety commissioning mode (p0010 ≠ 95) is exited.
 - The Control Unit initiates a safe pulse cancellation via its own safety shutdown path.
 - If parameterized (p1215), the brake is closed.
 - It is not possible to enable the safety functions (p9601/p9801 and p9602/p9802).
-

Prerequisites for commissioning the safety functions

1. Commissioning of the drives must be completed.
2. The non safety-related pulse cancellation must be present, e.g. via OFF1 = "0" or OFF2 = "0"
 If a brake is connected and has been parameterized, then the brake is closed.
3. The terminals for "Safe Torque Off" must be wired.
 - Control Unit: Digital input DI 0 ... DI 7 (NCU)
 Digital input DI 0 ... DI 3 (NX)
 - Motor Module: Terminal "EP"
4. For operation with SBC, the following applies:
 A brake must be connected to the appropriate Motor Module connector.

4.6 Commissioning the STO, SBC and SS1 functions

4.6.2 Procedure for commissioning STO, SBC and SS1

In the SINUMERIK environment, commissioning can be simplified by using the softkeys "Activate drive commissioning" and "Deactivate drive commissioning".

With "Activate drive commissioning", p0010 is set to 95; the required functions can then be enabled and the settings entered (also refer to Table 4-1 "Commissioning STO, SBC and SS1, Steps 3 to 9).

With "Deactivate drive commissioning" the checksums (p9799 = r9798, p9899 = r9898) are set to the same value and p0010 is set to 0.

To commission the STO, SBC and SS1 functions, carry out the following steps:

Table 4-1 Commissioning the "STO", "SBC" and "SS1" functions

No.	Parameter	Description and comments
1	p0010 = 95	<p>Sets the Safety Integrated commissioning mode</p> <ul style="list-style-type: none"> The following alarms and faults are output: <ul style="list-style-type: none"> A01698 (SI CU: Commissioning mode active) <p>Only when commissioning the system for the first time:</p> <ul style="list-style-type: none"> F01650 (SI CU: Acceptance test required) with fault value = 130 (no safety parameters exist for the Motor Module). F30650 (SI MM: Acceptance test required) with fault value = 130 (no safety parameters exist for the Motor Module). <p>For information on the acceptance test and acceptance report, see step 4.</p> The pulses are safely cancelled and monitored by the Control Unit and Motor Module. The safety sign-of-life is monitored by the Control Unit and Motor Module. The function for exchanging stop responses between the control unit and motor module is active. An existing and parameterized brake has already been closed. In this mode, fault F01650 or F30650 with fault value = 2003 is output after a safety parameter is changed for the first time. <p>This behavior applies for the entire duration of safety commissioning, which means that the STO function cannot be selected/deselected while safety commissioning mode is active because this would constantly force safe pulse cancellation.</p>

4.6 Commissioning the STO, SBC and SS1 functions

Table 4-1 Commissioning the "STO", "SBC" and "SS1" functions, continued

No.	Parameter	Description and comments
2	p9761 = "Value"	Sets the safety password When Safety Integrated is commissioned for the first time, the following applies: <ul style="list-style-type: none"> • Safety password = 0 • Default setting for p9761 = 0 This means that the safety password does not need to be set during initial commissioning.
3	p9601.0 p9801.0	Enable Safe Torque Off function STO via Control Unit terminals STO via Motor Module terminals <ul style="list-style-type: none"> • The parameters are not changed until safety commissioning mode has been exited (i.e. when p0010 ≠ 95 is set). • Both parameters are included in the crosswise data comparison and must, therefore, be identical.
4	p9602 = 1 p9802 = 1	Enables the safe brake control function Enables SBC on the Control Unit Enables SBC on the Motor Module <ul style="list-style-type: none"> • The parameters are not changed until safety commissioning mode has been exited (i.e. when p0010 ≠ 95 is set). • Both parameters are included in the crosswise data comparison and must, therefore, be identical. • The safe brake control function only becomes active if at least one safety monitoring function is enabled (i.e. p9601 = p9801 ≠ 0).
5	p9652 > 0 p9852 > 0	Enable Safe Stop 1 function Enable SS1 on the Control Unit Enable SS1 on the Motor Module <ul style="list-style-type: none"> • The parameters are not changed until safety commissioning mode has been exited (i.e. when p0010 ≠ 95 is set). • Both parameters are included in the crosswise data comparison and must, therefore, be identical. • The Safe Stop 1 function only becomes active if at least one safety monitoring function is enabled (i.e. p9601 = p9801 ≠ 0).

4.6 Commissioning the STO, SBC and SS1 functions

Table 4-1 Commissioning the "STO", "SBC" and "SS1" functions, continued

No.	Parameter	Description and comments
6	p9620 = "Value" Terminal "EP"	Set terminals for Safe Torque Off (STO) Set the signal source for STO on the Control Unit Connects terminal "EP" (Enable Pulses) on the Motor Module. <ul style="list-style-type: none"> Control Unit monitoring channel: By appropriately interconnecting BI: p9620 for the individual drives, the following is possible: <ul style="list-style-type: none"> Selecting/deselecting the STO the terminals for safe standstill can be grouped Digital input DI 0 ... DI 7 on the Control Unit can be used as a signal source (NCU). DI 0 ... DI 3 (NX). Motor Module monitoring channel: By wiring the "EP" terminal accordingly on the individual Motor Modules, the following is possible: <ul style="list-style-type: none"> Selecting/deselecting the STO Terminal groups for STO Note: The STO terminals must be grouped identically in both monitoring channels.
7	p9650 = "Value" p9850 = "Value"	Set F–DI changeover tolerance time F–FI changeover tolerance time on Control Unit F–DI changeover tolerance time on Motor Module <ul style="list-style-type: none"> The parameters are not changed until safety commissioning mode has been exited (i.e. when p0010 ≠ 95 is set). Due to the different runtimes in the two monitoring channels, an F–DI changeover (e.g. selection/deselection of STO) does not take immediate effect. After an F–DI changeover, dynamic data is not subject to a data cross-check during this tolerance time. Both parameters are contained in the crosswise data comparison and must, therefore, be "identical". A difference of one safety monitoring clock cycle is tolerated.

4.6 Commissioning the STO, SBC and SS1 functions

Table 4-1 Commissioning the "STO", "SBC" and "SS1" functions, continued

No.	Parameter	Description and comments
8	p9658 = "Value" p9858 = "Value"	<p>Sets the transition time from STOP F to STOP A</p> <p>Transition time from STOP F to STOP A on the Control Unit</p> <p>Transition time from STOP F to STOP A on the Motor Module</p> <ul style="list-style-type: none"> The parameters are not changed until safety commissioning mode has been exited (i.e. when p0010 ≠ 95 is set). STOP F is the stop response initiated by fault F01611 or F30611 (SI defect in a monitoring channel) when the crosswise data comparison is violated. STOP F normally initiates "No stop response". Once the parameterized time has elapsed, STOP A (immediate safety pulse cancellation) is initiated by fault F01600 or F30600 (SI STOP A initiated). <p>The default setting for p9658 and p9858 is 0, i.e. STOP F immediately results in STOP A.</p> <ul style="list-style-type: none"> Both parameters are contained in the crosswise data comparison and must, therefore, be "identical". A difference of one safety monitoring clock cycle is tolerated for the values.
9	p9659 = "Value"	<p>Sets the time to carry out the forced checking procedure and testing the safety shutdown paths</p> <ul style="list-style-type: none"> After this time has expired, using alarm A01699 (SI CU: Shutdown paths must be tested), is requested to test the shutdown paths (i.e. select/deselect STO). The commissioning engineer can change the time required for carrying out the forced checking procedure and testing the safety switch-off paths.
10	p9799 = "r9798" p9899 = "r9898"	<p>Adapt the specified reference checksums</p> <p>Reference checksum on the Control Unit</p> <p>Reference checksum on the Motor Module</p> <p>The actual checksums for the safety parameters that have undergone a checksum check are displayed as follows:</p> <ul style="list-style-type: none"> Actual checksum on the Control Unit: r9798 Actual checksum on the Motor Module: r9898 <p>By setting the actual checksum in the parameter for the specified reference checksum, the commissioning engineer confirms the safety parameters in each monitoring channel.</p>
11	p9762 = "Value" p9763 = "Value"	<p>Sets a new safety password</p> <p>Enter a new password</p> <p>Confirm the new password</p> <p>In the SINUMERIK environment we recommend that an axial password is not used. The commissioning area is sufficiently protected using the password protection at the HMI and an axial password makes further commissioning steps more difficult.</p> <ul style="list-style-type: none"> The new password is not valid until it has been entered in p9762 and confirmed in p9763. From now on you must enter the new password in p9761 so that you can change safety parameters. Changing the safety password does not mean that you have to change the checksums in p9799 and p9899.

4.6 Commissioning the STO, SBC and SS1 functions

Table 4-1 Commissioning the "STO", "SBC" and "SS1" functions, continued

No.	Parameter	Description and comments
12	p0010 = Value not equal to 95	Exit Safety Integrated commissioning mode <ul style="list-style-type: none"> If at least one safety monitoring function is enabled ($p9601 = p9801 \neq 0$), the checksums are checked: If the reference checksum on the Control Unit has not been correctly adapted, then fault F01650 (SI CU: Acceptance test required) is output with fault code 2000 and it is not possible to exit the safety commissioning mode. If the reference checksum on the Motor Module has not been correctly adapted, then fault F01650 (SI CU: Acceptance test required) is output with fault code 2001 and it is not possible to exit the safety commissioning mode. If a safety monitoring function has not been enabled ($p9601 = p9801 = 0$), safety commissioning mode is exited without the checksums being checked. <p>When the safety commissioning mode is exited, the following is carried out:</p> <ul style="list-style-type: none"> The new safety parameterization becomes effective on the Control Unit and on the Motor Module.
13	—	All drive parameters (entire drive group or only single axis) must be manually saved from RAM to ROM. These data are not saved automatically!
13	—	Carry out a POWER ON After commissioning, a POWER ON reset must be carried out.
14	—	Carry out an acceptance test and prepare an acceptance report Once safety commissioning has been completed, the commissioning engineer must carry out an acceptance test for the enabled safety monitoring functions. The results of the acceptance test must be documented in an acceptance report (see Chapter 4.8 "Acceptance test and acceptance report").

4.6.3 Safety faults

Stop response

When Safety Integrated faults occur, the following stop responses can be initiated:

4.6 Commissioning the STO, SBC and SS1 functions

Table 4-2 Safety Integrated stop responses

Stop response	Action	Effect	Initiated when
STOP A cannot be acknowledged	Initiates safe pulse cancellation via the shutdown path of the relevant monitoring channel. For operation with SBC: The brake is closed.	The motor coasts to a standstill or is braked by the holding brake.	For all safety faults that cannot be acknowledged with pulse cancellation.
STOP A			For all safety faults that can be acknowledged with pulse cancellation. As a subsequent response to STOP F.
	STOP A corresponds to Stop Category 0 to EN 60204–1. With STOP A, the motor is switched directly to zero torque via the Safe Torque Off (STO) function. A motor at standstill cannot be started again accidentally. A moving motor coasts to standstill. This can be prevented by using external braking mechanisms, e.g. armature short-circuit, holding or operational brake. When STOP A is present, Safe Torque Off (STO) is active.		
STOP F	Transition to STOP A	None ¹⁾	If a fault occurs in the crosswise data comparison.
	STOP F is permanently assigned to the crosswise data comparison (CDC). In this way, errors are detected in the monitoring channels. After STOP F, STOP A is initiated. When STOP A is present, Safe Torque Off (STO) is active.		

1) If STOP F is output by the crosswise data comparison of the two input signals when the Safe Torque Off function is selected, this means that the pulses were canceled when Safe Torque Off was selected on one channel.

**Warning**

With a vertical axis or pulling load, there is a risk of uncontrolled axis movements when STOP A/F is initiated. This can be prevented by using safe brake control (SBC) and a brake with sufficient holding force (not safe).

4.6 Commissioning the STO, SBC and SS1 functions

Acknowledging safety faults

Safety Integrated faults must be acknowledged as follows:

1. Remove the cause of the fault.
2. Select/deselect Safe Torque Off (STO).
3. Acknowledge the fault.

If the safety commissioning mode is exited when the safety functions are switched off (p0010 = value not equal to 95 when p9601 = p9801 = 0), all the safety faults can be acknowledged.

After the safety commissioning mode has been set again (p0010 = 95), all of the faults that were previously available, re-appear.

Notice

Safety faults can also be acknowledged (as with all other faults) by switching the drive unit off and then on again (power on).

If the fault cause has still not been resolved, then the fault is immediately displayed again after booting.

Description of faults and alarms

See also Chapter 10.3.

Note

The faults and alarms for SINAMICS Safety Integrated are described in the following documentation:

Reference: /LH1/ SINAMICS S List Manual

4.7 Overview of parameters and function diagrams

Parameter overview

Table 4-3 Safety Integrated parameters

No. Control Unit (CU)	No. Motor Module (MM)	Name	Can be changed in
p9601	p9801	Enables safety functions	Safety Integrated commissioning (p0010 = 95)
p9602	p9802	Enables safe brake control	
p9620	–	Signal source for safe standstill	
p9650	p9850	Tolerance time SGE changeover	
p9652	p9852	Safe Stop 1 delay time	
p9658	p9858	Transition time STOP F to STOP A	
p9659	–	Timer for forced checking procedure	
p9761	–	Enter password	In every operating state
p9762	–	New password	Safety Integrated commissioning (p0010 = 95)
p9763	–	Confirm password	
r9770[0...2]	r9870[0...2]	Version, drive–autonomous safety function	–
r9771	r9871	Shared functions	–
r9772	r9872	Status	–
r9773	–	Status (Control Unit + Motor Module)	–
r9774	–	Status (group safe standstill)	–
r9780	r9880	Monitoring cycle	–
r9794	r9894	Cross monitoring list	–
r9795	r9895	Diagnostics for STOP F	–
r9798	r9898	Actual checksum Safety Integrated parameters	–
p9799	p9899	Reference checksum, Safety Integrated parameters	Safety Integrated commissioning (p0010 = 95)

Overview of parameters and function diagrams

Function diagram overview

- 2800 Parameter manager
- 2802 Monitoring functions and faults/alarms
- 2804 Status words
- 2810 Safe Torque Off (STO)
- 2814 Safe Brake Control (SBC)

Also see Chapter 8.2.2 "Description of parameters".

Note

The SINAMICS Safety Integrated parameters are described in the following document:

Reference: /LH1/ SINAMICS S List Manual

4.8 Acceptance test and acceptance report

4.8.1 General information about acceptance

Also see Chapter 9.5 of this Function Manual.

Acceptance test

The machine manufacturer must carry out an acceptance test for the activated Safety Integrated functions (SI functions) on the machine.

During the acceptance test, all the limit values entered for the enabled SI functions must be exceeded to check and verify that the functions are working properly.



Warning

The acceptance test must only be carried out after the safety functions have been commissioned and power on reset.

SINAMICS firmware versions

For SINUMERIK software releases 1.3 and 1.4/2.4, different firmware versions of the components involved in the safety functions (NCU, NX, Motor Modules) can be mixed without having to adapt the firmware versions.

From SINUMERIK software release 1.5/2.5 onwards, the following applies:

The firmware versions of the Motor Modules involved in the safety functions must be adapted to the SINAMICS firmware version of the NCU. This is performed automatically during startup if parameter p9826 (firmware, automatic) is set to 1 (default setting). When Safety Integrated is used, parameter p9826 (firmware, automatic) must be set to 1 – and must not be re-parameterized. For the acceptance test for Safety Integrated, the safety firmware versions of **all** of the Motor Modules involved in the safety functions must be read out, logged and checked against the following list.

<http://support.automation.siemens.com/WW/view/de/28554461>

Every line in the table represents a permissible combination of safety firmware versions.

4.8 Acceptance test and acceptance report

Authorized persons, acceptance report

Each SI function must be tested and the results documented and signed in the acceptance report by an authorized person. The acceptance report must be kept with the machine logbook.

In this context this is a person who is authorized by the machine manufacturer and who has adequate professional training and knowledge of the safety functions in order to conduct the acceptance test in a proficient manner.

Note

- The information and descriptions regarding commissioning must be carefully observed.
 - If any parameters are altered by SI functions, the acceptance test must be carried out again and documented in the acceptance report.
-

Contents of a complete acceptance test**Documentation (see Chapter 4.8.2)**

Machine documentation including the SI functions.

1. Machine description and overview diagram (see Tables 4-4 and 4-5)
2. Safety Integrated functions for every drive (see Table 4-6)
3. Description of safety equipment (see Table 4-7)

Functional test (see Chapter 4.8.3)

Check the individual SI functions used.

1. "Safe Torque Off" function, (refer to Table 4-8)
2. "Safe Stop 1" function (refer to Table 4-9)
3. "Safe brake control" function (see Table 4-10)

Completing the report (see Chapter 4.8.6).

Record the commissioning procedure and provide countersignatures.

1. Check the safety parameters
2. Record the checksums
3. Verify the data backups (archives)
4. Countersignatures

Appendix

Measurement records for functional test parts 1 and 2.

- Alarm logs
- Trace recordings

4.8.2 Documentation

Table 4-4 Machine description and overview diagram

Designation	
Type	
Serial number	
Manufacturer	
End customer	
Electrical axes	
Other axes	
Spindles	
Block diagram of the machine	

4.8 Acceptance test and acceptance report

Table 4-5 Values from relevant machine data

Parameter		FW version	—
Control Unit		r0018 =	—
Parameter Motor Modules	Drive number	FW version	SI version
		r0018 =	r9770 =
		r0128 =	r9870 =
		r0128 =	r9870 =
		r0128 =	r9870 =
		r0128 =	r9870 =
		r0128 =	r9870 =
		r0128 =	r9870 =
Parameter Motor Modules	Drive number	SI monitoring clock cycle Control Unit	SI monitoring clock cycle Motor Module
		r9780 =	r9880 =
		r9780 =	r9880 =
		r9780 =	r9880 =
		r9780 =	r9880 =
		r9780 =	r9880 =
		r9780 =	r9880 =

Table 4-6 SI functions for each drive

Drive number	SI function

4.8 Acceptance test and acceptance report

4.8.3 Acceptance test for Safe Torque Off (STO)

The function test must be carried out individually for each drive (as far as the machine allows).

"Safe Torque Off" (STO) function

This test comprises the following steps:

Table 4-8 "Safe Torque Off" (STO) function

No.	Description	Status
1.	Initial state	
	• Drive in the "Ready" state (p0010 = 0)	
	• STO function enabled (p9601.0 = 1, p9801.0 = 1)	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)	
	• r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)	
	• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)	
	• For terminal grouping for "Safe Torque Off": r9774.0 = r9774.1 = 0 (STO deselected and inactive – group)	
2.	Run the drive	
3.	Ensure that the correct drive is running	
4.	Select STO when issuing the traversing command	
Note: The acceptance test must take place individually for each activation configured.		
5.	Check the following:	
	• The drive "coasts" to a standstill or is braked and stopped by the mechanical brake – if a brake is available and is configured (p1215, p9602, p9802)	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 1 (STO selected and active – CU)	
	• r9872.0 = r9872.1 = 1 (STO selected and active – MM)	
	• r9773.0 = r9773.1 = 1 (STO selected and active – drive)	
	• For terminal grouping for "Safe Torque Off": r9774.0 = r9774.1 = 1 (STO selected and active – group)	
6.	Deselect STO	

Table 4-8 "Safe Torque Off" (STO) function

No.	Description	Status
7.	Check the following:	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)	
	• r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)	
	• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)	
	• For terminal grouping for "Safe Torque Off": r9774.0 = r9774.1 = 0 (STO deselected and inactive – group)	
	• r0046.0 = 1 (drive in "power-on inhibit" state)	
8.	Acknowledge power-on inhibit and run the drive	
9.	Ensure that the correct drive is running	
	The following is tested: <ul style="list-style-type: none"> • Correct DRIVE-CLiQ wiring between Control Unit and Motor Modules • Correct assignment, drive No. – Motor Module – motor • The hardware is functioning correctly • Correct wiring of the shutdown paths • Correct STO terminal assignment on the Control Unit • Correct STO grouping (if available) • Correct parameterization of the STO function • Routine for the forced checking procedure of the shutdown paths 	

4.8.4 Acceptance test for Safe Stop 1, time-controlled (SS1)

This test comprises the following steps:

Table 4-9 "Safe Stop 1" function (SS1)

No.	Description	Status
1.	Initial state	
	• Drive in the "Ready" state (p0010 = 0)	
	• STO function enabled (p9601.0 = 1, p9801.0 = 1)	
	• SS1 function enabled (p9652 > 0, p9852 > 0)	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)	
	• r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)	
	• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)	
	• r9772.2 = r9872.2 = 0 (SS1 not requested – CU and MM)	
2.	Run the drive	

4.8 Acceptance test and acceptance report

Table 4-9 "Safe Stop 1" function (SS1)

No.	Description	Status
3.	Ensure that the correct drive is running	
4.	Select SS1 when the run command is issued	
Note: The acceptance test must take place individually for each activation configured.		
5.	Check the following:	
	– The drive is braked along the OFF3 ramp (p1135)	
	– Before the expiry of the SS1 delay time (p9652, p9852), the following applies:	
	• r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)	
	• r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)	
	• r9772.2 = r9872.2 = 1 (SS1 active – CU and MM)	
	• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)	
	• r9773.2 = 1 (SS1 active – drive)	
	– STO is initiated after expiry of the SS1 delay time (p9652, p9852).	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 1 (STO selected and active – CU)	
	• r9872.0 = r9872.1 = 1 (STO selected and active – MM)	
	• r9772.2 = r9872.2 = 0 (SS1 inactive – CU and MM)	
	• r9773.0 = r9773.1 = 1 (STO selected and active – drive)	
	• r9773.2 = 0 (SS1 inactive – drive)	
6.	Deselect SS1	
7.	Check the following:	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)	
	• r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)	
	• r9772.2 = r9872.2 = 0 (SS1 inactive – CU and MM)	
	• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)	
	• r9773.2 = 0 (SS1 inactive – drive)	
	• r0046.0 = 1 (drive in "power-on inhibit" state)	
8.	Acknowledge power-on inhibit and run the drive	
9.	Ensure that the correct drive is running	
	The following is tested:	
	• Correct parameterization of the SS1 function	

4.8.5 Acceptance test for Safe Brake Control (SBC)

"Safe Brake Control" function (SBC)

This test comprises the following steps:

Table 4-10 "Safe brake control" (SBC) function

No.	Description	Status
1.	Initial state	
	• Drive in the "Ready" state (p0010 = 0)	
	• STO function enabled (p9601.0 = 1, p9801.0 = 1)	
	• SBC function enabled (p9602 = 1, p9802 = 1)	
	• Vertical axis: Brake as in sequential control (p1215 = 1)	
	• No vertical axis: Brake always open (p1215 = 2)	
	• Vertical axis: Mechanical brake is closed	
	• No vertical axis: Mechanical brake is open	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)	
	• r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)	
2.	Run drive (the closed brake is opened)	
	Ensure that the correct drive is running	
3.	Select STO/SS1 during the traversing command	
Note:		
The acceptance test must take place individually for each activation configured.		
5.	Check the following:	
	• Drive is braked and stopped by the mechanical brake.	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 1 (STO selected and active – CU)	
	• r9872.0 = r9872.1 = 1 (STO selected and active – MM)	
	• r9773.0 = r9773.1 = 1 (STO selected and active – drive)	
	• r9772.4 = r9872.4 = 1 (SBC requested – CU and MM)	
6.	Deselect STO	

4.8 Acceptance test and acceptance report

Table 4-10 "Safe brake control" (SBC) function, continued

No.	Description	Status
7.	Check the following:	
	<ul style="list-style-type: none"> Vertical axis: Mechanical brake remains closed No vertical axis: Mechanical brake is opened 	
	• No safety faults and alarms (r0945, r2122)	
	• r9772.0 = r9772.1 = 0 (STO deselected and inactive – CU)	
	• r9872.0 = r9872.1 = 0 (STO deselected and inactive – MM)	
	• r9773.0 = r9773.1 = 0 (STO deselected and inactive – drive)	
	• r9772.4 = r9872.4 = 0 (SBC not requested – CU and MM)	
	• r0046.0 = 1 (drive in "power-on inhibit" state)	
8.	Acknowledge power-on inhibit and run the drive (Vertical axis: mechanical brake is opened)	
9.	Ensure that the correct drive is running	
	The following is tested: <ul style="list-style-type: none"> The brake is correctly connected The hardware is functioning correctly The SBC is parameterized correctly Routine for forced checking procedure of the brake control 	

4.8.6 Completing the log

Safety Integrated parameters

	Were the specified values checked?	
	Yes	No
Control Unit		
Motor Module		

Checksums

Axis/spindle		Checksum (8 hex)	
Name	Drive number	Control Unit	Motor Module

Data backup

	Storage device			Archiving location
	Type	Designation	Date	
Parameter				
PLC program				
Circuit diagrams				

Countersignatures**System startup engineer**

This confirms that the tests and checks have been correctly carried out.

Date	Name	Company/ Department	Signature

4.8 Acceptance test and acceptance report**Machine manufacturer**

This confirms that the parameterization recorded above is correct.

Date	Name	Company/ Department	Signature

Basics on the Safety Functions Integrated in the System/Drive

5

Motion monitoring functions with a higher-level control

The motion monitoring functions are carried out using a higher-level control. The higher-level control and the drive are the two monitoring channels. Just like the monitoring functions integrated in the drive, also here, each channel must be assigned a shutdown path so that when a fault develops, the pulses can be cancelled independently of the other channel.

- The shutdown path of the Control Unit is assigned to the drive monitoring channel.
- The shutdown path of the Motor Module is assigned the control monitoring channel.

5.1 Monitoring cycle

Setting the monitoring clock cycle time

The axial safety-related functions are monitored cyclically in the monitoring clock cycle that can be set jointly for all axes/spindles using the following machine data:

for 840D sl

MD 10090: \$MN_SAFETY_SYSCLOCK_TIME_RATIO

The specified clock cycle is checked and rounded-off to the next possible value when the control boots and every time the machine data changes.

The resulting monitoring clock cycle is displayed using MD 10091:

\$MN_INFO_SAFETY_CYCLE_TIME

(refer to Chapter 8.1.2, "Description of machine data").

for SINAMICS S120

p9500 SI motion monitoring clock cycle (Control Unit)

(refer to Chapter 8.2.2, "Description of parameters")

5.1 Monitoring cycle

**Warning**

The monitoring clock cycle determines the response time of the safety-related functions. It must therefore be selected to be ≤ 25 ms. The higher the monitoring cycle setting, the greater the amount by which the monitored limit value is violated in the event of an error and the more that the drive(s) overshoots.

5.2 Crosswise data comparison

The continuous comparison of the safety-related data in the monitoring channels carried out in the SI monitoring clock cycle is known as "crosswise data comparison" (CDC).

The following apply to the axial monitoring functions: In the case of "non-steady-state" data, tolerance values defined using machine data are used by which amount the results of the two channels may deviate from one another without initiating a response (e.g. tolerance for crosswise data comparison of actual positions).

A distinction is made between:

- Drive CDC between the drive and Motor Module (refer to Chapter 4 "Safety Functions Integrated in the Drive").
- Axis CDC between the NCK and drive (refer to Chapter 6 "Safety Functions Integrated in the System/Drive").
- Communication CDC between the NCK and PLC (refer to Chapter 7.2, "Connecting I/O via PROFIsafe").
- SPL CDC between the NCK and PLC (refer to Chapter 7.3, "Safe programmable logic (SPL)").

Error response

If the crosswise data comparison identifies an error, then this results in a stop response (refer to Chapter 6.3, "Safe Stops A–F").

In addition, safety alarms are output.

Note

If SGEs are quickly changed over several times this can initiate a STOP F.

Displays the crosswise data comparison clock cycle

To display the actual crosswise data comparison cycle time between the NCK and drive, the axial MD 36992 is used: \$MA_SAFE_CROSSCHECK_CYCLE and the general MD 10092: \$MN_INFO_CROSSCHECK_CYCLE_TIME. If the monitoring clock cycle is modified, then the crosswise comparison clock cycle is also changed.

5.3 Forced checking procedure

Forced checking procedure, general (extract from /6/)

"...A forced checking procedure must be carried out for all static (steady-stage) signals and data. Within the required time (8 h), the state must change from a logical 1 to a logical 0 – or vice versa. If the state remains static in a fault situation, then this is detected at the latest as a result of this forced checking procedure and the subsequent comparison.

A forced checking procedure must be used, e.g. for components that are required to stop a process (e.g. contactors and power semiconductors) – the so-called shutdown path and for the shutdown condition. Generally, it is not possible to test a shutdown condition, e.g. violation of a limit value criterion, using other methods such as e.g. crosswise data comparison, when the machine is in an acceptable (good) condition. This also applies to errors along the entire shutdown path including associated hardware and software and circuit-breakers.

By integrating a test stop every eight hours with a comparison and expected status, faults can also be detected when the machine is in an acceptable (good) condition...."

(Comment: Acceptable (good) condition means that there are no machine faults that are apparent to the operator).

(Comment: For Safety Integrated, a forced checking procedure interval of one year is permissible)

Forced checking procedure with Safety Integrated

The forced checking procedure is used to detect faults/errors in the software and hardware of the two monitoring channels. In order to do this, the safety-related parts in both channels must be processed at least once during a defined period in all safety-related branches. Any faults/errors in the monitoring channel would cause deviations and will be detected by the cross-wise data comparison.

For Safety Integrated, the forced checking procedure interval is max. 1 year. This involves components from the SINUMERIK 840D sl/SINAMICS S120 system. Possible requirements relating to shorter forced checking procedure intervals of safety-related components (e.g. PROFIsafe I/O modules, sensors such as e.g. emergency stop buttons, actuators such as e.g. brakes, etc.) are not influenced.

The forced checking procedure must be initiated by the user or integrated in the process as an automatic procedure, e.g.:

- When the axes are stationary after the system has been powered-up
- When the protective door is opened
- In defined cycles (e.g. every 8 hours – a maximum of once every year is permissible).
- In the automatic mode, dependent on the time and event.

The forced checking procedure also includes testing the safety-related sensors and actuators at the safety-related inputs/outputs. In this case, the entire circuit including the "Safe Programmable Logic" (SPL) is tested to ensure that it is correctly functioning (refer to Chapter 7.1.2, "Forced checking procedure of SPL signals").



Warning

The test interval duration of max. 1 year may only be extended under the following conditions:

- In the time after the test interval has expired, no hazards for personnel may be allowed to occur – they must be completely excluded (e.g. the protective door is closed and is also interlocked)
- After the test interval has expired, before a possible hazard to personnel (e.g. for a request to open a protective door), a test stop or a forced checking procedure must be carried out to absolutely ensure the availability of the shutdown paths and the safety-related inputs/outputs.

This means that for the duration of the automatic mode (with the protective door closed and interlocked), a fixed cycle is not strictly specified. After expiry of the time, the forced checking procedure can be carried out before the next opening of the protective door.

Note

If the crosswise data comparison identifies an error, then this results in a stop response (refer to Chapter 6.3, "Safe Stops A–F").

5.4 Actual value conditioning

5.4.1 Encoder types

Basic types

The following basic encoder types can be used with a drive module to implement safety-related operation:

1. Incremental encoder via a Sensor Module and DRIVE-CLiQ with sinusoidal voltage signals A and B (signal A is shifted with respect to B through 90° and a reference signal R, e.g.: ERN 1387, LS 186, SIZAG2)
2. Absolute encoder via Sensor Module and DRIVE-CLiQ with an EnDat interface and incremental sinusoidal voltage signals A and B (signal A is shifted with respect to B through 90°), e.g.: EQN 1325, LC 181
3. Motor encoder (IMS) with integrated DRIVE-CLiQ interface, with the properties corresponding to 1. or 2.
4. Direct encoder (DMS, e.g. linear scale) with integrated DRIVE-CLiQ interface, with the properties corresponding to 1. or 2.

Combining encoder types

Various combinations can be derived from the basic types.

Table 5-1 Combining encoder types

Incremental encoder		Absolute encoders		Comments
at the motor	at the load	at the motor	at the load	
x				1–encoder system
		x		1–encoder system
	x	x		2–encoder system
x	x			2–encoder system
x			x	2–encoder system
		x	x	2–encoder system
Note: x → encoder connection				

1–encoder system

For a 1–encoder system, the incremental or absolute encoder of the motor is used for the safety–related actual values of the NC and drive.

The actual values are generated in a safety–related fashion either directly in the encoder or in the Sensor Module and are provided – with no–reaction – to the NCK and the drive using safety–related communications via DRIVE–CLiQ.

Special feature regarding linear motors:

For linear motors, the motor encoder (linear scale) is also the measuring system at the load. IMS and DMS are one measuring system. The connection is made at the IMS input of the Sensor Module or directly via DRIVE–CLiQ.

Significance of the coarse encoder position:

For a 1–encoder system, for all position monitoring functions, the accuracy of the redundant actual value must be assumed to apply. This accuracy depends on the encoder evaluation. For all encoder evaluation functions that can be used with Safety Integrated (SME, SMC, motor with DRIVE–CLiQ), the coarse encoder pulses are redundantly counted including the quadrupling (coarse encoder position). The machine manufacturer must select the appropriate encoder with the necessary encoder pulse number for his particular requirements. To do this, the encoder resolution must be converted to the accuracy on the load side. This conversion is dependent on the type of encoder mounting and the type of axis. Further, gearbox factors, the spindle pitch for linear axes and the radius of the rotary table for rotary axes must also be taken into account.

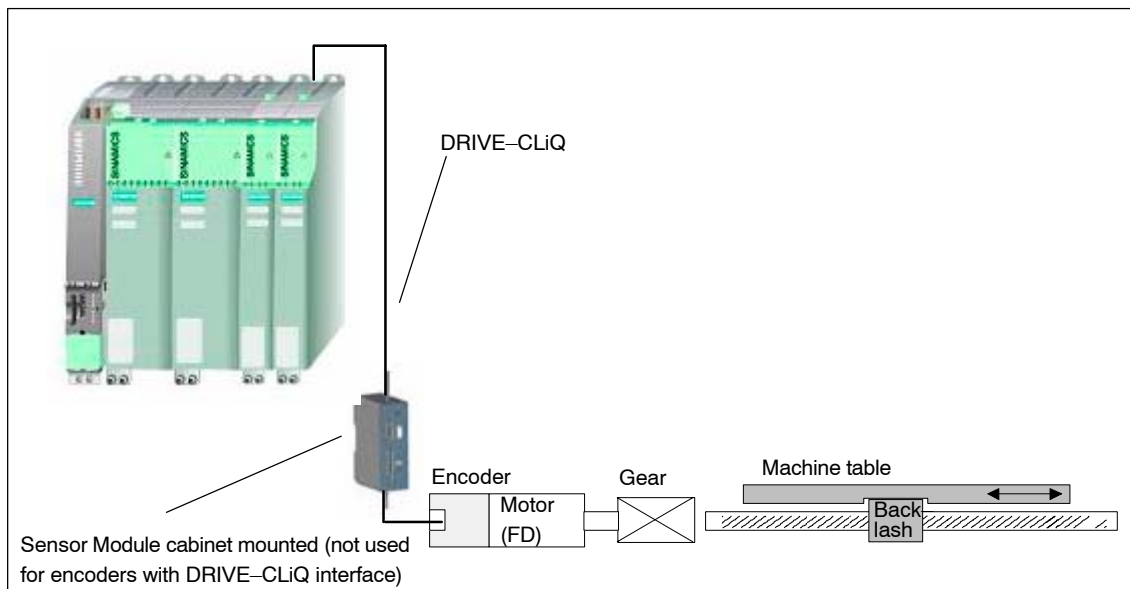


Fig. 5-1 1–encoder system for a feed drive (FD)

5.4 Actual value conditioning

**Warning**

The specific residual risks for 1 encoder systems (refer to Chapter 3.5 "Residual risks") must be carefully taken into consideration.

2-encoder system

In this case, the safety-related actual values for an axis are supplied from 2 separate encoders. In standard applications, the drive evaluates the motor encoder (IMS) and the NC, the measuring system (DMS). The actual values are generated in a safety-related fashion either directly in the encoder or in the Sensor Module and are provided – with no-reaction – to the NCK and the drive using safety-related communications via DRIVE-CLiQ. A separate connection or a separate Sensor Module is required for every measuring system.

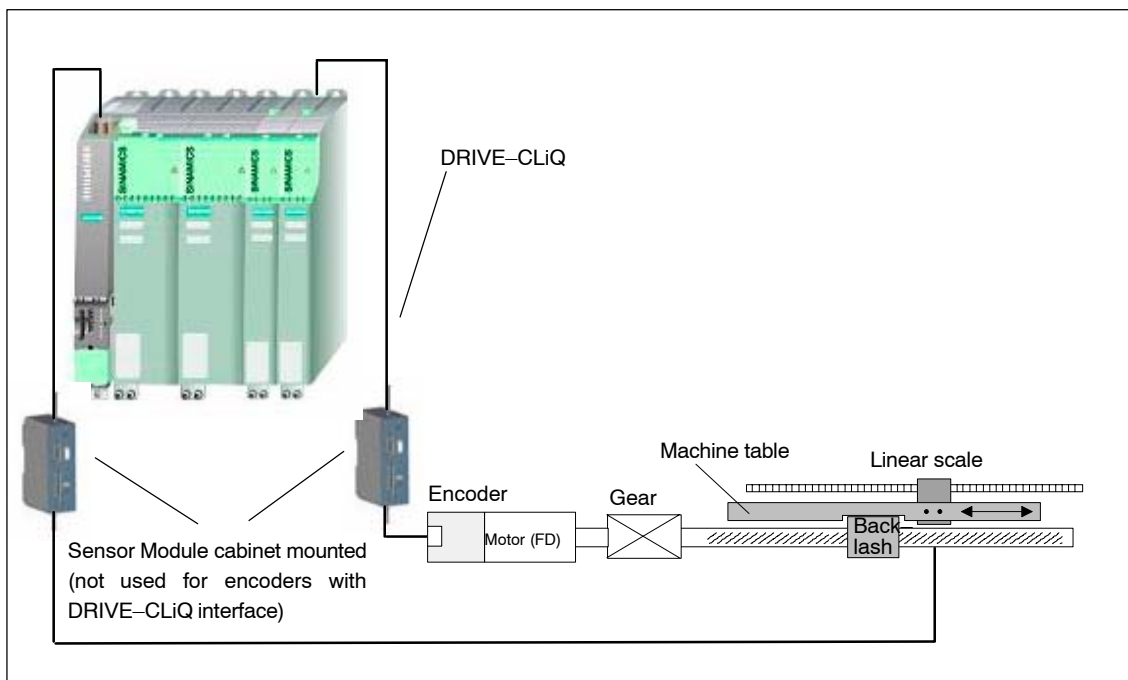


Fig. 5-2 2-encoder system for a feed drive (FD), connected through 2 Sensor Modules

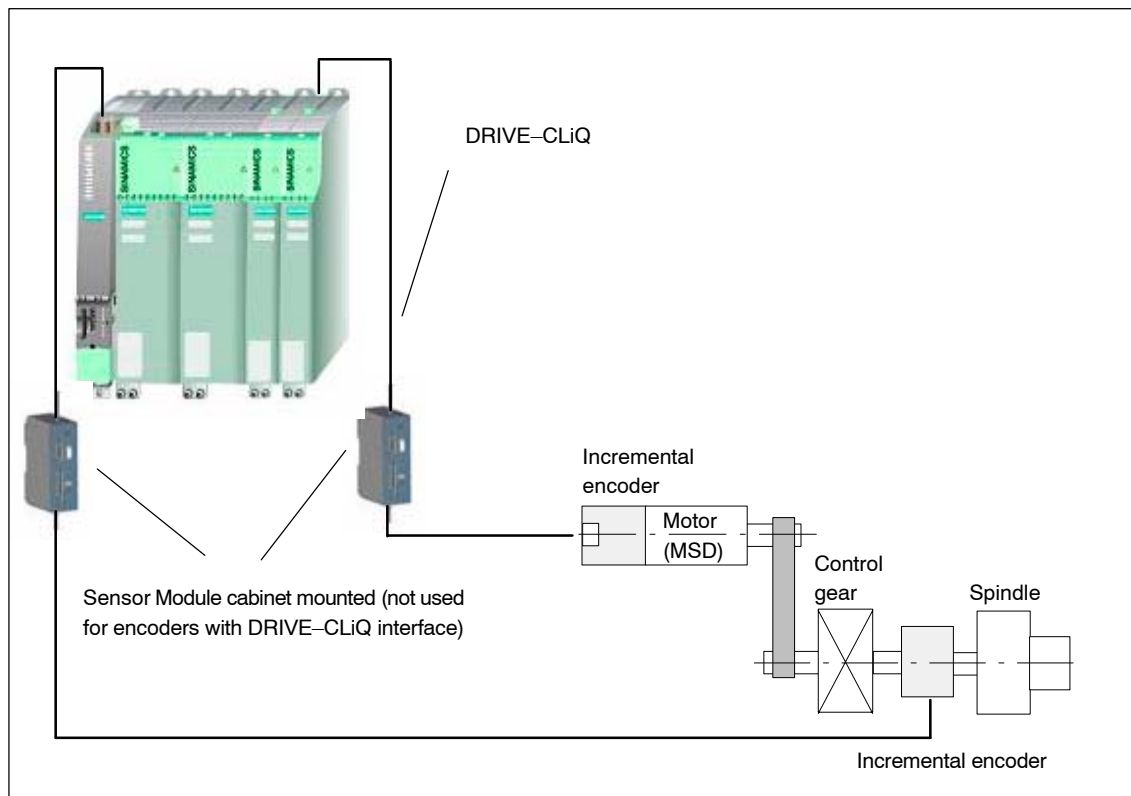


Fig. 5-3 2-encoder system for the main spindle, connected via 2 Sensor Modules

Note

For systems with slip, refer to Chapter 5.4.6, "Actual value synchronization (slip for 2-encoder systems)".

5.4.2 Encoder adjustment, calibrating the axes

Adjusting the motor encoder

Generally, for 1-encoder systems, the integrated encoder is an integral component of the motor (the encoder is adjusted to match the motor). Data relating to distance, speed and rotor position (for synchronous drives) is obtained from one encoder. It is no longer possible to adjust the encoders in motor measuring systems in the conventional sense.

5.4 Actual value conditioning

Calibrating the machine

The machine zero and encoder zero are calibrated purely on the basis of the offset value (the machine must be calibrated). This procedure must be carried out for both absolute and incremental encoders.

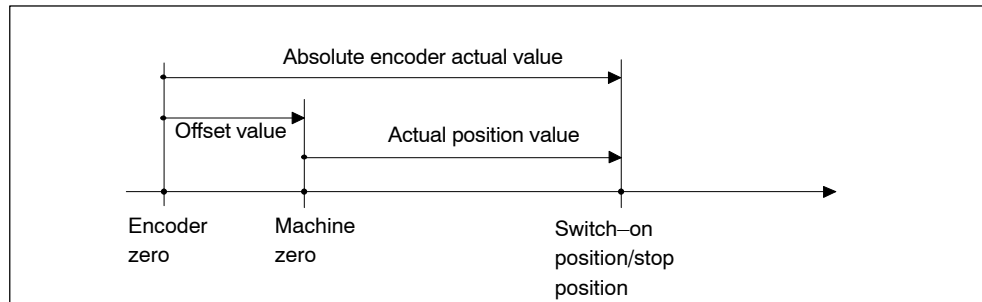


Fig. 5-4 Positions and actual values

When calibrating the machine, a known or measured position is approached using a dial gauge, fixed stop, etc. and the offset determined. This offset is then entered into the appropriate machine data. Calibration must always be carried out for position-controlled (closed-loop) axes/spindles.

References: /IAD/, Commissioning Manual SINUMERIK 840D sl
/FBD/, Description of Functions, SINUMERIK 840D sl,
R1, "Reference point approach"

5.4.3 Axis states

"Axis not referenced" state

The axis state "axis not referenced" is reached after the power supply has been powered-up and the drive and control system have completely booted. This state is indicated using the axis-specific interface signal "reference point reached" as follows:

Interface signal

"Reference point reached" = "1" Axis state "Axis referenced"

"Reference point reached" = "0" Axis state "**Axis not referenced**"

for 840D sl DB31-61, DBX60.4/DBX60.5

(refer to Fig. 5-5 "Axis states when referencing")

"Axis referenced" state

For **incremental encoders**, the position actual value is lost when the NC is powered-down. When the NC is powered-up, a reference point approach must be carried out. If this is executed correctly, then the axis is referenced and goes into the "axis referenced" state (refer to 5-5 "Axis states when referencing").

Contrary to incremental encoders, **absolute encoders** do not require a reference point approach after the NC has been powered-up. These encoders track the absolute position, e.g. using a mechanical gear, both when powered-up and powered-down. The absolute position is transferred implicitly via a serial interface when the NC is powered-up. After the position data has been transferred and the offset value has been taken into account, the axis also goes in the axis state "axis referenced" (refer to Fig. 5-5 "Axis states when referencing").

This axis state "axis referenced" is indicated using the axis-specific interface signal "reference point reached" as follows:

Interface signal

"Reference point reached" = "1" Axis state **"Axis referenced"**

"Reference point reached" = "0" Axis state "Axis not referenced"

for 840D sl DB31-61, DBX60.4/DBX60.5

References: /IAD/, Commissioning Manual, SINUMERIK 840D sl

"Axis safely referenced" state

In order to reach the axis state "axis safely referenced", the axis state "axis referenced" must have been reached, and either

- the user confirms the current position using the user agreement (refer to Chapter 5.4.4 "User agreement")

or

- a saved and set user agreement and saved stop position when the system was powered-down must exist. The position associated with the saved data must match the current position within a tolerance window. This is checked both in the drive and in the NC.

(refer to Fig. 5-5 "Axis states when referencing").

The axis state "axis safely referenced" is displayed using the SGA "axis safely referenced". A safety-related position evaluation can only be carried out for the SE and SN functions after this state has been reached.

Saved user agreement

The state of the user agreement function is saved in non-volatile memories. This saved user agreement forms, together with the stop position, also saved in a non-volatile fashion the prerequisite for the axis state "axis safely referenced".

5.4 Actual value conditioning

Saved stop position

The saved stop position data is combined with the permanently saved user agreement to form the previous history.

The following must be noted when the stop position is saved:

The following applies when SE/SN is active:

- The stop position is also cyclically saved.
- If the axis is moved with the system powered-down, then the saved stop position no longer matches the current position.

As described under "axis safely referenced" the "axis safely referenced" state can also be achieved using a saved and set user agreement and a saved stop position.

The following conditions must be fulfilled:

- The saved user agreement must be available.
- The difference between the "reference position" (power-on position with absolute measuring systems or reference position for incremental measuring systems) and the saved stop position (including the traversing distance to the reference point with ERN) must be within a tolerance window specified using the appropriate machine data.

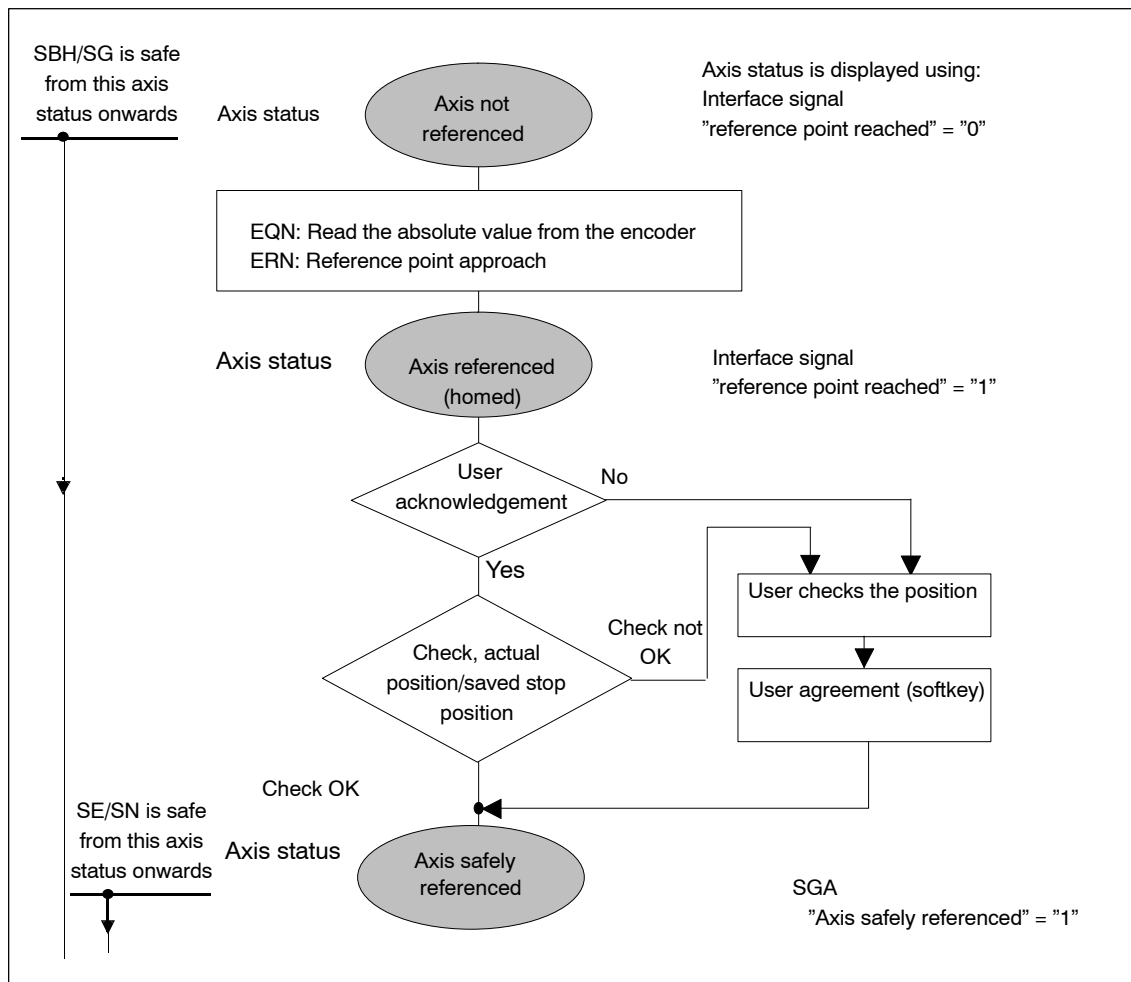


Fig. 5-5 Axis states when referencing

5.4.4 User acknowledgement

Description

With a user agreement, an appropriately authorized person confirms that the currently displayed SI actual position of an axis corresponds to the actual position at the machine.

This can be checked by traversing the axis to a known position (e.g. a visual mark) or the axis is adjusted/calibrated and the SI actual position is therefore compared in the "user agreement" screen.

An axis/spindle with integrated safety functions can have the following status:

User agreement = yes, or

User agreement = no

5.4 Actual value conditioning

All safety axes are listed in the HMI display "user agreement" for which safety end stops and/or safety cams have been activated. The following data are displayed:

- Machine-axis name
- SI position
- User acknowledgement

When does a user agreement have to be given?

A user agreement is always required if an axis/spindle is to be monitored for SE, SN.

A user agreement is only required:

- when the axis/spindle is commissioned for the first time.
- when the user intends or needs to again manually and safely reference the axis/spindle.
- If, after Power On, the stop position did not correspond with the actual position and the control cancelled the user agreement.
- after parking an axis/spindle
(only if the change in position is greater than that defined using MD 36944: \$MA_SAFE_REFP_POS_TOL tolerance actual value comparison (referencing) is defined).

Note

An axis/spindle must have the status User agreement = yes before the SN and SE functions can be used.

For axes/spindles without the safety "SE" and "SN" functions, the saved stop position is not evaluated.



Warning

If the drive has not been safely referenced and a user agreement has not been given, then the following applies:

- The "Safe software cams" and/or "Safe cam track" are active, but are not safety-relevant.
 - The "Safe software limit switches" are not active.
-

The user agreement can only be set by an authorized user.

The user agreement can be cancelled by the user or as a result of a function being selected (e.g. new gear stage) or also an incorrect state (e.g. inconsistency in the user agreement between the NC and drive). When the user agreement is cancelled, the axis state "axis safely referenced" is always reset (refer to Fig. 5-5 "Axis states when referencing").

Interlocking the user agreement

Before a user agreement can be issued, the interlock must be cancelled:

- KeySwitch
in setting 3 → the user agreement can be issued

After the user agreement has been issued, the interlocking must be again set (e.g. key switch position 3 must be left and the key withdrawn).

5.4.5 Taking into account control gears

The possible gearbox ratios must be known in order that the NC and drive can evaluate the position actual values referred to the load.

For this purposes, various gearbox ratios can be selected on an axis-for-axis basis in the machine data and selected using the "Safety-related inputs/outputs" (SGEs/SGAs).

The following points must be carefully observed for drives with control gears (these are generally used with spindles).

- If the drive is operated with an (indirect) encoder (motor measuring system), i.e. the safety-related actual value for the NCK and drive are derived from the same measuring system, then the gearbox ratios (gearbox stage selection for Safety Integrated) must also be selected for both monitoring channels. The state of the SGE signal ratio selection (bits 0..2) is not subject to a crosswise data comparison; however, the safety-related actual values from the NCK and drive are compared to evaluate if there is any deviation (< 36942 \$MA_SAFE_POS_TOL or parameter p9542 SI motion, actual value comparison tolerance (crosswise) (Control Unit).
- If the drive is operated with an (indirect) motor encoder and a (direct) spindle encoder, the safety-related actual values are derived from the direct encoder and those of the drive from the indirect encoder. For the direct encoder, the gearbox changeover is not relevant and the gearbox stage changeover only has to be configured/engineered for the drive.
- Using the two machine data fields
36921[0..7] \$MA_SAFE_ENC_GEAR_DENOM[n] denominator, gearbox encoder/load and
MD 36922[0..7] \$MA_SAFE_ENC_GEAR_NUMERA[n] numerator, gearbox encoder/load
or
p9521[0..7] SI motion gearbox encoder/load denominator (Control Unit) and
p9522[0..7] SI motion gearbox encoder/load numerator (Control Unit)
8 different gearbox stage pairs for NCK/drive can be defined. For this definition, there is no special function for an index value – e.g. interdependency on the operating mode of the spindle. These 8 pairs must be parameterized and selected depending on the encoder configuration.

5.4 Actual value conditioning

- As a result of the gearbox stage changeover, the encoder evaluation for the safety-related actual values change. Ideally, the gearbox stage for Safety Integrated is changed-over at standstill. However, this is generally not in-line with what is required in practice. This means that the actual value offset when changing-over the gearbox stage (e.g. using oscillation) may not be greater than the already mentioned actual value tolerance window (MD 36942/p9542).
- If, for the axis with control gear, position-dependent monitoring functions are activated – such as SE or SN – the user agreement (assuming that it was previously set) is withdrawn when changing-over the gearbox ratio and the SGA "axis safely referenced" is set to 0. When the gearbox stage is changed from the PLC and/or by selecting a new ratio, a new gearbox ratio is detected using the appropriate SGEs.
- After the gearbox stage has been selected, the spindle must be re-synchronized. When re-synchronizing the spindle, the two safety-related actual values (NCK and drive) are re-initialized with the newly synchronized actual value. A possible difference that was previously present between the two safety-related actual values is therefore corrected.
- In order to be able to re-use the SN or SE function after the gearbox ratio has been selected (changed), the user must bring the spindle into the state "axis safely referenced" – the user agreement must be re-issued.
- For 2-encoder systems, the gearbox ratio does not have to be selected in a safety-related fashion and can be implemented through one channel. On the other hand, for a 1-encoder system, the ratio selection must be implemented using safety-related technology – i.e. using two channels.



Warning

When a new stage is selected for a control gear (the ratio changed), an axis is parked or the mounting situation is modified (encoder and motor replaced), this means that the load and encoder have been decoupled. The NC and drive cannot detect this. The state "axis safety referenced" is no longer applicable. The user is responsible in bringing the axis back into the "axis safely referenced" state if the functions "safe software limit switch" or "safe cams" are used.

5.4.6 Actual value synchronization (slip for 2–encoder systems)

Description of function

When a 2–encoder system is used, SI actual values from the NC and the drive drift apart for systems that have inherent slip. The reason for this is that the drive evaluates the motor measuring system and the NC evaluates the direct measuring system after the gearbox.

There are the following two alternatives in order to avoid this:

- 1–encoder system without actual value synchronization
- 2–encoder system with actual value synchronization and therefore additional monitoring of the load side

Slip tolerance

The actual value is synchronized through two channels. In both channels, machine data 36949: \$MA_SAFE_SLIP_VELO_TOL/parameter p9549 "SI motion slip velocity tolerance" is used in which the maximum offset between the NCK and drive actual value is entered as velocity. The tolerance value entered in MD 36942: \$MA_SAFE_POS_TOL is not relevant.

For the actual value synchronization, both channels correct their SI actual position to half the determined actual value difference. Please note that the two SI actual positions no longer display the correct absolute position. The NC actual position and the two SI actual positions are different.

The actual values are synchronized in the crosswise data comparison clock cycle. Actual value synchronization is also performed when a crosswise data comparison of the SI actual position outputs an error.

Actual values are also synchronized after "referencing" and for "parking axis".

The currently determined and the maximum SI speed difference since the last reset are displayed in the axis–specific service screen for diagnostic purposes.

In order to define the slip tolerance, in MD 36949: \$MA_SAFE_SLIP_VELO_TOL the maximum differential speed is set. As a result of an action, such as e.g. maximum acceleration when starting, gearbox stage changes with oscillation, a situation is created where the actual values drift apart. This value can be taken as nominal value from the diagnostics screen "Maximum velocity difference", multiplied by a factor of 1.5 and then entered into MD 36949.

Note

Actual values are only synchronized when there is an actual value difference between the two channels of 2 µm or 2 m degrees in each SI monitoring clock cycle.

5.4 Actual value conditioning

Limitations

The two SI actual positions no longer display the correct absolute machine position. The correct position can now only be read out via the NC actual position.

The safety monitoring functions SG, SBH, SBR and "n<n_x" still only respond to actual value changes from the particular actual value acquisition channel – not to changes in the actual value resulting from the actual value synchronization. A single-channel SG violation only initiates an alarm in the channel in which this speed violation was detected. The associated stop response is therefore still initiated through two channels.

SGA "n<n_x" can also assume different static states in the two monitoring channels.

Note

It is not possible to activate the safe SE and SN functions for an axis/spindle where slip can occur between the motor and the load.

Activating

The actual value synchronization is selected by setting bit 3 in machine data 36901: \$MA_SAFE_FUNCTION_ENABLE or parameter p9501: "SI motion, enable safety-related functions". In addition, SI function "SBH/SG monitoring" must also be enabled.

Actual value synchronization is only permissible if a monitoring function with absolute reference has not been enabled. If SE and/or SN are also selected, power on Alarms 27033 and F01688 are also output when booting.

The actual value synchronization is only permissible for 2-encoder systems. If this function is enabled for a single-encoder system, Alarm 27033/F01688 is output.

5.4.7 Encoder limit frequency

For safety-related operation, it is not permissible that the encoder limit frequency of 500 kHz exceeded.

For this purposes, Safety Integrated monitors for the encoder limit frequency being exceeded depending on the situation (depending on the context); when the encoder limit frequency is exceeded, an appropriate alarm is output (refer to Chapter 6.5 "Safely reduced speed")

5.5 Enabling the safety-related functions

Global enable

SINUMERIK Safety Integrated (SI) with the safety-related functions is enabled using options.

The enable signal determines the number of axes/spindles for which SI can be activated. Using an additional options, in addition, the number of possible SPL-SGE/SGAs is defined.

The SH/SBC/SS1 function is completely implemented in SINAMICS S120 and is, as a function integrated in the drive, included in the basic drive scope.

Enabling safety-related functions

Which safety functions are to be effective can be individually selected for each axis using the following machine data:

for 840D sl

MD 36901: \$MA_SAFE_FUNCTION_ENABLE

(refer to Chapter 8.1, "Machine data for SINUMERIK 840D sl")

for S120

p9501: SI motion enable safety functions (Control Unit)

(refer to Chapter 8.2, "Parameters for SINAMICS S120")

Among others, the following functions can be individually enabled:

- SBH/SG
- SE
- SN
- SG override
- Actual value synchronization
- External STOPs
- Cam synchronization
- STOP E

5.5 Enabling the safety-related functions

Note

- To ensure that SBH can always be selected in the event of an error, the function SBH/SG must be activated and appropriately parameterized when the function SE and/or SN are(is) enabled.
 - The axis-specific enable data in the NCK must match those in the drive, otherwise, the crosswise data comparison signals an error.
 - An SI axis is treated as an axis in terms of the global option if at least one safety-related function is activated via the axis-specific enable data.
 - The maximum number of axes that may operate with SI and SPL SGE/SGAs is the number that was enabled using the options.
-

5.6 Switching the system on/off



Warning

From SINAMICS SW2.5 onwards, the following applies:

In a system configuration, the firmware versions of the DRIVE-CLiQ components can only differ from the versions on the CF card, if either

- a) the automatic upgrade/downgrade (parameter p7826) is deactivated, or
- b) components with a new firmware version can no longer be downgraded to the status of the version available on the CF card.

Scenario a) is not permitted when Safety Integrated is used. The automatic upgrade/downgrade must not be disabled when Safety Integrated is used. (automatic firmware update (p7826) must be equal to 1)

Scenario b) is only permissible if this combination has been explicitly approved by the manufacturer.



Warning

After hardware and/or software components have been changed or replaced, it is only permissible to boot the system and activate the drives when the protective devices are closed. Personnel shall not be present within the danger zone.

Depending on the change made or what has been replaced, it may be necessary to carry out a partial or complete acceptance test (refer to Chapter 9.5, "Acceptance test").

Before allowing anybody to re-enter the danger zone, you should test that the closed-loop control behaves in a stable fashion by briefly moving the drives forwards and backwards (+/-).

It is especially important to carefully observe this for high-speed linear or torque motors.

What has to be observed when powering-up?

The safety-related functions are only available and can be activated after the system has completely booted.

We recommend that the "safe operating stop (SBH)" function is selected.

For axes with SE/SN, the stop position is used to internally check the position when powering-up.

5.6 Switching the system on/off



Warning

When the system boots, this represents a critical operating state with increased risk. In this phase, especially when activating drives, it is not permissible that personnel are close to the hazardous area.

Further, for vertical axes, it is very important to ensure that the drives are in a state with the pulses cancelled.

A complete forced checking procedure after powering-up (refer to Chapter 5.3, "Forced checking procedure").

What has to be observed when powering-down?

- The following applies when SE/SN is activated:
The stop position is also cyclically saved.
For this reason, the user should only power-down the control when the axes/spindles with safety functions have stopped moving.

Note

If the axis is moved with the system powered-down, then the saved stop position no longer matches the current position. For axes with safety SE and SN functions, when powering-up, a user agreement is again required after the position has been checked.

Safety Functions Integrated in the System/ Drive

6

6.1 Safe stop (SH)

Note

This Chapter describes the safety function "safe standstill" (SH), controlled from the safety-related motion monitoring functions. The function is based on the safety functions STO/SBC of the drive (see Chapter 4). Fig. 6-1 shows the interrelationships.

The safety functions STO, SBC and SS1, integrated in the drive, controlled via the drive terminals, are described in Chapter 4. Control via terminals and from the motion monitoring functions is in parallel and can be used independently of one another.

A Stop A/STO initiated in the drive (i.e. a system error in the drive or STO/SBC/SS1 selection via terminal) is however not available as two-channel SGA "STOP A/B active" for the safety-related motion monitoring functions. There is only a single-channel signal "pulses cancelled" present.

Description

The "safe standstill" function is based on the pulse cancellation (start inhibit) function integrated in the Motor Modules of the SINAMICS S120 (see Chapter 4.2, "Safe Torque Off (STO)").

There are two shutdown paths that are independent of one another that ensure that when a component fails, the drive is always brought into a safe condition.

The safe standstill function safely disconnects the energy feed to the motor in the event of a fault or in conjunction with a machine function.

The following must be carefully observed when controlling/energizing SH from the motion monitoring functions.

- The safety functions STO/SBC/SS1 integrated in the drive are, corresponding to the description in Chapter 4 "Safety Functions Integrated in the Drive" fully effective (parameters, alarms etc.). The standard pre-assignment (default setting) of the associated parameters is generally sufficient in the context of the motion monitoring functions.

6.1 Safe stop (SH)

- The safety function STO integrated in the drive does not have to be explicitly enabled; this is implicitly enabled by enabling the motion monitoring functions (p9501 < > 0). If the safety function SBC integrated in the drive is to be additionally activated when selecting STO, then this however must be explicitly enabled.
- The PROFIsafe drive address must be set.



Warning

If the "safe standstill" function or "STOP A" is activated, the motor can no longer generate any torque. This is the reason that potentially hazardous motion can occur, e.g. for the following:

- When an external force acts on the drive axes
- Vertical and inclined axes without weight equalization
- Axes that are moving (coasting down)
- Direct drives with low friction and low self-locking
- Notching torques (depending on the motor type, bearing design and friction characteristics, up to half a pole pitch in a direction that cannot be predicted).

Possible hazards must be clearly identified using a risk analysis that must be carried out by the manufacturer. With an assessment, based on this risk analysis, it should be defined as to which additional measures are required, e.g. external brakes.

Features

The main features of the safe standstill function are as follows:

- The motor cannot be started unintentionally or accidentally
- The energy feed to the motor is safely disconnected
- The Motor Module and motor are not electrically isolated from one another

Selecting/deselecting SH

The "safe standstill" function corresponds to an external STOP A. This makes it possible to explicitly select SH, not only using internal events (STOP A when a limit value is violated), but also via SGE.

- Safe standstill is activated after a STOP A.
- Safe standstill is automatically activated from every monitoring channel when testing the shutdown paths.



Warning

After the machine has been powered-up, the "safe standstill" function must always be tested for all of the axes/spindles by testing the shutdown path using Safety Integrated.

6.1.1 Shutdown paths

The interaction of the safety functions integrated in the drive and the motion monitoring functions (Motion Monitor) are shown in Fig. 6-1.

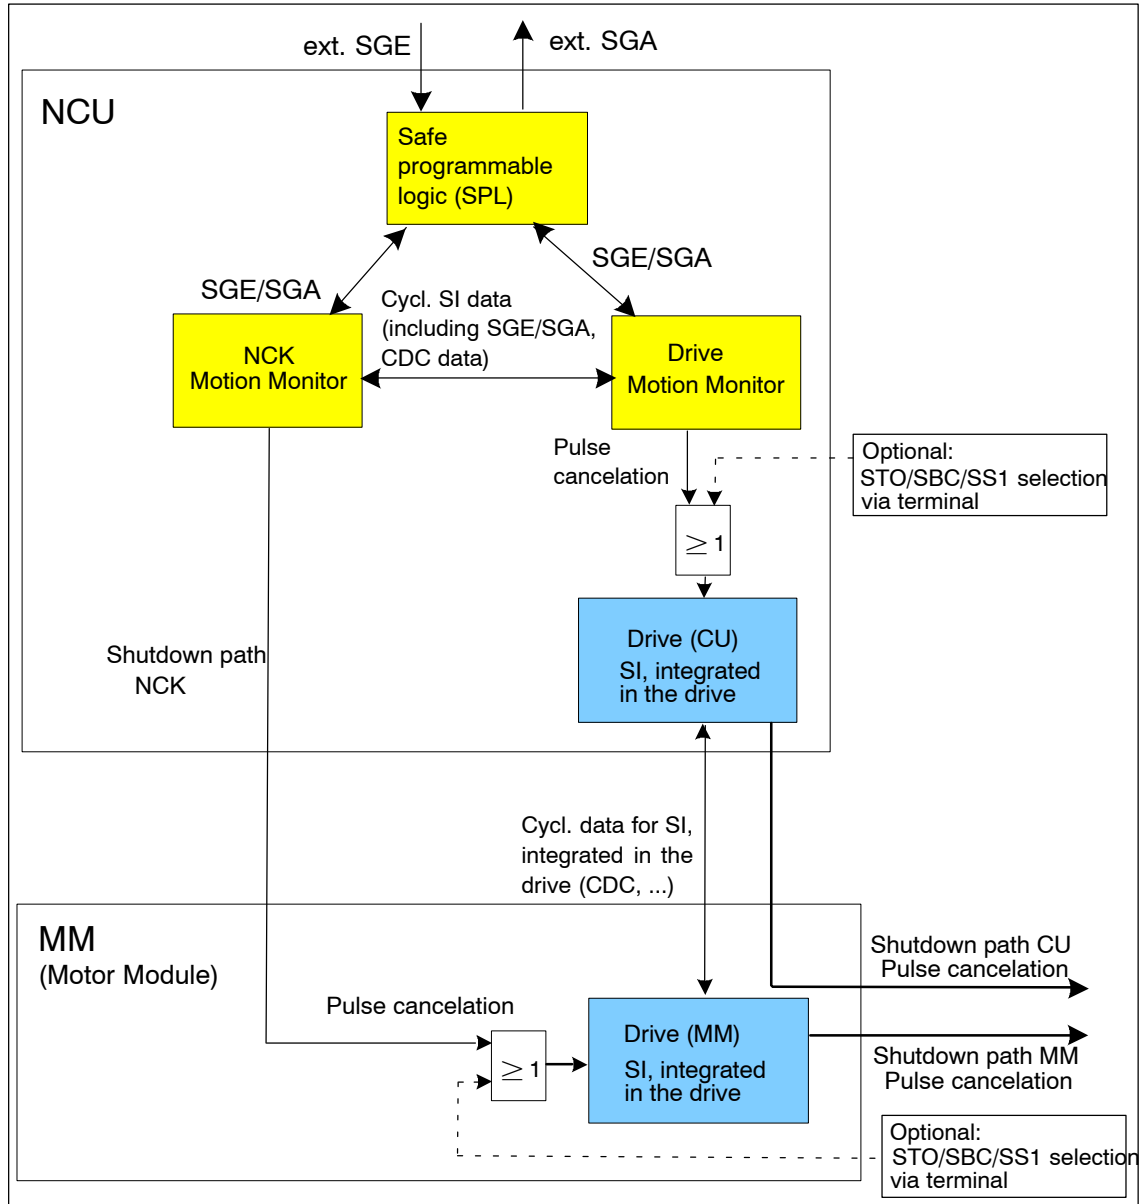


Fig. 6-1 Overview of the shutdown paths

Shutdown path of the monitoring channel, drive

The motion monitoring function in the CU signals the monitoring function integrated in the drive in the CU that the pulses must be cancelled in the SI monitoring channel integrated in the drive.

6.1 Safe stop (SH)

- Drive (CU) SI, integrated in the drive
 - The requirement to cancel the pulses is detected. Mechanisms then start that are also executed when STO is selected for the safety functions integrated in the drive:
 - Initiating the pulse cancellation
 - The timer routine is started to check the feedback. After the timer has expired (in the next monitoring clock cycle integrated in the drive), using the feedback signal, it is checked as to whether the pulses have been cancelled via this shutdown path.
 - If p9602=1, then safe brake control is executed.

Shutdown path of the monitoring channel, control

If the higher-level control with its motion monitoring identifies that it is necessary to cancel the pulses, then the following sequence applies:

- NCK Motion Monitor
 - The control communicates to the Motor Modules the requirements to cancel the pulses.
- Drive (MM), SI, integrated in the drive
 - If the drive-integrated monitoring function in the Motor Module identifies the requirement to cancel the pulses, then the same mechanisms are started that are carried out for an STO selection of the safety functions integrated in the drive and an STO is initiated:
 - Initiating the pulse cancellation
 - The timer routine is started to check the feedback. After the timer has expired (in the next monitoring clock cycle integrated in the drive), using the feedback signal, it is checked as to whether the pulses have been cancelled via this shutdown path.
 - If p9802=1, then safe brake control is executed.
 - If the Motor Module detects that communications to the NCK have failed, then this is identified by the safety functions integrated in the drive and an STO is initiated.

6.1.2 Testing the shutdown paths

Description

The test stop is used to check the shutdown paths of both monitoring channels. There is a test stop input (drive SGE). The acknowledgement is realized via the drive SGA "status pulses cancelled". The pulse cancellation must be simultaneously initiated through both shutdown paths due to the fact that the Motor Modules and drive closed-loop control are cross-checked.

The user (machine manufacturer) must configure the execution of the test stop phase.

Note

A test stop can be simultaneously made for all axes of a drive unit.

Instant in time of the test stop

The shutdown paths must be tested (forced checking procedure) at a suitable instant in time. This is generally carried out after the machine has been powered-up and afterwards in the setting-up mode once within a maximum of 8 hours. We recommend that the test is carried out before opening protective devices/guards or when the hazardous area is entered (e.g. when selecting the setting-up mode) if the shutdown paths were not tested in the last 8 hours.

Note

The machine manufacturer should define the "test shutdown paths" time in an appropriate "test block".

Note

If the brake control is enabled, then when the test stop is initiated, the brake is also controlled.

Prerequisites for the test stop

- At the start, the pulses must still be enabled; further, it is not permissible that SH is selected at the start.
- For vertical (suspended) axes, the manufacturer must ensure that these are locked (to stop them falling).

Note

The test stop can be carried out independently of the status of the standard pulse cancellation.

Message

The "test stop running" message is displayed during the "test stop".

6.2 Safe operating stop (SBH)

Description

The SBH function safely monitors the stop position (zero speed) of an axis/spindle in closed-loop position or speed control.

When SBH is active (SGA "SBH active" = 1), operating personnel can, for example, enter protected machine areas in the setting-up mode without first having to power-down the machine.

An incremental encoder is sufficient to implement this function. The actual position value is monitored for a change.

In this case, the encoder coarse position must be taken into account for a 1–encoder system (see Chapter 5.4 "Actual value conditioning").

Features

The features of the SBH function are as follows:

- The axis remains in closed-loop control
- Parameterizable SBH tolerance window
- STOP B is the stop response after SBH has responded

Zero speed tolerance

The standstill of the axis/spindle is monitored using an SBH tolerance window that is parameterized using the following machine data:

for 840D sl:

MD 36930: \$MA_SAFE_STANDSTILL_TOL

for SINAMICS S120:

p9530: SI motion standstill tolerance (Control Unit)

Note

The width of the SBH tolerance window should be based on the standstill (zero speed) monitoring limit and should lie slightly above it. Otherwise, the standard monitoring functions of the control could be ineffective. In this case, the encoder coarse position must be taken into account for a 1–encoder system (see Chapter 5.4 "Actual value conditioning").

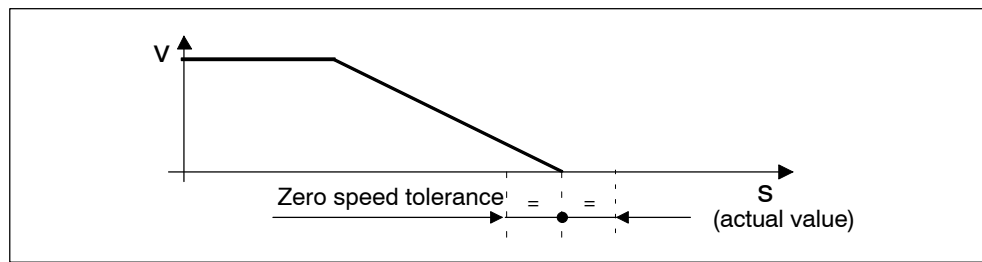


Fig. 6-2 Zero speed tolerance

Prerequisites

The following prerequisites must be fulfilled (see Chapter 3.1, "System requirements"):

- The option and functions must be enabled in the axis-specific machine data
- The SGEs "SBH/SG deselection" and "SBH deselection" must be supplied in the NCK and drive monitoring channel

6.2.1 Selecting/deselecting the safe operating stop

Selecting SBH

The safe operating stop function is selected using the following SGEs:

Table 6-1 Selecting/deselecting SBH

SGE		SGA	Description
SBH/SG de-selection	SBH de-selection	SBH active	
= 1	x	0	SBH and SG are deselected
= 0	= 0	1	SBH is selected
= 0	= 1	0	SG is selected (see Chapter 6.5, "Safely reduced speed (SG)", ¹⁾)
Note: x → Any signal state ¹⁾ The active SG stage is displayed using SGA "SGA active bit 0" and "SG active bit 1".			

6.2 Safe operating stop (SBH)

Note

If "safely reduced speed" was not active prior to the selection of SBH, any moving axis/spindle is stopped with STOP B/A.

The actual status of the function is displayed using the SGA "SBH active".

The SGEs and SGAs are described in Chapter 7.1 "Safety-related input/output signals (SGE/SGA)".

Internal control request for SBH

When the SG or SE responds (STOP C, D, E) the drive is internally switched to the safe operating stop state in the control. In such cases, the external circuit of the SGEs (SBH/SG deselection and SBH deselection) is ignored and both are internally set to "0".

Selecting SBH from SG

The changeover from safely reduced speed to safe operating stop is initiated using the SGE "SBH deselection". A delay time that is parameterized in the following machine data is simultaneously started with the changeover to SBH ("signal "SBH deselection"=0):

for 840D sl

MD 36951: \$MA_SAFE_VELO_SWITCH_DELAY

for SINAMICS S120

p9551: SI motion SLS(SG) changeover delay time (Control Unit)

SBH is activated as soon as the delay time expires.

Note

If the SBH function is selected while an axis/spindle is moving, the machine manufacturer must initiate the braking process such that the axis/spindle is in position – i.e. stationary – after the delay time has expired. This can be performed automatically using the "setpoint speed limiting" function. If the axis moves out of the standstill tolerance window after the delay has expired, an alarm is generated (for 840D sl: 27010, for SINAMICS S120: F01707) and STOP B/A initiated!

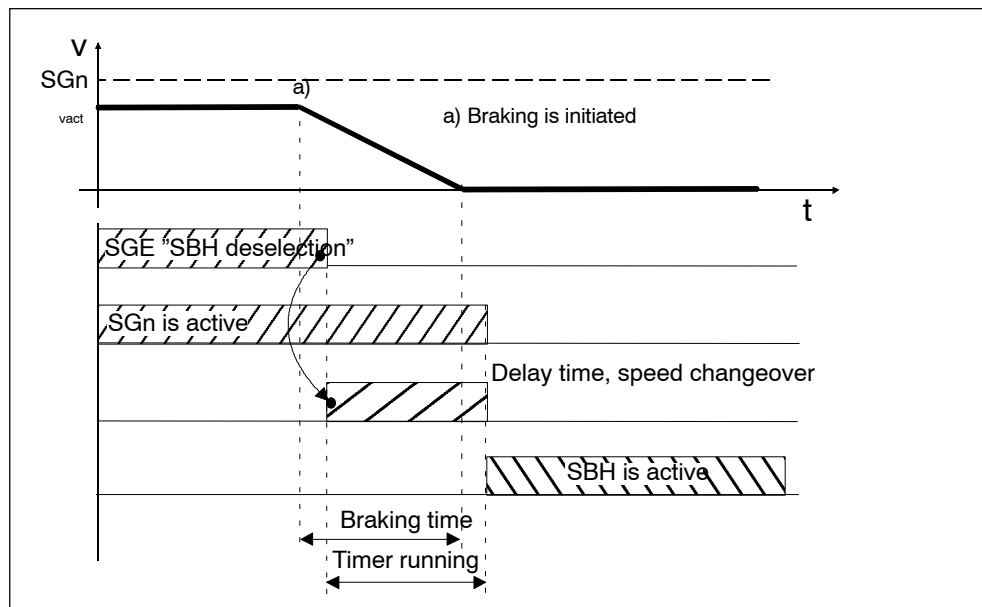


Fig. 6-3 Timing when SBH is selected from SG

Deselecting SBH

Safe operating stop can be deselected using SGE "SBH/SG deselection" (= "1" signal); this results in a general deactivation of SBH and SG. The SBH function is also deselected when the SG function is selected using the SGE "SBH deselection".



Warning

The delay time must be selected as a function of the distance to the hazardous location. The speeds to be taken into account in this respect are stipulated in Standard DIN EN 999.

Configuring NCK–SGAs

The NCK–SGA "SBH active" is configured using the following machine data:

for 840D sl

MD 36981: \$MA_SAFE_SS_STATUS_OUTPUT

Configuring NCK–SGEs

for 840D sl

MD 36971: \$MA_SAFE_SS_DISABLE_INPUT

6.2 Safe operating stop (SBH)

SGA "SBH active"

If this SGA is set, then safe operating stop (SBH) is active. This means that the axis is safely monitored for zero speed. This SGA can be used, for example, to implement protective door interlocking functions.

6.2.2 Effects when the limit is exceeded for SBH



Warning

If the "safe operating stop" function is activated, when a fault situation occurs, the axis mechanical system can exhibit jerky, uneven motion. The magnitude of this movement depends on the following parameters:

- Design of the mechanical system and gear ratio between the motor and mechanical system
- Speed and acceleration capability of the motor
- Magnitude of the selected monitoring clock cycle
- Magnitude of the selected SBH tolerance window

If the axis/spindle is being monitored (SGA "SBH active"=1) and leaves, for example, the standstill tolerance window as the result of an external influence or an undefined setpoint input, the effects are as follows:

Effects

- The axis switches to STOP A/B configured using the following MDs:
for 840D sl: 36956: \$MA_SAFE_PULSE_DISABLE_DELAY
for S120: p9556 SI motion pulse cancelation delay time (Control Unit)
and
for 840D sl: 36960: \$MA_SAFE_STANDSTILL_VELO_TOL
for S120: p9560 SI motion pulse cancelation shutdown speed (Control Unit)
- An alarm is generated (for 840D sl: 27010, for S120: F01707)

Timing when the limit value is exceeded

If the safe operating stop function is active, the response when the limit value is exceeded is as follows:

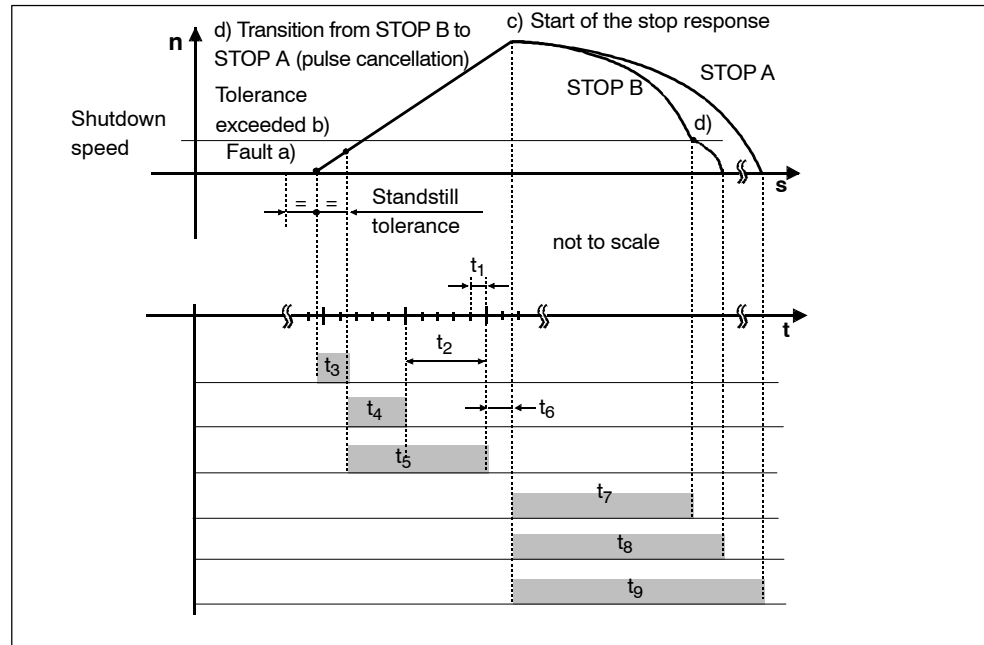


Fig. 6-4 Timing when the limit value is exceeded for SBH

Table 6-2 Explanation of the diagram

Time	Explanation
t_1	The position control clock cycle, defined by the following MDs: for 840D sl: MD 10050: \$MN_SYSCLOCK_CYCLE_TIME MD 10060: \$MN_POSCTRL_SYSCLOCK_TIME_RATIO
t_2	Monitoring clock cycle, defined by the following MDs: for 840D sl: MD 10090: \$MN_SAFETY_SYSCLOCK_TIME_RATIO for SINAMICS S120: r9500: SI motion monitoring clock cycle (Control Unit)
t_3	Time until the standstill tolerance value is exceeded
t_4	Time until it has been detected that the standstill tolerance value has been exceeded (<u>typical</u> 0.5 monitoring clock cycles, <u>maximum</u> 1 monitoring clock cycle + 1 position controller clock cycle)
t_5	Response time required to initiate the configured stop response (<u>typical</u> 1.5 monitoring clock cycles, <u>maximum</u> 2 monitoring clock cycles + 1 position controller clock cycle)
t_6	Time until the stop response that was initiated starts (<u>typical</u> 2 position controller clock cycles, <u>maximum</u> 2 position controller clock cycles)
t_7	Time required to reach the shutdown speed for STOP B.
t_8	Time required to stop the axis for a STOP B.

6.2 Safe operating stop (SBH)

Table 6-2 Explanation of the diagram

Time	Explanation
t_9	Time required to stop the axis for a STOP A.
Note: Each axis must be measured during commissioning (start-up) to determine the distance that it travels between the limit switch being violated and it coming to a standstill.	

6.3 Safe Stops A–F

6.3.1 General information

Safe Stops are used to stop drive motion and bring it to a standstill. A distinction is made between internal and external Stops. The internal Stop responses, initiated by safety-related functions when limit values are violated, initiate an alarm. The external Stop responses selected by SGEs do not issue an alarm and are acknowledged when the SGEs are deselected.

Stop responses SBH and SH

Fig. 6-5 shows the relationship between the stop responses and the safe operating stop (SBH) or the safe standstill (SH).

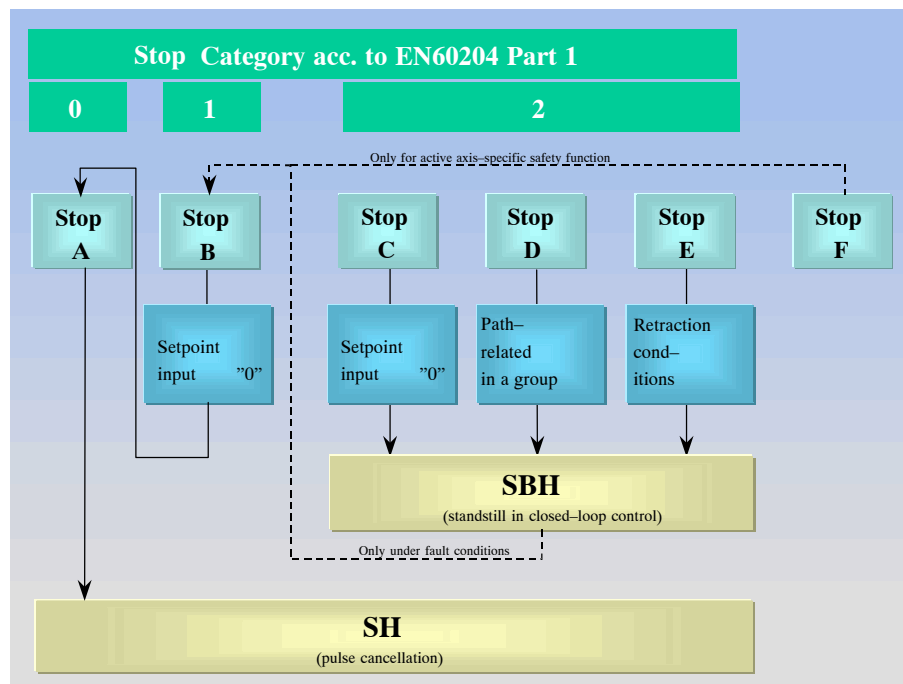


Fig. 6-5 Stop responses, safe operating stop (SBH), safe standstill (SH)

A high degree of security against faults/errors is afforded by the two-channel system structure with its permanent, crosswise data comparison. Alarms and stop responses are initiated when differences are detected between the two channels. The purpose of the stop responses is to safely stop the drives in a controlled fashion according to the actual machine requirements. A differentiation is made between the stop responses STOP A, B, C, D, E, F and the test stop. The type of stop response that occurs in the event of a fault/error can either be pre-determined by the system or configured by the machine manufacturer.

6.3 Safe Stops A–F

Stops A, C, D and E can also be externally selected as a function of an event via safety-related inputs (SGE).

**Warning**

Protection of personnel must be given top priority when stop responses are configured. The objective is to stop the drives in a way that best suits the situation. The time stages of the stops must be configured with the smallest possible value corresponding to the application.

Table 6-3 Overview of stop responses

STOP	Action	Effect	Initiated in response to	Changes to	Alarm
A	Pulses are immediately cancelled	Drive coasts down	SBR/SG	SH	POWER ON
B	0 speed setpoint is immediately entered + timer t_B started $t_B = 0$ or $n_{act} < n_{shutdown}$: STOP A	The drive brakes along the OFF3 ramp – transition into STOP A	SBH/SG	SH	POWER ON
C	0 speed setpoint is immediately entered + timer t_C started $t_C = 0$: SBH is activated	The drive is braked along the OFF3 ramp SBH active	SG/SE	SBH	RESET
D	Motor is braked along the acceleration + timer t_D started $t_D = 0$: SBH is activated	Drive is braked as part of a group along the path SBH active	SG/SE	SBH	RESET
E	Results in stopping and retraction + timer t_E started $t_E = 0$: SBH is activated	Drive is braked along the programmed retraction and stopping motion (ESR). SBH active	SG/SE	SBH	RESET

Table 6-3 Overview of stop responses

STOP	Action	Effect	Initiated in response to	Changes to	Alarm
F	Depending on the particular situation a) Safety function inactive (no SBH, SG, SE and SN active): Saved (latched) message to the operator b) Safety function active (SBH, SG, SE or SN active) STOP B/A is initiated (can be configured) c) Safety function active and STOP C, D or E initiated: Saved (latched) message to the operator	a) NC start and traversing interlock b) Transition to STOP B/A c) NC start and traversing interlock	Crosswise data comparison	a) — b) SH c) —	a) RESET b) POWER ON c) RESET
Note: The timers can be set using the appropriate machine data.					

Configurable stop responses

The stop responses that occur when limit values are violated can be selected by the machine manufacturer using the appropriate machine data. These limit values are defined using the corresponding machine data:

Table 6-4 Configurable stop responses

Safety-related function	Configurable stop responses
SBH	STOP B* (cannot be configured)
SG	STOP A, B*, C, D, E
SE	STOP C, D, E
SN	No internal stop response When required, the user can configure the appropriate safe stop responses using the SGAs SN1, SN2,
SBR	STOP A (cannot be configured)
Crosswise data comparison: STOP F cannot be configured Note: * There is an immediate transition from STOP B to A if $t_B = 0$ or the parameterized speed threshold is exceeded.	

6.3 Safe Stops A–F

Assignment table for stop responses

Table 6-5 Stop responses for SI acc. to EN 60204–1

Stop response for SINUMERIK Safety Integrated	Stop function acc. to EN 60204–1
STOP A	Category 0
STOP B, STOP F ¹⁾	Category 1
STOP C, STOP D, STOP E	Category 2
Note: 1): STOP F initiates STOP B if at least one safety–related function is active.	

Priority of the stop responses

Table 6-6 Priority for the stop responses

Priority level	Stop response
Highest priority	STOP A
.....	STOP B
.....	SGE test stop selection
.....	STOP C
...	STOP D
.	STOP E
Lowest priority	STOP F

Note

A stop response listed in Table 6-6 "Priorities for stop responses" can only be initiated if at least one safety–related function is active (except for STOP F).

Once a stop response has occurred, the sequence of operations it involves will be completed even if the cause of the stop no longer exists.

It is possible to advance to stop responses that have a higher priority. It is not possible to advance to stop responses that have a lower priority.

When the external stops are selected, there is the exception that the actual low–priority STOP F can be initiated in spite of this.

Stop response sequence

If a stop response is initiated in the drive, a signal is sent to the NC that responds by initiating the same stop response (two-channel safety). Likewise, if a stop response is initiated in the NC, the drive is automatically signaled and responds by requesting the same stop response.

This mechanism ensures that stop responses are managed with a high degree of safety.

External stops

Using this function, the user can stop the drive using SGEs.

The drives can be brought to a standstill in the following ways:

- By canceling the drive pulses SGE "deselect ext. STOP A"
- Braking with $n_{\text{set}} = 0$ SGE "deselect ext. STOP C"
- Braking along a path SGE "deselect ext. STOP D"
- Initiate an ESR SGE "deselect ext. STOP E"

Enabling and activating the function

The function "external STOPs" is enabled and activated using the following machine data:

- Enabling the function
MD 36901/parameter p9501: \$MA_SAFE_FUNCTION_ENABLE/
"SI motion, enable safety functions"
Bit 0: Enable SBH/SG (see note)
Bit 6: Enable external STOPs
Bit 4: Enable external STOP E

Note

- In addition to enabling the function "external STOPs", function SBH/SG must also be enabled as a minimum requirement.
 - The external STOP E must be enabled with bit 4 = 1 in addition to bit 6 "enable external STOPs".
-

Configuring NCK–SGEs

for 840D sl:

MD 36977: \$MA_SAFE_EXT_STOP_INPUT[n]:

(input assignment, external stop request) with $n = 0, 1, 2, 3$.

6.3 Safe Stops A–F

Note

- For stopping types that are **not used**, the assignment must be inverted by appropriately parameterizing MD 36977[n]. This means that they are set to a "1" signal and are permanently "inactive".

Exception:

- STOP E is interlocked by its own enable signal.

An external Stop E can also be initiated as an error response to a crosswise data comparison of NCK and PLC–SPL or for PROFIsafe errors, instead of a STOP D. Parameterization on the NCK side is carried out using MD10097: \$MN_SAFE_SPL_STOP_MODE = 4, on the PLC side using DB 18.DBX36.1=1. This parameterization is checked in the crosswise data comparison between PLC–SPL and NCK–SPL (see Chapter 7.3 "Safe programmable logic").

If the value 4 is parameterized in MD 10097, without enabling the external Stop E in all axes with SI function enable, then Alarm 27033 is output for all of these axes.

SGEs to stop the drive

The following SGEs are available to stop the drive:

Table 6-7 SGEs to stop the drive

SGE	Stopping type	Priority
Deselect ext STOP A (= SH deselection)	Pulse cancelation	High
Deselect ext. STOP C	Braking with $n_{\text{set}} = 0$...
Deselect ext. STOP D	Braking along a path	...
Deselect ext. STOP E	ESR is initiated	Low
Notes: SGE "..." = 1 Stopping is not initiated (it is deselected) SGE "..." = 0 Stopping is initiated (it is selected) If a stop request is selected simultaneously using several SGEs, then that with the highest priority is executed. If one of these SGEs changes, the "tolerance time for SGE changeover" is activated (36950/p9550). Feedback signals: for SGE "deselect ext. STOP A": via SGA "status pulses cancelled" and SGA "STOP A/B active" for SGE "deselect ext. STOP C": via SGA "STOP C active" for SGE "deselect ext. STOP D": via SGA "STOP D active" for SGE "deselect ext. STOP E": via SGA "STOP E active"		

Note

- For external STOPs, alarms are not displayed. This means that the user himself must configure the required message/signal.

Combinations for external STOPs

The following input bit combinations are obtained for the SGEs "deselect ext. STOP A", "deselect ext. STOP C", "deselect ext. STOP D" and "deselect ext. STOP E":

Table 6-8 Input bit combinations

SGE				
Deselect external STOP E	Deselect external STOP D	Deselect external STOP C	Deselect external STOP A	Description
x	x	x	0	"Pulse cancellation" is initiated
x	x	0	1	"Braking with $n_{\text{set}} = 0$ " is initiated
x	0	1	1	"Braking along a path" is initiated
0	1	1	1	"ESR" is initiated
1	1	1	1	External STOPs are not selected

Acknowledging a stop request

After requesting a specific stop type via SGE, this sequence can be cancelled by one of the following events:

- Deselecting the stop request
- Selecting a stop request using an SGE with a higher priority
- A higher stop request (STOP A; B; C or D) with a higher priority is received from an internal monitoring function

6.3 Safe Stops A–F

Effects of the stop responses on other axes/spindles

If a stop response is initiated, then this has the following effects on all of the other axes in the same channel:

STOP E: Extended stopping and retraction is initiated

STOP D: Braking along a path

STOP C: IPO fast stop (braking at the current limit)

STOP A: IPO fast stop (braking at the current limit)

The effect on the other axes in the channel can be influenced using MD 36964: \$MA_SAFE_IPO_STOP_GROUP. This allows, for example, the pulses of a spindle to be safely cancelled (using an external STOP A), in order that this spindle can be manually turned and the axes can still be moved while being safely monitored.

STOP	\$MA_SAFE_IPO_STOP_GROUP = 0	\$MA_SAFE_IPO_STOP_GROUP = 1
C	Axes that interpolate with the involved axis brake at the current limit. All other axes brake along the parameterized braking ramp.	Axes that interpolate with the involved axis brake at the current limit. All other axes do not brake.
D	Axes/spindles brake along the path or along the parameterized braking ramp.	Axes that interpolate with the involved axis brake along the parameterized braking ramp. All other axes do not brake.
E	<u>ESR enabled and active:</u> ESR is initiated <u>ESR neither active nor enabled:</u> After a delay time of max. 2 lpo clock cycles, the behavior as described for STOP D is initiated.	

6.3.2 Description of STOP A

Action in the drive monitoring channel:

Pulses are immediately cancelled using the internal signal "cancel pulses". In addition, the pulses in the gating unit are cancelled by a software function.

Action in the NCK monitoring channel:

the pulses are cancelled via the internal shutdown path of the NCK monitoring channel

- Effect:
The drive coasts to a standstill if no external braking mechanism such as an armature short-circuit and/or holding brake is used. The axis-specific alarm results in a mode group stop, i.e. as the result of the error in one axis, all axes and spindles in a mode group are stopped. Safe standstill becomes effective at the end of STOP A.
- Alarm message for an internally initiated STOP A:
The alarm message "STOP A initiated" is displayed.

- Acknowledgement for an internally initiated STOP A:
An unintentional restart is prevented for STOP A. The error can only be acknowledged from the drive and control using a power on.

SGA STOP A/B active

This signal indicates that STOP A/B is active.

0 signal: STOP A/B is not active.

1 signal: STOP A/B is active.

**Warning**

If the "safe standstill" function or "STOP A" is activated, the motor can no longer generate any torque. This is the reason that potentially hazardous motion can occur, e.g. for the following:

- When an external force acts on the drive axes
- Vertical and inclined axes without weight equalization
- Axes that are moving (coasting down)
- Direct drives with low friction and low self-locking
- Notching torques (depending on the motor type, bearing design and friction characteristics, up to half a pole pitch in a direction that cannot be predicted)

Possible hazards must be clearly identified using a risk analysis that must be carried out by the manufacturer. With an assessment, based on this risk analysis, it should be defined as to which additional measures are required, e.g. external brakes.

SGE deselect external STOP A

"Pulse cancellation" can be requested and executed using this SGE.

The safe functions currently active (SG/SBH/SN/SE) are not influenced by this SGE.

If one of the currently active limits is violated, an appropriate alarm is initiated. The associated shutdown response cannot be activated because the pulses have already been cancelled. As soon as the stop request is cancelled via the SGE "deselect ext. STOP A" any queued shutdown responses become active.

If a stop request is active, SGA "STOP A/B is active" is set in the same way as it would be for an internally triggered STOP A.

MD 36977: \$MA_SAFE_EXT_STOP_INPUT[0] is used to define the selection/deselection of the external brake request, in this case, "deselect external STOP A" (SH, pulse cancellation).

6.3.3 Description of STOP B

Action in the drive monitoring channel:

The drive is braked along the OFF3 ramp by entering a speed setpoint = 0. If the speed setpoint falls below the value entered into p9560: "SI motion, pulse cancellation shutdown speed", or if the timer p9556: "SI motion, delay time expired", then the system automatically changes into a STOP A.

Action in the NCK monitoring channel:

Analog to the drive, the control enters a speed setpoint of 0 and when the value in MD 36960: \$MA_SAFE_STANDSTILL_VELO_TOL is fallen below or after the timer MD 36956: \$MA_SAFE_PULSE_DISABLE_DELAY has expired, then a transition is automatically made to STOP A.

If the timer in data 36956: \$MA_SAFE_PULSE_DISABLE_DELAY or p 9556: "SI motion pulse cancellation, delay time" is set to zero, then for a STOP B, the system immediately changes over to a STOP A.

The shutdown speed for the pulse cancellation is generally reached faster than the delay time for the pulse cancellation.

- Effect:
The drive is braked along the OFF3 ramp under closed-loop speed control and brought to a safe standstill.
- Alarm message for an internally initiated STOP B
The alarm message "STOP B initiated" is displayed.
- Alarm message for an internally initiated STOP B:
An unintentional restart is prevented using a STOP A. The error can only be acknowledged from the drive and control using a power on.

SGA STOP A/B is active

This signal indicates that STOP A/B is active.

0 signal: STOP A/B is not active.

1 signal: STOP A/B is active.

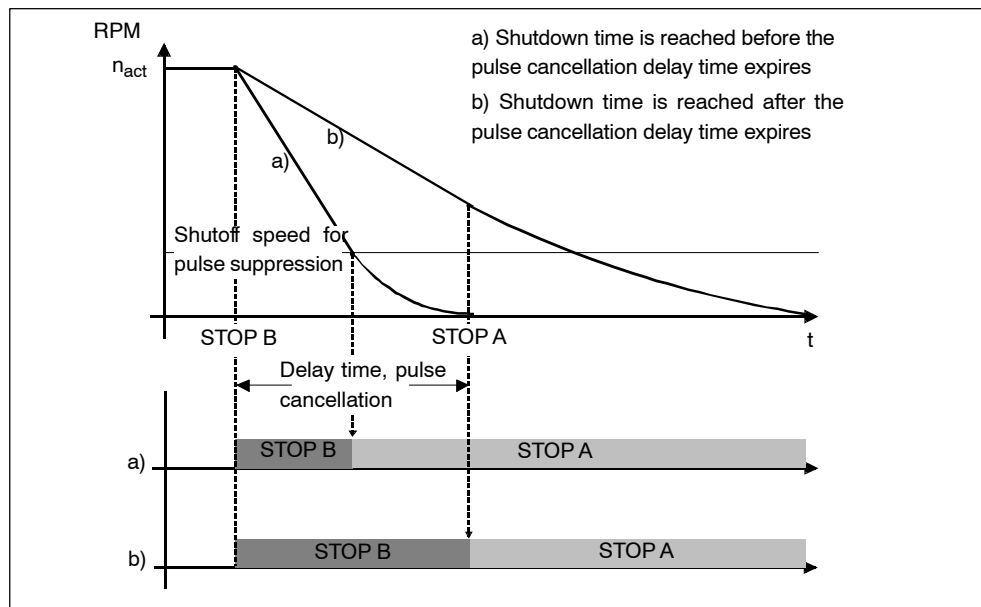


Fig. 6-6 Transition from STOP B to STOP A

It is possible that the stop for the NCK becomes effective one safety monitoring clock cycle earlier than for the drive. This means that braking along the current limit can become effective before the OFF3 ramp of the drive becomes effective. In order to reduce the level of stress of the mechanical system of the machine (if required) the braking torque can be reduced. To realize this, bit 4 "Torque limiting active in motoring/regenerating mode" can be set in parameter p1400 and parameter p1521 "Torque limit lower/regenerative" can be set to the required lower torque. In this case, it should be noted that the braking distance (stopping distance) of the axis is extended.

6.3.4 Description of STOP C

Action in the drive monitoring channel:

The drive is braked along the STOP2 ramp in response to a speed setpoint input = 0 and in parallel, the timer via parameter p9552: "Transition time from STOP C to SBH" is started. The SBH function is automatically activated after the timer expires.

Action in the NCK monitoring channel:

Essentially the same as in the drive, the control specifies a zero speed setpoint and the interface signal "position controller active" (DB 31, ... DBX 61.5) of the associated drive is set to zero.

At the same time, the timer via MD 36952: \$MA_SAFE_STOP_SWITCH_TIME_C is started. The SBH function is automatically activated after the timer expires.

6.3 Safe Stops A–F

- **Effect:**
The drive is braked along the STOP2 ramp under closed-loop speed control and brought into SBH.
- **Alarm message for an internally initiated STOP C:**
The alarm message "STOP C initiated" is output (see Chapter 10.2, "Alarms for SINUMERIK 840D sl").
- **Acknowledgement for an internally initiated STOP C:**
An unintentional restart is prevented for a STOP C. The error can be acknowledged using the NC–RESET key.

SGA STOP C is active

This signal indicates that STOP C is active.

0 signal: STOP C is not active.

1 signal: STOP C is active.

It is possible that the stop for the NCK becomes effective one safety monitoring clock cycle earlier than for the drive. This means that braking along the current limit can become effective before the STOP2 ramp of the drive becomes effective. In order to reduce the level of stress of the mechanical system of the machine (if required) the braking torque can be reduced. To realize this, bit 4 "Torque limiting active in motoring/regenerating mode" can be set in parameter p1400 and parameter p1521 "Torque limit lower/regenerative" can be set to the required lower torque. In this case, it should be noted that the braking distance (stopping distance) of the axis is extended.

SGE deselect external STOP C

If a stop request is active, SGA "STOP C is active" is set in the same way as it would be for an internally initiated STOP C.

MD 36977: \$MA_SAFE_EXT_STOP_INPUT[1] is used to define the selection/deselection of the external braking request; in this case "deselect external STOP C" (braking along the current limit).

6.3.5 Description of STOP D

Action in the drive monitoring channel:

The drive monitoring channel requests a path stop or braking along the actual acceleration characteristic. In parallel, the timer is started via parameter 9553: "transition time from STOP D to SBH" is started. The SBH function is automatically activated after the timer expires.

Action in the NCK monitoring channel:

Essentially the same as the drive, the control system monitoring channel requests a path stop or braking along the acceleration characteristic. At the same time, the timer via MD 36953: \$MA_SAFE_STOP_SWITCH_TIME_D is started. The SBH function is automatically activated after the timer expires.

- **Effect:**
The drive is braked in a group – including simultaneous axes – along the set traversing path. Endlessly rotating axes are braked at the acceleration limit. The SBH function is automatically activated after the timer expires.
- **Alarm message for an internally initiated STOP D:**
The alarm message "STOP D initiated" is output.
- **Acknowledgement for an internally initiated STOP D:**
An unintentional restart is prevented for STOP D. The error can be acknowledged using the NC–RESET key.

SGA STOP D is active

This signal indicates that STOP D is active.

0 signal: STOP D is not active.

1 signal: STOP D is active.

SGE deselect external STOP D

If a stop request is active, SGA "STOP D is active" is set in the same way as it would be for an internally triggered STOP D.

MD 36977: \$MA_SAFE_EXT_STOP_INPUT[2] is used to define the selection/deselection of the external braking request, in this case "deselect external STOP D" (path braking).

6.3.6 Description of STOP E

Action in the drive monitoring channel:

The drive monitoring channel requests an extended stop and retract (ESR), controlled from the NC. At the same time, timer in parameter p9554: "SI motion transition time from STOP E to SBH" is started. The SBH function is automatically activated after the timer expires.

Action in the NCK monitoring channel:

An ESR is requested by the control monitoring channel. At the same time, timer in MD 36954: \$MA_SAFE_STOP_SWITCH_TIME_E is started. The SBH function is automatically activated after the timer expires.

- **Effect:**
The extended stop and retract that have been configured are started.
- **Alarm message:**
The alarm message "STOP E initiated" is displayed.
- **Acknowledgment:**
For STOP E, an unintentional restart is prevented. The error can be acknowledged using the NC–RESET key.

SGA STOP E is active

This signal indicates that STOP E is active.

0 signal: STOP E is not active.

1 signal: STOP E is active.

6.3 Safe Stops A–F

The NC-controlled ESR is initiated by writing to the system variable \$AC_ESR_TRIGGER=1 (also see /FB3/, M3 "Axis coupling and ESR"). To obtain the criteria for initiating, the following SI system variables are used:

\$VA_STOPSI:

Axial system variable that contains the present stop.

For a value of 4, a Stop E is active for this axis.

\$A_STOPESI:

Global system variable that displays a value not equal to 0 to indicate that a Stop E is active on one of the axes. This variable saves the user having to search through all of the axes.

SGE deselect external STOP E

When a stop request is active, the SGA "STOP E is active" is set.

MD 36977: \$MA_SAFE_EXT_STOP_INPUT[3] defines the selection/deselection of the external braking request, in this case "deselect external STOP E" (extended stopping and retraction plus path braking).

Note

STOP E only produces a different response than STOP D if the user has configured the ESR function – extended stop and retract – and initiation of the ESR is programmed depending on \$VA_STOPSI or \$A_STOPESI.

If ESR is not active, the STOP E behaves like a STOP D. However, if the ESR configuration is incorrect, there is a delay of up to 2 IPO cycles compared to STOP D until the braking operation is initiated. Possible causes:

- The initiation of the ESR as static synchronous action does not take into account the system variables \$VA_STOPSI or \$A_STOPESI.
- ESR is neither parameterized nor enabled.
- For individual PLC controlled axes, only the axis-specific ESR is used via \$AA_ESR_TRIGGER. This trigger may be used in addition to the channel-specific trigger.

For other incorrect ESR programming, a delay by the time entered in \$MC_ESR_DELAY_TIME1 and \$MC_ESR_DELAY_TIME2 is possible. After these times have expired, braking is initiated at the current limit. Possible cause:

- The retraction position cannot be reached within the specified time.
-

6.3.7 Description of STOP F

The STOP F response is permanently assigned to the error handling (e.g. the crosswise result and data comparison, detecting communication and encoder faults).

If such as fault/error state is detected, then the following responses are triggered.

Response, if no safety functions are active:

Faults/errors are also detected if none of the safety-related functions are active (safety functions are SBH, SG, SE, SN). The saved message "defect in a monitoring channel" is output on both the drive and control sides and can only be acknowledged using the NC-RESET key. The message does not interrupt machining. A system restart is prevented by an internal NC start/traversing inhibit function. Faults/errors are detected in the drive and control systems.

Response if one safety function is active:

Faults/errors are detected and a STOP B/A response is initiated in the drive and control system (see description of STOP B). The error can only be acknowledged from the drive and control using a power on.

Exception: If an internal STOP C/D/E is already present, because STOP F has a lower priority (see Chapter 6.3.1, Section "Priority of the stop responses").

- Alarm message:
Alarms 27001 "defect in a monitoring channel" and C01711 "SI motion defect in a monitoring channel" are displayed.
For further diagnostics, for Alarm 27001, a fine error coding is displayed in the alarm line. The fine coding for the drive alarm can be found in r9725 "SI motion diagnostics for STOP F".
The significance of the error code is provided in Chapter 10.2 under Alarm 27001 "Defect in a monitoring channel".

A delay time before STOP B is initiated can be parameterized using MD 36955 \$MA_SAFE_STOP_SWITCH_TIME_F. During this time, the machine manufacturer can initiate an NC controlled response, e.g. ESR. After this time has expired, the involved axis is braked with STOP B. This is also true if, in the meantime, a stop with a higher priority than STOP F (STOP E, D, C) is present. The system variables \$VA_XFAULTSI and \$A_XFAULTSI, bit 1 can be used to detect whether a STOP F was initiated that is then followed by a STOP B. In the delay time up to the STOP B, an ESR or braking along the programmed path can be initiated (e.g. by writing to \$AC_ESR_TRIGGER or initiating an external STOP D). During the delay time up to initiating STOP B, additional, non-safety-related monitoring functions can already result in other braking responses. A STOP D or the initiation of ESR can be influenced due to harder braking responses of the drive (the same as e.g. the configured braking response when an encoder fails).

6.3 Safe Stops A–F

**Warning**

If an internal or external fault occurs, none or only some of the parameterized safety functions are available during the STOP F response triggered by the fault. This must be carefully taken into account when parameterizing the delay time between STOP F and STOP B (MD 36955/p9555) and must be taken into account in the risk analysis performed by the machine manufacturer. This is especially true for vertical axes.

Note

A delay time between STOP F and STOP B should only be set, if, during this time, an alternative response is initiated by evaluating the system variables \$VA_XFAULTSI and \$A_XFAULTSI.

Further, when using the delay time, a monitoring function should always be active – also in the automatic mode (e.g. SE, SN, SG with high limit switch). For example, if the SBH monitoring function is only active on the drive side, for example because of the (single-channel) failure of a door switch, then although this results in a STOP F, the STOP F → STOP B delay time on the NCK side is not started if previously no monitoring function was active. This means that in this case, the drive responds with a STOP B (however this is also initiated in the NCK due to the exchange of the stop responses), but this is not displayed in the NCK variables \$VA_XFAULTSI and \$A_XFAULTSI.

The appropriate monitoring functions of the drive (e.g. when SBH is selected) are also executed instantaneously without any delay.

Example 1 – delaying the transition from STOP F to STOP B:

The speed characteristics of an axis for parameterized stopping are shown in Fig. 6-7. In this case, the axis should continue 500 ms and then brake along the parameterized ramp. A delay time of 2.5 s is selected until STOP B is initiated (\$MA_SAFE_STOP_SWITCH_TIME_F).

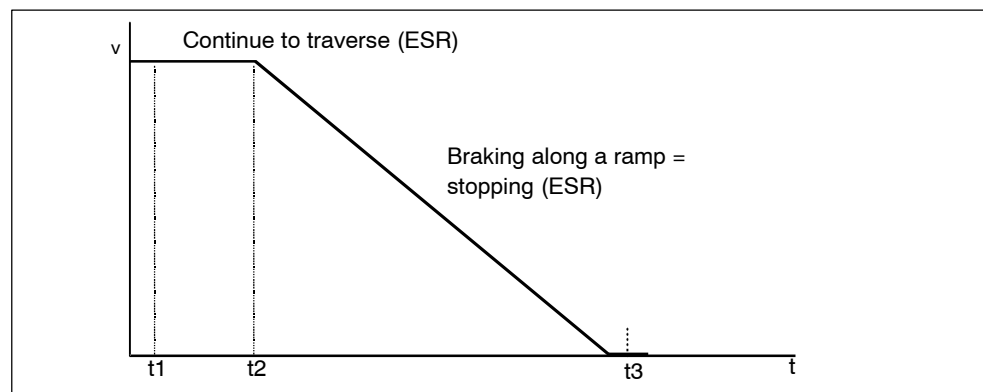


Fig. 6-7 Velocity characteristic of an SI axis when stopping with STOP F

The following actions take place at the following instants in time:

t1:

STOP F occurs, ESR is started

t2:

500 ms after t1, braking starts along the parameterized ramp

t3:

STOP B is initiated 2.5 s after t1. The axis is already stationary at this time, which means that the pulses can be immediately cancelled.

Example 2 – delaying the transition from STOP F to STOP B

The same parameterization as in Example 1 is shown in Fig. 6-8. However, when a STOP F occurs, no monitoring function is active. At instant in time t2, a monitoring function is activated. ESR is only started if there is a STOP F with active monitoring function.

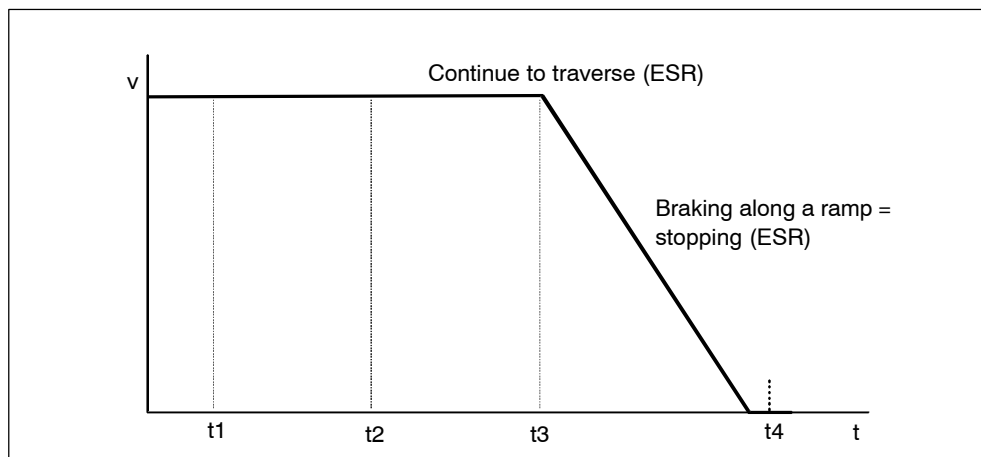


Fig. 6-8 Velocity characteristic of an SI axis when stopping with STOP F

The following actions take place at the following instants in time:

t1:

STOP F occurs, no response

t2:

At any time after t1, a monitoring function is activated. At this instant in time, the transition to a STOP B is started and bits 1 in \$A_XFAULTSI and \$VA_XFAULTSI of this axis are set.

t3:

500 ms after t2, braking starts along the parameterized ramp

t4:

STOP B is initiated 2.5 s after t2. The axis is already stationary at this time, which means that the pulses can be immediately cancelled.

6.3 Safe Stops A–F

6.3.8 Forced checking procedure of the external STOPs

The following applies for the test stop of external STOPs:

All stop SGEs that are used are switched one after the other in each channel and the positive response evaluated using the associated SGA "STOP x is active".

Note

Only the enabled and activated external standstill functions have to be tested.

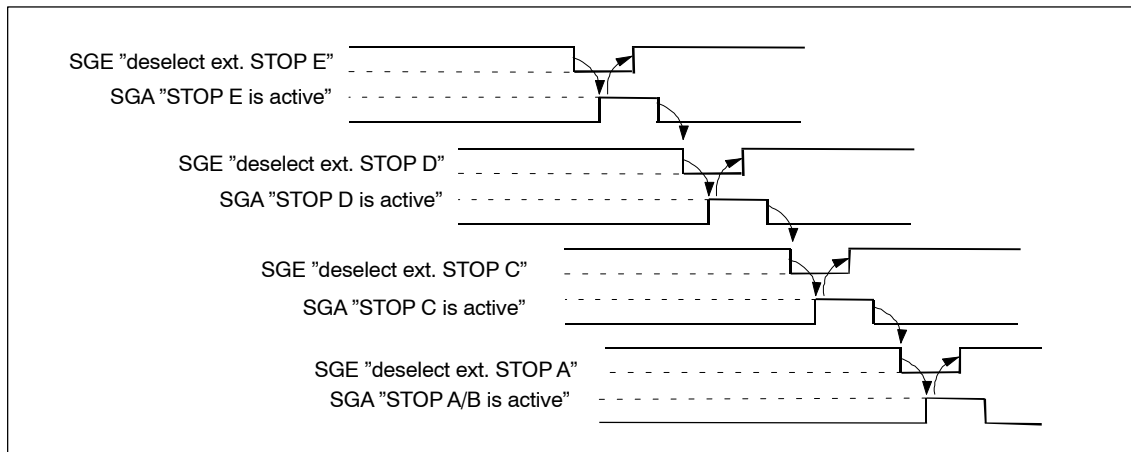


Fig. 6-9 Sequence of the test stop for external STOPs. Example: External STOPs A, C, D, E are used

Which SGEs/SGAs are required for the test stop of external STOPs?

The following SGEs/SGAs can be used to perform the test stop for external STOPs:

Table 6-9 SGEs/SGAs for the test stop, external STOPs

NCK monitoring channel	NCK–SGE "deselect ext. STOP A" NCK–SGA "STOP A/B is active" NCK–SGE "deselect ext. STOP C" NCK–SGA "STOP C is active" NCK–SGE "deselect ext. STOP D" NCK–SGA "STOP D is active" NCK–SGE "deselect ext. STOP E" NCK–SGA "STOP E is active"
Drive monitoring channel	PLC–SGE "deselect ext. STOP A" PLC–SGA "STOP A/B is active" PLC–SGE "deselect ext. STOP C" PLC–SGA "STOP C is active" PLC–SGE "deselect ext. STOP D" PLC–SGA "STOP D is active" PLC–SGE "deselect ext. STOP E" PLC–SGA "STOP E is active"

6.4 Safe acceleration monitoring (SBR)

Description

Using this function, for STOPs B and C the system monitors as to whether the drive speed increases.

Features

The most important features include:

- Fastest possible detection if the axis starts to re-accelerate when braking
- SBR is automatically activated, when a STOP B or C has been initiated
- STOP A is initiated when SBR responds

Activating the SBR

When a STOP B or C is initiated, the actual speed plus the speed tolerance, defined in the machine data/parameter, is activated as the speed limit. When the actual speed reduces, then this speed limit is correspondingly corrected; however, for an increased speed, it is not changed. If the drive speed exceeds the actual speed limit then a STOP A is initiated. If the axis starts to re-accelerate while braking, this is detected as quickly as possible and prevented.

Machine data/parameters for the SBR speed tolerance:

for 840D sl:

MD 36948: \$MA_SAFE_STOP_VELO_TOL

for SINAMICS S120:

p9548: SI motion SBR actual speed tolerance (Control Unit)

The speed limit is corrected until the speed, defined in the following machine data, is undershot (fallen below). After that, the limit value of the SBR monitoring is frozen to the value in MD/parameter 36946/p9546 plus the value in MD/parameter 36948/p9548.

for 840D sl:

MD 36946: \$MA_SAFE_VELO_X (speed limit n_x)

for SINAMICS S120:

p9546: SI motion SSM (SGA $n < n_x$) speed limit n_x (CU)

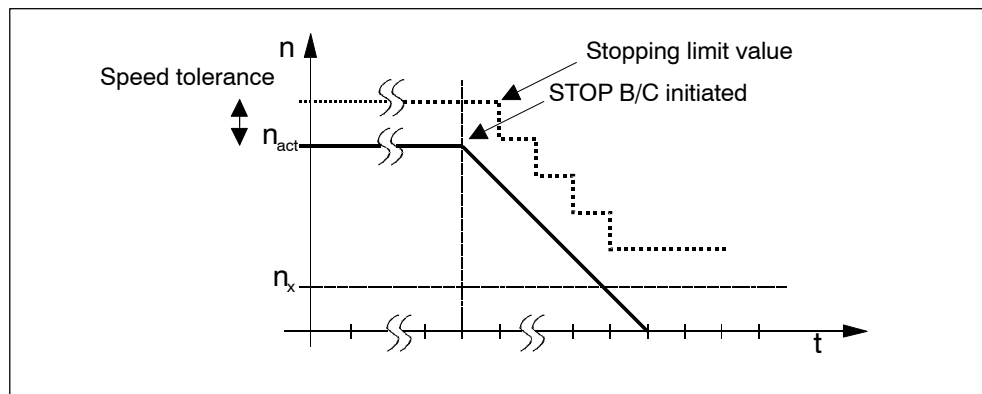


Fig. 6-10 Characteristic of the stopping limit value for SBR

Calculating the SBR tolerance of the actual speed

The following applies when parameterizing the SBR tolerance:

The possible speed increase after initiating a STOP B/C is obtained from the effective acceleration a and the duration of the acceleration phase. The acceleration phase lasts from one monitoring clock cycle $\ddot{U}T$ (delay from detecting a STOP B/C until $n_{\text{set}} = 0$):

SBR tolerance

Actual speed for SBR = acceleration * acceleration duration

The following setting rules apply:

For a linear axis:

$$\text{SBR tolerance [mm/min]} = a [\text{m/s}^2] * \ddot{U}T [\text{s}] * 1000 [\text{mm/m}] * 60 [\text{s/min}]$$

For rotary axis/spindle:

$$\text{SBR tolerance [rev/min]} = a [\text{rev/s}^2] * \ddot{U}T [\text{s}] * 60 [\text{s/min}]$$

The following machine data should be taken into account when determining the acceleration:

MD 32300: MAX_AX_ACCEL

MD 35200: GEAR_STEP_SPEEDCTRL_ACCEL

MD 35210: GEAR_STEP_POSCTRL_ACCEL

MD 35410: SPIND_OSCILL_ACCEL

Recommendation:

The value entered for the SBR tolerance should be approx. 20% higher than the calculated value.

6.4 Safe acceleration monitoring (SBR)

Timing when the actual stop limit value is exceeded

If the safe acceleration monitoring function is active, then the following timing is obtained when the actual stop limit value is exceeded:

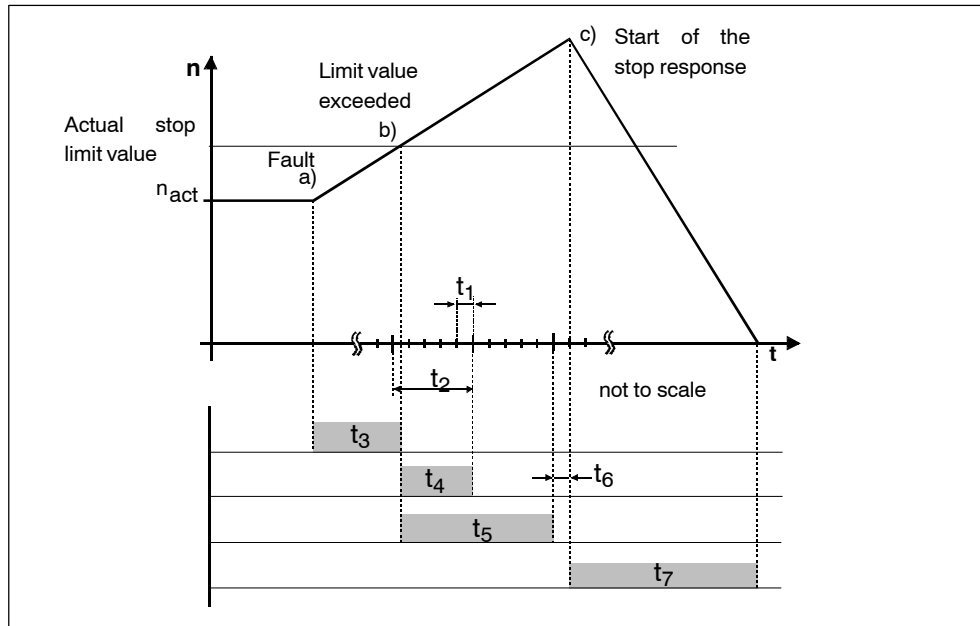


Fig. 6-11 Timing when the actual stop limit value for SBR is exceeded

Table 6-10 Explanation of the diagram

Time	Explanation
t_1	The position control clock cycle, defined by the following MDs: MD 10050: \$MN_SYSCLOCK_CYCLE_TIME MD 10060: \$MN_POSCTRL_SYSCLOCK_TIME_RATIO
t_2	Monitoring clock cycle, defined by the following MDs: for 840D sl: MD 10090: \$MN_SAFETY_SYSCLOCK_TIME_RATIO for SINAMICS S120: r9500 SI motion monitoring clock cycle (Control Unit)
t_3	Time between an error occurring and a limit value being reached
t_4	Time until a limit value violation is detected (<u>typical</u> 1 monitoring clock cycle, <u>maximum</u> 1.5 monitoring clock cycles + 1 position controller clock cycle)
t_5	Response time that is required to introduce the stop response (<u>typical</u> 2 monitoring clock cycles, <u>maximum</u> 2.5 monitoring clock cycles + 1 position controller clock cycle)
t_6	Time until the stop response that was initiated starts (<u>typical</u> 2 ms, <u>maximum</u> 3 position controller clock cycles + 8 ms)
t_7	Time required to bring the axis to a standstill. This time and thus the residual distance traveled by the axis is determined by the axis design (motor, mass, friction, ...).

Notice

During "normal" operation, speed overshoot should not unintentionally initiate the SBR. Speed overshoot should therefore be checked by making the appropriate measurements.



Warning

If the "safe standstill" function or "STOP A" is activated, the motor can no longer generate any torque. This is the reason that potentially hazardous motion can occur, e.g. for the following:

- When an external force acts on the drive axes
- Vertical and inclined axes without weight equalization
- Axes that are moving (coasting down)
- Direct drives with low friction and low self-locking
- Notching torques (depending on the motor type, bearing design and friction characteristics, up to half a pole pitch in a direction that cannot be predicted)

Possible hazards must be clearly identified using a risk analysis that must be carried out by the manufacturer. With an assessment, based on this risk analysis, it should be defined as to which additional measures are required, e.g. external brakes.

6.5 Safely reduced speed (SG)

Description

The purpose of the SG (safely reduced speed) function is to safely monitor the load-side speed of an axis/spindle.

The actual speed of the axis/spindle is cyclically compared in the monitoring clock cycle with the speed limit value selected using SGEs. The speed limit values are defined in the following machine data/parameters:

for 840D sl:

MD 36931: \$MA_SAFE_VELO_LIMIT[n]

for SINAMICS S120:

p9531: SI motion SLS (SG) limits (Control Unit)

The speed limit values for SG1, SG2, SG3 or SG4 allow various applications/operating states on the machine to be monitored. The safely reduced speed function can therefore be used to implement protective measures for the operating personnel and machine in the setting-up mode or also in automatic operation.



Warning

For control gears, it is important to select the correct gear ratio!

Features

The features of the SG function are as follows:

- Load-side speed limit values are safely monitored
- Monitoring limit values are adapted to various operating states (e.g. test, setting-up, automatic modes)
- Configurable stop response when the SG responds

Prerequisites

The following prerequisites must be fulfilled (see Chapter 3.1, "System prerequisites"):

- The option and functions must be enabled in the axis-specific machine data
- The SGEs "SBH/SG deselection" and "SBH deselection" must be configured

Specifying velocities and speeds

The requirements regarding speeds and velocities that are stipulated for individual processes (milling, turning, grinding, etc.) vary depending on the different C Standards. For example, the following could be specified for the setting-up mode: "Safely reduced speed" with 2 m/min for feed drives and 50 RPM for spindle drives or standstill within 2 revolutions.

The machine manufacturer must parameterize SI in such a way as to ensure full compliance with the EC Machinery Directive. The relevant standards provide the necessary guidelines and support.

Quantities that influence the parameterization include, e.g. the drive dynamic response, the set parameters with their delay times, electrical and mechanical gear ratios and all of the mechanical properties and characteristics. The interrelationships between the drive dynamic response and internal delay times of SI are shown in Fig. 6-13 "Timing when exceeding the limit value for SG".

6.5.1 Speed monitoring, encoder limit frequency

When SBH/SG is active in a configuration with a 1–encoder, the speed is monitored to ensure that it does not exceed a maximum encoder limit frequency. An appropriate alarm is output if this limit is exceeded.

Encoder limit frequency

The encoder limit frequency is 500 kHz. When the encoder limit frequency in SG is exceeded, the SG-specific parameterized stop is initiated.

6.5 Safely reduced speed (SG)

6.5.2 Selecting/deselecting safely reduced speed

Selecting SG

The following SGEs are used to select SG:

Table 6-11 Selecting/deselecting SG

SGE		Description
SBH/SG deselection	SBH deselection	
= 1	x	SBH and SG are deselected
= 0	= 0	SBH is selected (see Chapter 6.2, "Safe operating stop (SBH)")
= 0	= 1	SG is selected
Note: x → Any signal state		

Note

The actual status of the function is displayed using the SGA "SBH/SG active" and SGA "SBH active".

Before activating the SG function it must be ensured that the speed of the axis/spindle is lower than the selected speed limit value. If it is higher, an alarm is generated that causes the drive to be shut down.

The SGEs and SGAs are described in Chapter 7.1 "Safety-related input/output signals (SGE/SGA)".

Selecting speed limit values

The maximum permissible speed of an axis/spindle in the setting-up mode is defined for individual machine types in the C Standards (product standards). The machine manufacturer is responsible for ensuring that the correct speed limit value is selected depending on the operating mode and the application.

The required speed limit is selected as follows by combining the following SGEs:

Table 6-12 Selecting speed limit values for SGs

SGE		Description
SG selection Bit 1	SG selection Bit 0	
= 0	= 0	Speed limit value for SG1 active
= 0	= 1	Speed limit value active for SG2 ¹⁾
= 1	= 0	Speed limit value for SG3 active
= 1	= 1	Speed limit value active for SG4 ¹⁾
Note: 1) The SG limit values SG2 and SG4 can be finely graduated using the SG override (see Chapter 6.5.4, "Override for safely reduced speed". The active SG stage is displayed using SGA "SGA active bit 0" and "SGA active bit 1".		

Changing-over the speed limit values

A changeover from a lower to a higher speed limit value takes effect instantaneously without any delay.

When changing-over from a higher to a lower limit value, then a delay time is started that is parameterized using the machine data (refer to Figure 6-12, "Timing when changing-over from a higher to a lower speed limit").

for 840D sl:

MD 36951: \$MA_SAFE_VELO_SWITCH_DELAY

for SINAMICS S120:

p9551: SI motion SLS (SG) changeover delay time (Control Unit) /

The axis/spindle must be braked sufficiently during the delay time so that it has reached the reduced speed that is below the new limit value when the delay time expires. However, if the actual speed is higher than the new limit value when the time has expired, an appropriate alarm is output with the configurable stop response.

6.5 Safely reduced speed (SG)

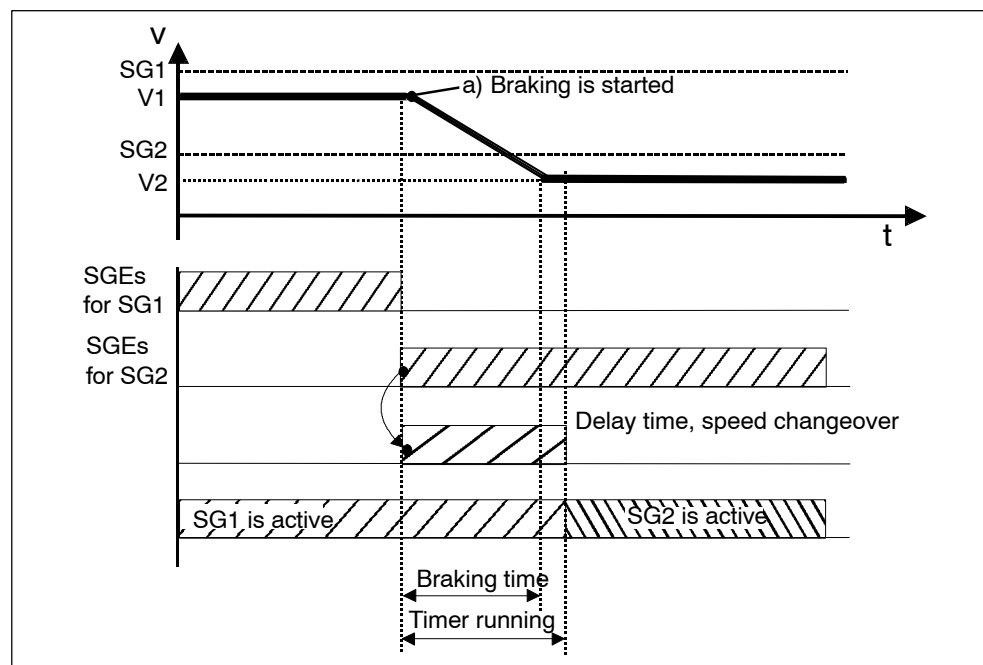


Fig. 6-12 Timing when changing-over from a higher to a lower speed limit

Deselecting SG

The SG function can be deselected at any speed by activating the SGE "SBH/SG deselection".

**Warning**

The delay time must also be selected as a function of the distance to the hazardous location. The speeds to be taken into account (speed at which hands/arms are moved to appropriately arrange protective devices/guards) are specified in Standard DIN EN 999.

6.5.3 Effects when the limit value is exceeded for SG

Configurable stop response

When the selected speed limit value is violated, a stop response configured in the following machine data/parameters is generated:

for 840D sl:

MD 36961: \$MA_SAFE_VELO_STOP_MODE

MD 36963: \$MA_SAFE_VELO_STOP_REACTION[n]

for SINAMICS S120:

p9561: SI motion SLS (SG) stop response (Control Unit)

p9563[0...3]: SI motion SLS (SG)–specific stop response (Control Unit)

Note

- An alarm is displayed (for 840D sl: 27011, for SINAMICS S120: F01714). After the cause of the fault has been removed, the alarm can be acknowledged with RESET. The monitoring function is then again active.
- Depending on the selected monitoring clock cycle, the dynamic drives may cause a brief increase in speed on the monitored axis/spindle before the stop response sequence starts.
- For traversing modes which use a transformation with singularity points (e.g. 5–axis transformation and TRANSMIT), relatively high axial speeds occur at these points. These speeds can initiate stop responses even though the Cartesian motion of the tool center point (TCP) is below the selected speed limit value.

The monitoring functions provided by SI are basically axis–specific. This means that it is not possible to directly monitor the TCP.

6.5 Safely reduced speed (SG)

Timing when the limit value is exceeded

When the safely reduced speed function is active, then the timing is as follows when the limit value is violated:

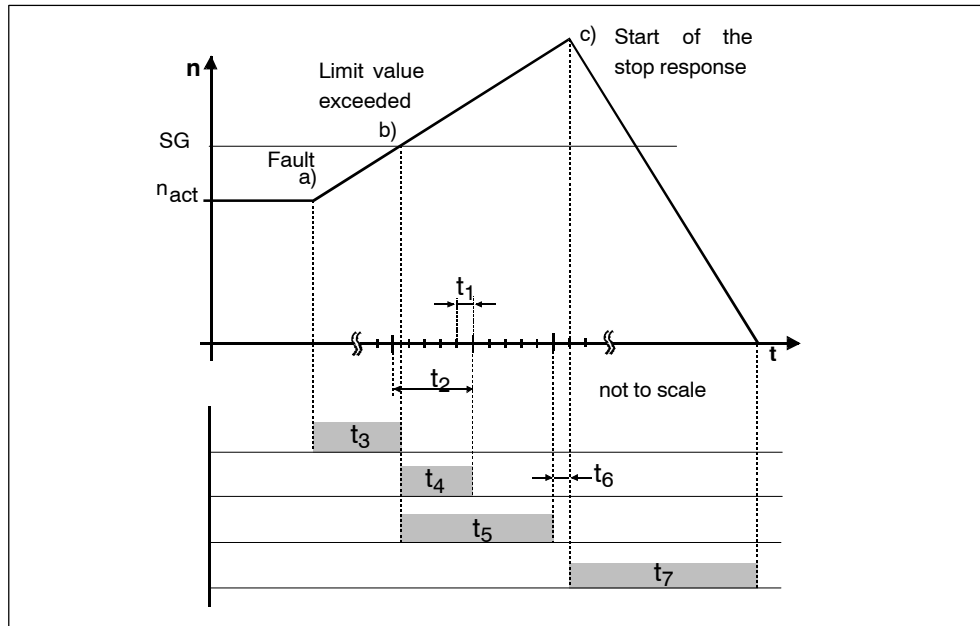


Fig. 6-13 Timing when the limit value is exceeded for SG

Table 6-13 Explanation of the diagram

Time	Explanation
t_1	The position control clock cycle, defined by the following MDs: MD 10050: \$MN_SYSCLOCK_CYCLE_TIME MD 10060: \$MN_POSCTRL_SYSCLOCK_TIME_RATIO
t_2	Monitoring clock cycle, defined by the following MDs: for 840D sl: MD 10090: \$MN_SAFETY_SYSCLOCK_TIME_RATIO for SINAMICS S120: r9500 SI motion monitoring clock cycle (Control Unit)
t_3	Time between an error occurring and a limit value being reached
t_4	Time until a limit value violation is detected (<u>typical</u> 1 monitoring clock cycle, <u>maximum</u> 1.5 monitoring clock cycles + 1 position controller clock cycle)
t_5	Response time required to initiate the configured stop response (<u>typical</u> 2 monitoring clock cycles, <u>maximum</u> 2.5 monitoring clock cycles + 1 position controller clock cycle)
t_6	Time until the stop response that was initiated starts (STOP A: <u>typical</u> 2 ms, <u>maximum</u> 3 position controller clock cycles + 8 ms) (STOP B/C: <u>typical</u> 2 position controller clock cycles, <u>maximum</u> 2 position controller clock cycles) (STOP D/E: <u>typical</u> 2 interpolation clock cycles, <u>maximum</u> 2 interpolation clock cycles + 2 monitoring clock cycles)

Table 6-13 Explanation of the diagram

Time	Explanation
t ₇	Time required to bring the axis to a standstill. This time and thus the residual distance traveled by the axis is determined by the axis design (motor, mass, friction, ...) and the configured stop response (STOP C is faster than STOP D).
Note: Each axis must be measured during commissioning (start-up) to determine the distance that it travels between the limit switch being violated and it coming to a standstill.	

Configurable SG specific stop responses

Using the configurable SG-specific stop response, a suitable braking behavior can be set for every SG stage in-line with the application when the particular speed limit value is exceeded.

For example, when:

SETTING-UP, the SG stage SG2 can be active with the configured stop response STOP C and
in the AUTOMATIC mode, the SG stage SG4 with the configured stop response STOP D.

Activating

The function is active if the MD/parameter 36961/p9561:

\$MA_SAFE_VELO_STOP_MODE = 5 / SI motion SLS (SG) stop response (Control Unit) = 5.

Setting the configurable SG-specific stop responses

The SG-specific stop responses can be set using the following machine data:

for 840D sl:

MD 36963: \$MA_SAFE_VELO_STOP_REACTION[n]

for SINAMICS S120:

p9563[0...3] SI motion SLS(SG)-specific stop response (Control Unit)

6.5 Safely reduced speed (SG)

6.5.4 Override for safely reduced speed

General information

16 SG override stages for the limit values of safely reduced speeds 2 and 4 using SGEs. This means that the limit values for SG2 and SG4 can be more finely graduated.

Using the following machine data, an override stage can be assigned factors of between 1 and 100%:

for 840D sl:

MD 36932: \$MA_SAFE_VELO_OVR_FACTOR[n]

for SINAMICS S120:

p9532[0...15]: SI motion SLS (SG) override factor (Control Unit)

Application example

For grinding applications, the limit value for the safely reduced speed can be adjusted to the variations in the grinding wheel peripheral speed using the SG override.

Activating

The following prerequisites must be fulfilled before the function can be used:

- The function is enabled via MD 36901/parameter p9501:
\$MA_SAFE_FUNCTION_ENABLE, bit 5/SI motion enable, safety functions, bit 5
- The SBH/SG function is enabled via MD36901/parameter p9501:
\$MA_SAFE_FUNCTION_ENABLE, bit 0/SI motion enable, safety functions (Control Unit), bit 0
- The required SGEs "SG override selection bits 3, 2, 1, 0" have either been completely or partially configured
- The SG override factors have been entered into the appropriate MD 36932/parameter p9532: \$MA_SAFE_VELO_OVR_FACTOR[n]/p9532[0...15] SI motion SLS (SG) override factor (Control Unit)
- Safely reduced speed 2 or 4 has been activated

Changing-over an SG override

SG override values are changed-over subject to the same conditions as those that apply to speed limit values.

Table 6-14 Changing-over SG override stages

Switch over	Description
From lower to higher	Instantaneous
From higher to lower	The time parameterized using MD 36951/p 9551 is started. The axis/spindle must be braked within this delay time.
Note: See Chapter 6.5.2, "Selecting/deselecting safely reduced speed"	

Note

Changing between SGEs "SG override selection, bits 3, 2, 1, 0" continuously and quickly may initiate a STOP F.

Selecting an SG override

The active speed limit value (SG1, 2, 3 or 4) is selected using SGEs "SG selection bits 1 and 0". The desired override is selected by combining SGEs "SG override selection bits 3, 2, 1 and 0". The override is only effective for the speed limit value for SG2 and SG4.

Table 6-15 Selecting the SG override for safely reduced speed

SG selec- tion Bit 1	SG selec- tion Bit 0	SGE				Description
		SG override selection Bit 3	SG override selection Bit 2	SG override selection Bit 1	SG override selection Bit 0	
= 0	= 0	x	x	x	x	Speed limit value for SG1 active
= 0	= 1	= 0	= 0	= 0	= 0	Speed limit value for SG2 active with override stage 0
— " —		= 0	= 0	= 0	= 1	... with override stage 1
— " —		= 0	= 0	= 1	= 0	... with override stage 2
— " —		= 0	= 0	= 1	= 1	... with override stage 3
— " —		= 0	= 1	= 0	= 0	... with override stage 4
— " —		= 0	= 1	= 0	= 1	... with override stage 5
— " —		= 0	= 1	= 1	= 0	... with override stage 6
— " —		= 0	= 1	= 1	= 1	... with override stage 7
— " —		= 1	= 0	= 0	= 0	... with override stage 8
— " —		= 1	= 0	= 0	= 1	... with override stage 9
— " —		= 1	= 0	= 1	= 0	... with override stage 10

6.5 Safely reduced speed (SG)

Table 6-15 Selecting the SG override for safely reduced speed

SG selection Bit 1	SG selection Bit 0	SG override selection Bit 3	SG override selection Bit 2	SG override selection Bit 1	SG override selection Bit 0	Description
—	—	= 1	= 0	= 1	= 1	... with override stage 11
—	—	= 1	= 1	= 0	= 0	... with override stage 12
—	—	= 1	= 1	= 0	= 1	... with override stage 13
—	—	= 1	= 1	= 1	= 0	... with override stage 14
—	—	= 1	= 1	= 1	= 1	... with override stage 15
= 1	= 0	x	x	x	x	Speed limit value for SG3 active
= 1	= 1	= 0	= 0	= 0	= 0	Speed limit value for SG4 active with override stage 0
—	—	= 0	= 0	= 0	= 1	... with override stage 1
—	—	= 0	= 0	= 1	= 0	... with override stage 2
—	—	= 0	= 0	= 1	= 1	... with override stage 3
—	—	= 0	= 1	= 0	= 0	... with override stage 4
—	—	= 0	= 1	= 0	= 1	... with override stage 5
—	—	= 0	= 1	= 1	= 0	... with override stage 6
—	—	= 0	= 1	= 1	= 1	... with override stage 7
—	—	= 1	= 0	= 0	= 0	... with override stage 8
—	—	= 1	= 0	= 0	= 1	... with override stage 9
—	—	= 1	= 0	= 1	= 0	... with override stage 10
—	—	= 1	= 0	= 1	= 1	... with override stage 11
—	—	= 1	= 1	= 0	= 0	... with override stage 12
—	—	= 1	= 1	= 0	= 1	... with override stage 13
—	—	= 1	= 1	= 1	= 0	... with override stage 14
—	—	= 1	= 1	= 1	= 1	... with override stage 15
x: Signal status is optional since override values are not effective for SG1 and SG3						

Configuring NCK–SGEs

NCK–SGEs (override selection bits 3, 2, 1, 0) are configured using the following machine data:

for 840D sl:

MD 36978: \$MA_SAFE_OVR_INPUT[n]

(input assignment for override selection)

Defining SG override factors

The SG override factors themselves (percentage values) are defined using the following machine data:

for 840D sl:

MD 36932: \$MA_SAFE_VELO_OVR_FACTOR[n]

for SINAMICS S120

p9532[n]: SI motion SLS (SG) override factor (Control Unit)

6.5.5 Example: Override for safely reduced speed

Task assignment

When safely reduced speeds are selected, the speed limit values must be set as follows.

Table 6-16 Application example of how override is used for safely reduced speed

SGE SG selection		SGE override selection				Effective speed limit value	
Bit 1	Bit 0	Bit 3	Bit 2	Bit 1	Bit 0		Assumptions for the example
0	0	x	x	x	x	Limit value 1	1000 mm/min
0	1	0	0	0	0	Limit value 2 with override stage 0	100 % = 2000 mm/min
—	—	0	0	0	1	Limit value 2 with override stage 1	80 % = 1600 mm/min
—	—	0	0	1	0	Limit value 2 with override stage 2	50 % = 1000 mm/min
—	—	0	0	1	1	Limit value 2 with override stage 3	30 % = 600 mm/min
1	0	x	x	x	x	Limit value 3	4000 mm/min
1	1	0	0	0	0	Limit value 4 with override stage 0	100 % = 5000 mm/min
—	—	0	0	0	1	Limit value 4 with override stage 1	80 % = 4000 mm/min
—	—	0	0	1	0	Limit value 4 with override stage 2	50 % = 2500 mm/min
—	—	0	0	1	1	Limit value 4 with override stage 3	30 % = 1500 mm/min
Notes: x: Signal status is optional since override values are not effective for SG1 and SG3 SGEs "SG override selection bit 3 and bit 2" are not required to select an SG override – i.e. they do not need to be configured (they are internally set to "0").							

6.5 Safely reduced speed (SG)

Assumptions for the example

- Defining the SGEs in the NCK monitoring channel
 - I/O number for signal SG selection, bit 1: → OUTSI[13]
 - I/O number for signal SG selection, bit 0: → OUTSI[14]
 - I/O number for signal, override, bit 1: → OUTSI[17]
 - I/O number for signal, override, bit 0: → OUTSI[18]

Defining machine data

Table 6-17 Supplying MDs for the speed limit values

Limit value	for 840D sl		for SINAMICS S120	
	MD number	Value	Parameter No.	Value
SG1	36931[0]	1000	p9531[0]	1000
SG2	36931[1]	2000	p9531[1]	2000
SG3	36931[2]	4000	p9531[2]	4000
SG4	36931[3]	5000	p9531[3]	5000

Table 6-18 Supplying the MDs for the SGEs

Signal SGE	Assignment	
	MD number	Value
SG selection, bit 1	36972[1]	0401010D
SG selection, bit 0	36972[0]	0401010E
SG override selection, bit 1	36978[1]	04010111
SG override selection, bit 0	36978[0]	04010112

Table 6-19 Supplying MDs for override factors

Override	for 840D sl		for SINAMICS S120	
	MD number	Value	Parameter No.	Value
0	36932[0]	100	p9532[0]	100
1	36932[1]	80	p9532[1]	80
2	36932[2]	50	p9532[2]	50
3	36932[3]	30	p9532[3]	30

6.6 Safety-related output "n<n_x"

The function safety-related output "n<n_x" (SGA "n<n_x") is used to safely detect the speed range of a drive. The speed range detection is evaluated on a user-for-user basis, e.g. in so much that a protective door can only be re-enabled if a spindle that is running-down has fallen below a certain speed.

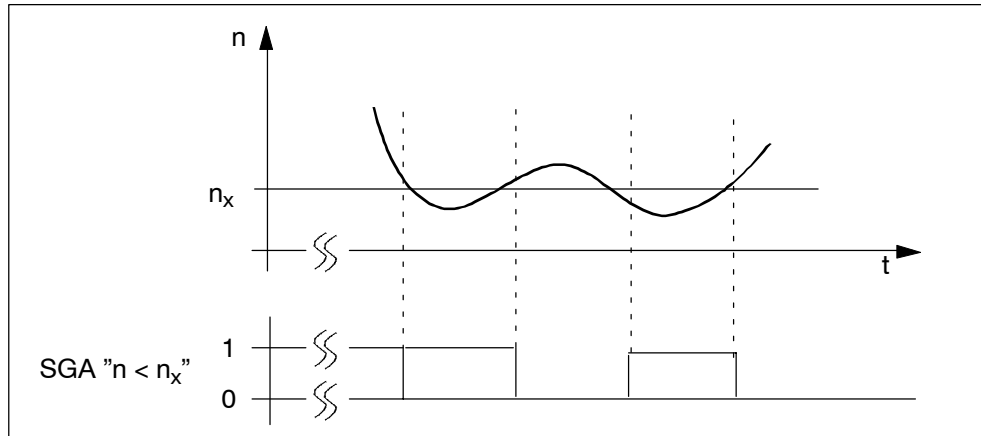


Fig. 6-14 Signal $n < n_x$, dependent on the speed characteristic

Description

This function is for each axis and is implemented through 2 channels. One channel is activated in the NCK, the other directly in the drive.

One velocity comparison value n_x can be defined in the machine data.

If the actual speed n of the drive falls below the velocity comparison value n_x , then an associated SGA "n<n_x" switches. Contrary to SG, no other response is initiated. By further processing the SGAs "n<n_x" – e.g. using safe programmable logic (SPL) – then, for example it can be evaluated as to whether a drive is in a non-hazardous speed range.

Defining n_x

The limit speed n_x is defined using the following MD/following parameters:

for 840D sl:

MD 36946 \$MA_SAFE_VELO_X

for SINAMICS S120:

p9546 SI motion SSM (SGA $n < n_x$) speed limit n_x (CU)

6.6 Safety-related output " $n < n_x$ "**Response time and error responses**

Typical response time for $n < n_x$:

1 interpolation clock cycle + 2 monitoring clock cycles

Maximum response times: 1 position controller clock cycle + 5.5 monitoring clock cycles + 2 interpolation clock cycles + 3 PLC cycles



Warning

A STOP F (displayed using alarms 27001, 27101 and onwards or F01611) only results in a subsequent STOP B/A response, if at least one of the safety-related functions SBH, SG, SE or SN is active or selected. If only the function " $n < n_x$ " is active, then a STOP F does not result in a subsequent STOP B/A response. This means that if " $n < n_x$ " is used as a safety function, then at least one of the SBH, SG, SE or SN functions must be active or selected (e.g. by selecting a high SG level).

Note

If the axis/spindle runs at a speed n_x , then as a result of actual differences in the two monitoring channels, the SGA " $n < n_x$ " can have different states. This must be taken into account in the safe processing of the SGAs.

6.7 Safe software limit switches (SE)

Note

The function "safe software limit switches" (SE) is also known as "safe limit positions".

Description

The "safe software limit switches" function (SE) can be used to implement protective functions for operating personnel and machinery or working zone/protection zone delimitation for specific axes. For example, this function can replace hardware limit switches.

Two "safe software limit switches" (SE1 and SE2) are available for each axis. If the SE function is active, limit switch position pair SE1 or SE2 can be selected as a function of SGE "SE selection".

Defining the upper and lower limit values

The position limit values for the software limit switch position pairs 1 and 2 are defined in the following machine data:

for 840D sl:

MD 36934: \$MA_SAFE_POS_LIMIT_PLUS[n]

MD 36935: \$MA_SAFE_POS_LIMIT_MINUS[n]

for SINAMICS S120:

p9534[n]: SI motion SLP (SE) upper limit values (Control Unit)

p9535[n]: SI motion SLP (SE) lower limit values (Control Unit)

Note

The upper and lower position limit values must be selected so that when the axis is traversing in this direction, the software limit switches – that are used as standard – are first reached.

Features

The most important features include:

- Software limit switches are safely defined and evaluated as a software function
- Configurable stop response when software limit switches are passed
- The stop response is implemented internally in the software (and is therefore faster than a hardware limit switch response) when software limit switches are passed (i.e. actuated)

6.7 Safe software limit switches (SE)

Prerequisites

The following prerequisites must be fulfilled for the "safe software limit switches" function:

- The "safe software limit switches" function must be enabled
- The axis/axes must have been safely referenced (user agreement)
- SGE "SE selection" must be supplied (configured) in both channels



Warning

"Safe software limit switches" are only effective if the user agreement has been given.

6.7.1 Effects when an SE responds



Warning

The SE function does not predictively monitor the SW (software) limit switches. This means that the axis stops after passing the limit position. The distance traveled after the SE is dependent on:

- How the function was parameterized (monitoring clock cycle, stop response, ...)
- The actual speed
- The design of the axis

Configurable stop responses

When an axis passes (actuates) a "safe software limit switch", a stop response configured in the following machine data is generated:

for 840D sl:

MD 36962: \$MA_SAFE_POS_STOP_MODE

for SINAMICS S120:

p9562: SI motion SLP (SE) stop response (Control Unit)

The user can select either STOP C, D or STOP E.

Effect

- The configured stop response is initiated
- The relevant alarm is displayed

Acknowledging and moving away

1. Withdraw the user agreement (SE is no longer active) or changeover to another SE.
2. Acknowledge the stop and alarm response.
3. Bring the axis into a range in which the monitoring no longer responds.

Timing when the safe software limit switches are actuated

If the "safe software limit switches" function is active, the system timing is as follows when the software limit switches are actuated (passed):

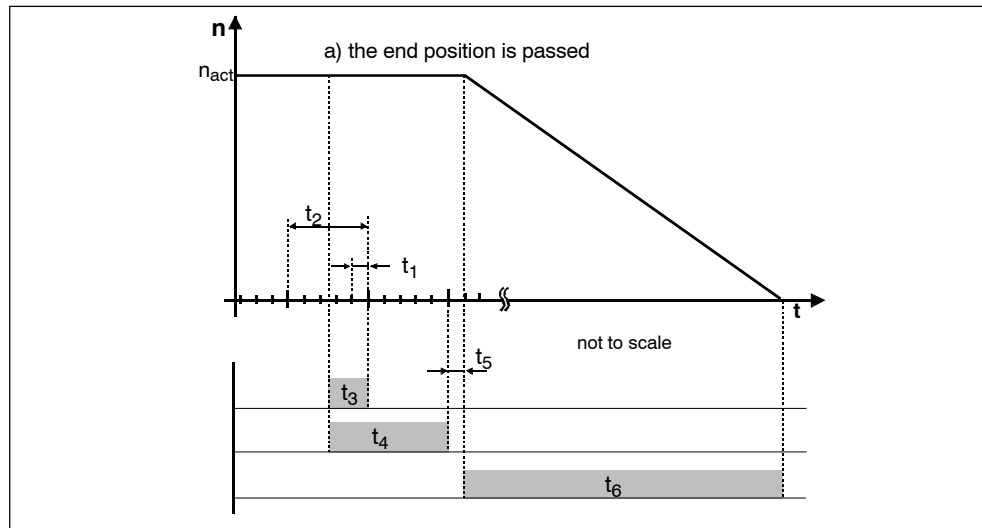


Fig. 6-15 Timing when a software limit switch is actuated

Table 6-20 Explanation of the diagram

Time	Explanation
t_1	The position control clock cycle, defined by the following MDs: for 840D sl: MD 10050: \$MN_SYSCLOCK_CYCLE_TIME MD 10060: \$MN_POSCTRL_SYSCLOCK_TIME_RATIO
t_2	Monitoring clock cycle, defined by the following MDs: for 840D sl: MD 10090: \$MN_SAFETY_SYSCLOCK_TIME_RATIO for SINAMICS S120: p9500: SI motion monitoring clock cycle (Control Unit)
t_3	Delay until the configured stop response is output (<u>typical</u> 0.5 monitoring clock cycles, <u>maximum</u> 1 monitoring clock cycle + 1 position controller clock cycle)
t_4	Time until the configured stop response becomes effective (<u>typical</u> 1.5 monitoring clock cycles, <u>maximum</u> 2 monitoring clock cycles + 1 position controller clock cycle)

6.7 Safe software limit switches (SE)

Table 6-20 Explanation of the diagram

Time	Explanation
t_5	Time until the stop response that was initiated actually starts STOP C: <u>typical</u> 2 position controller clock cycles, <u>maximum</u> 2 position controller clock cycles STOP D/E: <u>typical</u> 2 interpolation clock cycles, <u>maximum</u> 2 interpolation clock cycles + 2 monitoring clock cycles
t_6	Time required to bring the axis to a standstill. This time and thus the residual distance traveled by the axis is determined by the axis design (motor, mass, friction, ...) and the configured stop response (STOP C is faster than STOP D).
Note: Each axis must be measured during commissioning (start-up) to determine the distance that it travels between the limit switch being violated and it coming to a standstill.	

6.8 Safety software cams and safety cam track (SN)

Description

The "safe software cams" function (SN) can be used to implement safe electronic cams, safe range detection or working zone/protection zone delimitation for specific axes, thereby replacing the hardware solution.



Warning

The enabled cam signals are immediately output when the control system is powered-up, this output is however only safe after safe referencing (this is signaled using the SGA "Axis safely referenced").

The cams are only considered as being safe if they were safely referenced. This is the reason that the user must interlock this SGA with the cam SGA.

Features

The most important features include:

- Cam positions are safely defined and evaluated as a software function
- Working ranges/zones are defined

Tolerance for SN

Owing to variations in the clock cycle and signal run times (signal propagation times), the cam signals of the two monitoring channels do not switch simultaneously and not precisely at the same position. A tolerance bandwidth can therefore be specified for all cams using the following machine data/parameters. Within this bandwidth, the signal states for the same cam may be different in the two monitoring channels.

for 840D sl:

MD 36940: \$MA_SAFE_CAM_TOL

for SINAMICS S120:

p9540: SI motion SCA (SN) tolerance (Control Unit)

Note

The lowest possible tolerance bandwidth (less than 5–10 mm) should be selected for the "safe software cams" function. It makes sense to parameterize the cam tolerance greater than or equal to the actual value tolerance.

6.8 Safety software cams and safety cam track (SN)

Effects when SN responds



Warning

When defining cam positions, please note that the function only monitors the actual position thus making (predictive) sensing of cam signals impossible.

The cams are only considered as being safe if they were safely referenced. This is the reason that the user must link this SGA in the SPL with the corresponding SGA of the cam functionality.

Response times

- Response times without cam synchronization
typical 1 interpolation clock cycle + 1.5 monitoring clock cycles
maximum 1 position controller clock cycle + 4 monitoring clock cycles + 2 interpolation clock cycles + 3 PLC cycles
- Response times with cam synchronization
typical 1 interpolation clock cycle + 2.5 monitoring clock cycles
maximum 1 position controller clock cycle + 5 monitoring clock cycles + 2 interpolation clock cycles + 3 PLC cycles

6.8.1 Safe software cams (4 cam pairs)

Note

If more than 4 cam pairs are required, then the "safe cam track" function must be used (refer to Chapter 6.8.2, "Safe cam track").

Description

There are 4 pairs of cams (SN1, SN2, SN3, SN4) available for each axis. Each cam pair consists of a plus cam (SN1+, SN2+, SN3+, SN4+) and a minus cam (SN1-, SN2-, SN3-, SN4-). Each cam signal can be individually enabled and configured via machine data. The cam signals are output via SGAs.

Prerequisites

The following prerequisites must be fulfilled for the "safe software cams" function:

- The axis/axes must have been safely referenced (user agreement)
- The safe cams must be configured:

The required cams are enabled using machine data

for 840D sl:

36901: \$MA_SAFE_FUNCTION_ENABLE, bits 8...15 and parameter

for SINAMICS S120:

p9501: SI motion, enable safety functions, bits 8...15

SGA assignment is defined using machine data

for 840D sl:

36988: \$MA_SAFE_CAM_PLUS_OUTPUT[n] and

36989: \$MA_SAFE_CAM_MINUS_OUTPUT[n]

Defining the cam positions

The cam positions are defined in the following machine data/parameters:

for 840D sl:

MD 36936: \$MA_SAFE_CAM_POS_PLUS[0...3]

MD 36937: \$MA_SAFE_CAM_POS_MINUS[0...3]

for SINAMICS S120:

p9536[n]: SI motion SCA (SN) plus cam position (Control Unit)

p9537[n]: SI motion SCA (SN) minus cam position (Control Unit)

Special case for SN

If the axis is positioned precisely at the parameterized cam position, the cam signals may have different states owing to system-related variations in the actual values between the two monitoring channels.

This must be taken into account when safely processing the cam signals, e.g. by filtering the different signal states by means of a logic circuit (see "Synchronizing cam signals").

Synchronizing cam signals

As a result of system-related actual value differences, the cam signals of the monitoring channels can have different states. In order to prevent this, the cam synchronization can be activated. This rounds off the results of both channels.

The cam SGAs at the input position of the SPL are synchronized if the user has parameterized this using the function enable.

Cam signal synchronization is enabled using the following machine data/parameters:

6.8 Safety software cams and safety cam track (SN)

for 840D sl:

MD 36901: \$MA_SAFE_FUNCTION_ENABLE, bit 7

for SINAMICS S120:

p9501: SI Motion enable safety functions (Control Unit), bit 7

The cam SGAs including the hysteresis, but without synchronization are displayed in the service screen and servo trace.

Hysteresis of cam SGAs

When cam synchronization is activated, cam signals are output with a hysteresis that takes into account the approach direction (refer to Figure 6-16, "Hysteresis of the cam SGAs"). This helps to prevent the SGAs from "flickering" if the axis is positioned exactly on the cam.

The magnitude of the hysteresis is determined by the following data:

for 840D sl:

MD 36940: \$MA_SAFE_CAM_TOL
(tolerance for safe software cams)

for SINAMICS S120:

p9540: SI motion SCA (SN) tolerance (Control Unit)

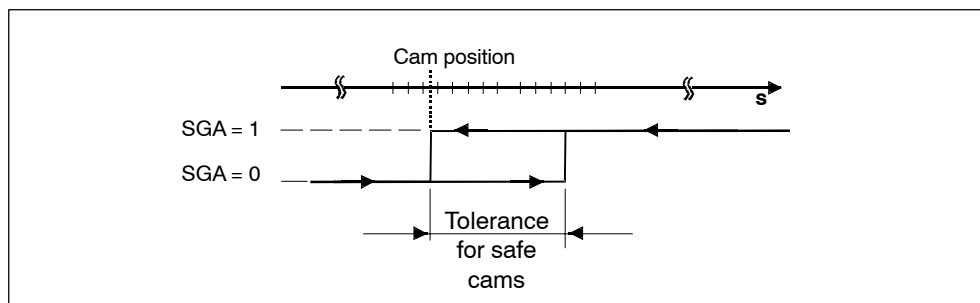


Fig. 6-16 Hysteresis of cam SGAs

If the cam is incorrectly/inadmissibly parameterized, then this is indicated by Alarm 27033.



Warning

As a result of the cam hysteresis, for increasing actual values, the cams SGA do not switch at the configured cam position (SN) but at the position increased by the cam tolerance (hysteresis) (SN+TOL).

Users must carefully take this into consideration when configuring the cam positions and cam tolerance.

Safe software cams for endlessly turning rotary axes

For rotary axes with cams, the modulo range (cam actual value range) can be set using the following machine data/parameters:

for 840D sl:

MD 36902: \$MA_SAFE_IS_ROT_AX

for SINAMICS S120:

p9502: SI motion axis type (Control Unit)

for 840D sl:

MD 36905: \$MA_SAFE_MODULO_RANGE

for SINAMICS S120:

p9505: SI motion SCA (SN) modulo value (Control Unit)

The cam actual value range should be selected as wide as the modulo display of the safe actual value.

For rotary axes, the modulo display of safe actual values is selected and parameterized using the following machine data:

for 840D sl:

MD 30300: \$MA_IS_ROT_AX

MD 30320: \$MA_DISPLAY_IS_MODULO

MD 30330: \$MA_MODULO_RANGE

Limiting the cam positions

When parameterizing the cam positions, the following conditions close to the modulo limits must be maintained.

When cam synchronization is not active:

- $-\text{Mod_Pos} + \text{Pos_Tol} < \text{SN_Pos} < \text{Mod_Pos} - \text{Pos_Tol}$

When cam synchronization is active:

- $-\text{Mod_Pos} + \text{Pos_Tol} + \text{Cam_Tol} < \text{SN_Pos} < \text{Mod_Pos} - \text{Pos_Tol} - \text{Cam_Tol}$

Meanings:

Pos_Tol: Actual value tolerance

MD 36942: \$MA_SAFE_POS_TOL for 840D sl

p9542: SI motion, actual value comparison tolerance (crosswise) (Control Unit) for SINAMICS S120

Cam_Tol: Cam tolerance

MD 36940: \$MA_SAFE_CAM_TOL for 840D sl

p9540: SI motion SCA (SN) tolerance (Control Unit) for SINAMICS S120

Mod_Pos: Lower/upper modulo value:

MD 36905: \$MA_SAFE_MODULO_RANGE for 840D sl

p9505: SI motion SCA (SN) modulo value (Control Unit) for SINAMICS S120

6.8 Safety software cams and safety cam track (SN)

SN_Pos: Cam position:

MD 36936: \$MA_SAFE_CAM_POS_PLUS[n] for 840D sl

p9536: SI motion SCA (SN) plus cam position (Control Unit) for SINAMICS S120

MD 36937: \$MA_SAFE_CAM_POS_MINUS[n] for 840D sl

p9537: SI motion SCA (SN) minus cam position (Control Unit) for SINAMICS S120

When booting, the parameterization (parameter assignments) are checked in each monitoring channel. In the case of parameterization errors (a condition is not fulfilled), Alarm 27033 or F01687 is output after the control has been booted.

6.8.2 Safe cam track (SN)

Description

The "safe cam track" function is used as an alternative to safe cams (refer to Chapter 6.8.1). The user has 4 cam tracks at his disposal. Up to 15 cams can be evaluated on a cam track. A total of 30 cams are available. The information as to which cam of a cam track is presently active is saved in the SGA "cam range" (4 bits for each cam track) and can together with the SGA "cam track" be evaluated in the safe programmable logic (SPL).

Further, the cams are available as SGA safe cam range bits.

Prerequisites

The following prerequisites apply to the "safe cam track" function:

- The axis/axes must have been safely referenced (user agreement)
- Either the "safe cams" function or the "safe cam track" function may be used, i.e. simultaneous enable in the machine data or parameters
MD 36903 \$MA_SAFE_CAM_ENABLE/p9503 SI motion SCA (SN) enable (Control Unit) and
MD 36901 \$MA_SAFE_FUNCTION_ENABLE/p9501 SI motion enable safety functions (Control Unit)
is not permissible and result in the alarm 27033/C01681 "Invalid parameterization".
- The modulo function is not supported. If the "safe cam track" function is enabled and a value > 0 entered in the MD 36905 \$MA_SAFE_MODULO_RANGE/p9505 SI motion SCA (SN) modular value (Control Unit), then alarm 27033 "Axis %1 parameterization of the MD \$MA_SAFE_REFP_STATUS_OUTPUT[0] invalid" is output with a reference to \$MA_SAFE_MODULO_RANGE.

- The safe cams must be configured:

The required cams are enabled using machine data
for 840D sl:

36903: \$MA_SAFE_CAM_ENABLE, bits 0...29 and parameter
for SINAMICS S120:

p9503: SI motion SCA (SN) enable (Control Unit), bits 0...29

SGA assignment is defined using machine data
for 840D sl:

36988: \$MA_SAFE_CAM_PLUS_OUTPUT[n] and

36989: \$MA_SAFE_CAM_MINUS_OUTPUT[n]

Defining the cam positions

The cam positions are defined in the following machine data/parameters:

for 840D sl:

MD 36936: \$MA_SAFE_CAM_POS_PLUS[0...29]

MD 36937: \$MA_SAFE_CAM_POS_MINUS[0...29]

for SINAMICS S120:

p9536[0...29]: SI motion SCA (SN) plus cam position (Control Unit)

p9537[0...29]: SI motion SCA (SN) plus cam position (Control Unit)

Note

The minus position of cam x must be less than the plus position of cam x, otherwise alarm 27033 "Invalid parameterization" is output. For an incorrect parameterization, also alarm F01686 "SI Motion: Cam position parameterization not permissible" of the drive is also output.

Assignment, cam to cam track

The cams defined in \$MA_SAFE_CAM_POS_PLUS[0...29] and \$MA_SAFE_CAM_POS_MINUS[0...29] are assigned to a cam track as follows:

for 840D sl:

MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[0...29]

for SINAMICS S120:

p9538[0...29]: SI motion cam track assignment (Control Unit)

Range of values:

100...114 = cam range 0...14 at cam track 1

200...214 = cam range 0...14 at cam track 2

300...314 = cam range 0...14 at cam track 3

400...414 = cam range 0...14 at cam track 4

The "hundreds" position defines which cam track is assigned to the cams. The "tens" and "ones" positions contain the numerical value that is signaled to the SPL as SGA "cam range".

6.8 Safety software cams and safety cam track (SN)

Please note:

- It is not possible to assign a cam a multiple number of times to several tracks. A multiple assignment only functions if an additional cam is parameterized with the same cam position and assigned to another cam track.
- Cam positions can be freely assigned to a cam range.
- Cams that have not been assigned do not appear on the cam track.
- The cams on a cam track must not overlap.
- The cams on a cam track must have a certain minimum length.
- The cams on a cam track must have a certain minimum distance between them.

Evaluation of the parameterization

For the evaluation, the following checks are made (for the NCK and drive):

- If $\$MA_SAFE_CAM_ENABLE > 0$, then $\$MA_SAFE_FUNCTION_ENABLE$, bits 8–15 must be = 0.
- If $\$MA_SAFE_CAM_ENABLE > 0$, then it is not permissible that the enable bit for cam synchronization is set ($(\$MA_SAFE_FUNCTION_ENABLE, \text{bit } 7 = 0)$).
- Modulo cams are not permissible ($\$MA_SAFE_MODULO_RANGE$ must be 0 if $\$MA_SAFE_CAM_ENABLE > 0$).
- Checking the cam length:

$$\$MA_SAFE_CAM_POS_PLUS[0...29] - \$MA_SAFE_CAM_POS_MINUS[0...29] \geq \$MA_SAFE_CAM_TOL + \$MA_SAFE_POS_TOL$$

- Checking the distance between 2 cams on a cam track:

$$\$MA_SAFE_CAM_POS_MINUS[y] - \$MA_SAFE_CAM_POS_PLUS[x] \geq \$MA_SAFE_CAM_TOL + \$MA_SAFE_POS_TOL$$

- It is not permissible to parameterize two cams on the same track and range:

Example:

$\$MA_SAFE_CAM_TRACK_ASSIGN[2] = 205;$

$\$MA_SAFE_CAM_TRACK_ASSIGN[5] = 205;$

As a consequence, it is not possible to assign more than 15 cams to a cam track.

- If a cam is enabled in $\$MA_SAFE_CAM_ENABLE$, then it must also be assigned.

If a violation is determined when making these checks, then alarm 27033 "Parameterization invalid"/F01686 "SI motion: Cam position parameterization not permissible" is output.

The generation of the new cam SGA is shown in Fig. 6-17:

Parameterization example for SGA "cam track" and "cam range"

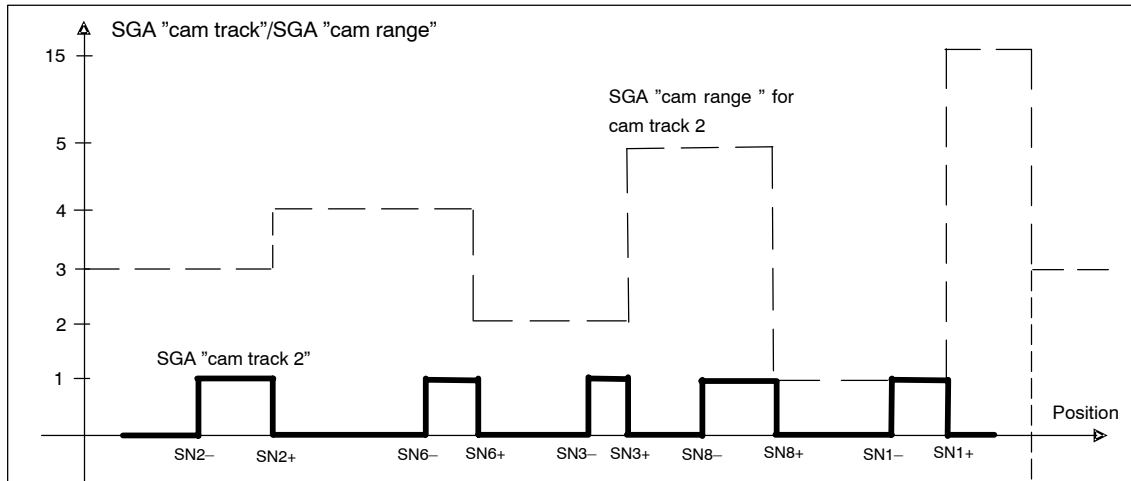


Fig. 6-17 SGA "cam track" and "cam range"

Note

The traversing range for rotary axes must lie within ± 2048 revolutions. This corresponds to the value range of the safety-related actual value.

Parameterization example for Fig. 6-17:

Enabling the cams SN1, SN2, SN3, SN6, SN8:

`$MA_SAFE_CAM_ENABLE = 0xA7 (0000 0000 0000 0000 0000 0000 1010 0111);`

Parameterizing the cam positions for the cams that have been enabled:

- SN1
`$MA_SAFE_CAM_POS_PLUS[0] = 480`
`$MA_SAFE_CAM_POS_MINUS[0] = 455`
- SN2
`$MA_SAFE_CAM_POS_PLUS[1] = 120`
`$MA_SAFE_CAM_POS_MINUS[1] = 80`
- SN3
`$MA_SAFE_CAM_POS_PLUS[2] = 320`
`$MA_SAFE_CAM_POS_MINUS[2] = 300`
- SN6
`$MA_SAFE_CAM_POS_PLUS[5] = 200`
`$MA_SAFE_CAM_POS_MINUS[5] = 170`
- SN8
`$MA_SAFE_CAM_POS_PLUS[7] = 380`
`$MA_SAFE_CAM_POS_MINUS[7] = 350`

Parameterizing the cam range assignment:

(all cams that have been enabled are assigned to cam track 2)

6.8 Safety software cams and safety cam track (SN)

- \$MA_SAFE_CAM_TRACK_ASSIGN[0] = 201
(cam SN1 is assigned cam range 1)
- \$MA_SAFE_CAM_TRACK_ASSIGN[1] = 203
(cam SN2 is assigned cam range 3)
- \$MA_SAFE_CAM_TRACK_ASSIGN[2] = 202
(cam SN3 is assigned cam range 2)
- \$MA_SAFE_CAM_TRACK_ASSIGN[5] = 204
(cam SN6 is assigned cam range 4)
- \$MA_SAFE_CAM_TRACK_ASSIGN[7] = 205
(cam SN8 is assigned cam range 5)

Behavior of the SGA

The SGA "cam track" is the OR logic operation of all individual cams on a cam track. If an axis is at a cam on a cam track, then the SGA of this cam track is set to 1. Together with the SGA "cam range", information is available as to which cam is presently active.

The SGA "cam range" starts at the lower end of the traversing range with the range of the first cam – assigned in \$MA_SAFE_CAM_TRACK_ASSIGN[n] – on this cam track, i.e. in this case "3". At the upper end after the last cam on this cam track, the range SGA is set to "15". The transition of the range to the next value is realized when moving in the positive direction always at the falling edge of an individual cam.

The enable machine data as well as all cam limit values and range assignments are compared crosswise between the NCK and drive.

The user can use the following to connect to the SPL interface (\$A_INSI/\$A_OUTSI)

- SGA "cam track", MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT[0...3] and for the
- SGA "cam range", MD 37901–37904: \$MA_SAFE_CAM_RANGE_OUTPUT_1/2/3/4[0...3] and for the
- SGA "cam range bits", machine data 37906–37909
\$MA_SAFE_CAM_RANGE_BIN_OUTPUT_1/2/3/4[0...14].

Specified machine data follow the generally valid rules when assigning the safety-related inputs/outputs.



Warning

In the case of a fault, SGAs can assume a value of "0" (e.g. as a result of the cam synchronization between monitoring channels, loss of the safety-related referencing etc.). The user must take this into account so that when the SGAs are further processed, in a fault condition, no unsafe (hazardous) machine states can occur (that means, for example, safety door enabling only with value "1").

Further, the SGAs "cam range" may only be evaluated as supplementary information to SGA "cam track". It is not permissible to evaluate the SGA "cam range" alone without evaluating the SGA "cam track".

Hysteresis of cam SGAs

The hysteresis is applied both to the SGA "cam track" as well as to SGA "cam range" to prevent signal flutter. This means the SGAs are therefore generated as follows in the two monitoring channels, NCK and drive:

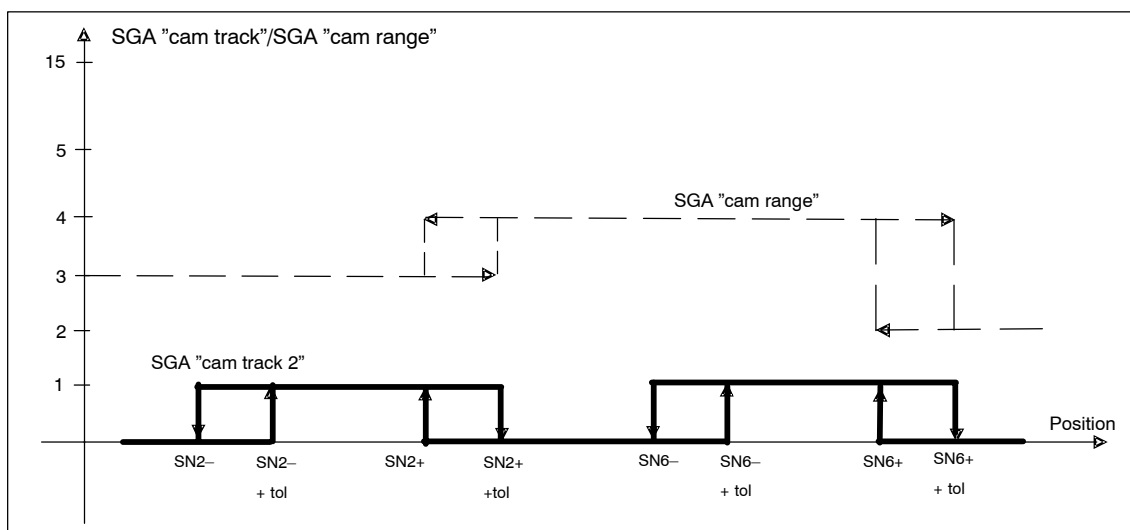


Fig. 6-18 SGA "cam track" and "cam range" with hysteresis



Warning

As a result of the cam hysteresis, for increasing actual values, the cams SGA do not switch at the configured cam position (SN) but at the position increased by the cam tolerance (hysteresis) (SN+TOL).

Users must carefully take this into consideration when configuring the cam positions and cam tolerance.

6.8 Safety software cams and safety cam track (SN)

Synchronization

The synchronization of the cam SGA is carried out between the NCK and PLC. Both the SGA "cam track" as well as the SGA "cam range" must be synchronized.

The SGA "cam track" is synchronized by AND'ing the two signals from the NCK and drive monitoring channels. The logic operation is carried out for all 4 cam positions.

The 4-bit SGA "cam range" (value range 0...15) is synchronized according to the following rule:

If the SGA "cam range" as well as the SGA "cam track" is different in both monitoring channels and the SGA "cam track" of its own channel has a value of "1", then the SGA "cam range" of the other channel must be used.

Alternative evaluation of the cam signals

In order to simplify the evaluation of cam signals, the cam signals "cam track" and "cam range", generated from the axis monitoring channels NCK and drive can be mapped to 15 "cam range bits" for each cam track (for the cam ranges 0 ... 14).

The "cam range bits" are generated by logically combining the "cam track" and "cam range" signals in the NCK and in the PLC. If the axis is positioned at a cam, then the cam range bit of the cam range assigned to this cam is set to 1.

The SGA "cam track", "cam range" and "cam range bit" are shown in the Fig. 6-19 using an example:

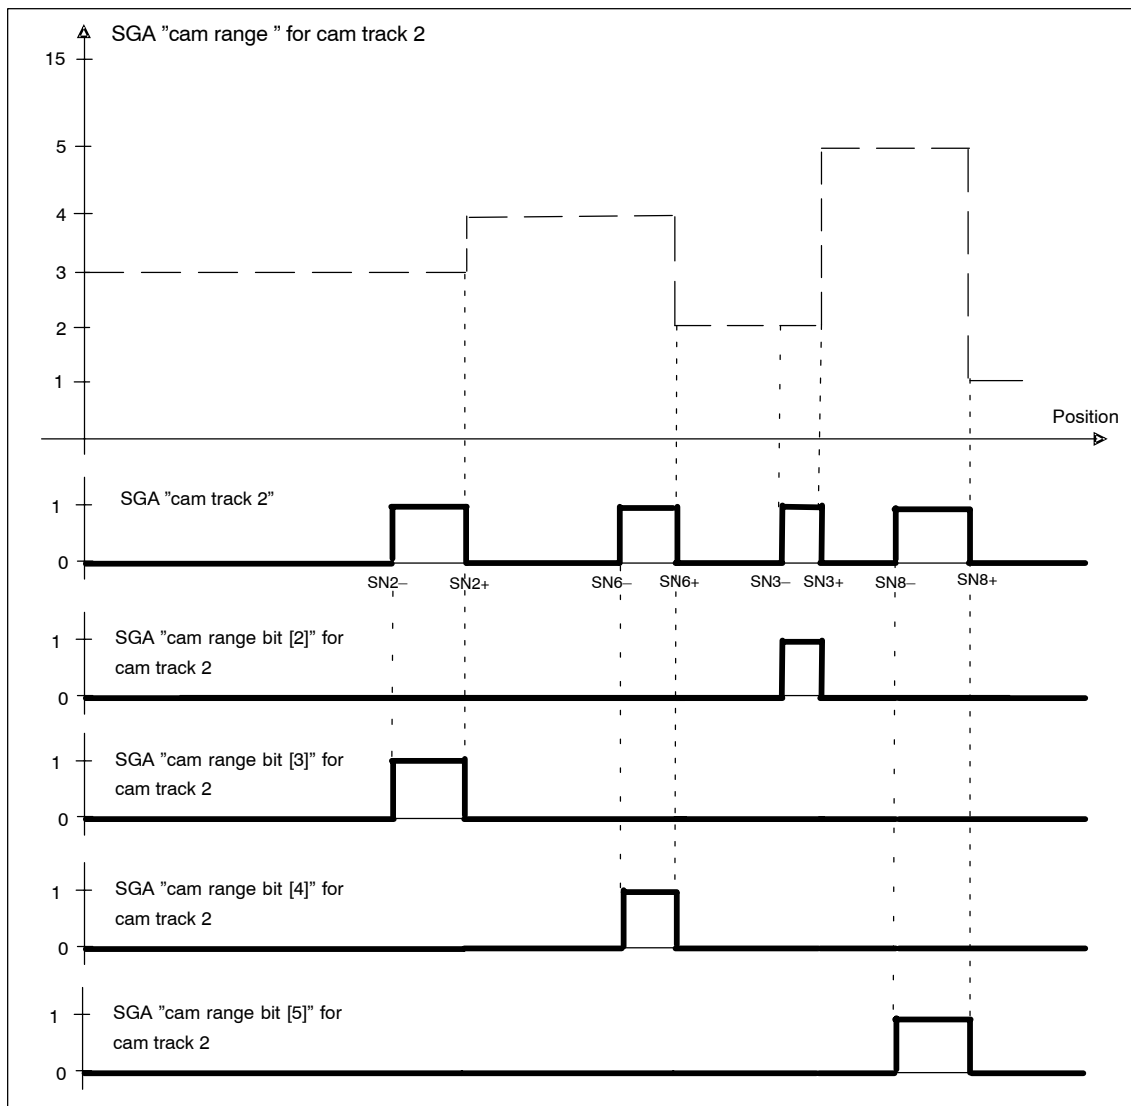


Fig. 6-19 SGA "cam track" and "cam range"

Explanation

- Cam SN2 is assigned to track 2 by parameterizing cam range 3 (\$MA_SAFE_CAM_TRACK_ASSIGN[1] = 203). If the axis is at cam SN2, SGA "cam range bit [3]" (index 3 stands for cam range 3) is set to 1.
- Cam SN6 is assigned to track 2 by parameterizing cam range 4 (\$MA_SAFE_CAM_TRACK_ASSIGN[5] = 204). If the axis is at cam SN6, SGA "cam range bit [4]" (index 4 stands for cam range 4) is set to 1 etc.
- ...

Connecting Sensors/Actuators

7.1 Safety-related input/output signals

7.1.1 Overview of the SGEs/SGAs and their structure

Description

The safety-related input and output signals (SGEs and SGAs) are the interface of the internal Safety Integrated functionality to the process.

SGE signals (safety-related input signals) control the active monitoring by deselecting or selecting the safety functions. This is realized, among other things, depending on the status (switching status) of sensors and transmitters.

SGA signals (safety-related output signals) are feedback signals from safety functions. They are, among other things, suitable for controlling actuators in a safety-related fashion.

Processing I/O signals for the NC and drive through two channels

A two-channel structure is used to input/output and process safety-related input/output signals (refer to Figure 7-1 "NCK and drive monitoring channel"). All of the requests and feedback signals for safety-related functions should be entered or retrieved through both monitoring channels (two-channel structure).

7.1 Safety-related input/output signals

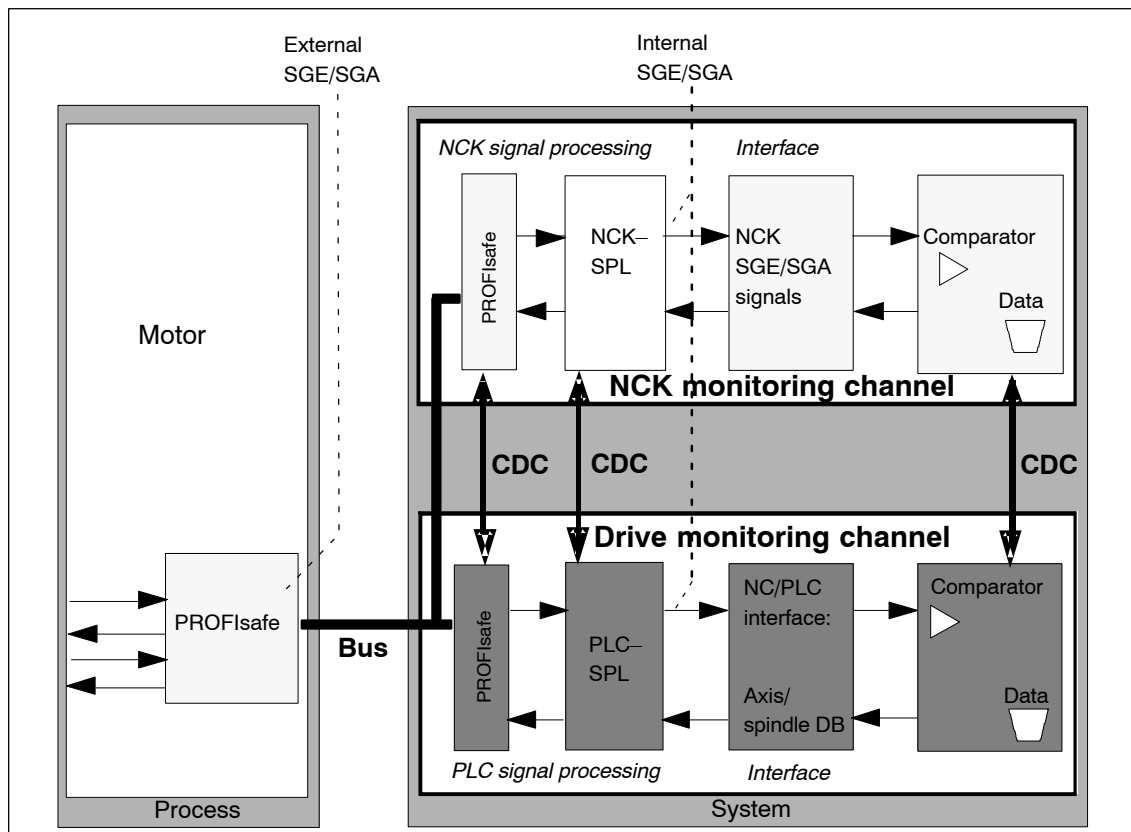


Fig. 7-1 NCK and drive monitoring channel

For the NCK monitoring channel, signals are input/output via the SPL – possibly processed by the NCK (see Chapter 7.1.5 "Multiple distribution and multiple interlocking") and emulated (mapped) in the NCK–SGE/SGA interface.

The signals from the drive monitoring channel are input/output via the SPL and sent to the drive via the interface axis/spindle DB.

Internal SGE/SGA (interface to the various axial safety functions) are, e.g. selecting and deselecting safety functions, changing-over limit values, output of status signals. They are defined for the particular Safety Integrated functions.

Sensors – e.g. switches, pushbuttons, protective door contacts, emergency stop buttons, light curtains, laser scanners – are connected to the external SGE (interface to the process, i.e. to the machine). Actuators – e.g. load contactors, valves, interlocking solenoids – are connected to the external SGA. The connection is established through the PROFIsafe I/O, also see Chapter 7.2. Generally, a brake is directly connected at the Motor Modules via terminals.

The external and internal SGE/SGA are freely interlocked (logically combined) by the user using the "safe programmable logic" (SPL), also see Chapter 7.3.

Crosswise data comparison is implemented between the monitoring channels that operate independently of one another. If there is inequality, then a STOP F is initiated (crosswise data comparison between the drive and NCK).

A STOP D/E is triggered for an SPL crosswise data comparison error. SGE/SGA are set into the safe state if an error is detected by the communication crosswise data comparison.

Note

As a result of the two-channel structure of Safety Integrated, the machine manufacturer must supply the SGE and SGA in both the NCK monitoring channel and the drive monitoring channel.

The actual signal state of the SGE/SGA is displayed using the "Service display" menu. Information regarding Safety Integrated data with the associated axis names and the axis number are displayed in the "Service SI" window.

SGE/SGA are, for Safety Integrated, connected through PROFIBUS with the PRO-Flsafe profile and I/O modules that are PROFIsafe-capable. Internal SGE/SGA signals are accessed via the SPL (see Chapter 7.3 "Safe programmable logic (SPL)").

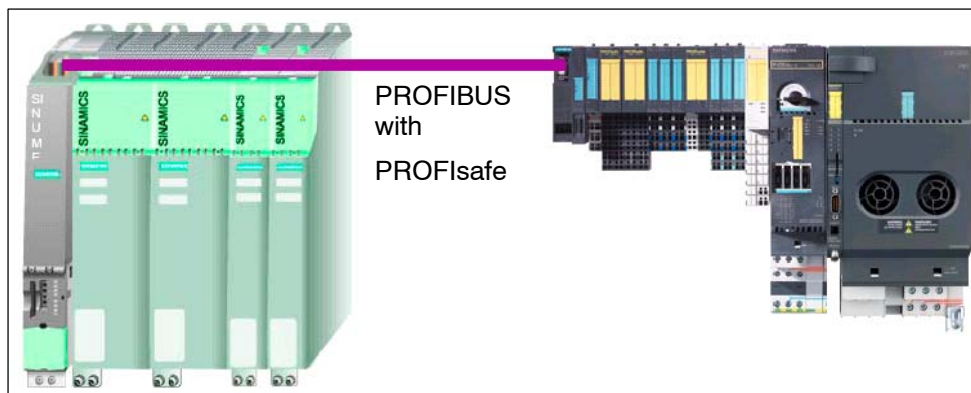


Fig. 7-2 External SGE/SGA via PROFIBUS with the PROFIsafe profile

For instance, the following can be requested or signaled in each monitoring channel and for each/spindle with safety technology using SGE/SGA signals:

- Safety functions can be selected and deselected
- Limit values can be selected and changed-over
- States relating to safety operation can be fed back

7.1 Safety-related input/output signals

Features

- SGE and SGA signals are processed through two channels
- Processed in the NCK monitoring channel
- Processed in the drive monitoring channel
- Safety functions are selected/deselected independent of the NC mode
- Differences in the active SGE/SGA in the monitoring channels are detected in the crosswise data/result comparison

The access to SGE/SGA signals is described in Chapter 7.2 "Connecting I/O via PROFIsafe" and Chapter 7.3 "Safe programmable logic (SPL)".



Warning

The state of a deleted SGE/SGA (logical "0") that can be achieved both by the user as well as also using fault responses of the "SINUMERIK Safety Integrated" system, are defined as so-called "fail-safe state" of an SGE/SGA. This is the reason that the system is only suitable for applications where this state corresponds to the fail-safe state of the process controlled by "SINUMERIK Safety Integrated".

Which SGEs/SGAs are there?

For each axis/spindle, the following SGE and SGA are in each monitoring channel:

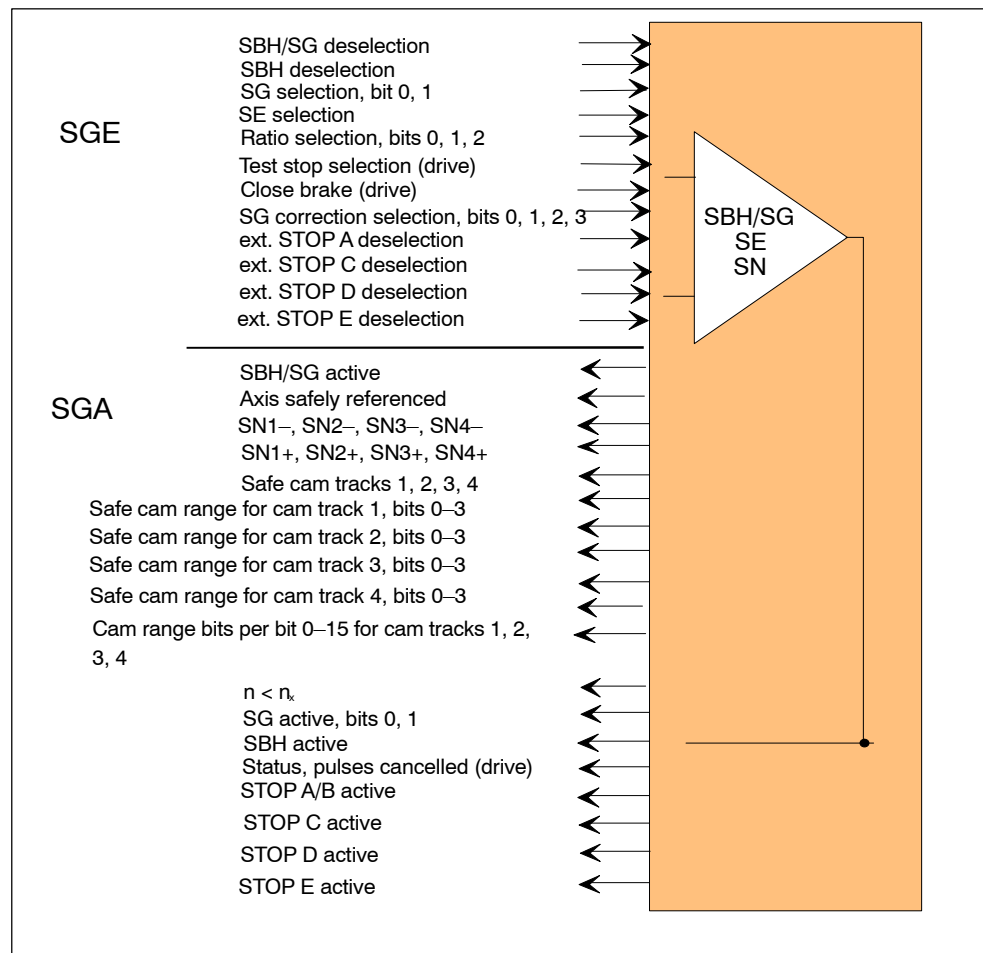


Fig. 7-3 SGE and SGA in every monitoring channel for each axis/spindle

Note

The SGE/SGA signals are described in Chapter 8.3, "Description of Interface signals".

NCK-SGE/SGA

The signals are assigned to the NCK-SPL inputs/outputs using machine data.

7.1 Safety-related input/output signals

Note

Only the NCK–SGE are assigned to an NCK–SPL output that are also required for the particular application. For axes, where for example, the gear ratio does not change, the NCK–SGE "ratio selection bit 2 to 0" do not have to be assigned to SPL inputs. A value of 0 should be entered into the associated MD (i.e. the NCK–SGE does not have an SPL assignment and is set to 0). This does not apply to external STOPs that are not used.

PLC SGEs/SGAs

For the drive monitoring channel, the NC/PLC interface (axis/spindle DB) represents the SGE/SGA interface between the PLC and the drive. The PLC user program must supply this interface.

Note

Only the PLC–SGE should be processed in the PLC user program that are also required for the particular application. SGE that are not used must be set to the value 0 – i.e. to a defined state. This does not apply to external STOPs that are not used.

See Chapter 6.3.8 "Forced checking procedure of the external STOPs" for information about SGE/SGA for the test stop for external stops.

How many SGE/SGA are required as a minimum?

Depending on the particular application, only some of the maximum number of SGE/SGA available are required.

Table 7-1 SGE/SGA required as a minimum

Function	Minimum SGEs required	Minimum SGAs required
Safe operating stop (SBH)	SBH/SG deselection Test stop selection (drive) External stops	SBH/SG active Status, pulses cancelled (drive) STOP A/B, C, D, E active (only if required)
	if gearbox stages are being used Gear ratio selection, bit 2 (only if it is necessary to select the ratio) Gear ratio selection, bit 1 (only if it is necessary to select the ratio) Gear ratio selection, bit 0 (only if it is necessary to select the ratio)	

Table 7-1 SGE/SGA required as a minimum

Function	Minimum SGEs required	Minimum SGAs required
Safely reduced speed (SG)	SBH/SG deselection SBH deselection SG selection, bit 1 (only for SG changeover) SG selection, bit 0 (only for SG changeover) Test stop selection (drive) External stops if gearbox stages are being used Gear ratio selection, bit 2 (only if it is necessary to select the ratio) Gear ratio selection, bit 1 (only if it is necessary to select the ratio) Gear ratio selection, bit 0 (only if it is necessary to select the ratio)	SBH/SG active Status, pulses cancelled (drive) STOP A/B, C, D, E active (only where required) active SG stage, bits 0, 1 (only where required)
Safe software limit switches (SE)	SE selection (only for SE changeover) Test stop selection (drive) SBH/SG deselection (at least for test during commissioning [start-up]) External stops	SBH/SG active Axis safely referenced Status, pulses cancelled (drive) STOP A/B, C, D, E active (only where required)
Safe software cams (SN)	Test stop selection (drive) SBH/SG deselection (at least for test during commissioning [start-up]) External stops	SBH/SG active STOP A/B, C, D, E active (only where required) Axis safely referenced SN1–, SN2–, ..., SN30– (only where required) SN1+, SN2+, ..., SN30+ (only where required) Status, pulses cancelled (drive)

Different signal run times in the channels

The signal timing in the two monitoring channels varies (the PLC cycle time takes up most of the available time in the drive monitoring channel). To prevent the crosswise data comparison function from being immediately activated after a signal change, a tolerance time is defined using the following machine data.

for 840D sl:

MD 36950: \$MA_SAFE_MODE_SWITCH_TIME

for SINAMICS S120:

p9550: SI motion SGE changeover tolerance time (Control Unit)

This data specifies the time period for which different signal states may be tolerated after the SGEs have been changed-over before an error message is output.

7.1 Safety-related input/output signals

Note

System-related minimum tolerance time
 $2 \times \text{PLC cycle time (maximum cycle)} + 1 \times \text{IPO cycle time}$

7.1.2 Forced checking procedure of SPL signals

Basic principles

Safety-related input/output signals including the connecting cables to the I/O (peripherals) and the sensors and actuators connected to them must always be subject to a forced-checking procedure (see Chapter 5.3 "Forced checking procedure").

The scope of the forced checking procedure should be implemented corresponding to the subsequent conditions.

This means that the selection of a suitable forced checking procedure concept depends on the specific application and the specific sensor and/or actuator; this decision must be made by the user. In this scope, the user must configure the forced checking procedure.

SPL signals

The forced checking procedure of SPL signals is a part of the SPL functionality (see Chapter 7.3 "Safe programmable logic (SPL)").

Once the external safety circuit has been wired, a two-channel SPL has been created and the relevant safety functions configured and checked with an acceptance test, the long-term reliability of this function, verified using an acceptance test, can be ensured:

- **External inputs/outputs**
 The external inputs/outputs of the SPL (\$A_INSE or \$A_OUTSE) must be subject to a forced checking procedure to ensure that faults do not accumulate over a period of time which would mean that both monitoring channels could fail.
- **Internal inputs/outputs**
 Internal inputs/outputs (\$A_INSI, \$A_OUTSI), markers (\$A_MARKERSI) etc. (\$A_TIMERSI) do not have to be subject to a forced checking procedure. It will always be possible to detect an error at these locations due to the differing two-channel responses of the external inputs/outputs or the NCK/drive monitoring channels; crosswise data comparison is carried out at both ends of the response chain to detect any errors.

Test signals

"3-terminal concept" (see Chapter 7.1.3 "Connecting sensors – actuators using the 3-terminal concept"):

- If an input signal (\$A_INSE) is, for example, evaluated through **two channels**, the associated test output signal can be implemented using **one channel**. It is extremely important that the input signal can be forced/changed and checked in both channels.
- In the same way, the assigned test input signal for two-channel output signals (\$A_OUTSE) can be implemented in one channel if it is connected according to the following rule:

The test input signal may only return an "OK" status ("1" signal level) if **both** output signals function (i.e. both monitoring channels have output a "0").

A **simultaneous test** in both channels allows the correct functioning in both channels to be checked using **one** feedback signal.

Trigger/test

The timer or event controlled triggering of the forced checking procedure is activated in one channel by the PLC.

If errors are detected, the PLC user program should respond by initiating an external "STOP D/E" and switching the external SGAs into a safe state.

Notes to avoid errors

1. A "2-terminal concept" in which a **single-channel net (useful) signal** is to be subject to a forced checking procedure using a **single-channel** test signal is **not permitted**. In this case, the two-channel SPL structure would be worthless and crosswise data comparison would have no effect.

The following are permitted:

- A "full 4-terminal concept for sensors" (two-channel test signal for a two-channel useful [net] signal),
- the "3-terminal concept for sensors/actuators" recommended above
- a "2-terminal concept for sensors *without* test signals", if the two-channel net (useful) signal to be tested automatically changes its level dynamically as a result of the process – e.g. for the input signals of a protective door,
- a "2-terminal concept for sensors *without* test signals", if the sensor is a safety-related component, e.g. light curtains,
- a "2-terminal concept for actuators *without* test signals", if the actuator is a safety-related component, e.g. safety valves,
- a "2-terminal concept for actuators *without* test signals" if the feedback signal can be checked using other useful signals – e.g. for a valve that indirectly switches a BERO via the process and this is available for evaluation,
- a "2-terminal concept for actuators *without* test signals" if the function of the mechanical system can be checked using other useful signals – e.g. for a brake that is checked using a separate brake test.

7.1 Safety-related input/output signals

2. The signals "**external STOPs**" are processed internally in a special way:

- In order to increase the level of security that a requested "external STOP" actually takes effect, the STOPs are internally exchanged between the two channels. Failure of the stop control function in **one** channel does **not** cause an error for these signals (in contrast to the mode changeover signals, e.g. "SG/SBH active") in the crosswise data comparison.
While other signals can be subject to a forced checking procedure in parallel and in both channels (and should be – in order to avoid errors being triggered by the crosswise data comparison), the "external STOPs" must be subject to a forced checking procedure **one after the other** in both channels.

7.1.3 Connecting sensors – actuators using the 3-terminal concept

Basic principle for safety-related signal processing

With the 3-terminal concept, three terminals (signals) are required to connect a sensor or actuator. Faults/errors in the sensors and actuators can be detected in conjunction with the SPL-crosswise data comparison and forced checking procedure or the forced checking as a result of the process itself. The connecting cables are **generally monitored autonomously** by the fail-safe I/O.

The following applies to the safety-related sensor connection:
2 safety-related inputs + 1 standard test output.

The following applies to the safety-related actuator connection:
2 safety-related outputs + 1 standard test input.

Example of an actuator connection

2 outputs (to control through 2 channels via SGA) and 1 standard test input (for the forced checking procedure) are required to connect an actuator in a safety-related fashion. The test input is the feedback signal from the load circuit and is fed from the power supply voltage of a standard input module. The user should derive this as directly as possible from the process quantity.

Actuator control, P/M switching:

The actuator is directly controlled using a plus potential (P-switching) and minus potential (M-switching). If the actuator is not a qualified component (safety component or component with fault exclusion), then in the case that the actuator fails, the user must apply additional cascaded measures in order to bring the process into a safe condition.

Example:

The process quantity, e.g. hydraulic pressure, is switched using a standard valve that is controlled in a safety-related fashion. A pressure sensor signals the status of the process quantity. If the valve can no longer switch due to a fault condition, then using a safely controlled standard contactor, the motor that is generating the pressure, is shutdown. The advantage of this particular version is that components can be used that are already available as standard. As to whether this solution can be used, must be confirmed as a result of the risk assessment (see Fig. 7-4).

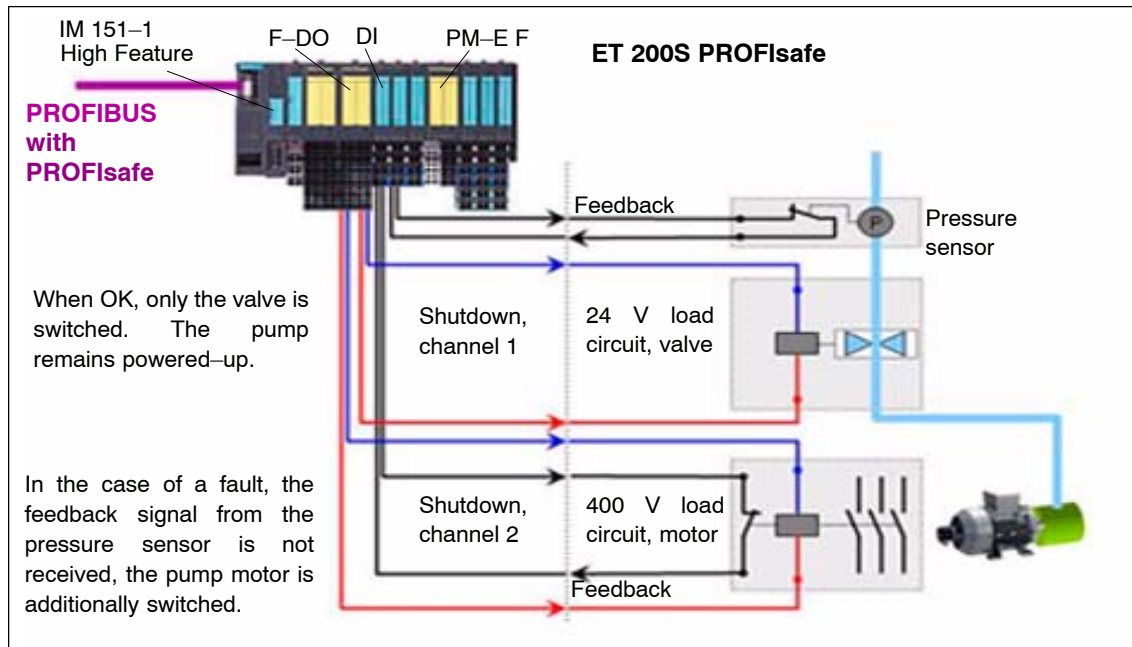


Fig. 7-4 Cascaded shutdown using fail-safe outputs

In other cases a second actuator must be connected in series in the load circuit (see Fig. 7-5).

In conjunction with the safety-related control of a brake, no feedback signal is available. The brake test will identify as to whether the actuator is correctly functioning from a mechanical perspective.

7.1 Safety-related input/output signals

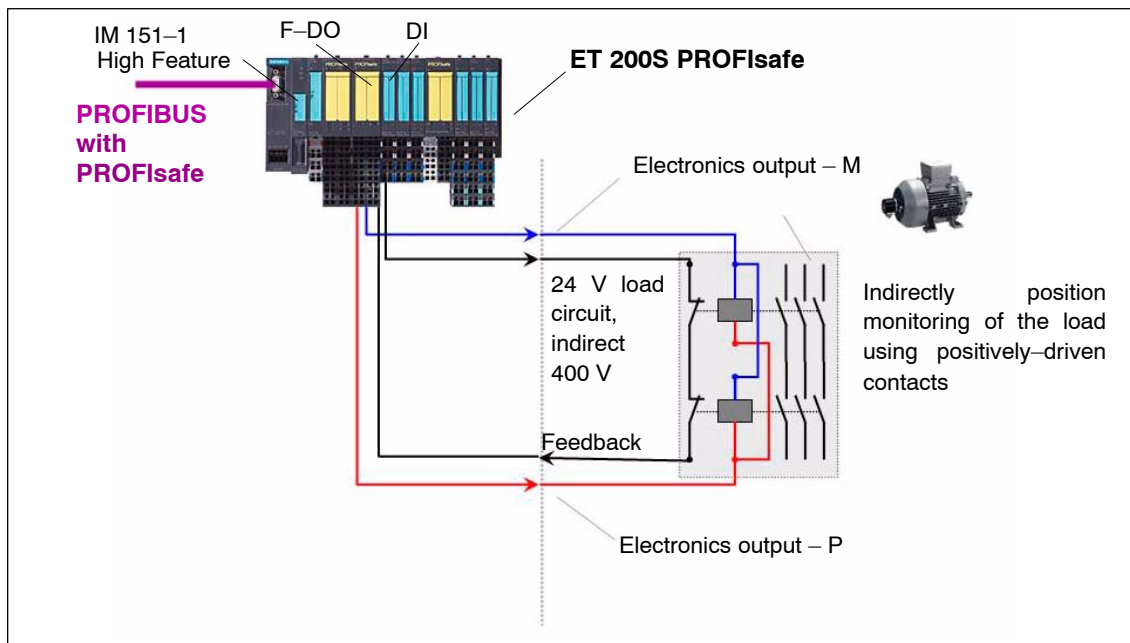


Fig. 7-5 Actuator connection via fail-safe outputs, e.g. 400 V load circuit – P/M-switching

Example of connecting a sensor

2 safety-related inputs (to read-in through 2 channels via SGE) and 1 standard test output (for the forced checking procedure) are required to connect a sensor in a fail-safe fashion. The test output is fed from the power supply voltage of the safety input module. For sensors with a self-test routine, the test output on the input module is not required. For the 3-terminal connection concept we recommend that sensors with non-equivalence contacts are used (NC contact/NO contact). If a P or M short-circuit or broken cable at both signal cables, then a signal state is obtained that is not logically permissible. This means, that a cross-circuit fault can be detected by the non-equivalence concept without having to carry out any test.

Note

Cross-circuit fault detection in the input module is not required.

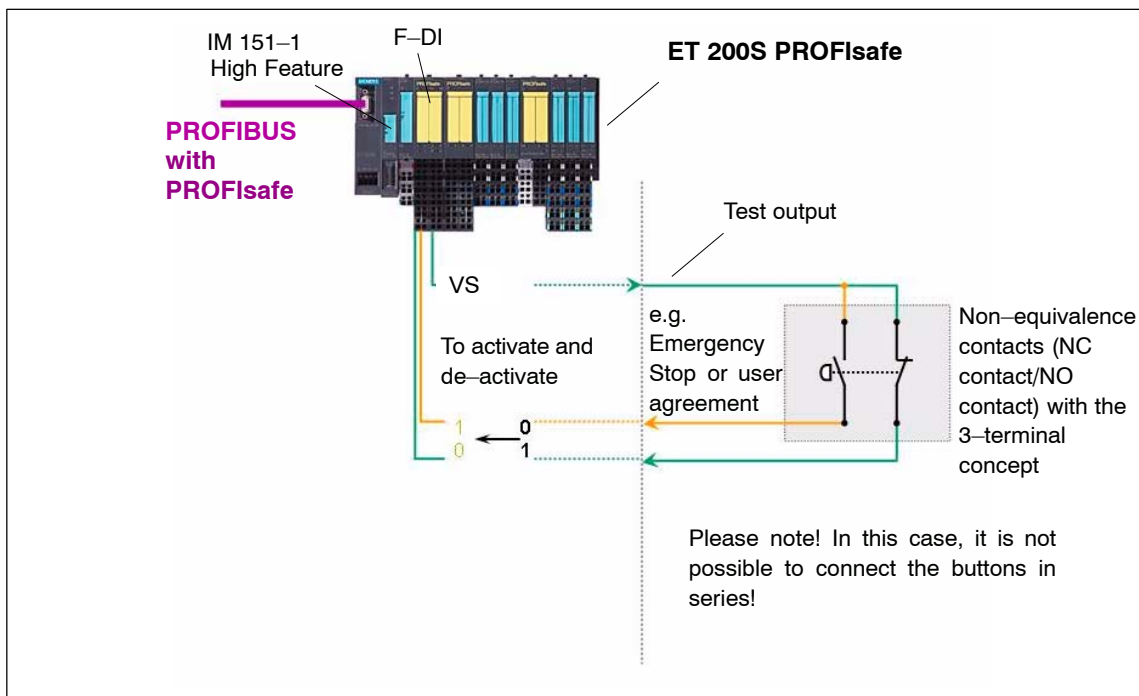


Fig. 7-6 Sensor connection using fail-safe inputs according to the 3-terminal concept

7.1.4 Sensor connection using the 4-terminal concept

For the 4-terminal concept, four terminals are required at the fail-safe input module to connect a sensor that utilizes a contact (e.g. Emergency Stop pushbutton). Faults/errors in the sensors and actuators can be detected in conjunction with the SPL-crosswise data comparison and forced checking procedure or the forced checking as a result of the process itself. The connecting cables are generally monitored autonomously by the fail-safe input module.

The following applies to the safety-related sensor connection:
2 safety inputs + 2 standard test outputs

Example

2 inputs (to read-in the 2-channel sensor signals via SGE) and 2 standard test outputs (for the forced checking procedure) are required for the fail-safe connection of a sensor. The test outputs are supplied from the two power supply voltages (VS1, VS2) of the safety input module. For the connection concept with 4 terminals, both equivalence (NC contact/NC contact, NO contact/NO contact) as well as non-equivalence (NC contact/NO contact) contact versions are possible.

7.1 Safety-related input/output signals

Note

Cross-circuit fault detection in the input module is not required. Measures against cross-circuit faults are required only for equivalence contacts (NC contact/NC contact, NO contact/NO contact) if the cable has been routed so that it is very exposed, e.g. for cables connecting handheld terminals. This can be mechanically implemented in the cable, e.g. using the appropriate shielding.

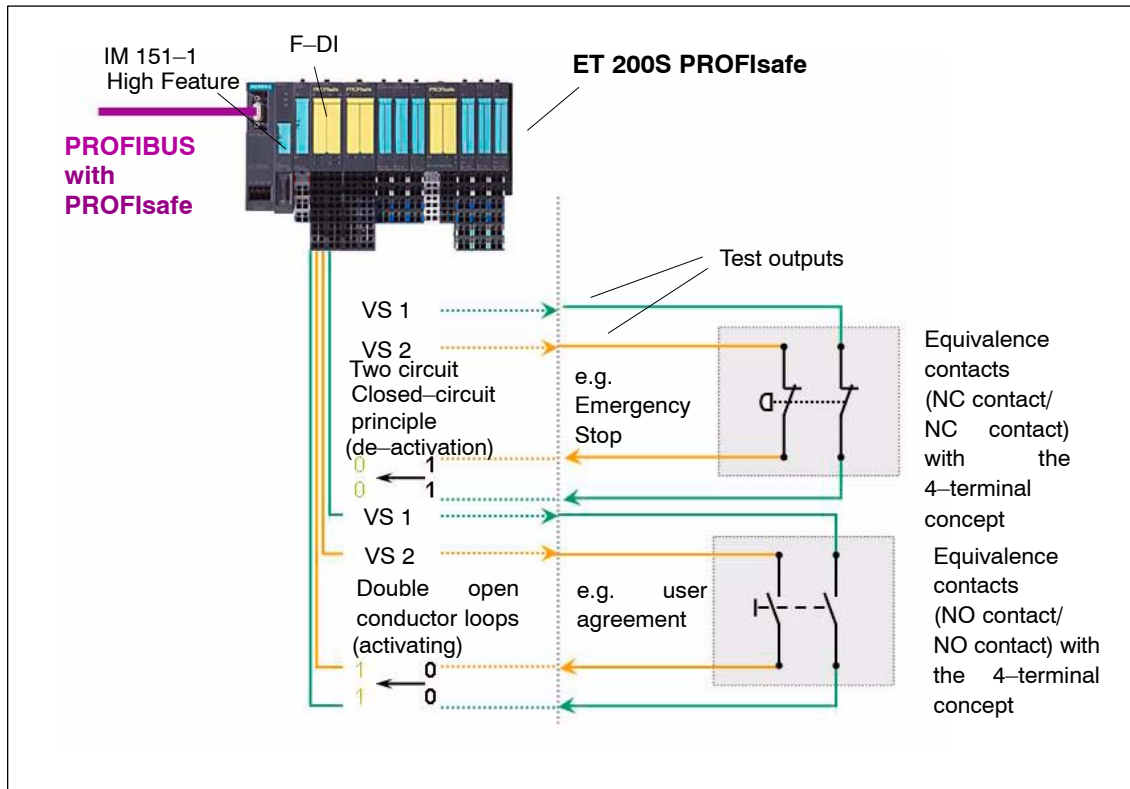


Fig. 7-7 Sensor connection using the 4-terminal concept

7.1.5 Multiple distribution and multiple interlocking

Interlocking functions between the SGE/SGA are implemented in the NCK channel in the NCK-SPL. However, in order to relieve the NCK-SPL, it is also possible to pre-process signals between the NCK-SPL and NCK monitoring channel using the "multiple distribution" and "multiple interlocking" functions.

Note

The multiple distribution/interlocking that can be parameterized in the NCK machine data must be programmed by the user on the PLC side.

Processing the NCK-SGE for 840D sl (multiple distribution)

Axis-specific/spindle-specific machine data is used to define which internal SPL output is to be used for which function and which axis/spindle. Under the condition that certain axes/spindles belong to the same safety group, it is possible to implement multiple distribution (1 NCK-SPL output is assigned, for example, to 3 axes with the same function). In addition, when an internal NCK-SPL output is selected via MD, it is also possible to define whether the inverted signal is also to be processed.

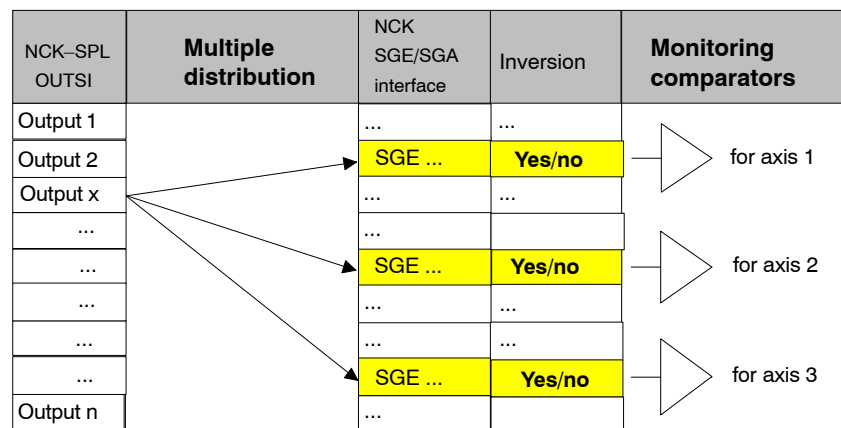


Fig. 7-8 Multiple distribution for NCK-SGE

7.1 Safety-related input/output signals

Example

It must be possible to change over between the "safe software limit switches" 1 or 2 for axes 1, 2 and 3 as a group using an internal NCK-SPL output (OUTSI x).

The machine data must be parameterized as follows:

Axis 1: MD 36973: \$MA_SAFE_POS_SELECT_INPUT = OUTSI x

Axis 2: MD 36973: \$MA_SAFE_POS_SELECT_INPUT = OUTSI x

Axis 3: MD 36973: \$MA_SAFE_POS_SELECT_INPUT = OUTSI x

Processing the NCK-SGA for 840D sl (multiple assignment)

Axis-specific/spindle-specific machine data is used to define which SGA from which axis/spindle must be assigned to which NCK-SPL input. It is possible to implement a multiple assignment (SGA from several axes are assigned to 1 input) provided that certain axes/spindles belong to the same safety group. The SGA are then ANDed and the result output at the NCK-SPL input. In addition, when an NCK output is selected via an MD, it is also possible to define whether the signal is to be output in an inverted form before it is ANDed.

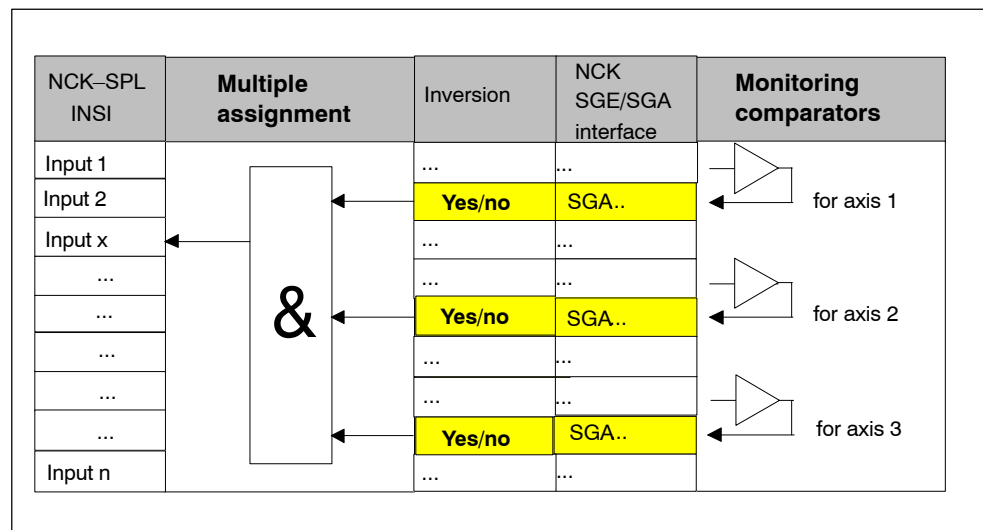


Fig. 7-9 Multiple assignment for NCK-SGA

Example

Axes 1, 2 and 3 belong to one safety area. For these axes, the message "axis safely referenced" should be output at one NCK-SPL input (INSI) (this means that the message is output at the input if the message (signal) is present for all 3 axes). The machine data must be parameterized as follows:

Axis 1: MD 36987: \$MA_SAFE_REFP_STATUS_OUTPUT = INSI x

Axis 2: MD 36987: \$MA_SAFE_REFP_STATUS_OUTPUT = INSI x

Axis 3: MD 36987: \$MA_SAFE_REFP_STATUS_OUTPUT = INSI x

7.2 Connecting I/O via PROFIsafe

7.2.1 Description of Functions

The fail-safe DP master (F master) integrated in the SINUMERIK 840D sl allows, in conjunction with fail-safe DP modules (F modules), fail-safe communications along PROFIBUS DP specified in accordance with the PROFIsafe profile (PROFIsafe communication).

This means that the safety-related input/output signals of the process (machine) are coupled to the Safety Integrated function "safe programmable logic" (SPL) in the same way for both the PLC and NCK-SPL via PROFIBUS-DP. Interface X126 is used for this purpose.

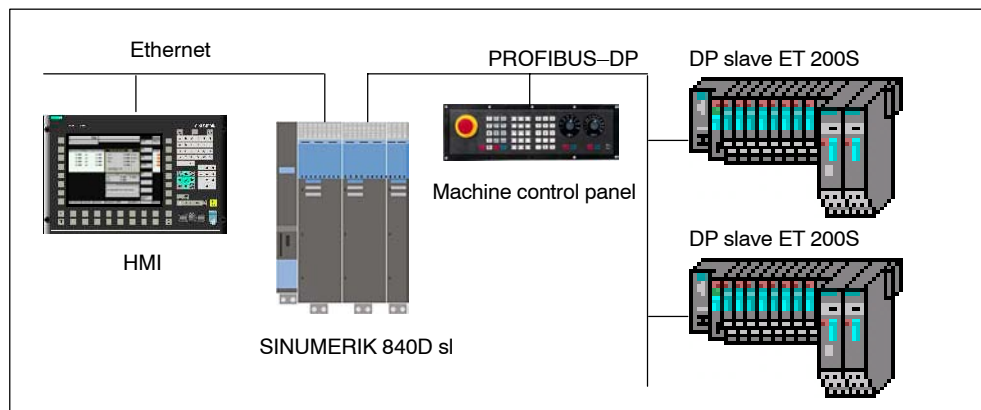


Fig. 7-10 SI I/Os using fail-safe modules connected to PROFIBUS-DP

PROFIBUS DP

PROFIBUS DP is an international, open fieldbus standard specified in the European fieldbus Standard EN 50170 Part 2. It is optimized for fast data transfer at the field level (time critical).

In the case of the components that communicate via PROFIBUS DP, a distinction is made between master and slave components.

1. Master (active bus device)

Components operating on the bus as master determine the data exchange on the bus and are therefore also designated as active bus devices.

There are two classes of master:

- DP master, Class 1 (DPMC1):
Central master devices that exchange information with the slaves in fixed message (telegram) cycles.
Examples: S7-300 CPU: CPU 317-2 DP etc.

- DP master, class 2 (DPMC2):
Devices for configuration, commissioning, operator control and monitoring during bus operation.
Examples: Programming units, operator control and visualization devices
- 2. Slaves (passive devices)
These devices may only receive, acknowledge and transfer messages to a master when so requested.
Examples: Drives, I/O modules etc.

PROFIsafe

For PROFIsafe, it involves a PROFIBUS profile for fail-safe data transfer between fail-safe components (F master and F slave) along PROFIBUS DP.

The PROFIsafe profile is characterized by the fact that the safety-related functions are implemented in the safe terminal nodes, i.e. the F/CPUs, the distributed slaves and the actuators/sensors/field devices using the standard PROFIBUS functions.

The useful (net) data of the safety function plus the safety measures are sent in a standard data telegram. This does not require any additional hardware components, since the protocol chips, drivers, repeaters, cables can still be used as they are. This means that both standard components and F components can be used on a PROFIBUS system.

SINUMERIK Safety Integrated supports PROFIsafe V1.

7.2.2 System structure

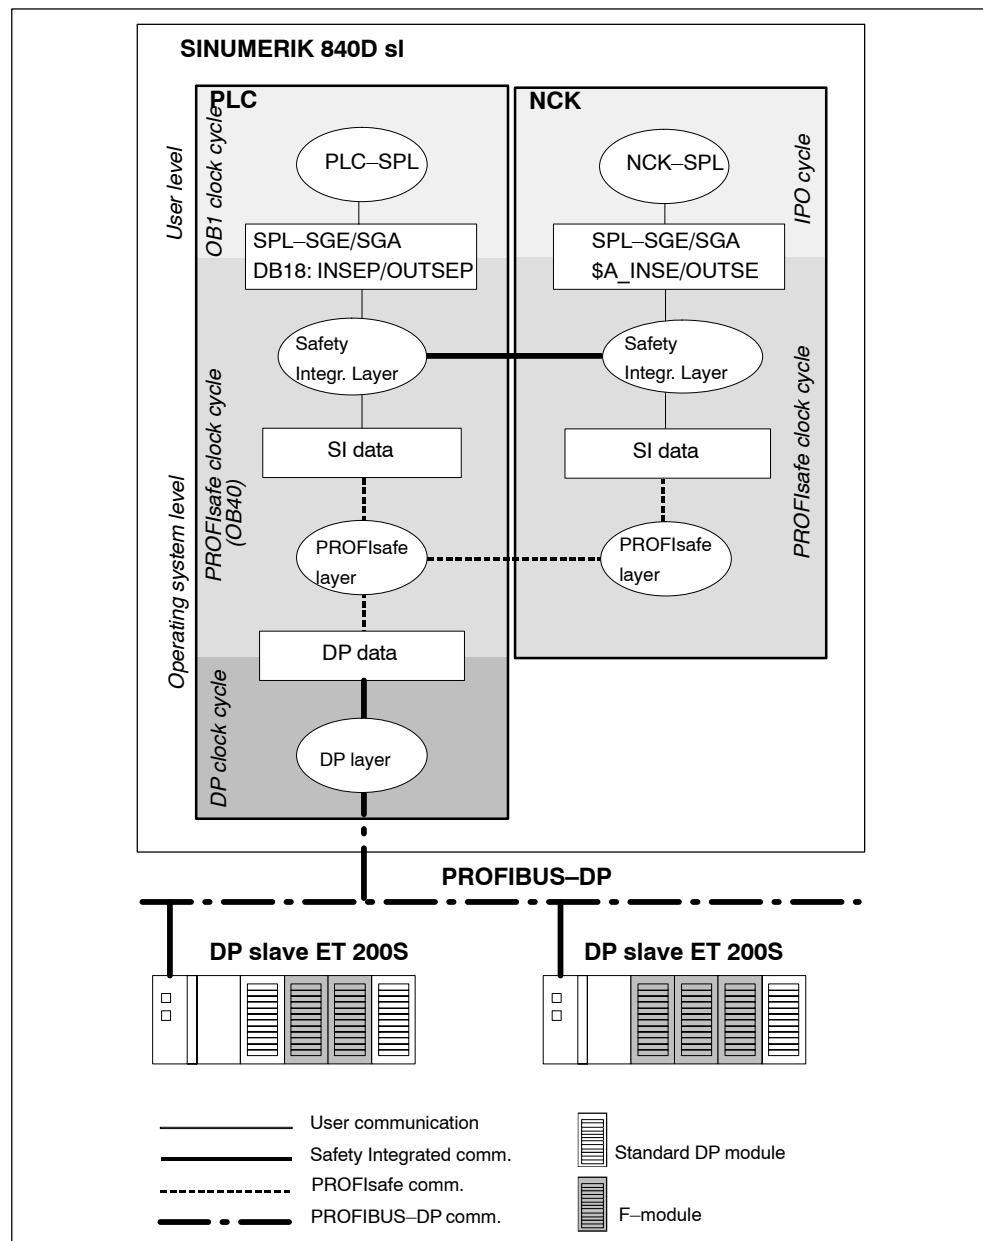


Fig. 7-11 System structure: SI I/O using F modules connected to PROFIBUS-DP

Just like Safety Integrated, the PROFIsafe system structure also has a 2-channel diverse system design based on the PLC and NCK-PROFIsafe layer.

PROFIsafe communication

The principle of PROFIsafe communications between SINUMERIK 840D and the F modules on the PROFIBUS-DP is explained in detail below. This is based on the transfer of the SPL output data \$A_OUTSE/\$A_OUTSEP to the F-DO modules:

The PROFIsafe layer creates a PROFIsafe telegram (F telegram) in each PROFIsafe cycle with the ANDed SPL output data as F useful (net) data

$$\text{F useful (net) data} = (\text{OUTSEP AND } \$A_OUTSE)$$

and the backup data (CRC and the consecutive number) and transfers it to the PROFIBUS layer via the DP data interface.

The PROFIBUS layer transfers a DP telegram with the PROFIsafe telegram created by the F layer in each PROFIBUS cycle as DP useful data to the DP slaves. This is independent of the PROFIsafe cycle.



Warning

It is not guaranteed that simultaneous changes to individual bits in the SPL (NCK and PLC OUTSE), which are interpreted as a contiguous associated bit pattern, are transferred together. It is possible that the receiver briefly receives an inconsistent bit pattern.

Configuring/parameterizing

The configuration and parameterization needed to connect the F modules to the external NCK/PLC-SPL interfaces entails the following steps:

1. Generating the configuration using SIMATIC STEP7.
2. Performing a standard SINUMERIK 840D sl commissioning (minimum requirement).
3. Loading the configuration and the PLC basic and user program modules into the SINUMERIK 840D sl PLC.
4. Parameterizing the PROFIsafe-relevant SINUMERIK 840D sl machine data. See Chapter 7.2.4 "Parameterizing the F master (NCK)".

7.2.3 Configuring and parameterizing the PROFIsafe I/O

The information on configuring and parameterizing the PROFIsafe I/O provided in this chapter essentially refers to the specific requirements of SIMATIC. Complete information on configuring and parameterizing PROFIsafe components from Siemens is provided in the SIMATIC Manuals:

References:

Distributed I/O System ET 200S, Manual

Distributed I/O System ET 200S, Fail-Safe Modules, Manual

Distributed I/O System ET 200pro, Fail-Safe Modules

Distributed I/O Station ET 200eco, Fail-Safe I/O Module

ASIsafe DP/AS-i F-Link

Configuring

The F I/O are configured while configuring the standard PROFIBUS configuration using STEP 7.

After the "S7 Distributed Safety" option package or the S7 F configuration package has been installed (refer to the Chapter 3.1 "System prerequisites") the F modules are available in the hardware catalog of STEP 7: HW Config (if the hardware catalog is not displayed, open it using the menu command **View > Catalog**).

Parameter assignment

Both the standard and F parameterization of the F modules is carried out using the relevant properties dialog box of the module. Select the appropriate DP slave (e.g. IM 151-1) in the station window and then open the properties dialog box of the relevant F module in the detailed view.

Note

The parameter assignments specified in this chapter only refer to the ET 200S modules. Other PROFIsafe devices have a different parameter assignment.

Parameters: Input/output address

The parameterization of the input/output addresses that an F module occupies in the input/output address range of the DP master is realized in the properties dialog box, under:

Dialog: Properties

Tab: Addresses

Input: **Start**

Output: **Start**

Note

The following conditions apply to the input/output addresses of an F module:

- Input address for PLC317 > 127
 - Input address for PLC319 > 512
 - Output address = input address
-

F parameterization

F parameterization is realized in the properties dialog box under:

Dialog: Properties

Tab: Parameter

Parameters > F parameters

The F parameters of the electronic modules are automatically set to the F monitoring time of the HW Config and cannot be changed.

The displayed values of the F parameters

- F_source_address
- F_target_address

must be entered into the machine data to parameterize the NCK in a subsequent parameterizing step.

**Warning**

The PROFIsafe addresses are for unique identification of source and target of safety-related communications.

The following applies to pure PROFIBUS-DP subnetworks:

The PROFIsafe target address must be unique network-wide* and station-wide** (system-wide). A maximum of 1022 different PROFIsafe target addresses can be assigned.

* A network consists of one or more subnets. "Network-wide" means across subnet boundaries.

** "Station-wide" means for a station with HW configuration (e.g. a SINUMERIK 840D).

F parameters: F_source_address

The F-source-address is the decimal PROFIsafe address of the F master allocated automatically by HW Config. The F_source_address is formed from the "basis for PROFIsafe addresses" plus the PROFIBUS address of the PROFIBUS-DP interface.

Note

To clearly define the PROFIsafe communication, the PROFIsafe address of the F master – assigned by HW Config – must be saved in the F master. To do this, the PROFIsafe address of the F master must be converted from decimal into hexadecimal and entered into the machine data of SINUMERIK 840D sl. Refer to Chapter 7.2.4 "Parameterizing the F master (NCK)".

F parameters: F_target_address

The F_target_address is the decimal PROFIsafe address of the F module automatically allocated by HW Config (the user can change this).

Note

In order to parameterize the PROFIsafe communication relationships, the F master is informed, via the PROFIsafe address of the F module that this F module is assigned to it. To do this, the PROFIsafe address must be converted from decimal into hexadecimal and entered into the machine data of SINUMERIK 840D sl. Refer to Chapter 7.2.4 "Parameterizing the F master (NCK)".

The DIL switch setting shown corresponds to the PROFIsafe address to be set at the DIL switch of the F module.

F parameters: F-monitoring time

The F monitoring time defines the maximum time until a new valid F telegram must have been received from the F master.

Note

If the F monitoring time is configured to be shorter than the PROFIsafe monitoring clock cycle set using the appropriate machine data, when the control runs-up an alarm is displayed:

Alarm 27242 "PROFIsafe: F module %1, %2 incorrect"

Parameters: DO/DI channel x

The channels of an F module are parameterized in the properties dialog box under:

Dialog: Properties

Tab: Parameter

Parameters > Module parameter > DO or DI channel x

F-DI module

The channels of the F-DI module are mapped differently to the NCK/PLC-SPL inputs \$A_INSE/INSEP depending on the selected parameterization.

- 2v2 parameterization
For 2v2 parameterization, the process signals of both channels in the F-DI module are combined to form one F useful (net) data signal and thus supply an SPL input data.

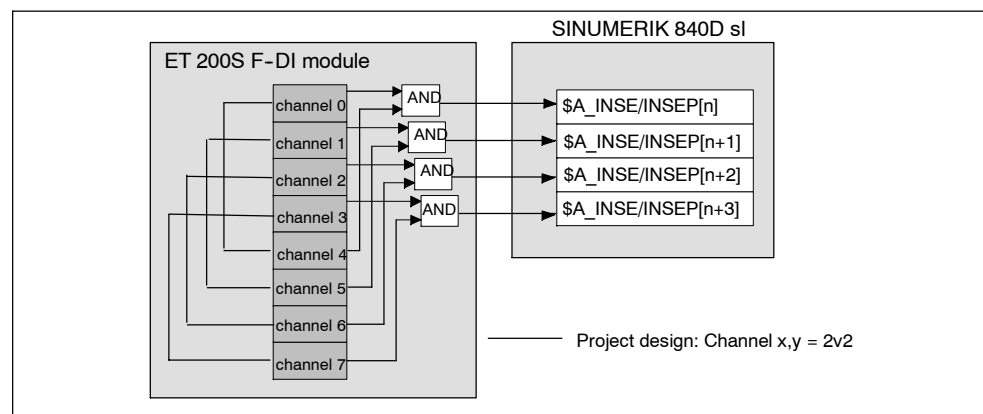


Fig. 7-12 2v2 mapping of the F-DI channels to SPL input data for ET 200S

- 1v1 parameterization
For 1v1 parameterization, the process signals of both channels are transferred from the F-DI module and can thus supply 2 different SPL input data.

7.2 Connecting I/O via PROFIsafe

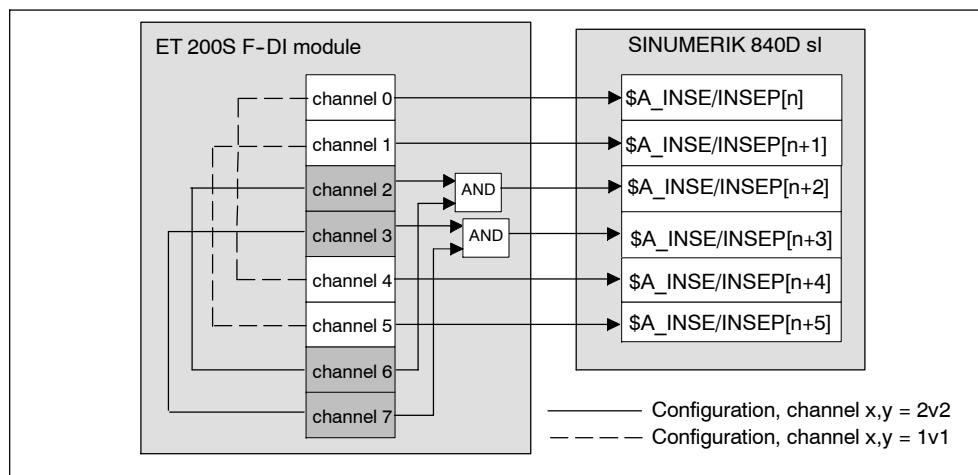


Fig. 7-13 2v2/1v1 mapping of the F-DI channels to SPL input data

Note

If mixed 2v2 and 1v1 parameterization is used in an F-DI module, this can reduce the number of SPL input data \$A_INSE/INSEP that can be used. This is the reason that we recommend that 1v1 is first parameterized followed by 2v2.

If more pieces of F net data of an F-DI module are used then the number relevant bits that can be transferred by parameterizing the channels of the F-DI module, then the control does not recognize this.

Example:

For a 2v2 parameterization of all of the channels of the F-DI module:

- ET 200S F, F-DI module: 4/8 F-DI 24 V DC

The 8 transferred F net data bits contain 4 relevant (bit 0 – bit 3) and 4 non-relevant bits (bit 4 – bit 7).

F-DO module

The NCK/PLC-SPL outputs \$A_OUTSE/OUTSEP are logically combined in the F driver to produce an F net (useful) data signal(implicit 2v2 parameterization) and mapped to the channels of the relevant F-DO module.

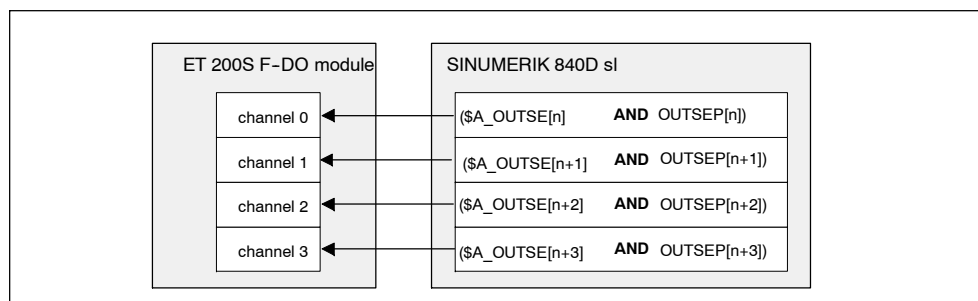


Fig. 7-14 Mapping the SPL output data to F-DO channels

PROFIsafe clock cycle and DP cycle time

When parameterizing the PROFIsafe clock cycle, in order to ensure a correct PROFIsafe communication, the DP cycle time, determined by HW Config must be observed (refer to Chapter 7.2.5 "Parameterizing the PROFIsafe communication (NCK)").

After the station has been fully configured, the DP cycle time can be determined by activating the equidistant (isochronous) bus cycle:

Open the properties dialog box of PROFIBUS in HW Config: DP master of the configured station:

Dialog: Properties – DP master system

Tab: General

Subnetwork, button: Properties

Dialog: Properties – PROFIBUS

Tab: Network settings

Button: Options

Dialog: Options

Tab: Equidistance

Checkbox: **Activate equidistance bus cycle/
Re-calculate equidistant type**

(Note: Activate the equidistant bus cycle using the checkbox: "Activate equidistant bus cycle/recalculate equidistant time". This can be used to determine the DP cycle time. The equidistant bus cycle should then be deactivated again.)

Display field: **Equidistant bus cycle**

(Note: The value calculated by HW Config and displayed in the display field: "Equidistant bus cycle" has the same significance as the DP cycle time)

Abort

Abort

Abort

Note

The DP cycle time calculated by the HW Config is required as guideline to parameterize the PROFIsafe clock cycle (refer to Chapter 7.2.5 "Parameterizing the PROFIsafe communication (NCK)").

The information and instructions in the online documentation should be carefully observed before changing the DP cycle time. "Help" of the relevant dialog box).

7.2.4 Parameterizing the F master (NCK)

The F master is parameterized in the machine data of the NCK and comprises the following subareas:

- PROFIsafe communication
 - PROFIsafe address of the F master
 - PROFIsafe clock cycle

See Chapter 7.2.5 "Configuring and parameterizing the PROFIsafe I/O"

- SPL–SGE/SGA interface
 - PROFIsafe address of the F module
 - F net data filter
 - SGE/SGA assignment

SPL–SGE interface See Chapter 7.2.6 "Parameterizing the SPL–SGE interface (NCK)".

SPL–SGA interface: See Chapter 7.2.7 "Parameterizing the SPL–SGA interface (NCK)".

7.2.5 Parameterizing the PROFIsafe communication (NCK)

F master address

In order to define a unique and clear communication relationship between F slave and F master, in addition to the target address (PROFIsafe address of the F slave), the source address (PROFIsafe address of the F master) must be defined.

The PROFIsafe address of the F master is entered into the following machine data:

- MD10385: \$MN_PROFISAFE_MASTER_ADDRESS
(PROFIsafe address of the F master)

Input format: 0s 00 aaaa

- s: Bus segment
Range of values: 5 = DP connection on the PLC side
- aaaa: Hexadecimal PROFIsafe address
Range of values: 1...FA7D_H

Note

The PROFIsafe address of the F master is provided under:

- HW Config > Properties dialog box of the F module > F parameter:
F_source_address
-

If the value entered does not match the value displayed in the F modules, an alarm is issued when the control boots:

- Alarm: 27220 "PROFIsafe: Number of NCK F modules (%1) < > Number of S7 F modules (%2)"

In this case, alarm parameter %2 contains the value 0.

PROFIsafe clock cycle

The PROFIsafe clock cycle defines the time grid in which new F telegrams are generated by the F master for transfer to the F modules. The PROFIsafe clock cycle is derived as standard from the interpolation cycle in the ratio 1:1.

As part of the PROFIsafe communications, a cyclic interrupt of the PLC user program (OB1) is made. This is realized in the PROFIsafe clock cycle via OB40.

In order to reduce the possible resulting computational load, machine data:

- MD 10098: \$MN_PROFISAFE_IPO_TIME_RATIO
(factor, PROFIsafe communications clock cycle)

can be used to modify the ratio between the PROFIsafe and interpolation clock cycle.

In order to achieve a sufficiently fast response time regarding PROFIsafe communications, the PROFIsafe clock cycle may not be parameterized greater than 25 ms. The selected PROFIsafe clock cycle is displayed in the machine data:

- MD 10099: \$MN_INFO_PROFISAFE_CYCLE_TIME
(PROFIsafe, communications clock cycle)

For a PROFIsafe clock cycle of greater than 25 ms, when the control boots the next time, an alarm is displayed:

- Alarm: 27200 "PROFIsafe cycle time %1 [ms] is too long"

PROFIsafe clock cycle and DP cycle time

The PROFIsafe clock cycle should be parameterized longer than the DP cycle time displayed by STEP 7: HW Config. Otherwise, the load (in time) on the PLC user program is increased as a result of unnecessary OB40 interrupts.

Note

The PROFIsafe clock cycle should be parameterized so that the following applies:
12 ms < PROFIsafe clock cycle < 25 ms

PROFIsafe clock cycle overruns

Even if the parameterized software operates error-free in normal operation, run time fluctuations in the PLC operating system (e.g. processing diagnostic alarms) can mean that the processing of the OB40 interrupt was not able to be completed before the start of the next PROFIsafe clock cycle.

In this particular case, the NCK attempts, up to a limit of 50 ms after the last correctly processed PROFIsafe clock cycle, to initiate an OB40 interrupt. The repeated attempts to initiate the OB40 interrupt are no longer executed in the PROFIsafe clock cycle but in the IPO clock cycle.

After this 50 ms limit value is exceeded,

- Alarm: 27253 "PROFIsafe communications error F master components %1, error %2"

is displayed and the configured Stop response (Stop D or E) is output to the safety axes.

Further, an attempt is still made to initiate the OB40 interrupt and to maintain PROFIsafe communications.

The time up to initiating the next OB40 interrupt is displayed in the following NCK machine data:

- MD 10099: \$MN_INFO_PROFISAFE_CYCLE_TIME
(PROFIsafe, communications clock cycle)

If the PROFIsafe clock cycle is continuously exceeded and just not sporadically, then the following alarm is displayed:

- Alarm: 27256 "PROFIsafe actual cycle time %1 [ms] > parameterized cycle time"

7.2.6 Parameterizing the SPL–SGE interface

A bitwise assignment can be made using machine data to better link the SPL interfaces to the net (useful) data of the F modules.

Note

The examples, now listed, to parameterize the SPL–SGE interface are based on the following specifications:

F–DI module

- F address: 114 = 90H
- F net data length: 8 bytes

Machine data

- MD10386 \$MN_PROFISAFE_IN_ADDRESS[5] = 05 00 0090
 - MD13300 \$MN_PROFISAFE_IN_FILTER[5] = 000F 000F
 - MD10388 \$MN_PROFISAFE_IN_ASSIGN[5] = 008 001
-

Assignment: F module to the F master

F net data of an F–DI module is sub–divided into units each 32 bits. Each of these 32 bit units are known as sub–slots. This sub–division, for assigning the F–DI module to the F master is expressed in the sub–slot address.

The machine data is used to assign the F–DI module to the F master:

- MD 10386: \$MN_PROFISAFE_IN_ADDRESS[Index]
(PROFIsafe address of the F–DI module)

Input format: 0s 0x aaaa

- s: Bus segment
Range of values: 5 = DP connection on the PLC side
- x: Sub–slot address
Range of values: 0...1
x = 0 addresses the F net data signals 1...32
x = 1 addresses the F net data signals 33...64
in the PROFIsafe telegram of the F slave
- aaaa: Hexadecimal PROFIsafe address of the F module
Range of values: 1...FFFF_H

Note

The PROFIsafe address of an F module is provided in STEP7 HW Config under:

Properties dialog box of the F module > F parameters: F_target_address

The PROFIsafe address of the F module is displayed in the decimal format in HW Config but must be entered into the machine data in the hexadecimal format.

Example

Net data of the 1st sub–slot is used to supply the SPL–SGE of the F–DI module with the PROFIsafe address: 90H

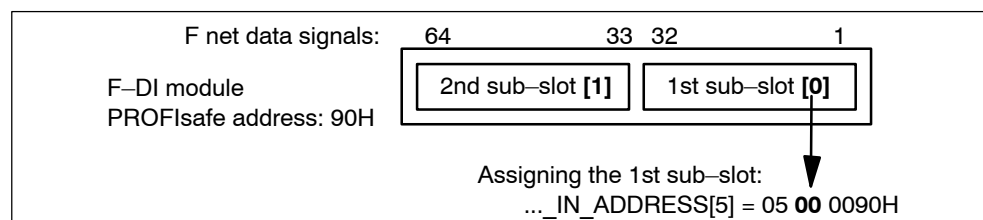


Fig. 7-15 F–DI addressing with the sub–slot

As a result of the possibility of flexibly assigning the F net data of an F–DI module to the SPL–SGE by combining the machine data now described (...IN_FILTER[n] and ...IN_ASSIGN[n]), it is possible and also makes sense to use the same PROFIsafe and sub–slot address a multiple number of times within the machine data:

- \$MN_PROFISAFE_IN_ADDRESS[0...max. Index]

possible and/or practical

7.2 Connecting I/O via PROFIsafe

Note

All machine data to connect an F-DI module to the SPL-SGE are associated with one another through the common index of the machine data:

- \$MN_PROFISAFE_IN_ADDRESS[Index]
- \$MN_PROFISAFE_IN_FILTER[Index]
- \$MN_PROFISAFE_IN_ASSIGN[Index]

F net data filter

If not all of the F net data signals of the sub-slots of an F-DI module are required for further processing within the SPL, then the relevant F-net data signal signals can be selected using the F-net data filter. Only these are then transferred to the SPL-SGE.

The F net data filter is parameterized in the machine data:

- MD 13300: \$MN_PROFISAFE_IN_FILTER[Index] (F net data filter IN)

Each F net data signal of the sub-slot is assigned to a filter bit. The filter bits of the F net data signals, that are to be transferred to SPL-SGE, should be set to 1. The filter bits of the F net data signals, that are not to be transferred, should be set to 0. The selected F net data signals are always transferred to the SPL-SGE as a consecutive bit field (i.e. a bit field without any gaps).

FFFF FFFFH is the default setting of the filter. This means that all F net data signals are transferred.

Example

8 F net data signals (bits 0...3 and bits 16...19) of the 1st sub-slot are filtered from the F net data of the F-DI module and transferred to the SPL-SGE.

- MD10386 \$MN_PROFISAFE_IN_ADDRESS[5] = 05 00 0090
- **MD13300 \$MN_PROFISAFE_IN_FILTER[5] = 000F 000F**
- MD10388 \$MN_PROFISAFE_IN_ASSIGN[5] = 008 001

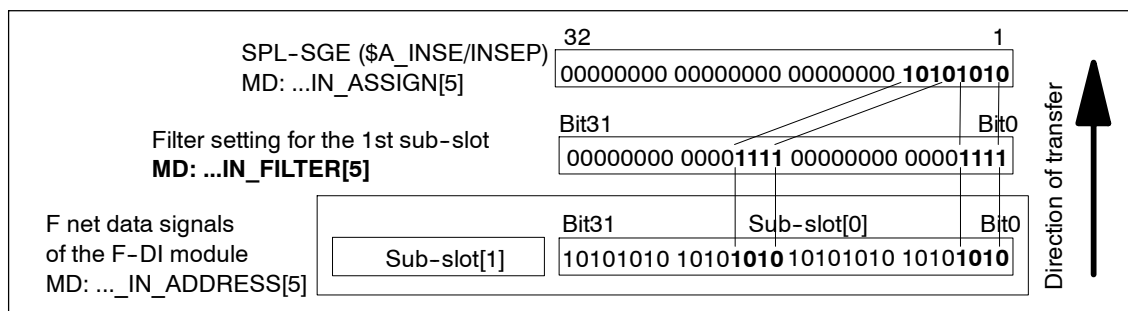


Fig. 7-16 Filtering the F net data signals in the input direction

SPL-SGE assignment

With this assignment, it is defined in which SPL-SGE (\$A_INSE/\$A_INSEP) the seamless (without gaps) F net data selected using the F net data filter are transferred.

The assignment is made using machine data:

- MD 10388: \$MN_PROFISAFE_IN_ASSIGN[Index],
(input assignment: F net data signals to \$A_INSE)

Input format: 00 aaa bbb

- aaa: Most significant SPL-SGE \$A_INSE/INSEP[aaa]
- bbb: Least significant SPL-SGE \$A_INSE/INSEP[bbb]

Example

8 F net data signals of the 1st sub-slot filtered from the F net data of the F-DI module are transferred in the SPL-SGE from \$A_INSE[1]/INSEP[1]).

- MD10386 \$MN_PROFISAFE_IN_ADDRESS[5] = 05 00 0090
- MD13300 \$MN_PROFISAFE_IN_FILTER[5] = 000F 000F
- **MD10388 \$MN_PROFISAFE_IN_ASSIGN[5] = 008 001**

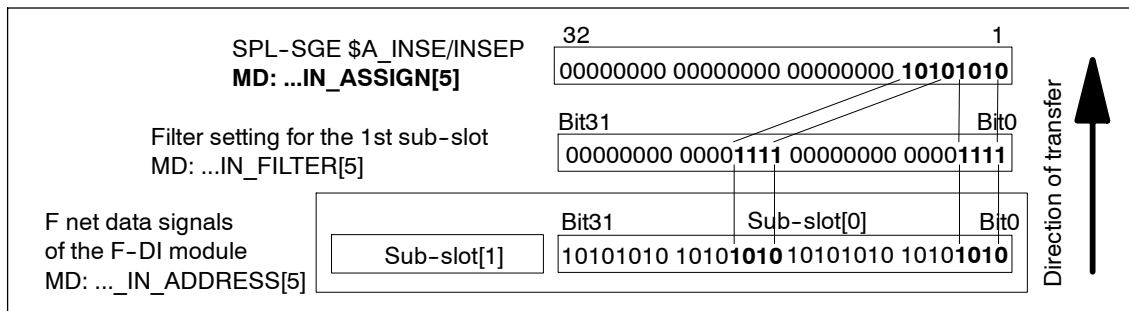


Fig. 7-17 Transfer: Filtered F net data signals in SPL-SGE

7.2.7 Parameterizing the SPL-SGA interface

Note

The following examples show the parameterization of the SPL-SGA interface based on the following specifications:

F-DO module

- F address: 256 = 100H
- F net data length: 6 bytes

Machine data

- MD10387 \$MN_PROFISAFE_OUT_ADDRESS[3] = 05 00 0100
 - MD13301 \$MN_PROFISAFE_OUT_FILTER[3] = 0000 1031
 - MD10389 \$MN_PROFISAFE_OUT_ASSIGN[3] = 008 005
-

Assignment: F module to the F master

The F net data of an F-DO module are sub-divided into 32-bit units. Each of these 32 bit units are known as sub-slots. This sub-division, for assigning the F-DO module to the F master is expressed in the sub-slot address.

The machine data is used to assign the F-DO module to the F master:

- MD 10387: \$MN_PROFISAFE_OUT_ADDRESS[Index]
(PROFIsafe address of the F-DI module)
Input format: 0s 0x aaaa
 - s: Bus segment
Range of values: 5 = DP connection on the PLC side
 - x: Sub-slot address
Range of values: 0...1
x = 0 addresses the F net data signals 1...32
x = 1 addresses the F net data signals 33...64
in the PROFIsafe telegram to the F slave
 - aaaa: Hexadecimal PROFIsafe address of the F module
Range of values: 1...FFFF_H
-

Note

The PROFIsafe address of an F module is provided in STEP7 HW Config under:

Properties dialog box of the F module > F parameters: F_target_address

The PROFIsafe address of the F module is displayed in the decimal format in HW Config but must be entered into the machine data in the hexadecimal format.

Example

SPL-SGA are written – as F net data – into the 1st sub-slot of the F-DO module with PROFIsafe address: 100H.

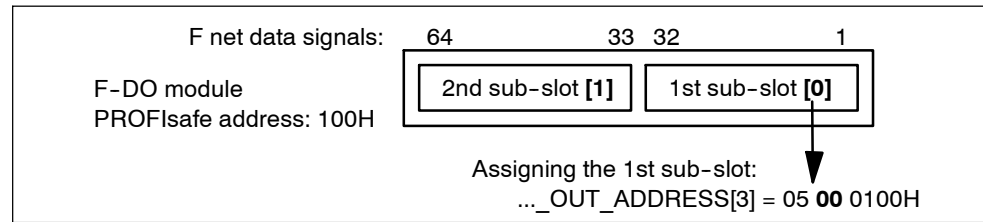


Fig. 7-18 F-DO addressing with sub-slot

As a result of the possibility of flexibly assigning the F net data of an F-DO module to the SPL-SGA by combining the machine data now described (...OUT_FILTER[n] and ...OUT_ASSIGN[n]), it is possible and also makes sense to use the same PROFIsafe and sub-slot address a multiple number of times within the machine data:

- \$MN_PROFISAFE_OUT_ADDRESS[0...max. Index]

possible and/or practical

Note

All machine data to connect an F-DO module to the SPL-SGA are associated with one another through the common index of the machine data:

- \$MN_PROFISAFE_OUT_ADDRESS[Index]
- \$MN_PROFISAFE_OUT_FILTER[Index]
- \$MN_PROFISAFE_OUT_ASSIGN[Index]

F net data filter

The F net data filter allows the selected SPL-SGA – without any gaps – to be distributed across any F net data signals within the sub-slot.

The F net data filter is parameterized in the machine data:

- MD 13301: \$MN_PROFISAFE_OUT_FILTER[Index] (F net data filter OUT)

Every selected SPL-SGA is assigned a filter bit in an increasing sequence. The filter bits, which are used to transfer the SPL-SGA to the F net data signals, should be set to 1. The filter bits of the SPL-SGA that are not to be transferred, should be set to 0.

FFFF FFFFH is the default setting of the F net data filter; this means that all of the selected SPL-SGA, are transferred from F net data signal 1 onwards (bit 0) into the F net data of the F-DO module.

7.2 Connecting I/O via PROFIsafe

Example

4 SPL-SGA are transferred into the F net data of the 1st sub-slot of the F-DO module corresponding to the set filter bits:

- MD10386 \$MN_PROFISAFE_OUT_ADDRESS[3] = 05 00 0100
- **MD13301 \$MN_PROFISAFE_OUT_FILTER[3] = 0000 1031**
- MD10389 \$MN_PROFISAFE_OUT_ASSIGN[3] = 008 005

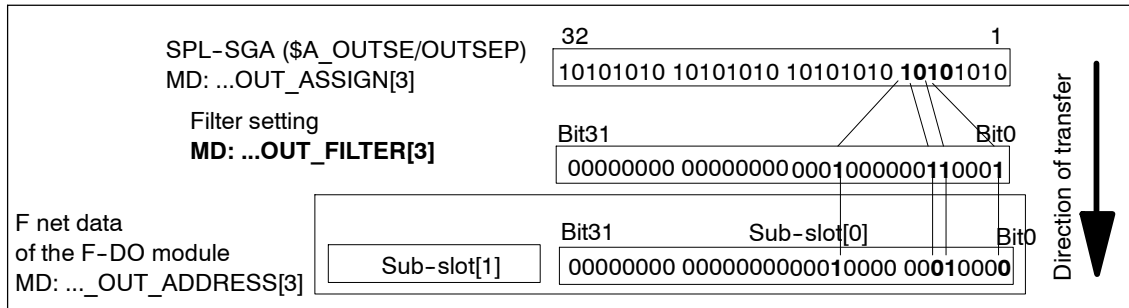


Fig. 7-19 Filtering the SPL-SGA in the output direction

SPL-SGA assignment

The assignment defines which SPL-SGA (\$A_OUTSE/\$A_OUTSEP) are transferred in the F net data of the F-DO module. The SPL-SGA can only be specified as a field of output signals without any gaps (consecutive field of output signals).

The assignment is made using machine data:

- MD 10389: \$MN_PROFISAFE_OUT_ASSIGN[Index],
(Output assignment: SPL-SGA to F net data signals)
Input format: 00 aaa bbb
 - aaa: Most significant SPL-SGA \$A_OUTSE/OUTSEP[aaa]
 - bbb: Least significant SPL-SGA \$A_OUTSE/OUTSEP[bbb]

Example

From the SPL-SGA, 4 output signals \$A_OUTSE/OUTSEP[5] to \$A_OUTSE/OUTSEP[8] are selected for transfer in the F net data of the F-DO module:

- MD10386 \$MN_PROFISAFE_OUT_ADDRESS[3] = 05 00 0100
- MD13301 \$MN_PROFISAFE_OUT_FILTER[3] = 0000 1031
- **MD10389 \$MN_PROFISAFE_OUT_ASSIGN[3] = 008 005**

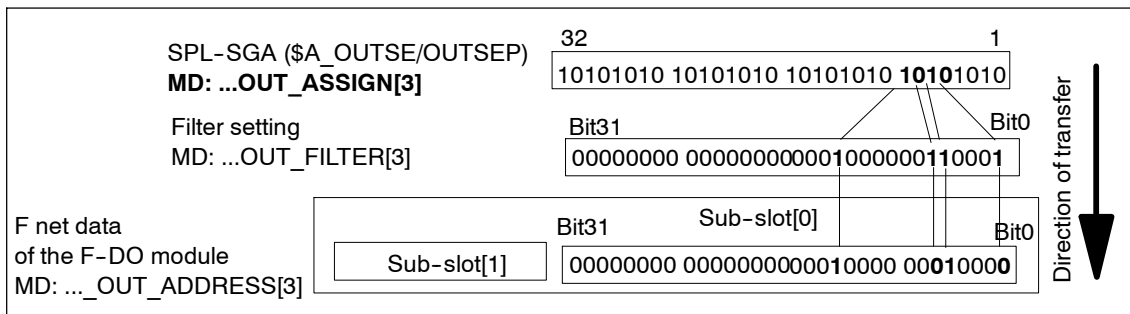


Fig. 7-20 Selecting the SPL-SGA for filtering

7.2.8 Module type (NCK)

The F module type cannot be explicitly specified. The F master determines the type depending on the machine data in which a PROFIsafe address has been entered:

- \$MN_PROFISAFE_IN_ADDRESS
- \$MN_PROFISAFE_OUT_ADDRESS

Dependent on this, the F module is identified as either input, output or bidirectional I/O modules.

Table 7-2 F module types

..._IN_ADDRESS	..._OUT_ADDRESS	Type
F address	-	Input module
-	F address	Output module
F address	F address	Input/output module

7.2.9 Parameterizing the F master (PLC)

In the PLC, the F master does not have to be explicitly parameterized regarding the connection of F modules.

The PLC is parameterized explicitly as follows:

- Parameterizing the NCK
- Generating and downloading the configuration

Data block DB18

Two bit arrays in data block DB 18 are used to display which INSEP/OUTSEP bytes are only assigned to F modules as a result of the parameterization in the NCK machine data:

- MD 10388: \$MN_PROFISAFE_IN_ASSIGN
- MD 10389: \$MN_PROFISAFE_OUT_ASSIGN

Data block DB18 (excerpt):

```
STRUCT
:
  SPL_DATA:STRUCT
    INSEP:          ARRAY[1 ... 64] OF BOOL;
    OUTSEP:         ARRAY[1 ... 64] OF BOOL;
:
  //External SPL input bytes(HW) with PROFIsafe slaves
  INSEP_PROFISAFE:  ARRAY[1 ... 8] OF BOOL;
  //External SPL output bytes(HW) with PROFIsafe slaves
  OUTSEP_PROFISAFE: ARRAY[1 ... 8] OF BOOL;
:
END_STRUCT;
```

7.2.10 Response times

The response times listed here refer exclusively to the internal processing of the signals by the F master. This means the following:

- **T(FDI → DB18) or T(FDI → SPL-INSE)**
The transfer time from the input area of the F-DI module to the input interface of the PLC-SPL or NCK-SPL
- **T(DB18 → FDO) or T(SPL-OUTSE → FDO)**
The transfer time from the output interface of the PLC-SPL or NCK-SPL to the output area of the F-DO module.
- **T(FDI → FDO)**
Sum of the transfer times from:
 - T(FDI → DB18) or T(FDI → SPL-INSE)
 - Processing time by the user-specific SPL program.
 - T(DB18 → FDO) or T(SPL-OUTSE → FDO)

The following applies for the subsequent tables of the PLC and NCK processing times:

- Values in *italics* can increase by up to 50 ms due to delays in the communication path between the NCK and PLC.
- PST = 50 ms (PST = PROFIsafe clock cycle) is the permanently implemented maximum time to detect error-free communications between the NCK and PLC. A STOP response (STOP D/E) is initiated if this time is exceeded.
- OB1 = 150 ms is the maximum time set as standard in the PLC-CPU to monitor the user level. The PLC goes into the STOP state if this time is exceeded.

- 0...m * IPO: This time component only becomes applicable if delays are incurred on the PLC side. In this case, in each subsequent IPO clock cycle, it is determined as to whether the PLC is ready to communicate again.
- OB40_INT is the maximum permissible time to initiate the interrupt on the NCK side up to execution of the PROFIsafe software and a ready signal to the NCK. The time is mainly determined by the run time (propagation time) of the F driver implementation on the PLC side and the PLC user program to be run-through in the OB40 context. These times typically lie in the vicinity of a few milliseconds.
- The specified maximum times are theoretical values; it is extremely improbable that they actually occur in practice.

Reason:

- It is improbable that the run time of the PLC–F driver is delayed – in the OB40 context – by the maximum time of 50 ms. The reason for this is that the interrupting organizational blocks (OB8x) only have such long run times in extremely few cases.
- For the theoretical value, it would be necessary that two consecutive runs of the PLC–PROFIsafe master driver in the OB40 context are delayed by the permitted maximum of 50 ms – this is extremely improbable.
- The maximum time of 150 ms for the user program is not reached in any of the applications relevant in practice.

PLC processing times

Time:: T(FDI→DB18)		
Formula	$2 * PST + 1 * OB1$	
Max. times	$2 * 50 \text{ ms} + 1 * 150 \text{ ms}$	250 ms
Typical times ¹⁾	$2 * 16 \text{ ms} + 1 * 30 \text{ ms}$	62 ms
Time:: T(DB18→FDO)		
Formula	$2 * PST + 1 * OB1$	
Max. times	$2 * 50 \text{ ms} + 1 * 150 \text{ ms}$	250 ms
Typical times ¹⁾	$2 * 16 \text{ ms} + 1 * 30 \text{ ms}$	62 ms
Time:: T(FDI→FDO)		
Formula	$4 * PST + 2 * OB1$	
Max. times	$4 * 50 \text{ ms} + 2 * 150 \text{ ms}$	500 ms
Typical times ¹⁾	$4 * 16 \text{ ms} + 2 * 30 \text{ ms}$	124 ms

1) Typical times: PST = 16 ms; OB1 = 30 ms

7.2 Connecting I/O via PROFIsafe

NCK processing times: $PST \leq 2 * IPO$

Time:: T(FDI→SPL→INSE)		
Formula	$2 * PST + 1 * IPO$	
Max. times	$2 * 50 \text{ ms} + 25 \text{ ms}$	125 ms
Typical times ¹⁾	$2 * 16 \text{ ms} + 8 \text{ ms}$	40 ms
Time:: T(SPL→OUTSE→FDO)		
Formula	$IPO + 0...m * IPO + OB40_INT$	
Max. times	$25 \text{ ms} + 50 \text{ ms} + 50 \text{ ms}$	125 ms
Typical times ¹⁾	$8 \text{ ms} + 2 \text{ ms}$	10 ms
Time:: T(FDI→FDO)		
Formula	$2 * PST + 2 * IPO + 0...m * IPO + OB40_INT$	
Max. times	$100 \text{ ms} + 50 \text{ ms} + 50 \text{ ms} + 50 \text{ ms}$	250 ms
Typical times ¹⁾	$2 * 16 \text{ ms} + 2 * 8 \text{ ms} + 2 \text{ ms}$	50 ms

1) Typical times: PST = 16 ms; IPO = 8 ms; OB40_INT = 2 ms

NCK processing times: $PST > 2 * IPO$

Time:: T(FDI→SPL→INSE)		
Formula	$2 * PST + 1 * IPO$	
Max. times	$2 * 48 \text{ ms} + 8 \text{ ms}$	104 ms ²⁾
Typical times ¹⁾	$2 * 18 \text{ ms} + 6 \text{ ms}$	42 ms
Time:: T(SPL→OUTSE→FDO)		
Formula	$IPO + (n-2) * IPO + 0...m * IPO + OB40_INT$	
Max. times	$16 \text{ ms} + 48 \text{ ms} + 48 \text{ ms}$	112 ms ²⁾
Typical times ¹⁾	$6 \text{ ms} + 6 \text{ ms} + 2 \text{ ms}$	14 ms
Time:: T(FDI→FDO)		
Formula	$2 * PST + PST + 0...m * IPO + OB40_INT$	
Max. times	$100 \text{ ms} + 25 \text{ ms} + 50 \text{ ms} + 50 \text{ ms}$	225 ms ³⁾
Typical times ¹⁾	$2 * 18 \text{ ms} + 18 \text{ ms} + 2 \text{ ms}$	56 ms

with:

PST: PROFIsafe clock cycle

$PST = n * IPO$; with $n = 1, 2, 3, \dots$

¹⁾ Typical times: PST = 18 ms; IPO = 6 ms; OB40_INT = 2 ms

²⁾ This time is valid for the case: IPO = 8 ms, $n=3 \Rightarrow PST = 24 \text{ ms}$; (maximum times for values $n > 2$)

³⁾ This time is valid for the case: $PST = n * IPO = 25 \text{ ms}$

7.2.11 Functional boundary conditions

When connecting via SPL I/O using one safety-related bus (PROFIsafe), several secondary conditions and constraints must be taken into consideration when configuring and programming:

- Faults/errors in the PROFIsafe input devices (e.g. input signals that differ from one another) cause the associated SPL input signals (\$A_INSE(P)) to be deleted (cleared). This initiates a STOP D/E.
- The external SPL input signals in the DB18 interface for the \$A_INSEP variables are transferred within the system. This means that programming is no longer necessary in the user program. Only one signal state for both SPL channels is transferred to the master from the PROFIsafe input peripherals.
- The external SPL output signals of the DB18 interface (\$A_OUTSEP variables) are transferred within the system to the relevant PROFIsafe output modules. A signal state is transferred to the output modules via PROFIsafe.
- It may be necessary to use single-channel signals (signals that are present only in the PLC or only in the NCK) to change over external SPL outputs (e.g. braking control). These single-channel signals must also be made available to the other program channel to align the logic and program synchronously. Direct communications between the NCK and PLC-SPL via DB18 is a good way to achieve this.
- In each PROFIsafe cycle, the PROFIsafe layer generates a PROFIsafe telegram with the logically AND'ed SPL output data as F net (useful) data.

F modules

As far as the F modules that can be operated with a SINUMERIK 840D sl, the following limitations apply:

- F modules with dynamic i parameters are not supported.
- The maximum possible F net data width for each F module is 64 bits.
- The value range for the F address of an F module is as follows: 1 – 65535_D or 1 – FFFF_H

Note

Only ET 200 stations can be operated whose configuration is less than 244 bytes large. If this rule is not observed, then PROFIsafe modules will no longer be detected and Alarms 27220 and 27221 will be output. The size of the configuration can be taken from the documentation of the ET 200 modules or using the ET 200 configurator.

Axial SGE/SGA

I/O (F net data) of an F module cannot be connected to axial SGE/ SGA. They can only be connected in the context of the SPL that must be installed for the purpose.

PLC SPL SGE/SGA

The basic PLC program automatically connects the I/O (F net data) of an F module to the SPL interface in data block DB18.

It is not possible to connect them in a PLC user program.

7.3 Safe programmable logic (SPL)

7.3.1 Basic principles

Function

These signals must be logically combined (interlocked) in a safety-related, freely programmable form in order to be able to flexibly process safety-related external process signals and safety-related internal input and output signals. The "Safe Programmable Logic" (SPL) handles this task as an integral system component.

Features:

- Logic operations implemented by the user are cyclically processed.
- Instructions are effective in all operating modes.
- The PLC program immediately starts to execute the instructions after the control has booted.
- The SGE/SGA must be supplied by the machine manufacturer – both in the drive monitoring channel as well as in the NCK monitoring channel.
- The NCK-SPL is written as ASUB using the CNC function synchronous actions. The PLC-SPL is written as PLC user program.

In order to check that the two SPLs (PLC and NCK) are functioning, the system program arranges cyclic data comparison between the PLC and NCK.

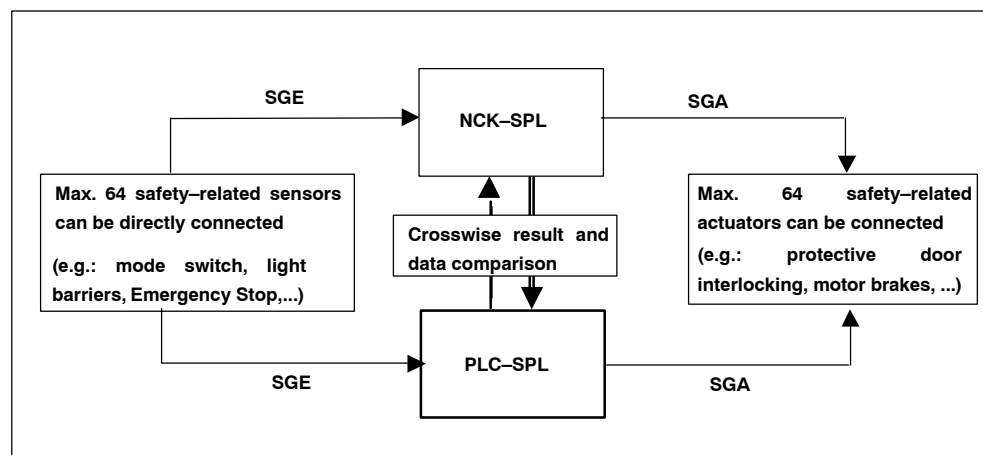


Fig. 7-21 Safe programmable logic

7.3 Safe programmable logic (SPL)

Crosswise data comparison

Data is cyclically exchanged between the PLC and NCK to check the correct functioning of the two SPLs (PLC and NCK). Just the same as the comparison between the NCK and the drive, it cross-checks the signals that arrive at the SPL, the safety-related signals generated by the SPL as well as internal markers.

The discrepancy time for the crosswise data comparison of SPL variables is permanently set to 1 s (or 10 s \$A_CMDSI).

The following signals are included in the crosswise data comparison between the NCK and the PLC:

Table 7-3 Signals for crosswise data comparison

	NCK	PLC
External SPL inputs	\$A_INSE[1 ... 64]	SPL_DATA.INSEP[1...64]
External SPL outputs	\$A_OUTSE[1 ... 64]	SPL_DATA.OUTSEP[1...64]
Internal SPL inputs	\$A_INSI[1 ... 64]	SPL_DATA.INSIP[1...64]
Internal SPL outputs	\$A_OUTSI[1 ... 64]	SPL_DATA.OTSIP[1...64]
SPL markers	\$A_MARKERSI[1 ... 64]	SPL_DATA.MARKER-SIP[1...64]
"SPL commissioning phase completed"	\$MN_PREVENT_SYN-ACT_LOCK[0,1]	DB18.DBX36.0
"Stop for SPL-crosswise data comparison error"	\$MN_SPL_STOP_MODE	DB18.DBX36.1

If an error is detected on one of the monitored signals, this is indicated using Alarm 27090 and the configured stop response (STOP D/E) is initiated.

If a difference is detected, Alarm 27090 "Error for crosswise data comparison NCK-PLC" is output. In addition, a STOP D/E is initiated if the SPL commissioning phase is defined as having been completed.

The criterion "commissioning phase completed" is derived from the NCK-MD \$MN_PREVENT_SYNACT_LOCK[0,1] in the NCK. If one of the two field entries is not equal to 0, "commissioning phase completed" is set internally by the crosswise data comparison. On the PLC side, this requirement is entered using DB18.DBX36.0. If this bit is set to "1", then the commissioning phase is considered to have been completed. An SPL crosswise data comparison error only results in a stop response after the SPL commissioning phase has been completed.

The stop response for an SPL crosswise data comparison error is set in the NCK using NCK-MD \$MN_SPL_STOP_MODE. If the MD value is 3, for an SPL crosswise data comparison error, a STOP D is initiated – for an MD value of 4, a STOP E is initiated. On the PLC side, this stop response is entered using DB18.DBX36.1. If this bit is set to "1", for an SPL crosswise data comparison error, a STOP E is initiated – otherwise a STOP D.

Any changes to data on the NCK and PLC side do not take effect until after power on.

Clearing the external SPL outputs for SPL system errors

If communications between the NCK and PLC with reference to the SPL crosswise data comparison, are interrupted, then all external SPL output signals (\$A_OUTSE/\$A_OUTSEP) are deleted with a delay of 5 s.

This state occurs if no data exchange or crosswise data comparison occurs between the NCK and PLC for one second. This is due to the fact that

- the one second limit of the user cycle limit in the PLC (OB1 cycle) was exceeded.
- a system error has occurred. The NCK or PLC system software no longer runs due to a system error – therefore interrupting communications.

Behavior of the NCK

The specified timer of 5 s is started if Alarm 27092 "Communication interrupted for crosswise data comparison NCK–SPL, error detected by %1" is initiated. This is independent of which component (NCK or PLC) interrupted the alarm.

The system variable \$A_STATSID, bit 29 = 1 is used to indicate to the SPL user that this timer has been started. This means that he has a possibility of initiating plant/system-specific actions before the system deletes (clears) the output.

After this time has expired, the system deletes the external SPL outputs. The status variable \$A_STATSID, bit 29 remains set. When reading-back the external outputs in the NCK–SPL via the system variable \$A_OUTSE, "0" is read corresponding to the actual output status.

Behavior of the PLC

If, on the PLC side, it is detected that the communication timeout has been exceeded, then a timer is started with 5 s.

After this time has expired, the PLC goes into Stop (by calling an SFC46). This state can only be exited using a power on.

After the 5 s timer has expired, the PLC outputs its own message for diagnostic purposes. At the same time, an entry with the same significance is located in the diagnostics buffer.

Using the status signal DB18.DBX119.5, the SPL programmer and the NCK is provided with the information that the timer was started. This means that he has the possibility of initiating system-specific actions before the PLC goes into the stop condition.

Note

In order to achieve the shortest possible response time, the system variable \$A_STATSID, bit 29 and the status signal DB18.DBX119.5 must be evaluated in the SPL in order to bring, as far as possible, the SPL–SGA into a safe state (cleared SPL–SGA).

7.3 Safe programmable logic (SPL)

Limitations

The user must take into consideration the following points regarding the functioning of the crosswise data comparison:

- Both channels (NCK/PLC) must execute the same logic.
- Do not implement any response sequences or sequence controllers that are externally controlled using short input pulses. This is because short pulses of this type may only be sent and processed in one channel because of sampling effects.
- Unused inputs/outputs/markers of the SPL must be assigned the default value = 0; single-channel use of individual bits for non-safety relevant purposes is not permissible.
- External STOPs must be enabled (they are also used internally) and can be extracted from the SPL if required. The "external STOP A" must be parameterized at the SPL interface for all safety axes using MD \$MA_SAFE_EXT_STOP_INPUT[0]. If this condition is not fulfilled, then Alarm 27033 is output.
- Crosswise data comparison checks whether the "commissioning phase" has been completed. If errors are detected in the crosswise data comparison, a "STOP D/E" is triggered on the NCK and drive depending on this criterion. If the commissioning phase has not been completed after booting, Alarm 27095 "SPL protection not activated" is repeatedly displayed (every 3 hours).

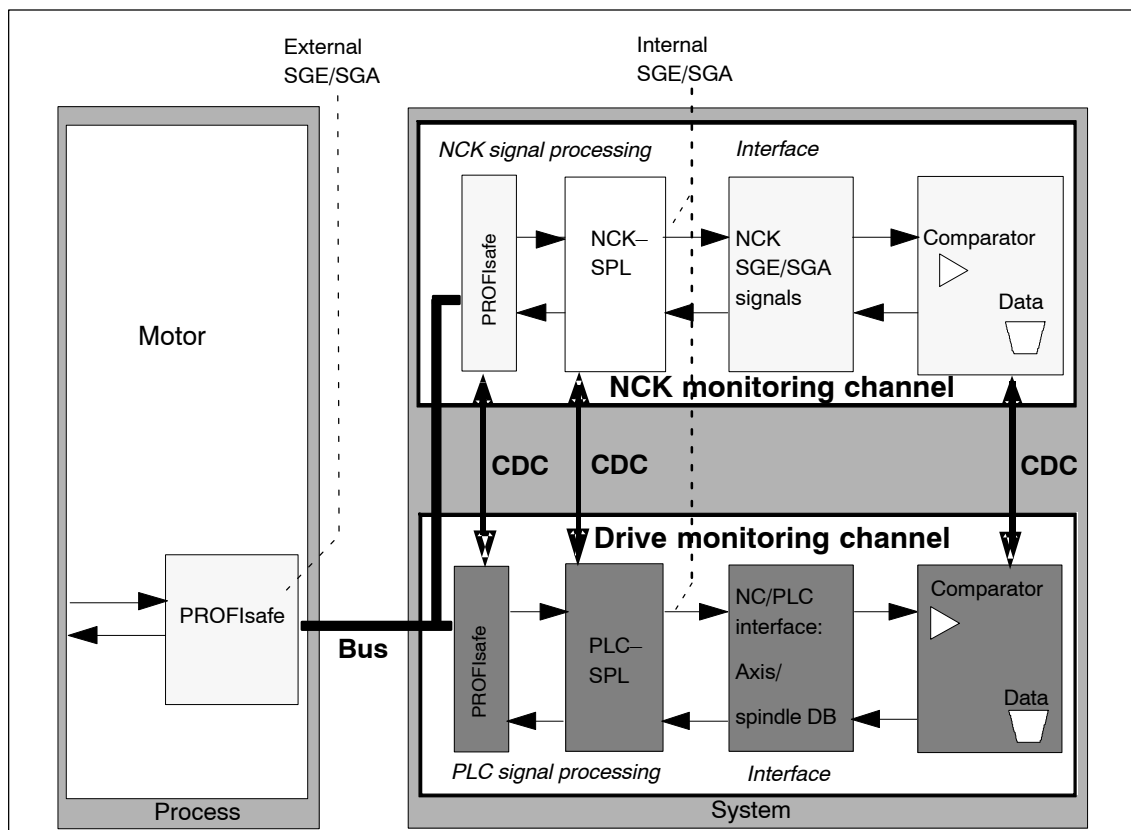


Fig. 7-22 Communications between the NCK-drive-PLC components

- In the case of a crosswise data comparison error, no system response is initiated regarding the SGE/SGA processed by the SPL. Users must implement this themselves. The only exception is when a system error is detected as was described above.

7.3.2 Synchronized actions for Safety Integrated

Motion-synchronizing actions (or "synchronizing actions" for short) are instructions programmed by the user, which are evaluated in the interpolation cycle of the NCK in synchronization with the execution of the part program. If the condition programmed in the synchronized action is fulfilled (logical expression) or if none is specified, then actions assigned to the instruction are activated in synchronism with the remainder of the part program run.

Description

The number of programmable synchronized action blocks depends entirely on the configurable number of synchronized action elements. The number of storage elements for general motion-synchronizing actions (synchronizing action elements) is defined in machine data MD 28250: MM_NUM_SYNC_ELEMENTS.

The memory management is listed separately in order to be able to handle synchronized actions for SAFE.SPF independently.

MD 28251: \$MC_MM_NUM_SAFE_SYNC_ELEMENTS is used to configure the memory for the safety synchronized action elements.

All modal synchronized actions that are programmed in the sub-program /_N_CST_DIR/_N_SAFE_SPF retrieve their elements from this memory area.

In order to determine the required for synchronized action elements, at the start and at the end of SAFE.SPF, system variables \$AC_SAFE_SYNA_MEM can be read. The difference between these values is then the number of synchronized action elements required. This value plus a possible reserve must be entered into MD 28251: \$MC_MM_NUM_SAFE_SYNC_ELEMENTS.

References: /FBSY/ Description of Functions, Synchronized Actions

7.3.3 NCK–SPL program

Description

The NCK–SPL program is written as an NC program (ASUB) with synchronized actions.

Features

The NCK–SPL program has the following features:

- The program can be started manually with NC START during commissioning.
- The following applies once the program has been started:
 - The synchronous actions assigned an ID No. are cyclically executed in the IPO clock cycles (modal)
 - The synchronous actions assigned the keyword IDS remain active even after the operating mode has been changed or NC–STOP/NC RESET
 - In order to check the program, the status of the active synchronous actions (operating area "Machine", soft key "Synchronous actions") can be displayed.
 - The program can be modified during commissioning. It must then be restarted.
 - The NCK–SPL program is saved in the NCK path `_N_CST_DIR` as sub-routine "`_N_SAFE_SPF`" (HMI view: standard cycles/SAFE.SPF). Other sub-routine names are not permitted.
- The images of the PLC safety variables (`$A_INSIP(D)`, `$A_OUTSIP(D)`, `$A_INSEP(D)`, `$A_OUTSEP(D)`, `$A_MARKERSIP(D)`) are required for the simulation (on the NC side) of an SPL. These can be used to develop the SPL step-by-step. They can only be read by the NCK.

Protective mechanisms

- The synchronous action IDs used for the NCK–SPL are protected from being influenced by the PLC or other programs using MD `$MN_PREVENT_SYNACT_LOCK`. To activate the protection, the number range of the synchronous action IDs used in the SPL program must be entered into the two fields of machine data `$MN_PREVENT_SYNACT_LOCK`. It is then no longer possible to change these synchronous actions (CANCEL, LOCK have no effect) once `_N_SAFE_SPF` has been started.

- System variables \$A_OUTSI, \$A_OUTSID, \$A_OUTSE, \$A_OUTSED, \$A_MARKERSI, \$A_TIMERSI and \$A_CMDSI are protected from being written to by programs other than the NCK–SPL (/ _N_CST_DIR/_N_SAFE_SPF). If an error occurs, Alarm 17070 "Channel %1 block %2 data item write-protected" is output.
- A reference checksum is calculated when booting by the NCK–SPL (/ _N_CST_DIR/_N_SAFE_SPF) – it is entered into the program as a comment:
Example: ; SAFE_CHECKSUM = 000476bbH
The checksum is then cyclically re-calculated and compared with the reference checksum. If a deviation is detected, Alarm 27093 "Checksum error NCK–SPL, %1, %2, %3" is output.
- The system variables \$A_INSIP(D), \$A_OUTSIP(D), \$A_INSEP(D), \$A_OUTSEP(D) and \$A_MARKERSIP(D) are only accessible during the commissioning phase.

If NCK–SPL execution is interrupted for any reason or the SI system variables are changed by another program, then this is detected by the cyclic crosswise data comparison with the PLC.

Table 7-4 Response to SPL errors

Event	MD 11500 \$MN_PREVENT_SYNACT_LOCK[m,n] equal to 0	MD 11500 \$MN_PREVENT_SYNACT_LOCK[m,n] not equal to 0
Crosswise data comparison NCK–PLC identifies an error	Alarm 27090 is triggered	Alarm 27090 is triggered and in addition, STOP D/E is triggered
SPL program file is to be changed (written, deleted, re-named, edited)	No response	Alarm 27093 is triggered



Warning

The protective mechanisms that prevent changes to the NCK–SPL file and the NCK–SPL instructions (statements) are only completely effective if MD \$MN_PREVENT_SYNACT_LOCK[0,1] is set to the value range of the synchronous action IDs used in the NCK–SPL.

The machine construction OEM must ensure that the protective mechanisms are activated no later than after the completion of the acceptance test and the values, set in MD \$MN_PREVENT_SYNACT_LOCK[0,1] are documented in the acceptance report.

After commissioning has been completed, the access rights to the SAFE.SPF file must be set to the correct access level for writing/reading/deleting access operations (manufacturer or service).

7.3 Safe programmable logic (SPL)

As long as the protective mechanisms for the NCK–SPL have not been activated (MN_PREVENT_SYNACT_LOCK[0.1] equal to 0), Alarm 27095 is displayed when the crosswise data comparison between the NCK and the PLC starts. This alarm can be acknowledged with the NCK key so that the SPL can be commissioned.

Note

The SPL program must be addressed using upper case letters. Alarm 27097 is output if this is not observed.

7.3.4 Starting the SPL

The NCK–SPL is active after the control has booted, if at least

1. The functions SBH/SG and "external STOPs" have been enabled for at least one axis using \$MA_/\$MD_SAFE_FUNCTION_ENABLE,
2. One of the NCK–SPL interfaces is used.
This means that an axial SGE/SGA was parameterized at one of the SPL interfaces using its assignment MD.

In this case, the "external STOP A" must be parameterized at the SPL interface for **all** of the axes that use Safety Integrated.

In addition, the following machine data must be set for an error-free ASUB start after the NCK and the PLC have booted:

3. \$MN_ASUP_START_MASK=7:
ASUB can be started in all operating states of the NC (RESET/JOG/not all axes referenced/read-in active).
4. \$MN_ASUP_START_PRIO_LEVEL=1:
Interrupt priority, from which MD \$MN_ASUP_START_MASK becomes active.

Other actions to be executed:

5. A PLC–SPL has to be created and integrated into the PLC user program
6. An NCK–SPL has to be created and loaded into the directory /_N_CST_DIR into the file /_N_SAFE_SPF (= MMC view standard cycles/SAFE.SPF)

Note

It is not permissible that any alarms are present for an ASUB start.

SPL start without axial safety enable

When the machine is being commissioned, the SPL must be started without enabling axis-specific safety-related functions.

It is therefore possible to handle general machine functions (hydraulics, Emergency Stop) before the axis is commissioned.

This is only possible in the commissioning state of the SPL (\$MN_PREVENT_SYNACT_LOCK[0,1]==0 and DB18.DBX36.0==0).

This state is displayed when the SPL starts using Alarm 27095 "%1 SPL protection not activated".

If an attempt is made to start the SPL in the protective state (after commissioning has been completed) without the axial safety function having been activated, then Alarm 27096 is output. The SPL is started if the SPL crosswise data comparison is not activated.

7.3.5 Starting the NCK-SPL using the PROG_EVENT mechanism

The NCK-SPL can also be started using the PROG_EVENT mechanism.

The PROG_EVENT.SPF cycle (saved under manufacturer cycles ..\DH\CMA.DIR) is started when a specific event occurs (event-controlled program call).

Using the machine data MD 20108 **\$MC_PROG_EVENT_MASK**, for this PROG_EVENT mechanism, certain events are enabled on a specific channel-for-channel basis which then start the cycle.

The following events can be activated as start condition:

- Start of a part program bit 0 == 1
- End of a part program bit 1 == 1
- Operator panel reset bit 2 == 1
- **Boot** bit 3 == 1

The start condition when booting (bit 3 ==1) must be active in order to start the NCK-SPL (SAFE.SPF) via PROG_EVENT.SPF.

7.3 Safe programmable logic (SPL)

Note

When starting the NCK–SPL (SAFE.SPF), it is important that the PROG_EVENT mechanism was started through channel 1. This must be taken into account when parameterizing the channel–specific data MD 20108

\$MC_PROG_EVENT_MASK.

Using the system variable **\$P_PROG_EVENT**, in PROG_EVENT.SPF it can be interrogated as to which event activated the call:

- Start of a part program **\$P_PROG_EVENT == 1**
- End of a part program **\$P_PROG_EVENT == 2**
- Operator panel reset **\$P_PROG_EVENT == 3**
- **Boot** **\$P_PROG_EVENT == 4**

For the PROG_EVENT.SPF cycle, MD 11602 **\$MN_ASUP_START_MASK** (recommended setting = 7H) is taken into account; this can be used to ignore reasons for initiating a stop to run the sequence. The setting in MD 11604 **\$MN_ASUP_START_PRIO_LEVEL** is not relevant for PROG_EVENT.SPF.

Example for PROG_EVENT.SPF

```

; -----
; Event-controlled program call
; PROG_EVENT.SPF under      \DH\CMA.DIR
; -----

; In machine data MD 20108: PROG_EVENT_MASK can be set channel-specifically which of the following events will enable the user program:
;
;
;      ( ) Start of the part program —> bit 0 == 1
;      ( ) End of the part program   —> bit 1 == 1
;      ( ) Operator panel reset      —> bit 2 == 1
;      (x) Run-up                    —> bit 3 == 1
; -----

; Using the system variable $P_PROG_EVENT, it can be interrogated as to
; which event activated the call:
;
;      ( ) Start of the part program —> $P_PROG_EVENT == 1
;      ( ) End of the part program   —> $P_PROG_EVENT == 2
;      ( ) Operator panel reset      —> $P_PROG_EVENT == 3
;      (x) Run-up                    —> $P_PROG_EVENT == 4
;

```



```

;----- Cycle definition -----
; Suppress single block, display
;-----

N100 PROC PROG_EVENT SBLOF DISPLOF

;
; NCK-SPL start
;-----

N200 IF ($P_PROG_EVENT == 4); Boot query
N300     CALL "/_N_CST_DIR/_N_SAFE_SPF"
N400 ENDIF
N500 ...
N600 ...
N700 M17 ; End of cycle

```

The part program SAFE.SPF is called if the system variable check \$P_PROG_EVENT indicated that the part program call PROG_EVENT.SPF was called when the control system booted.

Example for SAFE.SPF

A simple example for SAFE.SPF will now be shown that is started using PROG_EVENT when the system boots and includes steady-state synchronous actions.

```

; File: SAFE.SPF
=====

; Definitions
DEFINE STOP_A_DISABLE AS $A_OUTSI[1]
DEFINE STOP_C_DISABLE AS $A_OUTSI[2]
DEFINE STOP_D_DISABLE AS $A_OUTSI[3]
;
DEFINE STOP_A_EXT AS $A_INSE[6]
DEFINE STOP_C_EXT AS $A_INSE[7]
DEFINE STOP_D_EXT AS $A_INSE[8]

DEFINE STOP_A_XT AS $A_INSE[9]
;
; Program section
N10 IDS=01 DO STOP_A_DISABLE=STOP_A_EXT
N20 IDS=02 DO $A_OUTSE[1]=NOT $A_OUTSE[1]
N30 M17

```

7.3.6 Starting the NCK–SPL from the PLC user program

Program start

The NCK–SPL can also be started from the PLC user program. As soon as the NCK–SPL has been started, the crosswise data comparison is activated in the system program (NCK and PLC basic program).

The NCK–SPL program must be started as an ASUB. To do this, the interrupt number and channel must first be assigned via FB4 using the ASUB (asynchronous sub-routine) function via parameter PIService="PI.ASUB".

As soon as FB4 has been successfully run (output parameter "Done"=TRUE) the program is executed via FC9 "ASUB" [asynchronous sub-routine].

Starting the PLC–SPL

The PLC–SPL in conjunction with FB4/FC9 has started if the FC9 has signaled successful execution and has displayed that the end of SAFE.SPF has been reached. This is displayed using a signal in SAFE.SPF (e.g. \$A_PLCSIOUT variable, M function) or SPL status bit 13 (DB18.DBX137.5). Only then may the PLC–SPL be started to ensure that both SPLs run in synchronism and therefore the axial monitoring channels are synchronously supplied.

Parameterizing FB 4

FB4 may only be started in the cyclic mode (OB 1).

Table 7-5 Parameterizing FB 4

Signal	Type	Value range	Description
Reg			
PIService	ANY	PI.ASUP	Assign interrupt
Unit	INT	1 to 10 [1]	Channel
WVar1	INT	[1]	Interrupt number
WVar2	INT	[1]	Priority
WVar3	INT	0/1 [0]	LIFTFAST
WVar4	INT	0/1 [0]	BLSYNC
Addr1	STRING	'/_N_CST_DIR/'	NCK–SPL path name
Addr2	STRING	'/_N_SAFE_SPF'	NCK–SPL program name

[values in brackets are standard values required for the call]

Parameterizing FC 9

Table 7-6 Parameterizing FC9

Signal	Type	Type	Value range	Comment
Start	I	Bool		
ChanNo	I	Int	1 to 10 [1]	No. of the NC channel
IntNo	I	Int	1 – 8 [1]	Interrupt No.
Active	O	Bool		1 = Active
Done	O	Bool		1 = ASUB completed
Error	O	Bool		

[values in brackets are standard values required for the call]

7.3.7 Diagnostics/commissioning

The system variables \$A_INSIP(D), \$A_OUTSIP(D), \$A_INSEP(D) and \$A_OUTSEP(D), and \$A_MARKERSIP(D) are only used for diagnostics and commissioning the NCK–SPL. These system variables represent the input data for crosswise data comparison on the PLC side. They are updated every IPO cycle. They can also be used to access the crosswise data comparison on the PLC side from the NC. This helps when commissioning the SPL:

- Crosswise data comparison function can be temporarily bypassed
- NCK–SPL can be simulated to the process and to the NCK monitoring channel
To do this, the relevant PLC images are written to the variables \$A_OUTSED and \$A_OUTSID as long as there is no NCK–SPL. This means that the NCK–SPL can be commissioned step-by-step. This data may only be accessed during the commissioning phase.

In order to allow the SPL to be commissioned without the crosswise data comparison function constantly responding, the following "minimum NCK–SPL" can be installed in this phase:

```
; Simulate external SPL interface
IDS = 03 DO $A_OUTSED[1]      = $A_OUTSEPD[1]
IDS = 04 DO $A_OUTSED[2]      = $A_OUTSEPD[2]

; Simulate internal SPL interface
IDS = 07 DO $A_OUTSID[1]      = $A_OUTSIPD[1]
IDS = 08 DO $A_OUTSID[2]      = $A_OUTSIPD[2]

; Emulate PLC markers (for all markers used in the PLC)
IDS = 09 DO $A_MARKERSID[1]   = $A_MARKERSIPD[1]
IDS = 10 DO $A_MARKERSID[2]   = $A_MARKERSIPD[2]

; End of program
M17
```

7.3 Safe programmable logic (SPL)

These instructions simulate the output interfaces of the NCK–SPL and therefore "short-circuit" the crosswise data comparison.



Warning

The logic used in this phase has a single channel structure and is therefore not safe!

The described minimum NCK–SPL must be replaced by a full NCK–SPL without any access to \$A_INSIP(D), ..., \$A_MARKERSIP(D) when the PLC side is completed!

Additional diagnostic support:

- \$A_STATSID: A value not equal to 0 means that an error has occurred in the crosswise data comparison. The error numbers are selected in the same way as on the PLC side (see Chapter 7.3.11).
- \$A_CMDSI[n]: n=1: 10x change timer value for long forced checking procedure pulses and/or single-channel test stop logic.
- \$A_LEVELSID: Indicates how many signals have different signal levels on the NCK and PLC sides that can be presently detected.
- In addition, other NC variables or free R parameters can be written to monitor internal states of the SPL.

The following applies to all system variables of the NCK–SPL outputs:
They can be written from and read back to the SPL program.

7.3.8 Safe software relay

The standard SPL block "safety software relay" is designed to meet the requirements of an Emergency Stop function with safe programmable logic. However, it can also be used to implement other similar safety functions, e.g. to control a protective door.

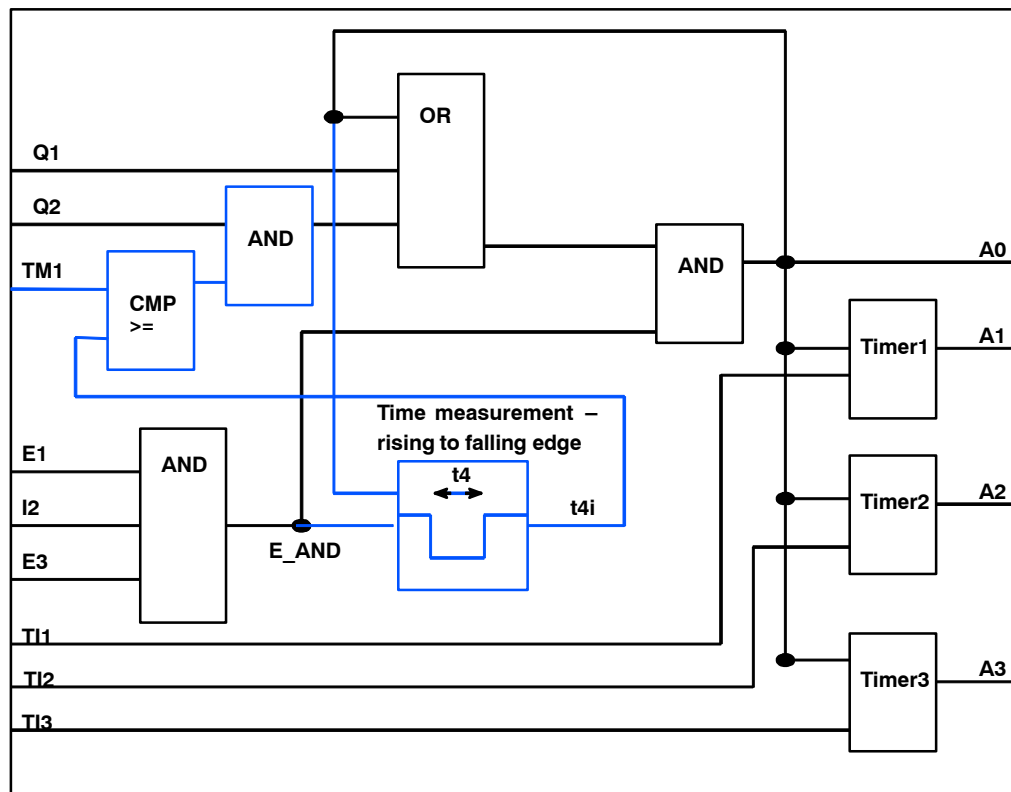


Fig. 7-23 Function diagram of the "safety relay"

The description is provided in the following:

Three shutdown inputs E1 to E3	<p>If one of these inputs is set to 0, direct output A0 is set to 0. Outputs A1 to A3 switch with the delay of timer 1–3. If one of these inputs is not used, then it is internally set to "1" as static signal.</p> <p>One of these inputs must also be used to initiate test operation of the safety relay (forced checking procedure).</p>
--------------------------------	---

7.3 Safe programmable logic (SPL)

Two acknowledge inputs Q1 and Q2	Q1 must be supplied with the signal from the real acknowledge button. Q2 is only used to automatically acknowledge the safety software relay as part of the forced checking procedure. The software relay itself does not have to be subject to a forced checking procedure. However, if the Emergency Stop function is executed and if external actuators have to be subject to a forced checking procedure, if the relay drops out during the Emergency Stop test, then it can be acknowledged using Q2 (in a defined time window, refer to TM1). This input must also be connected with a safety system variable (even if the signal is not used) – preferably with a \$A_MARKERSI – in order to detect that this acknowledge signal is available as steady-state signal in the crosswise data comparison with the PLC. The associated comparison data in the PLC must have a steady-state 0 signal level (error detection using different states of the particular SPL marker for the PLC and NCK).
Three timer initialization values TI1 to TI3	The times after which outputs A1 to A3 are switched to 0 at a negative edge in output signal A0 are defined here.
One timer limit value TM1	This limit value is used to define the maximum time that the shutdown inputs E1 to E3 (and their AND logic operation) may have been at a 0 signal level so that they can still be acknowledged using Q2. This therefore guarantees that Q2 can only be effective as automatic acknowledgment for the forced checking procedure within a defined time window after the relay has dropped out (after it has been de-energized). It is not permissible that Q2 is used to acknowledge a "real" shutdown.
Four output values A0 to A3	A0 supplies the result of ANDing E1 to E3 without any delay. Outputs A1 to A3 supply the same result for positive edges of A0; for negative edges, the results are delayed by the timer initialization TI1 to TI3. A0 to A3 do not produce a result after booting until an acknowledgment has been received via Q1.

Initialization in the part program

The connections for the function block are defined when initialized. The input and output quantities of the function block are assigned to the required system variables (\$A_MARKERSI, \$A_INSE, \$A_OUTSE,...). The following functions must be called:

SIRELIN: This language command assigns the input quantities Q1, Q2, E1, E2 and E3 to the safety relay x (x = 1..4). The return value contains the number of the first incorrect parameter; a value of 0 indicates that the parameter assignment is correct.

Syntax: SIRELIN(x,status,"Q1","Q2","E1","E2","E3")

The transfer parameters Q1 to E3 are strings and must therefore be entered in quotation marks (" "). The following system variables are permissible as input quantities:

\$A_MARKERSI[]

\$A_INSE[]

\$A_INSI[]

\$A_OUTSE[]

\$A_OUTSI[]

E2 and E3 are optional. If these parameters are not entered, the relevant inputs are set to "1" (static signal).

SIRELOUT: This language command assigns the output quantities A0, A1, A2 and A3 to safety relay x (x = 1..4). The return value contains the number of the first incorrect parameter; a value of 0 indicates that the parameter assignment is correct.

Syntax: SIRELOUT(x,status,"A0","A1","A2","A3")

The transfer parameters A0 to A3 are strings and must therefore be entered in quotation marks (" "). The following system variables are permissible as output quantities:

\$A_MARKERSI[]

\$A_OUTSE[]

\$A_OUTSI[]

\$A_PLCSIOUT[]

A1 to A3 are optional. If these parameters are not specified, then the corresponding outputs are not supplied. However, if A1 is specified, the initialization value for timer 1 (TI1) must also be parameterized via SIRELTIME. The same applies for A2 and timer 2 (TI2) and A3 and timer 3 (TI3).

SIRELTIME: This language command assigns the times – for the timers required – to safety relay x (x = 1..4). These include the timer limit value TM1 and the timer initialization values TI1, TI2 and TI3. The return value contains the number of the first incorrect parameter; a value of 0 indicates that the parameter assignment is correct.

Syntax: SIRELTIME(x,status,TM1,TI1,TI2,TI3)

Transfer parameters TM1 to TI3 are REAL numbers (timers in seconds). TI1 to TI3 are optional. If these parameters are not specified, the corresponding outputs A1 to A3 are not supplied. However, if TI1 is specified, output A1 must also be parameterized via SIRELOUT. The same applies for TI2 and A2 and TI3 and A3.

7.3 Safe programmable logic (SPL)

Note

- The initialization language commands must be directly included in the part program (e.g. SAFE.SPF); they may not be used in synchronized actions! If this condition is violated, Alarm 12571, "Channel 1 Block %2 %3 not permitted in motion synchronizing action" is triggered.
- As described above, there is an interdependency between the number of the optional parameters for the language commands SIRELTIME and SIRELTIME. This interdependency is checked in the language command that comes later in the part program sequence. If, for example, A2 is no longer parameterized in SIRELTIME, but TI2 is specified in SIRELTIME, then this parameter is identified as being incorrect!

Cyclic sequence

The correctly timed call in the SPL is made using the language command SIRELAY. A calling parameter is not required in the cyclic section except to select the desired relay x ($x = 1..4$). Initialization must be carried out beforehand. If this is not correctly done, then this is indicated in the return value of the language command SIRELAY. The cyclic section must be integrated in the synchronized actions of the SPL.

Syntax: status = SIRELAY(x)

The following values are possible for status:

Return value status	Description
1	The input quantity of the safety relay is either not parameterized or not correctly parameterized. Remedy: Call SIRELIN with the correct parameterization
2	The output quantities of the safety relay are either not parameterized or not correctly parameterized. Remedy: Call SIRELTIME with the correct parameterization
3	The input and output quantities of the safety relay are either not parameterized or not correctly parameterized. Remedy: Call SIRELIN and SIRELTIME with the correct parameterization
4	The timers of the safety relay are either not parameterized or not correctly parameterized. Remedy: Call SIRELTIME with the correct parameterization
5	The input quantities and timers of the safety relay are either not parameterized or not correctly parameterized. Remedy: Call SIRELIN and SIRELTIME with the correct parameterization

Return value status	Description
6	The output quantities of the safety relay are either not parameterized or not correctly parameterized. Remedy: Call SIRELOUT and SIRELTIME with the correct parameterization
7	The initialization of the safety relay was either not carried out or not correctly carried out. Remedy: Call SIRELIN, SIRELOUT and SIRELTIME with the correct parameterization

Note

1. The SIRELAY call must be made in the NCK–SPL (program SAFE.SPF), since the allocation of the output quantities corresponds to the write access operations to safety system variables. If the call comes from a different program, Alarm 17070 "Channel %1 Block %2 Data write-protected" is output.
2. The SIRELAY call must be included in a synchronized action. If this condition is not satisfied, Alarm 12080, "Channel %1 Block %2 Syntax error for text SIRELAY" is output.
3. If parameter x contains a value that lies outside the range 1 to 4, Alarm 20149 "Channel %1 Block %2 Motion synchronous action: Invalid index" is output.

Forced checking procedure

When the safety relay is tested, acknowledge input Q2 and one of the three disable inputs (E1, E2 or E3) must be used. Q2 must be connected to a safety marker (\$A_MARKERSI[]) and may only be briefly set (< 1s) to 1.

One of the three inputs E1 to E3 can be used (e.g. from the PLC) with a short falling edge to check that the safety relay has dropped out. The 0 signal level may not be present for longer than the time parameterized in TM1. The maximum value for TM1 is 1s, as otherwise the crosswise data comparison between NCK and PLC–SPL would detect an error.

Acknowledge input Q2 can only be used if the measured time t4 is shorter than TM1. This prevents a queued shutdown operation being acknowledged externally via the test acknowledge input. If A0 is 1 at the time of the falling edge of E_AND (= ANDing of E1, E2 and E3), time t4i (refer to Figure 7-23) is allocated the measured time t4. For additional measurements, while A0 remains at 0, t4i is only re-saved if the measured time t4 is greater than the old value of t4i.

7.3 Safe programmable logic (SPL)

Limitations

The language commands SIRELIN, SIRELOUT and SIRELTIME may not be used in synchronized actions.

The language command SIRELAY may only be used in synchronized actions of the SPL (SAFE.SPF). The connection must be specified beforehand using the language commands SIRELIN, SIRELOUT and SIRELTIME.

Example

Example of an Emergency Stop implemented using NCK-SPL in SAFE.SPF:

```

DEF          INT RESULT_IN, RESULT_OUT, RESULT_TIME

N10 DEFINE IE_NH_E          AS $A_INSE[1]
N20 DEFINE IE_NH_Q          AS $A_INSE[2]
N30 DEFINE MI_NH_Q          AS $A_MARKERSI[1]
N40 DEFINE MI_C_ABW         AS $A_MARKERSI[2]
N50 DEFINE MI_A_ABW_A       AS $A_MARKERSI[3]
N60 DEFINE MI_A_ABW_S       AS $A_MARKERSI[4]
N70 DEFINE M_STATUS_1       AS $AC_MARKER[1]

;-----
N200 SIRELIN(1,RESULT_IN,"IE_NH_Q","MI_NH_Q","IE_NH_E")
N210 SIRELOUT(1,RESULT_OUT,"MI_C_ABW",MI_A_ABW_A,"MI_A_ABW_S")
N220 SIRELTIME(1,RESULT_TIME,0.4, 2.2, 3.5)
;-----
N300 IDS=10 DO M_STATUS_1 = SIRELAY(1)
-----Error handling-----
N310 IDS=11 EVERY M_STATUS_1 < > DO . . . . .

```

FUNCTION_BLOCK FB 10

Declaration of the function

```

VAR_INPUT
    In1 : BOOL := True ;           // Input 1
    In2 : BOOL := True ;           // Input 2
    In3 : BOOL := True ;           // Input 3
    Ackn1 : BOOL ;                 // Ackn1 signal
    Ackn2 : BOOL ;                 // Ackn2 signal
    TimeValue1 : TIME := T#0ms ;   // TimeValue for Output 1
    TimeValue2 : TIME := T#0ms ;   // TimeValue for Output 2
    TimeValue3 : TIME := T#0ms ;   // TimeValue for Output 3
END_VAR

VAR_OUTPUT
    Out0 : BOOL ;                  // Output without Delay
    Out1 : BOOL ;                  // Delayed Output to False by Timer 1
    Out2 : BOOL ;                  // Delayed Output to False by Timer 2
    Out3 : BOOL ;                  // Delayed Output to False by Timer 3

```

END_VAR

VAR_INOUT

FirstRun: BOOL ; // True by User after 1st start of SPL

END_VAR

The following table shows all formal parameters of the SI relay function:

Signal	Type	Type	Comment
In1	I	BOOL	Input 1
In2	I	BOOL	Input 2
In3	I	BOOL	Input 3
Ackn1	I	BOOL	Acknowledge input 1
Ackn2	I	BOOL	Acknowledge input 2
TimeValue1	I	TIME	Value 1 for switch-off delay
TimeValue2	I	TIME	Value 2 for switch-off delay
TimeValue3	I	TIME	Value 3 for switch-off delay
Out0	O	BOOL	Output, instantaneous (no delay)
Out1	O	BOOL	Output, delayed by TimeValue1
Out2	O	BOOL	Output, delayed by TimeValue2
Out3	O	BOOL	Output, delayed by TimeValue3
FirstRun	I/O	BOOL	Activation of initial state

Parameter FirstRun must be switched to the value TRUE via a retentive data (memory bit, bit in the data block) at the first run-through after the control has booted. This data can be preset, e.g., in OB 100. The parameter is reset to FALSE when FB 10 is executed for the first time. Separate data must be used for parameter FirstRun for each call with separate instance.

Note

The block must be called cyclically by the user program beginning from when the PLC program is started. The user must provide an instance DB with any number for this purpose. The call is multi-instance-capable.

7.3 Safe programmable logic (SPL)

7.3.9 System variables for SINUMERIK 840D sl

The following system variables can only be used in combination with SINUMERIK Safety Integrated. They are used when programming the safe programmable logic (SPL).

Also see Chapter 8.4.2 "Description of the system variables" for a detailed description of the system variables.

Table 7-7 Overview of system variables

System variables	Description	Value range	Data type	Possible access for			
				Part program		Synchr. action	
				r	w	r	w
Actual position							
\$VA_IS[axis]	Safe actual position for Safety Integrated		DOUBLE	x		x	
\$AA_IM[axis]	Actual position of the closed-loop control		DOUBLE	x		x	
\$VA_IM[axis]	Encoder actual value in the machine coordinate system		DOUBLE	x		x	
Error status							
\$A_XFAULTSI	In the crosswise data comparison between NCK and drive of any axis, an actual-value error has been detected		INT	x		x	
\$VA_XFAULTSI [axis name]	The crosswise data comparison for this axis between NCK and drive has detected an actual value error		INT	x		x	
\$VA_STOPSI	Current Safety Integrated stop of the relevant axis		INT	x		x	
\$A_STOPESI	Current Safety Integrated STOP E for any axis		INT	x		x	
Internal SPL inputs/outputs							
\$A_INSI[n]	NCK input	n = 1, 2, ... 64 stand for the No. of the input	BOOL	x		x	
\$A_INSID[n]	NCK inputs	n = 1, 2	INT	x		x	
\$A_INSHIP[n]	Image, PLC input	n = 1, 2, ... 64	BOOL	x		x	
\$A_INSHIPD[n]	Image of the PLC inputs	n = 1, 2	INT	x		x	

7.3 Safe programmable logic (SPL)

Table 7-7 Overview of system variables

				r	w	r	w
\$A_OUTSI[n]	NCK output	n = 1, 2, ... 64 stand for the No. of the out- put	BOOL	x	x	x	x
\$A_OUTSID[n]	NCK outputs	n = 1, 2	INT	x	x	x	x
\$A_OUTSIP[n]	Image, PLC output	n = 1, 2, ... 64	BOOL	x		x	
\$A_OUTSIPD[n]	Image of the PLC out- puts	n = 1, 2	INT	x		x	
External SPL inputs/outputs							
\$A_INSE[n]	NCK input	n = 1, 2, ... 64 stand for the No. of the input	BOOL	x		x	
\$A_INSED[n]	NCK inputs	n = 1, 2	INT	x		x	
\$A_INSEP[n]	Image of PLC input	n = 1, 2, ... 64 stand for the No. of the input	BOOL	x		x	
\$A_INSEPD[n]	Image of the PLC inputs	n = 1, 2	INT	x		x	
\$A_OUTSE[n]	NCK output	n = 1, 2, ... 64 stand for the No. of the out- put	BOOL	x	x	x	x
\$A_OUTSED[n]	NCK outputs	n = 1, 2	INT	x	x	x	x
\$A_OUTSEP[n]	Image of a PLC output	n = 1, 2, ... 64 stand for the No. of the out- put	BOOL	x		x	
\$A_OUT- SEPD[n]	Image of the PLC out- puts	n = 1, 2	INT	x		x	
SPL markers and timers							
\$A_MAR- KERSI[n]	Markers	n = 1, 2, ... 64 stands for the No. of the marker	BOOL	x	x	x	x
\$A_MARKER- SID[n]	Markers	n = 1, 2	INT	x	x	x	x
\$A_MARKER- SIP[n]	Image of the PLC markers	n = 1,2, ...64	BOOL	x		x	
\$A_MARKER- SIPD[n]	Image of the PLC markers	n = 1, 2	INT	x		x	
\$A_TIMERSI[n]	Timer	n = 1, 2...16 stand for the No. of the timer	REAL	x	x	x	x

7.3 Safe programmable logic (SPL)

Table 7-7 Overview of system variables

				r	w	r	w
Miscellaneous							
\$A_STATSID	Crosswise data comparison error triggered if the value is not equal to 0	Bits 0...27 crosswise data comparison error in the I/O signals or flag bits Bit 28 crosswise data comparison error "SPL protection status" Bit 29 timeout in the communications between NCK and SPL Bit 30 PLC signals a stop to the NCK	INT	x		x	
\$A_CMDSI	10x change timer value for long forced checking procedure pulses and/or single-channel test stop logic	Bit 0 = 1 10x time active	BOOL	x	x	x	x
COMM_TO	0 → 1 communications timeout detected, PLC will go to STOP in 5 s	Bit5 of the 5 s timer was started	BOOL	x		x	
\$A_LEVELSID	Crosswise data comparison stack level display: Number of signals for which NCK and PLC detect different signal levels	0...320	INT	x		x	
\$A_PLCSIIN	Single-channel communication between NCK and PLC SPL		BOOL	x		x	
\$A_PLCSIOU	Single-channel communication between NCK and PLC SPL		BOOL	x	x	x	x
\$AC_SAFE_SYNA_MEM	Free safety synchronizing elements	[0,MAX_INT]		x		x	
Note: r → read, w → write							

7.3.10 Behavior after power on/mode change/reset

1. After the system has booted, the following Safety Integrated system variables are assigned the value zero:

\$A_INSE(D),
\$A_OUTSE(D),

```

$A_OUTSI(D),
$A_MARKERSI(D),
$A_INSEP(D),
$A_OUTSEP(D),
$A_OUTSIP(D),
$A_MARKERSIP(D)
$A_INSI(D).

```

2. Pre-assignment of other variables before cyclic processing of the NCK-SPL starts can be programmed in the same part program as the NCK-SPL itself. To ensure that the pre-assignment instructions are only performed once, they must use the following syntax:

```
IDS=<No.>    WHEN TRUE DO<Boot instructions>
```

As a result of the identifier IDS, the events "operating mode change" and "reset" have no effect on the processing of the NCK-SPL.

3. Several boot instructions can be programmed in one block.

7.3.11 SPL data on the PLC side

The safe programmable logic of the PLC (PLC-SPL) is a sub-function of the safety functions integrated in the SINUMERIK.

Signals

The PLC-SPL signals are in DB18 and are sub-divided into

1. Parameterization part, and
2. Data area/status.

Parameterization part

SPL_READY:

The SPL_READY = TRUE signal indicates that the commissioning phase has been completed, i.e. if a crosswise data comparison error has occurred, the basic program sends a "STOP D/E" to all the axes.

STOP_MODE:

For crosswise comparison error:

0 = external STOP D

1 = external STOP E

to the drive

7.3 Safe programmable logic (SPL)

Data area/status

SPL_DATA

The useful (net) data for the PLC–SPL is contained in the SPL_DATA structure. The useful data area is sub-divided into internal inputs/outputs and marker areas and external inputs/outputs that correspond to the hardware I/Os.

With the appropriate parameterization for external inputs/outputs, the basic program transfers the input image of the I/Os to the external inputs in DB 18 and from the external outputs in DB 18 to the output.

SPL_DELTA

The SPL_DELTA area is used for diagnostics. A signal with the status TRUE in this area means that the signal is different in the NCK and PLC at this bit position.

CMDSI

Signal CMDSI can be used to extend the timeout value in the crosswise SPL data comparison by a factor of 10. This extension is used for long forced checking procedure pulses or single-channel test stop logic functions.

STATSI

A crosswise data comparison error is indicated in STATSI. STATSI contains the number of the signal whose signal difference caused this error. The error number (1–320) refers to SPL_DATA as an array with $5 \times 64 = 320$ signals.

LEVELSI

The signal LEVELSI is used for diagnostics and indicates how many signals with different signal levels are present.

COMM_TO

If communications between the NCK and PLC are interrupted regarding SPL crosswise data comparison, then after a delay of 5 s the PLC is switched into the STOP state. Status signal DB18.DBB119, bit 5 is used to inform the SPL programmer that the 5 s timer was started. This means that it is possible to initiate system-specific actions before the PLC goes into the stop condition.

SPL status signals for SPL_STATUS (DB18.DBB136)

For a detailed description, see Chapter 8.3.3 "PLC data block (DB 18)".

INSEP_PROFISAFE (DB18.DBB138)

Bit array INSEP_PROFISAFE[1...8] is used to indicate which INSEP bytes are only assigned to F modules.

0 = no PROFIsafe F modules are assigned to INSEP[1...8]

1 = PROFIsafe F module is transferred to INSEP[1...8] by the basic program

OUTSEP_PROFISAFE (DB18.DBB140)

Bit array OUTSEP_PROFISAFE[1...8] is used to display which OUTSEP bytes are only assigned F modules.

0 = PROFIsafe F modules not assigned to OUTSEP[1...8]

1 = OUTSEP[1...8] transferred to PROFIsafe F module using the basic program

7.3.12 Direct communications between NCK and PLC–SPL

In SPL applications, a certain degree of single-channel communications between the two SPLs (NCK and PLC) is always required in addition to safety-related switching elements being connected through two channels. Testing external stops and the Emergency Stop acknowledgment are typical applications.

In order to be able to exchange single-channel SI-specific signals between the NCK and PLC in a dedicated data area, a corresponding communication interface exists between these components. The meaning of the individual bits in this interface are defined by the user.

NCK	PLC	
\$A_PLCSIOUT[1...32]	DB18.DBD128	32 bits from the NCK to PLC
\$A_PLCSIIN[1...32]	DB18.DBD132	32 bits from the PLC to NCK

Limitations

System variables \$A_PLCSIOUT[1...32] and \$A_PLCSIIN[1...32] are protected so that they cannot be accessed from other programs, except the NCK–SPL program (SAFE.SPF). A corresponding programming command is rejected with the alarm 17070 "Channel %1 block %2 Data write-protected".

7.4 Safe brake test (SBT)

7.4.1 Field of application

When the drives are powered-down axes and mechanical systems can drop as a result of gravity. The mechanical braking system test should be used for all axes which must be prevented from moving in an uncontrolled manner by a holding brake. This test function is primarily intended for so-called "vertical axes".

The functionality is based on "travel to fixed stop". The travel to fixed stop can be individually parameterized to test the function of the mechanical braking system. It is activated and deselected from the PLC. For further details on travel to fixed stop, see /FB1/, F1.

The machine manufacturer can use his PLC user program to close the brake at a suitable instant in time (nominal value, every 8h similar to the SI test stop) and initiates the drive to produce an additional force in addition to the weight of the axis. In a fault-free state, the brake can apply the necessary force, i.e. the axis will hardly move.

When an error occurs, the actual position value exits the parameterizable monitoring window. In this case, travel to fixed stop is terminated so that the position controller can prevent the axis falling. The brake test is then negatively acknowledged.

The brake test must always be started when the axis is at a standstill (also see Chapter 7.4.5 "Activation"). The direction in which the drive produces its force is specified by the PLC using a "traversing motion" via FC 18. The target of this traversing motion must be able to be reached without incurring any potential hazard for the case that the brake cannot provide the necessary force.

7.4.2 Parameter assignment

The user can use the following axial NCK machine data to parameterize the function test of the mechanical braking system:

for 840D sl

MD 37000: \$MA_FIXED_STOP_MODE

MD 37030: \$MA_FIXED_STOP_THRESHOLD

MD 36966 \$MA_SAFE_BRAKETEST_TORQUE

MD 36967: \$MA_SAFE_BRAKETEST_POS_TOL

MD 36968: \$MA_SAFE_BRAKETEST_CONTROL

\$MA_FIXED_STOP_MODE

The function test of the mechanical braking system is enabled by setting bit 1 in \$MA_FIXED_STOP_MODE. If the user needs to travel to a fixed stop with this axis from the part program, bit 0 can also be set. It is internally monitored to check that only one type of travel to fixed stop is active at a time. In the case of an error, Alarm 20092, "Axis % Travel to fixed stop still active" is issued.

\$MA_SAFE_BRAKETEST_TORQUE

The machine manufacturer must parameterize the total required brake holding torque in the axial MD \$MA_SAFE_BRAKETEST_TORQUE. Internally, this is used to calculate the drive torque that is required in addition to the weight of the axis to load the brake.

For SINAMICS S120 the drive torque is determined when the function test is selected. It is thus possible to take into account any deviation from the torque due to weight parameterized in drive parameter p1532 (or force due to weight). This ensures that the brake test can also be carried out with varying machine loads (e.g. different workpieces or tools). The drive torque to load the holding brake is limited to the maximum motor torque if the desired braking torque would require a higher drive torque.

If the load torque at an axis changes so significantly that a sensible value cannot be parameterized in drive parameter p1532, then the automatic determination of the load torque available must be activated using \$MA_SAFE_BRAKETEST_CONTROL.

Value for MD36966 = (test torque of brake / p2003) * 100

The value from \$MA_SAFE_BRAKETEST_TORQUE refers to the reference torque or the reference force from drive parameter p2003, whose image is saved in \$MA_SAFE_BRAKETEST_TORQUE_NORM.

7.4 Safe brake test (SBT)

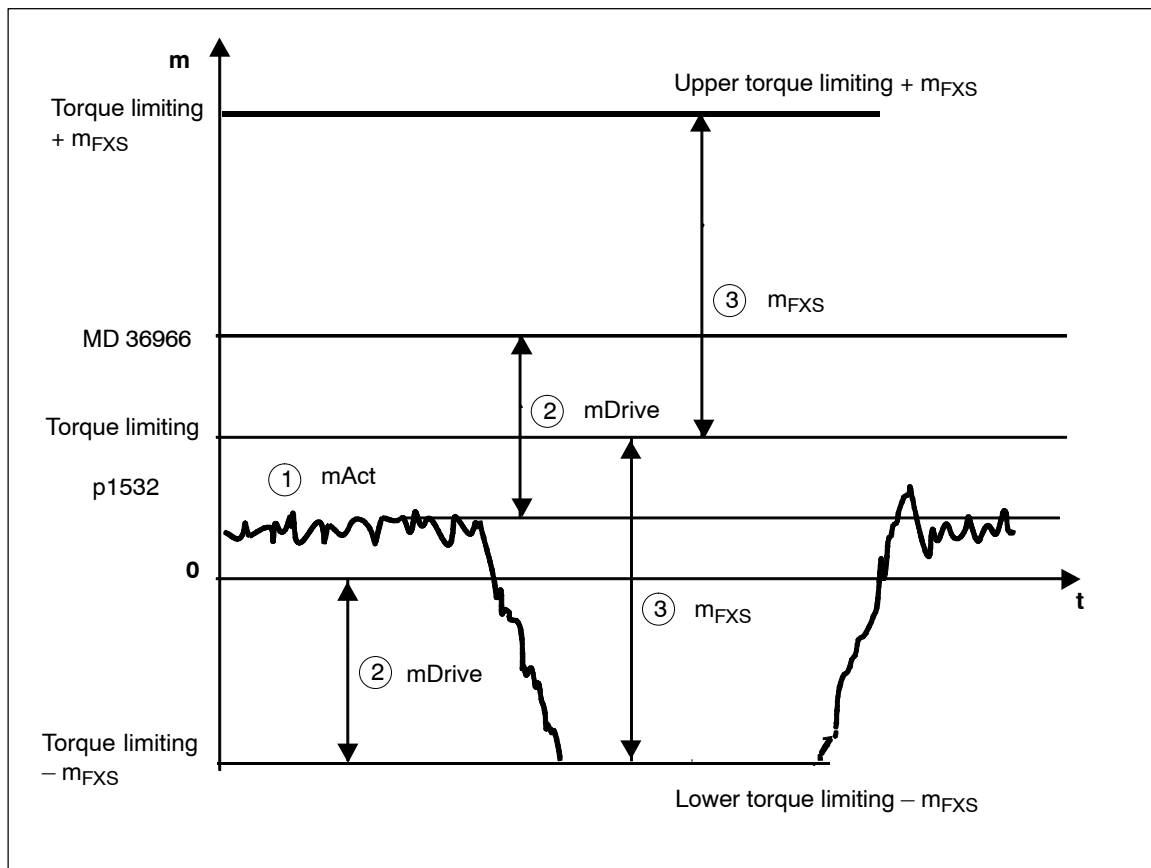


Fig. 7-24 Torque limiting for SINAMICS S120

①

When selecting the brake test, the holding torque required for the force due to the weight of the axis is internally measured (m_{Act}).

②

The drive must only additionally provide the difference between this torque and the braking torque from MD 36966 $\$MA_SAFE_BRAKETEST_TORQUE$. In the diagram 7-24, this torque is designated with m_{Drive} .

③

The torque limiting of SINAMICS is symmetrical around the torque from drive parameter p1532. In the diagram 7-24 the measured torque m_{Act} is however less than p1532.

This is the reason that m_{FXS} from Fig. 7-24 is entered as torque limiting.

m_{FXS} is the sum from m_{drive} and the drive parameter p1532. If the measured torque m_{act} matches that parameterized in drive parameter p1532, m_{FXS} becomes the value from the MD $\$MA_SAFE_BRAKETEST_TORQUE$.

Incorrect parameterization in MD $\$MA_SAFE_BRAKETEST_TORQUE$ or drive parameter p1532 could mean that the drive with reduced torque cannot even apply

the required holding torque. This parameterization is detected when the brake test is selected and results in Alarm 20095 (see Chapter 10.2). The fact that the actual torque/force setpoint is displayed in parameter r1509 makes it easier to correctly parameterize drive parameter p1532. If only the force due to the weight is effective, then this value can be directly transferred into the drive parameter. This value must be entered – with an additional safety margin – into MD \$MA_SAFE_BRAKE-TEST_TORQUE. The magnitude of the safety margin is orientated to the maximum holding force of the brake to be tested.

\$MA_SAFE_BRAKETEST_CONTROL

Some machines have braked axes whose load torque can vary significantly over the complete traversing range or depending on the workpiece or tool being used. If drive parameter p1532 cannot be generally parameterized for all of the situations, an automatic determination of the load torque present at the start of the braking test can be activated using MD 36968 \$MA_SAFE_BRAKETEST_CONTROL. If bit 0 of \$MA_SAFE_BRAKETEST_CONTROL is set to 1, then the torque, determined at the start of the brake test (mAct from Fig. 7-24 or Fig. 7-25) is temporarily used as average value for the torque limiting in the drive.

The user must carefully ensure that the brake is not previously closed thus preventing an incorrect load torque being determined. This would then mean that the brake test would be carried out with an incorrect torque. The plausibility of the load torque is then no longer checked.

This is the reason that this should only be activated if it is not possible to sensibly parameterize parameter 1532.

\$MA_SAFE_BRAKETEST_POS_TOL

The monitoring window for the maximum permissible movement during the brake test is defined in the axial MD \$MA_SAFE_BRAKETEST_POS_TOL. The PLC actively monitors this position window – from the start of the brake test and not only when it has been detected that the fixed stop has been reached. This is a difference when compared to activating the traversing to the fixed stop function from the part program.

\$MA_FIXED_STOP_THRESHOLD

The contour deviation that is determined is always used in the brake test to detect that the fixed stop has been reached. The parameterization in \$MA_FIXED_STOP_BY_SENSOR is therefore irrelevant. The required threshold value must be set in MD **\$MA_FIXED_STOP_THRESHOLD**. This means that the traversing distance from the PLC via FC 18 must be greater than this threshold value. Furthermore, the drive must have reached its torque limit parameterized using \$MA_SAFE_BRAKETEST_TORQUE.

7.4 Safe brake test (SBT)

Torque limits

The torque limits p1520[0] and p1521[0] and the reference torque p2003 are pre-assigned when commissioning the motor. The torque limits and the reference torque are pre-assigned differently depending on the technological application p0500 and dependent on the hardware components being used.

Further, the torque limits p1522[0] and p1523[0] are pre-assigned as follows:
p1522[0] 63:2902:5 reference to +100% referred to p2003 in the same Motor Module

p1523[0] 63:2902:12 reference to –100% referred to p2003 in the same Motor Module

When using the safe brake test, these pre-assignments for p1522[0]/p1523[0] may not be changed.

However, when upgrading the software, the following setting, which is also permissible, can be present:

p1522[0] 0:1.0 100% of p2003

p1523[0] 63:2900.0 reference to p2900 in the same Motor Module

p2900[0] –100% –100% from p2003

To ensure that the brake test functions without any errors, it should be checked as to whether the required test torque in MD 36966 \$MA_SAFE_BRAKETEST_TORQUE is not prevented from being generated due to the fact that torque limits are effective in the drive. For details on this, please see SINAMICS List Manual, e.g. function charts 5610 and 5620. For instance, the selectable torque limits from p1520/p1521 and p1522/p1523 may not be set so low that the required torque cannot be established for the brake test. When required, p1520/p1521 or p2003 should be adapted. When making a change to p2003, machine data 36966 should be re-determined.

Further, e.g. the following parameters can also have a limiting effect:

p1530/p1531 (power limit, motoring/regenerating)

p0640 (current limit)

p0326 (stall torque correction factor)

7.4.3 Procedure

The brake test in the PLC is carried out by calling function block FB11 (from the basic program) from the user program. The brake test comprises the following steps:

Step	Expected feedback	Monitoring time value
Start brake test	DBX 71.0 = 1	TV_BTactiv
Close Brake	Bclosed = 1	TV_Bclose
Output traversing command	DBX 64.6 Or DBX 64.7	TV_FeedCommand
Check, output traversing command	DBX62.5 = 1	TV_FXSreached
Wait for the holding time	DBX62.5 = 1	TV_FXShold
De-select brake test/open brake	DBX71.0 = 0	TV_BTactiv
Output test ok		

Function_Block FB 11

Declaration of the function:

```

VAR_INPUT
    Start : BOOL ;           //Start of the brake test
    Quit : BOOL ;            //Acknowledge fault
    Bclosed : BOOL ;         //Brake closed input (single channel – PLC)
    Axis : INT ;             //Testing axis No.
    TimerNo : TIMER ;        //Timer from user
    TV_BTactiv : S5TIME ;     //TimeValue → brake test active
    TV_Bclose : S5TIME ;      //TimeValue → close brake
    TV_FeedCommand : S5TIME ; //TimeValue → force FeedCommand
    TV_FXSreached : S5TIME ;  //TimeValue → Fixed stop reached
    TV_FXShold : S5TIME ;     //TimeValue → test brake
END_VAR

VAR_OUTPUT
    CloseBrake : BOOL ;      //Signal close brake
    MoveAxis : BOOL ;         //do move axis
    Done : BOOL ;
    Error : BOOL ;
    State : BYTE ;           //Error byte
END_VAR

```

The following table lists all of the formal parameters of the brake test function:

Signal	Type	Type	Comment
Start	I	BOOL	Starts the brake test
Ackn	I	BOOL	Acknowledge fault

7.4 Safe brake test (SBT)

Signal	Type	Type	Comment
Bclosed	I	BOOL	Feedback input whether a control signal has been issued to close the brake (single-channel PLC)
Axis	I	INT	Axis number of axis to be tested
TimerNo	I	TIMER	Timer from user program
TV_Btactiv	I	S5TIME	Monitoring time value → brake test active. Check the axis signal DBX71.0
TV_Bclose	I	S5TIME	Monitoring time value → close brake. Check the input signal Bclosed after the CloseBrake output was set.
TV_FeedCommand	I	S5TIME	Monitoring time value → output traversing command. Check traversing commands after MoveAxis has been set.
TV_FXSreached	I	S5TIME	Monitoring time value → fixed stop reached
TV_FXShold	I	S5TIME	Monitoring time value → test brake
CloseBrake	O	BOOL	Request, close brake
MoveAxis	O	BOOL	Request, initiate traversing motion
Done	O	BOOL	Test successfully completed
Error	O	BOOL	Error has occurred
State	O	BYTE	ErrorStatus

Fault IDs

State	Description
0	No error
1	Start conditions not fulfilled, e.g., the axis is not in closed-loop control/brake closed/axis inhibited
2	No NC checkback in "Brake test active" signal on selection of brake test
3	No "Brake applied" checkback by input signal Bclosed
4	No traversing command output (e.g. axis motion has not been started)
5	Fixed stop is not reached → axis RESET was initiated
6	Traversing inhibit/approach too slow → fixed stop cannot be reached. Monitoring time TV_FXSreached has expired.
7	Brake is not holding at all (the end position is reached)/approach speed is too high
8	Brake opens during the holding time
9	Error when deselecting the brake test
10	Internal error
11	"PLC-controlled axis" signal not enabled in the user program

Note

The block must be called by the user program. The user must provide an instance DB with any number for this purpose. The call is multi-instance-capable.

Example of calling FB11

```

UN  M 111.1           //Request close Z axis brake from FB
=   DB33.DBX23.5;     //Control Z axis brake
UN  DB33.DBX92.5 = M111.5 //Z axis brake is closed

AUF "Axis3";         //Brake test, Z axis

O   E 73.0;          //Initiates the brake test, Z axis
O   M 110.7;         //Brake test running
FP  M 110.0;
UN  M 111.4;         //Fault has occurred
S   M 110.7;         //Brake test running
S   M 110.6;         //Next step
SPBN m001;
L   DBB 68;
UW  W#16#F;
T   MB 115;         //Note channel status
L   B#16#10;
T   DBB 8;          //Request neutral axis

m001: U DBX 68.6;    //Feedback signal, axis is neutral
      U  M 110.6;
      FP M 110.1;
      R  M 110.6;
      S  M 110.5;    //Next step
      S  DBX 28.7;   //Request PLC-monitored axis

      U DBX 63.1;    //Feedback signal, the PLC is monitoring the axis
      U  M 110.5;
      FP M 110.2;
      R  M 110.5;
      S  M 111.0;    //Start the brake test for FB

CALL FB 11 , DB211 //Brake test module
Start   := M111.0, //Start brake test
Quit    := E3.7,   //Acknowledge error with Reset key
Bclosed :=M111.5,  //Feedback signal close brake initiated
Axis    :=3 //Axis number of axis to be tested, Z axis
TimerNo :=T 110    //Timer number
TV_BTactiv :=S5T#200MS, //Monitoring time value: Brake test active
                                   DBX71.0
TV_Bclosed :=S5T#1S,   //Monitoring time value: Brake closed

```

7.4 Safe brake test (SBT)

```

TV_FeedCommand := S5T#1S, //Monitoring time value: Travel command
are output
TV_FXSreached := S5T#1S, //Monitoring time value: Fixed stop reached
TV_FXShold := S5T#2S, //Monitoring time value: Brake test time
CloseBrake := M111.1, //Request, close brake
MoveAxis := M111.2, //Request, initiate traversing motion
Done := M111.3, //Test successfully completed
Error := M111.4, //Error occurred
State := MB112); //Error status

AUF "Axis3"; //Brake test, Z axis

U M 111.2; //Move axis
FP M 111.5; //FC18 start
S M 111.7; //Start FC18
O M 111.3; //Test successfully completed
O M 111.4; //Fault has occurred
FP M 110.3;
R DBX 28.7; //Request, PLC monitored axis

UN DBX 63.1; //Feedback signal, the PLC is monitoring the axis
U M 111.0; //Start the brake test for FB
U M 110.7; //Brake test running
FP M 110.4;
R M 111.0 //Start the brake test for FB
R M 110.7; //Brake test running
SPBN m002;
L MB 115; //Load noted channel state
OW W#16#10;
T DBB 8; //Request channel axis
m002: NOP 0;

CALL "SpinCtrl" //Traverse Z axis
Start := M 111.7, //Start of traversing motion
Stop := FALSE
Funct := B#16#5, //Mode: Axis mode
Mode := B#16#1, //Traverse: Incremental
AxisNo := 3, //Axis number of the axis to be traversed, Z-axis
Pos := -5.000000e+000, // Distance travelled: Minus 5 mm
FRate := 1.000000e+003, //Feed rate: 1000 mm/min
InPos := M 113.0, //Position reached
Error := M 113.1, //Fault has occurred
State := MB 114); //Error status

AUF "Axis3"; Brake text, Z axis
U M 113.0; //Position reached
O M 113.1; //Fault has occurred
FP M 113.2;
R M 111.7 //Start FC18

```

7.4.4 Limitations

During the brake test, traversing to fixed stop and/or traverse with limited torque FOC may not be active at the same time. In this case, Alarm 20092, "Axis %1 travel to fixed stop still active" is triggered.

The axis should be transferred back from the PLC after the brake test has been completed.

During the brake test, contour monitoring is not active. After the PLC has started traversing motion then there is also no standstill monitoring.

The function test/check of the brake mechanical system cannot be used for gantry axes.

If the parameterization of parameter p1532 (> 5%) deviates from the measured torque at the start of the brake test – then the brake test must be carried out in the same direction in which the load torque is effective. In the case of an error – Alarm 20097 "Axis %1 incorrect brake test direction" is output.

7.4.5 Activating

The brake test must always be started when the axis is at a standstill. For the entire duration of the brake test, the enable signals of the parameterized axis must be set to enable (e.g. the controller inhibit, feed enable signals). The signal "PLC-controlled axis" (DB "Axis".DBX28.7) must still be set to 1 by the user program for the entire duration of the test. Prior to activating the signal "PLC controlled axis", the axis must be set as "neutral axis", e.g. set byte 8 in the axis DB to channel 0. Set the activating signal in the same byte. The block may not be started until the NC feedback signal has been received via the appropriate bit (DB "Axis".DBX63.1). For a PLC-monitored axis, also see:

References: /FB2/ P2 "Autonomous single-axis processes"



Warning

The brake test must be carried out before carrying out the test stop. If the brake test was not successful (i.e. the brake cannot hold the axis), then it is not permissible that the test stop is carried out. Users must carefully take this into consideration when configuring the brake test and test stop. The brake may only be tested when the axis is in an absolutely safe position.

7.4 Safe brake test (SBT)

7.4.6 Example

An example of incorrect parameterization that results in Alarm 20095, "Axis %1 impermissible holding torque, measured torque %2" is shown in the following diagram: The torque due to weight in drive parameter p1532 has been parameterized considerably lower than the measured torque m_{Act} . The calculated torque limit m_{FXS} , positioned symmetrically around this MD, would mean that the drive would not be able to produce the required holding torque for this axis ($p1532 + m_{FXS}$ is lower than m_{Act}).

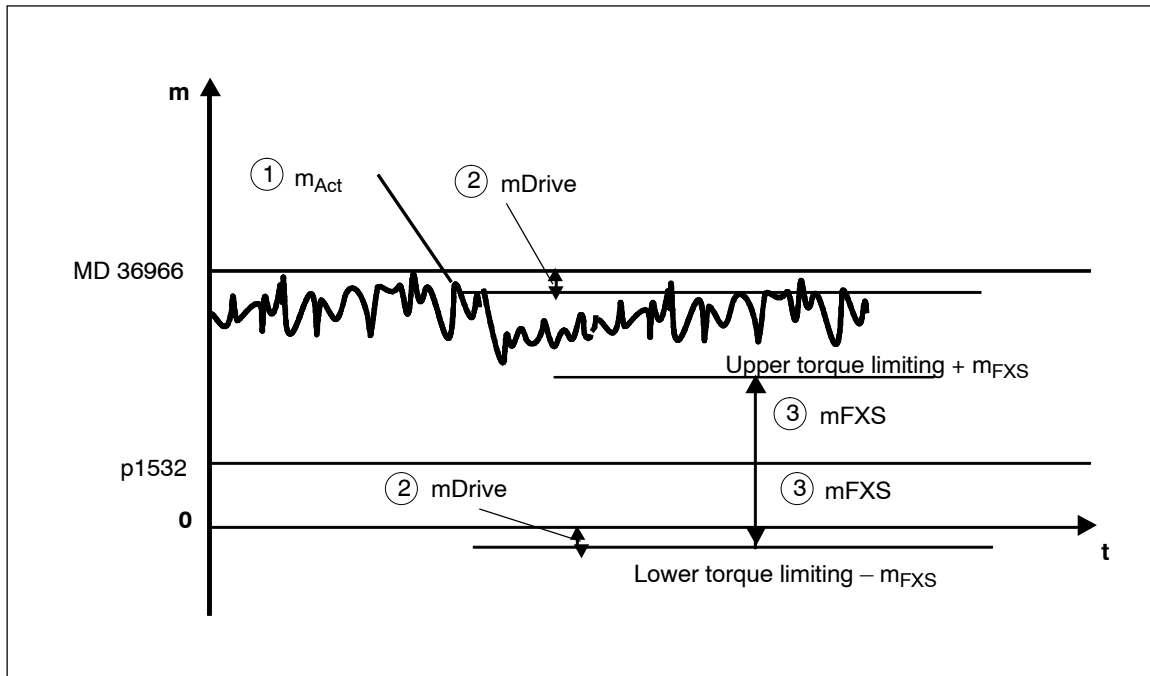


Fig. 7-25 Example of incorrect parameterization

If parameter p1532 cannot be sensibly parameterized for all situations where the brake test is to be carried out, then the automatic determination of the load torque must be activated using MA_SAFE_BRAKETEST_CONTROL.

Commissioning

To support the commissioning of the brake test Alarm 20096, "Axis %1 brake test aborted, additional info %2" can be enabled using bit 5 in machine data \$MN_ENABLE_ALARM_MASK. This alarm supplies detailed information if the brake test is interrupted.

Data Description

8.1 Machine data for SINUMERIK 840D sl

8.1.1 Overview of the machine data

Note

The meaning of the symbols used in the table is as follows:

- This data is calculated into SAFE_ACT_CHECKSUM[0].
- This data is calculated into SAFE_ACT_CHECKSUM[1].
- This data is not calculated into any checksum.

Table 8-1 Overview of machine data for SINUMERIK 840D sl

Number	Name	Name	Checksums MD
General (\$MN_ ...)			
10050	SYSCLOCK_CYCLE_TIME	Basic system clock cycle, see /FB1/, G2	●
10060	POSCTRL_SYSCLOCK_TIME_RATIO	Factor, position controller clock cycle, see /FB1/, G2	—
10070	IPO_SYSCLOCK_CYCLE_TIME_RATIO	Factor, interpolator clock cycle	●
10090	SAFETY_SYSCLOCK_TIME_RATIO	Factor for the monitoring clock cycle	—
10091	INFO_SAFETY_CYCLE_TIME	Display, monitoring clock cycle time	—
10092	INFO_CROSSCHECK_CYCLE_TIME	Displays the clock cycle time for a cross-wise data comparison	—
10093	INFO_NUM_SAFE_FILE_ACCESS	Number of SPL file access operations	—
10094	SAFE_ALARM_SUPPRESS_LEVEL	Alarm suppression level	—
10096	SAFE_DIAGNOSIS_MASK	Safety Integrated diagnostic functions	—
10097	SAFE_SPL_STOP_MODE	Stop response for SPL errors	●
10098	PROFISAFE_IPO_TIME_RATIO	Factor PROFIsafe communications clock cycle time	●
10099	INFO_PROFISAFE_CYCLE_TIME	PROFIsafe communications clock cycle time	—
10200	INT_INCR_PER_MM	Computational resolution for linear positions see /FB1/, G2	—

8.1 Machine data for SINUMERIK 840D sl

Table 8-1 Overview of machine data for SINUMERIK 840D sl

Number	Name	Name	Checksums MD
10210	INT_INCR_PER_DEG	Computational resolution for angular positions see /FB1/, G2	—
10385	PROFISAFE_MASTER_ADRESS	PROFIsafe address of the PROFIsafe master module	●
10386	PROFISAFE_IN_ADRESS	PROFIsafe address of an input module	●
10387	PROFISAFE_OUT_ADRESS	PROFIsafe address of a PROFIsafe output module	●
10388	PROFISAFE_IN_ASSIGN	Input assignment, \$A_INSE to PROFIsafe input module	●
10389	PROFISAFE_OUT_ASSIGN	Output assignment, \$A_OUTSE to PROFIsafe module	●
10393	SAFE_DRIVE_LOGIC_ADDRESS	Logical drive addresses, SI	●
13300	PROFISAFE_IN_FILTER	F useful (net) data filter IN	●
13301	PROFISAFE_OUT_FILTER	F net (useful) data filter OUT	●
13310	SAFE_SPL_START_TIMEOUT	Delay, display Alarm 27097	—
Channel-specific (\$MC_ ...)			
20108	PROG_EVENT_MASK	Event-controlled program call	—
28251	MM_NUM_SAFE_SYNC_ELEMENTS	Number of elements for expressions in safety synchronized actions	—
Axis/spindle-specific (\$MA_ ...)			
30240	ENC_TYPE	Encoder type of the actual value sensing (position actual value) see /FB1/, G2	—
30300	IS_ROT_AX	Rotary axis/spindle see /FB1/, R2	—
30320	DISPLAY_IS_MODULO	Modulo 360 degrees display for rotary axis or spindle see /FB1/, R2	—
30330	MODULO_RANGE	Size of the modulo range see /FB1/, R2	—
32300	MA_AX_ACCEL	Axis acceleration see /FB1/, B2	—
35200	GEAR_STEP_SPEEDCTRL_ACCEL	Acceleration in the open-loop speed controlled mode see /FB1/, S1	—
35210	GEAR_STEP_POSCTRL_ACCEL	Acceleration in the closed-loop position controlled mode see /FB1/, S1	—
35410	SPIND_OSCILL_ACCEL	Acceleration when oscillating see /FB1/, S1	—
36060	STANDSTILL_VELO_TOL	Threshold velocity/speed "axis/spindle stationary" see /FB1/, A2	—
36620	SERVO_DISABLE_DELAY_TIME	Shutdown delay controller enable see /FB1/, A2	—
36901	SAFE_FUNCTION_ENABLE	Enable safety-related functions	●
36902	SAFE_IS_ROT_AX	Rotary axis	●
36903	SAFE_CAM_ENABLE	Enable safe cam track	●
36905	SAFE_MODULO_RANGE	Modulo value, safe cams	●
36906	SAFE_CTRLOUT_MODULE_NR	SI drive assignment	●

8.1 Machine data for SINUMERIK 840D sl

Table 8-1 Overview of machine data for SINUMERIK 840D sl

Number	Name	Name	Checksums MD
36907	SAFE_DRIVE_PS_ADDRESS	PROFIsafe address of the drive	■
36912	SAFE_ENC_INPUT_NR	Actual value assignment: Drive encoder number	●
36914	SAFE_SINGLE_ENC	SI single-encoder system	●
36916	SAFE_ENC_IS_LINEAR	Linear scale	●
36917	SAFE_ENC_GRID_POINT_DIST	Grid spacing, linear scale	●
36918	SAFE_ENC_RESOL	Encoder pulses per revolution	●
36919	SAFE_ENC_PULSE_SHIFT	Shift factor of the encoder multiplication	●
36920	SAFE_ENC_GEAR_PITCH	Leadscrew pitch	●
36921	SAFE_ENC_GEAR_DENOM[n]	Denominator, gearbox ratio encoder/load	●
36922	SAFE_ENC_GEAR_NUMERA[n]	Numerator, gearbox ratio encoder/load	●
36923	SAFE_INFO_ENC_RESOL	Safety-related encoder resolution	—
36925	SAFE_ENC_POLARITY	Direction reversal actual value	●
36927	SAFE_ENC_MOD_TYPE	Encoder evaluation type	■
36928	SAFE_ENC_IDENT	Encoder identification	■
36930	SAFE_STANDSTILL_TOL	Zero speed tolerance	●
36931	SAFE_VELO_LIMIT[n]	Limit value for safely reduced speed	●
36932	SAFE_VELO_OVR_FACTOR[n]	SG selection values	●
36933	SAFE_DES_VELO_LIMIT	SG setpoint speed limiting	—
36934	SAFE_POS_LIMIT_PLUS[n]	Upper limit value for safe limit position	●
36935	SAFE_POS_LIMIT_MINUS[n]	Lower limit value for safe limit position	●
36936	SAFE_CAM_POS_PLUS[n]	Plus cam position for safe cams	●
36937	SAFE_CAM_POS_MINUS[n]	Minus cam position for safe cams	●
36938	SAFE_CAM_TRACK_ASSIGN[n]	Cam track assignment	●
36940	SAFE_CAM_TOL	Tolerance for safe cams	●
36942	SAFE_POS_TOL	Tolerance, actual value comparison (cross-wise)	●
36944	SAFE_REFP_POS_TOL	Tolerance, actual value comparison (referencing)	●
36946	SAFE_VELO_X	Speed limit n_x	●
36948	SAFE_STOP_VELO_TOL	Speed tolerance for safe acceleration monitoring	●
36949	SAFE_SLIP_VELO_TOL	Speed tolerance, slip	●
36950	SAFE_MODE_SWITCH_TIME	Tolerance time for SGE changeover	●
36951	SAFE_VELO_SWITCH_DELAY	Delay time, speed changeover	●
36952	SAFE_STOP_SWITCH_TIME_C	Transition time, STOP C to safe Standstill	●
36953	SAFE_STOP_SWITCH_TIME_D	Transition time, STOP D to safe Standstill	●
36954	SAFE_STOP_SWITCH_TIME_E	Transition time, STOP E to safe Standstill	●
36955	SAFE_STOP_SWITCH_TIME_F	Transition time STOP F to STOP B	●

8.1 Machine data for SINUMERIK 840D sl

Table 8-1 Overview of machine data for SINUMERIK 840D sl

Number	Name	Name	Checksums MD
36956	SAFE_PULSE_DISABLE_DELAY	Delay time, pulse cancellation	●
36957	SAFE_PULSE_DIS_CHECK_TIME	Time to check pulse cancellation	●
36958	SAFE_ACCEPTANCE_TST_TIMEOUT	Time limit for the acceptance test duration	●
36960	SAFE_STANDSTILL_VELO_TOL	Shutoff speed for pulse suppression	●
36961	SAFE_VELO_STOP_MODE	Stop response, safely reduced speed	●
36962	SAFE_POS_STOP_MODE	Stop response, safe limit position	●
36963	SAFE_VELO_STOP_REACTION[n]	Stop response, safely reduced speed	●
36964	SAFE_IPO_STOP_GROUP	Grouping, safety IPO response	—
36965	SAFE_PARK_ALARM_SUPPRESS	Alarm suppression for parking axes	●
36966	SAFE_BRAKETEST_TORQUE	Holding torque, brake test	●
36967	SAFE_BRAKETEST_POS_TOL	Position tolerance, brake test	●
36968	SAFE_BRAKETEST_CONTROL	Sequence check for the brake test	●
36969	SAFE_BRAKETEST_TORQUE_NORM	Reference quantity for the holding torque, brake test	●
36970	SAFE_SVSS_DISABLE_INPUT	Input assignment, SBH/SG deselection	●
36971	SAFE_SS_DISABLE_INPUT	Input assignment, SBH deselection	●
36972	SAFE_VELO_SELECT_INPUT[n]	Input assignment, SG selection	●
36973	SAFE_POS_SELECT_INPUT	Input assignment, SE selection	●
36974	SAFE_GEAR_SELECT_INPUT[n]	Input assignment, gearbox ratio selection	●
36977	SAFE_EXT_STOP_INPUT[n]	Input assignment, external brake request	●
36978	SAFE_OVR_INPUT[n]	Input assignment, SG override	●
36980	SAFE_SVSS_STATUS_OUTPUT	Output assignment, SBH/SG active	●
36981	SAFE_SS_STATUS_OUTPUT	Output assignment for SBH active	●
36982	SAFE_VELO_STATUS_OUTPUT[n]	Output assignment active SG selection	●
36985	SAFE_VELO_X_STATUS_OUTPUT	Output assignment for $n < n_x$	●
36987	SAFE_REFP_STATUS_OUTPUT	Output assignment, axis safely referenced	●
36988	SAFE_CAM_PLUS_OUTPUT[n]	Output assignment, SN1+ to SN4+	●
36989	SAFE_CAM_MINUS_OUTPUT[n]	Output assignment, SN1– to SN4–	●
36990	SAFE_ACT_STOP_OUTPUT[n]	Output assignment, active STOP	●
36992	SAFE_CROSSCHECK_CYCLE	Displays the axial crosswise comparison clock cycle	—
36993	SAFE_CONFIG_CHANGE_DATE[n]	Date/time of the last change SI–NCK–MD	—
36994	SAFE_PREV_CONFIG[n]	Data, previous safety function	—
36995	SAFE_STANDSTILL_POS	Standstill position	—
36997	SAFE_ACKN	User acknowledgement	—
36998	SAFE_ACT_CHECKSUM	Actual checksum	—
36999	SAFE_DES_CHECKSUM	Reference checksum	—
37000	FIXED_STOP_MODE	Travel to fixed stop mode	—
37900	SAFE_CAM_TRACK_OUTPUT	Output assignment cam tracks 1 to 4	●

8.1 Machine data for SINUMERIK 840D sl

Table 8-1 Overview of machine data for SINUMERIK 840D sl

Number	Name	Name	Checksums MD
37901	SAFE_CAM_RANGE_OUTPUT_1	Output assignment, cam range for cam track 1	●
37902	SAFE_CAM_RANGE_OUTPUT_2	Output assignment, cam range for cam track 2	●
37903	SAFE_CAM_RANGE_OUTPUT_3	Output assignment, cam range for cam track 3	●
37904	SAFE_CAM_RANGE_OUTPUT_4	Output assignment, cam range for cam track 4	●
37906	SAFE_CAM_RANGE_BIN_OUTPUT_1	Output assignment, cam range bit for cam track 1	●
37907	SAFE_CAM_RANGE_BIN_OUTPUT_2	Output assignment, cam range bit for cam track 2	●
37908	SAFE_CAM_RANGE_BIN_OUTPUT_3	Output assignment, cam range bit for cam track 3	●
37909	SAFE_CAM_RANGE_BIN_OUTPUT_4	Output assignment, cam range bit for cam track 4	●

8.1 Machine data for SINUMERIK 840D sl

8.1.2 Description of machine data

General information

General information about machine data and an explanation of their contents such as units, data type, protective stage, effectiveness, etc. can be found in the following references:

References: /LIS/, Lists, SINUMERIK 840D/840D sl

10090	\$MN_SAFETY_SYSCLOCK_TIME_RATIO		
MD number	Factor for the monitoring clock cycle		
Default value: 3		Min. input limit: 1	Max. input limit: 50
Change becomes effective after: POWER ON		Protection level: 7/1	Unit: –
Data type: DWORD			
Significance:	Ratio between the monitoring and system basic clock cycle. The monitoring clock cycle is the product of this data and \$MN_SYSCLOCK_CYCLE_TIME.		
Special cases, errors,...	<p>The monitoring clock cycle is checked during run-up:</p> <ul style="list-style-type: none">• It must be an integral multiple of the position control clock cycle• It must be < 25 ms <p>If these conditions are not fulfilled, the factor is rounded-off to the next possible value. The monitoring cycle that is actually set is displayed using \$MN_INFO_SAFETY_CYCLE_TIME.</p> <p>Further, the value for the crosswise data comparison clock cycle that is displayed using \$MN_INFO_CROSSCHECK_CYCLE_TIME also changes.</p> <p>Note:</p> <p>The monitoring clock cycle defines the response time of the monitoring functions. It should be noted that a short monitoring clock cycle time increases the load on the CPU.</p>		
corresponds with..	MD 10050: \$MN_SYSCLOCK_CYCLE_TIME MD 10091: \$MN_INFO_SAFETY_CYCLE_TIME MD 10092: \$MN_INFO_CROSSCHECK_CYCLE_TIME		

8.1 Machine data for SINUMERIK 840D sl

10091	\$MN_INFO_SAFETY_CYCLE_TIME		
MD number	Display, monitoring clock cycle time		
Default value: 0		Min. input limit: –	Max. input limit:
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: s
Data type: DOUBLE			
Significance:	Display data: Displays the actually effective monitoring clock cycle. This data cannot be written to. The data value is always re-calculated as soon as one of the following data is changed: SAFETY_SYSCLOCK_TIME_RATIO POSCTRL_SYSCLOCK_TIME_RATIO SYSCLOCK_CYCLE_TIME The new value only becomes effective after Power On.		
corresponds with:	MD 10090: \$MN_SAFETY_SYSCLOCK_TIME_RATIO		
Additional references	/FBSI/ see Chapter 5.1, "Monitoring clock cycle", Chapter 5.2 "Crosswise data comparison"		

10092	\$MN_INFO_CROSSCHECK_CYCLE_TIME		
MD number	Displays the clock cycle time for a crosswise data comparison		
Default value: 0.0		Min. input limit: –	Max. input limit:
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: s
Data type: DOUBLE			
Significance:	Display data: Maximum crosswise data comparison in seconds. This is obtained from the INFO_SAFETY_CYCLE_TIME and the number of data to be compared crosswise (depending on the drive type being used, this can differ for the individual axes). The data value is always re-calculated as soon as one of the following data is changed: SAFETY_SYSCLOCK_TIME_RATIO POSCTRL_SYSCLOCK_TIME_RATIO SYSCLOCK_CYCLE_TIME The new value only becomes effective after power on.		
corresponds with ...	MD 10090: \$MN_SAFETY_SYSCLOCK_TIME_RATIO MD 36992: \$MA_SAFE_CROSSCHECK_CYCLE		
Additional references	/FBSI/ see Chapter 5.1, "Monitoring clock cycle", Chapter 5.2 "Crosswise data comparison"		

10093	\$MN_INFO_NUM_SAFE_FILE_ACCESS		
MD number	Number of SPL file access operations		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 0/0	Unit: –
Data type: DWORD			
Significance:	Display data: SPL file / _N_CST_DIR/_N_SAFE_SPF has been accessed n–times in the protected state. This MD is only used for service purposes. The value of the MD can only be 0 or 1. The value cannot be changed.		
Special cases, errors,...			

8.1 Machine data for SINUMERIK 840D sl

10094		\$MN_SAFE_ALARM_SUPPRESS_LEVEL	
MD number		Alarm suppression level	
Default value: 2		Min. input limit: 0	Max. input limit: 13
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	<p>The monitoring channels NCK and drive display alarms with the same significance in several situations.</p> <p>In order to reduce the size of the alarm screen, this MD is used to specify whether safety alarms with the same significance are to be suppressed. The two-channel stop response is not influenced by the setting.</p> <p>0 = alarms triggered in two channels are displayed to the full extent</p> <ul style="list-style-type: none">– Two-channel display of all axial safety alarms– Alarm 27001, fault code 0 is displayed– Alarms 27090, 27091, 27092, 27093 and 27095 are displayed through two channels and a multiple number of times. <p>1 = alarms with the same meaning are only displayed once.</p> <p>This involves the following alarms and messages:</p> <ul style="list-style-type: none">27010 = C0170727011 = C0171427012 = C0171527013 = C0170627020 = C0171027021 = C0170927022 = C0170827023 = C0170127024 = C01700 <p>For these alarms, only one of the specified alarms (270xx or C01xxx) is initiated. The alarm of the monitoring channel that then subsequently initiates the alarm with the same significance, is no longer displayed.</p> <p>Furthermore, Alarm 27001 with fault code 0 is suppressed. This alarm occurs as a result of drive Alarm C01711. In this particular case, drive parameters r9710[0,1], r9711[0,1], r9735[0,1], r9736[0,1], r9737[0,1], r9738[0,1], r9739[0,1] provide information regarding the cause of the error.</p> <p>2= default setting</p> <p>Going beyond the functionality with MD value=1, the alarms from the SPL processing (27090, 27091, 27092, 27093 and 27095) are only displayed through one channel and only once. This also applies to alarms of the PROFIsafe communications (27250 and following).</p> <p>3= axial Alarms 27000 and A01797 are replaced by Alarm message 27100 for all axes/drives. Alarm 27040 is replaced by Alarm 27140 for all axes/drives.</p> <p>12= going beyond the functionality with MD value = 2, the alarms are assigned priorities. What appears to be apparent follow-on alarms are no longer displayed or are automatically cleared from the display.</p> <p>The following alarms may be involved:</p> <p>27001, 27004, 27020, 27021, 27022, 27023, 27024, 27091, 27101, 27102, 27103, 27104, 27105, 27106, 27107</p> <p>13= going beyond the functionality with MD value = 3, the alarms are assigned priorities as for MD value 12.</p> <p>This machine data must be set to 0 to generate an acceptance report. This allows the system to document all of the alarms that have been initiated.</p>		
Special cases, errors,...			

8.1 Machine data for SINUMERIK 840D sl

10096	\$MN_SAFE_DIAGNOSIS_MASK																				
MD number	'Safety Integrated' diagnostic functions																				
Default value: 1		Min. input limit: 0	Max. input limit: 0x0007																		
Change becomes effective after: NewConf		Protection level: 7/2	Unit: –																		
Data type: DWORD																					
Significance:	<p>Bit 0=0 SGE differences between NCK and the drive monitoring channels are not displayed Bit 0=1 Default: SGE differences between NCK and the drive monitoring channels are displayed Differences between the following SGEs are detected (the listed bit numbers refer to the axial mapping of the SGEs – these correspond to the assignment of the axial VDI inter-face):</p> <table><tr><td>Bit 0: SBH/SG deselection</td><td>= DB3<x>.DBX22.0</td></tr><tr><td>Bit 1: SBH deselection</td><td>= DB3<x>.DBX22.1</td></tr><tr><td>Bit 3: SG selection, bit 0</td><td>= DB3<x>.DBX22.3</td></tr><tr><td>Bit 4: SG selection, bit 1</td><td>= DB3<x>.DBX22.4</td></tr><tr><td>Bit 12: SE selection</td><td>= DB3<x>.DBX23.4</td></tr><tr><td>Bit 28: SG correction, bit 0</td><td>= DB3<x>.DBX33.4</td></tr><tr><td>Bit 29: SG correction, bit 1</td><td>= DB3<x>.DBX33.5</td></tr><tr><td>Bit 30: SG correction, bit 2</td><td>= DB3<x>.DBX33.6</td></tr><tr><td>Bit 31: SG correction, bit 3</td><td>= DB3<x>.DBX33.7</td></tr></table> <p>The differences are indicated using message Alarm 27004.</p> <p>Bit 1 = 0: Default: Displays an unsuccessful SPL start after the timer defined in MD SAFE_SPL_START_TIMEOUT has expired with Alarm 27097</p> <p>Bit 1 = 1: Display of Alarm 27097 is suppressed. Alarm 27097 indicates, that in spite of the SPL configuration, SPL was not started after the time set in MD SAFE_SPL_START_TIMEOUT expired. For the cause, refer to the description of Alarm 27097.</p> <p>Bit 2 = 0: Default: Communication errors with SFC error codes are displayed using Alarm 27354</p> <p>bit 2 = 1: Display of Alarm 27354 is suppressed</p>			Bit 0: SBH/SG deselection	= DB3<x>.DBX22.0	Bit 1: SBH deselection	= DB3<x>.DBX22.1	Bit 3: SG selection, bit 0	= DB3<x>.DBX22.3	Bit 4: SG selection, bit 1	= DB3<x>.DBX22.4	Bit 12: SE selection	= DB3<x>.DBX23.4	Bit 28: SG correction, bit 0	= DB3<x>.DBX33.4	Bit 29: SG correction, bit 1	= DB3<x>.DBX33.5	Bit 30: SG correction, bit 2	= DB3<x>.DBX33.6	Bit 31: SG correction, bit 3	= DB3<x>.DBX33.7
Bit 0: SBH/SG deselection	= DB3<x>.DBX22.0																				
Bit 1: SBH deselection	= DB3<x>.DBX22.1																				
Bit 3: SG selection, bit 0	= DB3<x>.DBX22.3																				
Bit 4: SG selection, bit 1	= DB3<x>.DBX22.4																				
Bit 12: SE selection	= DB3<x>.DBX23.4																				
Bit 28: SG correction, bit 0	= DB3<x>.DBX33.4																				
Bit 29: SG correction, bit 1	= DB3<x>.DBX33.5																				
Bit 30: SG correction, bit 2	= DB3<x>.DBX33.6																				
Bit 31: SG correction, bit 3	= DB3<x>.DBX33.7																				
Special cases, errors,...																					

10097	\$MN_SAFE_SPL_STOP_MODE		
MD number	Stop response for SPL errors		
Default value: 3		Min. input limit: 3	Max. input limit: 4
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	<p>Selects the stop response when errors are detected in the crosswise data comparison of NCK and PLC–SPL</p> <p>3: Stop D</p> <p>4 Stop E</p> <p>When the value 4 is entered in this MD (Stop E) without enabling the external Stop E in all axes with SI function enable signals (\$MA_SAFE_FUNCTION_ENABLE not equal to 0) results in Alarm 27033, "Axis %1 Invalid parameterization of MD MN_SAFE_SPL_STOP_MODE".</p> <p>To remedy this, either parameterize Stop D or set bit 4 and bit 6 in \$MA_SAFE_FUNCTION_ENABLE for all of the axes involved. If this MD is set to 4, then DB18.DBX36.1 (Stop E) must also be set to 1 in order to communicate this parameterization to the PLC. For a different parameter assignment, Alarm 27090 is output, "Error for crosswise data comparison NCK–PLC".</p>		
Special cases, errors,...			

8.1 Machine data for SINUMERIK 840D sl

10098	\$MN_PROFISAFE_IPO_TIME_RATIO		
MD number	Factor PROFIsafe communications clock cycle time		
Default value: 1		Min. input limit: 1	Max. input limit: 25
Change becomes effective after: POWER ON		Protection level: 7/1	Unit: –
Data type: DWORD			
Significance:	Ratio between PROFIsafe communication and interpolation clock cycle. The actual PROFIsafe communication clock cycle is the product from this data and IPO_CYCLE_TIME and is displayed in MD INFO_PROFISAFE_CYCLE_TIME. In this clock cycle, OB40 on the PLC side is initiated from the NCK to enable communication between the F master and F slaves. The PROFIsafe communications clock cycle may not be greater than 25 ms.		
Special cases, errors,...			

10099		\$MN_INFO_PROFISAFE_CYCLE_TIME	
MD number		PROFIsafe communications clock cycle time	
Default value: 0.0		Min. input limit: –	Max. input limit: –
Change becomes effective after: Power On		Protection level: 7/0	Unit: s
Data type: DOUBLE			
Significance:	Display data: Time grid for communications between an F master and F slave. The value is obtained from the interpolator clock cycle and MD \$MN_PROFISAFE_IPO_TIME_RATIO. The value cannot be changed. PROFIsafe communications via the OB40 in the PLC use this time grid.		
Special cases, errors,...			

10385	\$MN_PROFISAFE_MASTER_ADDRESS		
MD number	PROFIsafe address of the PROFIsafe master module		
Default value: 0		Min. input limit: 0	Max. input limit: 0x0500FA 7D
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Defines the PROFIsafe address for the F master NCK/PLC. This is used to uniquely assign an F master to an F slave. This parameter must be entered in accordance with the "F_source_address" parameter set in S7–ES for the F slaves. An attempt to establish communications is only made for F slaves that have entered this address.		
Special cases, errors,...			

8.1 Machine data for SINUMERIK 840D sl

10386	\$MN_PROFISAFE_IN_ADDRESS[n]: 0 ... 15		
MD number	PROFIsafe address of an input module		
Default value: 0		Min. input limit: 0	Max. input limit: 0x0501FFFF
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	PROFIsafe target address of an input module Format: 0s 0x aaaa s: Bus segment (5 = DP connection on the PLC side) x: Sub-slot address Range of values: 0...1 x = 0 addresses the F net data signals 1 ...32 x = 1 addresses the F net data signals 33 ...64 aaaa: Hexadecimal PROFIsafe address of the F module		
Special cases, errors,...			

10387	\$MN_PROFISAFE_OUT_ADDRESS[n]: 0 ... 15		
MD number	PROFIsafe address of a PROFIsafe output module		
Default value: 0		Min. input limit: 0	Max. input limit: 0x0501FFFF
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	PROFIsafe target address of an output module Format: 0s 0x aaaa s: Bus segment (5 = DP connection on the PLC side) x: Sub-slot address Range of values: 0...1 x = 0 addresses the F net data signals 1 ...32 x = 1 addresses the F net data signals 33 ...64 aaaa: Hexadecimal PROFIsafe address of the F module		
Special cases, errors,...			

10388	\$MN_PROFISAFE_IN_ASSIGN[n]: 0 ... 15		
MD number	Input assignment \$A_INSE to PROFIsafe module		
Default value: 0		Min. input limit: 0	Max. input limit: 64064
Change becomes effective after: POWER ON		Protective stage: 7/2	Unit: –
Data type: DWORD			
Significance:	Assignment between an ext. SPL interface \$A_INSE and a PROFIsafe input module. The three lower positions indicate the least significant \$A_INSE variable to be supplied. The three upper positions indicate the most significant \$A_INSE variable to be supplied. Example: PROFISAFE_IN_ASSIGN[0] = 4001 or alternatively 1004: The system variables \$A_INSE[1...4] are supplied with the state of the input terminals of the PROFIsafe module that was defined in MD PROFISAFE_IN_ADDRESS[0].		
Special cases, errors,...			

8.1 Machine data for SINUMERIK 840D sl

10389	\$MN_PROFISAFE_OUT_ASSIGN[n]: 0 ... 15		
MD number	Output assignment, \$A_OUTSE to PROFIsafe module		
Default value: 0		Min. input limit: 0	Max. input limit: 64064
Change becomes effective after: POWER ON		Protective stage: 7/2	Unit: –
Data type: DWORD			
Significance:	Assignment between an ext. SPL interface \$A_OUTSE and a PROFIsafe output module. The three lower positions indicate the least significant \$A_OUTSE variable to be connected. The three upper positions indicate the most significant \$A_OUTSE variable to be connected. Example: PROFISAFE_OUT_ASSIGN[0] = 64061 or alternatively 61064: The system variables \$A_OUTSE[61...64] are placed at the output terminals of the PROFIsafe module defined in MD PROFISAFE_OUT_ADDRESS[0].		
Special cases, errors,...			

10393	\$MN_SAFE_DRIVE_LOGIC_ADDRESS		
MD number	Logical drive addresses, SI		
Default value: 6700, 6724, 6748, 6772, 6796, 6820, 6844, 6868, 6892, 6916, 6940, 6964, 6988, 7012, 7036, 7060, 7084, 7108, 7132, 7156, 7180, 7204, 7228, 7252, 7276, 7300, 7324, 7348, 7372, 7396, 7420, 7444, 7468, 7492, 7516, 7540, 7564	Min. input limit: 258		Max. input limit: 8191
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Logical I/O addresses of the SI telegram of drives connected to PROFIBUS. An address is assigned to a drive.		
Special cases, errors,...			

8.1 Machine data for SINUMERIK 840D sl

13300	\$MN_PROFISAFE_IN_FILTER																						
MD number	F useful (net) data filter IN																						
Default value: 0xFFFFFFFF		Min. input limit: –	Max. input limit: –																				
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																				
Data type: DWORD																							
Significance:	<p>Filter between F net (useful) data and \$A_INSE variables</p> <p>The machine data: \$MN_PROFISAFE_IN_FILTER is used to define which F net data bits of the PROFIsafe module are accepted for further processing from the F net data interface of the PROFIsafe module in the NCK.</p> <p>The filtered F net data bits are pushed together inside the NCK to form a bit array without any gaps (consecutive bit array).</p> <p>The machine data: \$MN_PROFISAFE_IN_ASSIGN is then used to define in which \$INSE variables, the filtered F net data bits are transferred.</p> <p>Example: Note: For reasons of simplicity, only 16 bits are taken into consideration. Parameter assignment: PROFISAFE_IN_FILTER = 1010100101000100 PROFISAFE_IN_ASSIGN = 011006</p> <table> <tr> <td>n = 16</td><td>11</td><td>6</td><td>1</td></tr> <tr> <td>1010 1000 0000 0100</td><td colspan="3">value at the F net data interface of the PROFIsafe module</td></tr> <tr> <td>1010 1001 0100 0100</td><td colspan="3">\$MN_PROFISAFE_IN_FILTER</td></tr> <tr> <td>0000 0000 0011 1001</td><td colspan="3">internal NCK F net data image</td></tr> <tr> <td>xxxx x111 001x xxxx</td><td colspan="3">\$INSE[n], x = not relevant</td></tr> </table>			n = 16	11	6	1	1010 1000 0000 0100	value at the F net data interface of the PROFIsafe module			1010 1001 0100 0100	\$MN_PROFISAFE_IN_FILTER			0000 0000 0011 1001	internal NCK F net data image			xxxx x111 001x xxxx	\$INSE[n], x = not relevant		
n = 16	11	6	1																				
1010 1000 0000 0100	value at the F net data interface of the PROFIsafe module																						
1010 1001 0100 0100	\$MN_PROFISAFE_IN_FILTER																						
0000 0000 0011 1001	internal NCK F net data image																						
xxxx x111 001x xxxx	\$INSE[n], x = not relevant																						
corresponds with ...																							
Additional references																							

8.1 Machine data for SINUMERIK 840D sl

13301	\$MN_PROFISAFE_OUT_FILTER																											
MD number	F net (useful) data filter OUT																											
Default value 0xFFFFFFFF		Min. input limit: –	Max. input limit: –																									
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																									
Data type: DWORD																												
Significance:	<p>Filter between \$A_OUTSE variables and F net (useful) data</p> <p>The machine data: PROFISAFE_OUT_ASSIGN is used to define which \$A_OUTSE[n] variables are transferred into the F net data bits of the PROFIsafe module.</p> <p>The machine data: PROFISAFE_OUT_FILTER is used to define which F net data bit is transferred to the particular \$A_OUTSE[n] variable.</p> <p>Example: Note: For reasons of simplicity, only 16 bits are taken into consideration. Parameter assignment: \$MN_PROFISAFE_OUT_FILTER = 1010100101000100 \$MN_PROFISAFE_OUT_ASSIGN = 011006</p> <table><tr><td>n = 16</td><td>11</td><td>6</td><td>1</td><td></td></tr><tr><td>xxxx</td><td>x111</td><td>111x</td><td>xxxx</td><td>example value in the \$OUTSE variables, x not relevant</td></tr><tr><td>0000</td><td>0000</td><td>0011</td><td>1111</td><td>internal NCK F net data image</td></tr><tr><td>1010</td><td>1001</td><td>0100</td><td>0100</td><td>\$MN_PROFISAFE_OUT_FILTER</td></tr><tr><td>1010</td><td>1001</td><td>0100</td><td>0100</td><td>F net data of the PROFIsafe module</td></tr></table>			n = 16	11	6	1		xxxx	x111	111x	xxxx	example value in the \$OUTSE variables, x not relevant	0000	0000	0011	1111	internal NCK F net data image	1010	1001	0100	0100	\$MN_PROFISAFE_OUT_FILTER	1010	1001	0100	0100	F net data of the PROFIsafe module
n = 16	11	6	1																									
xxxx	x111	111x	xxxx	example value in the \$OUTSE variables, x not relevant																								
0000	0000	0011	1111	internal NCK F net data image																								
1010	1001	0100	0100	\$MN_PROFISAFE_OUT_FILTER																								
1010	1001	0100	0100	F net data of the PROFIsafe module																								
corresponds with ...																												
Additional references																												

13310	\$MN_SAFE_SPL_START_TIMEOUT		
MD number	Delay, display Alarm 27097		
Default value 20.		Min. input limit: 1.	Max. input limit: 60.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	After the control has booted, after the time has expired, Alarm 27097 is displayed if there was no SPL start.		
corresponds with ...			
Additional references			

8.1 Machine data for SINUMERIK 840D sl

20108	\$MC_PROG_EVENT_MASK		
MD number	Event-controlled program call		
Default value (0x0, 0x0,...)		Min. input limit: 0	Max. input limit: 0xF
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Parameterizes the event where the user program, set with \$MN_PROG_EVENT_NAME (default: _N_PROG_EVENT_SPF) is implicitly called: Bit 0 = 1: Part program start Bit 1 = 1: Part program end Bit 2 = 1: Operator panel reset Bit 3 = 1: Boot The user program is called using the following search path: 1. /_N_CUS_DIR/_NPROG_EVENT_SPF 2. /_N_CMA_DIR/_NPROG_EVENT_SPF 3. /_N_CST_DIR/_NPROG_EVENT_SPF		
corresponds with ...			
Additional references			

28251	\$MC_MM_NUM_SAFE_SYNC_ELEMENTS		
MD number	Number of elements for expressions in safety synchronized actions		
Default value 0		Min. input limit: 0	Max. input limit: 32000
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	The expressions of motion synchronizing actions are saved in storage elements in the control system. A motion synchronizing action requires a minimum of 4 elements. The assignments are as follows: each operand in the condition: 1 element each action: >= 1 element each assignment: 2 elements each additional operand in complex expressions: 1 element See also: MD 28250: \$MC_MM_NUM_SYNC_ELEMENTS		
corresponds with ...			
Additional references			

8.1 Machine data for SINUMERIK 840D sl

36901	\$MA_SAFE_FUNCTION_ENABLE		
MD number	Enable safety-related functions		
Default value: 0		Min. input limit: 0	Max. input limit: 0xFFFFB
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>The functions for safe operation can be enabled for one axis/spindle using this machine data.</p> <p>It is only possible to enable – on an axis-specific basis – as many axes/spindles for safe operation as have been enabled by the global option.</p> <p>The more partial functions that are set then the more computing time the safe functions require.</p> <p>Bit 0: Enable safely reduced speed, safe operating stop</p> <p>Bit 1: Enable safe limit switches</p> <p>Bit 2: Reserved for functions with absolute reference (such as SE/SN)</p> <p>Bit 3: Enable actual value synchronization, 2-encoder system</p> <p>Bit 4: Enable external ESR activation (STOP E)</p> <p>Bit 5: Enable SG correction</p> <p>Bit 6: Enable the external stop requests/external STOPs</p> <p>Bit 7: Enable cam synchronization</p> <p>Bit 8: Enable safe cam, pair 1, cam+</p> <p>Bit 9: Enable safe cam, pair 1, cam–</p> <p>Bit 10: Enable safe cam, pair 2, cam+</p> <p>Bit 11: Enable safe cam, pair 2, cam–</p> <p>Bit 12: Enable safe cam, pair 3, cam+</p> <p>Bit 13: Enable safe cam, pair 3, cam–</p> <p>Bit 14: Enable safe cam, pair 4, cam+</p> <p>Bit 15: Enable safe cam, pair 4, cam–</p>		
Special cases, errors,...	<ul style="list-style-type: none">– If bit 1 or a higher bit is set, then bit 0 must also be set since the control system switches to a safe operational stop in response to STOP C, D or E (a parameterization alarm 27033 is output if an error is detected).– If an insufficient number of axes/spindles have been enabled for safe operation using the global option, then this data may be overwritten with the value 0000 when booting.		
corresponds with ...	Global option		
Additional references	/FBSI/ see Chapter: 5.5, "Enabling safety-related functions"		

36902	\$MA_SAFE_IS_ROT_AX		
MD number	Rotary axis		
Default value: FALSE		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BOOLEAN			
Significance:	This data specifies whether the axis for safe operation is a rotary axis/spindle or linear axis. = 0: Linear axis = 1: Rotary axis/spindle The value set in this MD must be the same as the value set in MD \$MA_IS_ROT_AX. If they are not identical a parameterizing error is displayed.		
corresponds with ...			

8.1 Machine data for SINUMERIK 840D sl

36903		\$MA_SAFE_CAM_ENABLE	
MD number		Enable safe cam track	
Default value: 0		Min. input limit: 0	Max. input limit: 0x3FFFFFFF
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	30 safe cams can be enabled for one axis/spindle for the "safe cam track" function using this machine data. The enable signals may only be issued if the cam enable is not used in \$MA_SAFE_FUNC-TION_ENABLE. The cam synchronization is automatically activated if the "safe cam track" function is en-abled. Bit 0: Enable safe cam track, cam 1 Bit 1: Enable safe cam track, cam 2 Bit 2: Enable safe cam track, cam 3 Bit 3: Enable safe cam track, cam 4 Bit 4: Enable safe cam track, cam 5 Bit 5: Enable safe cam track, cam 6 Bit 6: Enable safe cam track, cam 7 Bit 7: Enable safe cam track, cam 8 Bit 8: Enable safe cam track, cam 9 Bit 9: Enable safe cam track, cam 10 Bit 10: Enable safe cam track, cam 11 Bit 11: Enable safe cam track, cam 12 Bit 12: Enable safe cam track, cam 13 Bit 13: Enable safe cam track, cam 14 Bit 14: Enable safe cam track, cam 15 Bit 15: Enable safe cam track, cam 16 Bit 16: Enable safe cam track, cam 17 Bit 17: Enable safe cam track, cam 18 Bit 18: Enable safe cam track, cam 19 Bit 19: Enable safe cam track, cam 20 Bit 20: Enable safe cam track, cam 21 Bit 21: Enable safe cam track, cam 22 Bit 22: Enable safe cam track, cam 23 Bit 23: Enable safe cam track, cam 24 Bit 24: Enable safe cam track, cam 25 Bit 25: Enable safe cam track, cam 26 Bit 26: Enable safe cam track, cam 27 Bit 27: Enable safe cam track, cam 28 Bit 28: Enable safe cam track, cam 29 Bit 29: Enable safe cam track, cam 30		
corresponds with ...	/FBSI/ see Chapter 6.8: "Safe software cams, safe cam track (SN)"		

8.1 Machine data for SINUMERIK 840D sl

36905	\$MA_SAFE_MODULO_RANGE		
MD number	Modulo value, safe cams		
Default value: 0.0		Min. input limit: 0.0	Max. input limit: 737280.0
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: degrees
Data type: DOUBLE			
Significance:	<p>Actual value range within which safe cams for rotary axes are calculated. The axis must be a rotary axis (\$MA_SAFE_IS_ROT_AX = 1).</p> <p>0: Modulo correction after +/- 2048 revolutions (i.e. after 737 280 degrees)</p> <p>> 0 and multiples of 360 Degrees: Modulo correction after this value e.g. value = 360 degrees → the actual value range is between 0 and 359.999 degrees, i.e. a modulo correction is carried out after every revolution.</p>		
Special cases, errors,...	<ul style="list-style-type: none"> – If the value set in this data is not 0 or a multiple of 360 degrees, then an appropriate alarm is output when the system boots. – The cam positions are also checked with respect to the parameterized actual value when the system boots. An appropriate alarm is output if parameterization errors are detected. – Actual value ranges set in \$MA_SAFE_MODULO_RANGE and \$MA_MODULO_RANGE must be a multiple integer. 		
corresponds with ...	MD 30330: \$MA_MODULO_RANGE MD 36935: \$MA_SAFE_CAM_POS_PLUS[n] MD 36937: \$MA_SAFE_CAM_POS_MINUS[n]		
Additional references	/FBSI/ see Chapter 6.8: "Safe software cams, safe cam track (SN)"		

36906	\$MA_SAFE_CTRLOUT_MODULE_NR		
MD number	SI drive assignment		
Default value: 1, 2, 3..		Min. input limit: 1	Max. input limit: 31
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	<p>Index in the data array \$MN_SAFE_DRIVE_LOGIC_ADDRESS to assign the drive for SI motion monitoring functions.</p> <p>The same drive must be assigned that was also selected using CTRLOUT_MODULE_NR and DRIVE_LOGIC_ADDRESS.</p>		
Special cases, errors,...			
corresponds with ...			

8.1 Machine data for SINUMERIK 840D sl

36907		\$MA_SAFE_DRIVE_PS_ADDRESS	
MD number		PROFIsafe address of the drive	
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: –
Data type: DWORD			
Significance:	This NCK–MD contains the PROFIsafe address of the drive assigned to this axis. When booting, the drive reads out this MD. The address must be unique across all of the axes. This MD cannot be written to; the PROFIsafe address must be parameterized in the drive. The value of this MD is incorporated in the calculation of MD \$MA_SAFE_ACT_CHECKSUM[1].		
Special cases, errors,...			
corresponds with ...			

36912		\$MA_SAFE_ENC_INPUT_NR	
MD number		Actual value assignment: Input on drive module/measuring circuit card	
Default value: 1		Min. input limit: 1	Max. input limit: 3
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	Number of the actual value input of a module via which the SI ² 1: SI encoder is connected to the upper input (motor encoder) 2: SI encoder is connected to the lower input		
Special cases, errors,...			
corresponds with ...	p9526, p0189,		

36914	\$MA_SAFE_SINGLE_ENC		
MD number	SI single-encoder system		
Default value: TRUE		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BOOLEAN			
Significance:	ID that SI is carried out with an encoder. If different encoders are used for the Safety Integrated monitoring functions in the drive and in the NCK, then this MD must be parameterized to be 0.		
Special cases, errors,...			
corresponds with ...			

8.1 Machine data for SINUMERIK 840D sl

36916	\$MA_SAFE_ENC_IS_LINEAR		
MD number	Linear scale		
Default value: 0		Min. input limit: 0	Max. input limit: 1
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BOOLEAN			
Significance:	<p>This MD specifies whether a linear or a rotary encoder is connected.</p> <p>= 0: A rotary encoder is connected, \$MA_SAFE_ENC_RESOL is used to specify its resolution and \$MA_SAFE_ENC_GEAR_PITCH, \$MA_SAFE_ENC_GEAR_DENOM[n] and \$MA_SAFE_ENC_GEAR_NUMERA[n] are used to convert it to the load side. The MD: \$MA_SAFE_ENC_GRID_POINT_DIST has no significance.</p> <p>= 1: Linear encoder is connected, \$MA_SAFE_ENC_GRID_POINT_DIST is used to specify its resolution. The MDs: \$MA_SAFE_ENC_RESOL, \$MA_SAFE_ENC_GEAR_PITCH, \$MA_SAFE_ENC_GEAR_DENOM[n] and \$MA_SAFE_ENC_GEAR_NUMERA[n] have no significance. This MD cannot be written to, the encoder type must be parameterized in the drive. If the value changes then Alarm 27036 is output.</p>		
corresponds with ...	<p>For 0: \$MA_SAFE_ENC_RESOL \$MA_SAFE_ENC_GEAR_PITCH \$MA_SAFE_ENC_GEAR_DENOM[n] \$MA_SAFE_ENC_GEAR_NUMERA[n]</p> <p>For 1: \$MA_SAFE_ENC_GRID_POINT_DIST</p>		

36917	\$MA_SAFE_ENC_GRID_POINT_DIST		
MD number	Grid spacing, linear scale		
Default value: 0.01		Min. input limit: 0.000 01	Max. input limit: 8
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm
Data type: DOUBLE			
Significance:	<p>This MD specifies the grid spacing of the linear scale used here. Not relevant for rotary encoders.</p>		
corresponds with ...			

36918	\$MA_SAFE_ENC_RESOL		
MD number	Encoder pulses per revolution		
Default value: 2 048		Min. input limit: 1	Max. input limit: 100 000
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>This MD specifies the number of pulses per revolution for a rotary encoder. Not relevant for a linear encoder.</p>		
corresponds with ...			

8.1 Machine data for SINUMERIK 840D sl

36919	\$MA_SAFE_ENC_PULSE_SHIFT		
MD number	Shift factor of the encoder multiplication		
Default value: 11		Min. input limit: 2	Max. input limit: 18
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	Shift factor of the multiplication (resolution) of the encoder, that is used for the Safety Integrated monitoring functions in the NCK. The encoder value must be divided by 2 so many times (shift factor) in order to obtain the number of encoder pulses. A shift factor of 11 corresponds to an encoder multiplication by a factor of 2048. If the drive provides this information (r0979[3,13,23]), then this MD is automatically internally assigned a value after the drive has run up. If the value changes then Alarm 27036 is output.		
corresponds with ...			

36920	\$MA_SAFE_ENC_GEAR_PITCH		
MD number	Leadscrew pitch		
Default value: 10.0		Min. input limit: 0.1	Max. input limit: 10000.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm
Data type: DOUBLE			
Significance:	Gear ratio of the gearbox (gear) between the encoder and load for a linear axis with rotary encoder.		
corresponds with ...			

36921	\$MA_SAFE_ENC_GEAR_DENOM[n]: 0 ... 7		
MD number	Denominator, gearbox ratio encoder/load		
Default value: 1		Min. input limit: 1	Max. input limit: 2 147 000 000
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Denominator of the gear between encoder and load, i.e. the denominator of the fraction number of encoder revolutions/number of load revolutions n= 0, 1, ... ,7 stands for gearbox stages 1, 2, ... 8 The actual value is selected using safety–related input signals (SGE).		
corresponds with ...	MD 36922: \$MA_SAFE_ENC_GEAR_NUMERA[n]		

36922	\$MA_SAFE_ENC_GEAR_NUMERA[n]: 0 ... 7		
MD number	Numerator, gearbox ratio encoder/load		
Default value: 1		Min. input limit: 1	Max. input limit: 2 147 000 000
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Numerator of the gear between encoder and load, i.e. the numerator of the fraction number of encoder revolutions/number of load revolutions” n= 0, 1, ... 7 stands for gearbox stages 1, 2, ... 8 The actual value is selected using safety–related input signals (SGE).		
corresponds with ...	MD 36921: \$MA_SAFE_ENC_GEAR_DENOM[n]		

8.1 Machine data for SINUMERIK 840D sl

36923	\$MA_SAFE_INFO_ENC_RESOL		
MD number	Safe encoder resolution		
Default value: 0.0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: mm, degrees
Data type: DOUBLE			
Significance:	Display data: Resolution of the encoder being used in the particular gear stage for the Safety Integrated monitoring functions. With this accuracy, for a single–encoder system, safety–related positions can be monitored. If different encoders are used for the Safety Integrated monitoring functions in the drive and in the NCK, then this MD is 0.		
corresponds with ...			

36925		\$MA_SAFE_ENC_POLARITY	
MD number		Direction reversal actual value	
Default value: 1		Min. input limit: −1	Max. input limit: 1
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Using this data, the direction of the actual value can be reversed. = −1: Direction reversal = 0 or = 1: no direction reversal		
corresponds with ...			

36927	\$MA_SAFE_ENC_MOD_TYPE		
MD number	Encoder evaluation type		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: –
Data type: BYTE			
Significance:	Type of the encoder evaluation of this axis used for Safety Integrated. When booting, the encoder evaluation reads out this type and compares with the value that was last saved here. This MD is then overwritten. The value of this MD is incorporated in the calculation of MD \$MA_SAFE_ACT_CHECKSUM[1].		
corresponds with ...			

36928	\$MA_SAFE_ENC_IDENT[n]		
MD number	Encoder identification		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: –
Data type: DWORD			
Significance:	Identification of the encoder evaluation of this axis used for Safety Integrated. When booting, the encoder evaluation reads out this identification and compares with the last value saved here. This MD is then overwritten. The value of this MD is incorporated in the calculation of MD \$MA_SAFE_ACT_CHECKSUM[1].		
corresponds with ...	r9881: SI motion Sensor Module Node Identifier control		

8.1 Machine data for SINUMERIK 840D sl

36930	\$MA_SAFE_STANDSTILL_TOL		
MD number	Zero speed tolerance		
Default value: 1.		Min. input limit: 0.	Max. input limit: 100.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm, degrees
Data type: DOUBLE			
Significance:	This MD specifies the tolerance for a safe operating stop. If the difference between the position limit value and position actual value is greater than the tolerance set here when a safe operating stop is selected, then the control system outputs Alarm 27010 with STOP B. The position limit value is the position actual value at the instant that a safe operating stop is selected.		
corresponds with ...	MD 36956: \$MA_SAFE_PULSE_DISABLE_DELAY		

36931	\$MA_SAFE_VELO_LIMIT[n]: 0 ... 3		
MD number	Limit value for safely reduced speed		
Default value: 2000.		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm/min, rev/min
Data type: DOUBLE			
Significance:	This MD defines the limit values for safely reduced speeds 1, 2, 3 and 4. When SG1, SG2, SG3 or SG4 is selected and the actual speed exceeds this limit value, then the control system outputs Alarm 27011 with the stop response configured in \$MA_SAFE_VELO_STOP_MODE or \$MA_SAFE_VELO_STOP_REACTION. n = 0, 1, 2, 3 stands for the limit value of SG1, SG2, SG3, SG4		
Special cases, errors,...	When SBH/SG is active in a 1–encoder system, the speed is monitored corresponding to the encoder limit frequency set in MD \$MA_SAFE_ENC_FREQ_LIMIT. An appropriate alarm is output if this limit is exceeded.		
corresponds with ...	MD 36961: \$MA_SAFE_VELO_STOP_MODE MD 36963: \$MA_SAFE_VELO_STOP_REACTION		

36932	\$MA_SAFE_VELO_OVR_FACTOR[n]: 0 ... 15		
MD number	SG selection values		
Default value: 100.0		Min. input limit: 1.0	Max. input limit: 100.0
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: %
Data type: DOUBLE			
Significance:	Limit value corrections for the safely reduced speeds 2 and 4 can be selected using SGEs and the associated correction value (percentage value) set using this MD. n = 0, 1, ... , 15 stands for correction 0, 1, ... 15		
Special cases, errors,...	<ul style="list-style-type: none">• The "Correction for safely reduced speed" function is enabled using MD 36901 \$MA_SAFE_FUNCTION_ENABLE.• This correction has no effect for the limit values associated with safely reduced speeds 1 and 3.		
Additional references	MD 36978: \$MA_SAFE_OVR_INPUT[n] MD 36931: \$MA_SAFE_VELO_LIMIT[n]		
Additional references	/FBSI/ see Chapter 6.5.4: "Override for safely reduced speed"		

8.1 Machine data for SINUMERIK 840D sl

36933	\$MA_SAFE_DES_VELO_LIMIT		
MD number	SG setpoint speed limiting		
Default value: 0.0		Min. input limit: 0	Max. input limit: 100
Change becomes effective after: RESET		Protection level: 7/2	Unit: %
Data type: DOUBLE			
Significance:	This is an evaluation factor to define the setpoint limit from the actual speed limit. The active SG limit value is evaluated using this factor and is entered into the interpolator as setpoint limit. When SBH is selected, a setpoint of 0 is entered. When 100% is entered, the setpoint is limited to the active SG stage When 0% is entered the setpoint speed limiting is not active.		
Special cases, errors,...	<ul style="list-style-type: none"> – This MD may have to be altered several times before an optimum setting for the dynamic response of the drives is found. In order that this operation is not made unnecessarily complex, "reset" has been defined as the criterion for being effective. – This data is not included in the crosswise data comparison with the drive. – This data is not included in the axial checksum \$MA_SAFE_ACT_CHECKSUM, as it is a single-channel function. 		
corresponds with ...			
Additional references	Refer to Chapter : 11.1 "Limiting the setpoint speed"		

36934	\$MA_SAFE_POS_LIMIT_PLUS[n]: 0 ... 1		
MD number	Upper limit value for safe limit position		
Default value: 100 000		Min. input limit: –2 147 000	Max. input limit: 2 147 000
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: Degrees, mm
Data type: DOUBLE			
Significance:	This MD specifies the upper limit value for safe limit positions 1 and 2. When SE1 or SE2 is selected and the actual position exceeds this limit, then the control system outputs Alarm 27012 with the stop response configured in \$MA_SAFE_POS_STOP_MODE and changes over into the SBH mode. If SBH is violated, STOP B and A are initiated as stop response. n = 0, 1 stand for the upper limit value of SE1, SE2		
Special cases, errors,...	If a lower or identical value is entered in MD \$MD_SAFE_POS_LIMIT_PLUS[n] than in MD \$MA_SAFE_POS_LIMIT_MINUS[n], then a parameterizing error is displayed.		
corresponds with ...	MD 36962: \$MA_SAFE_POS_STOP_MODE MD 36935: \$MA_SAFE_POS_LIMIT_MINUS[n] MD 36901: \$MA_SAFE_FUNCTION_ENABLE		
Additional references	/FBSI/ see Chapter 6.7: "Safe software limit switches (SE)"		

8.1 Machine data for SINUMERIK 840D sl

36935	\$MA_SAFE_POS_LIMIT_MINUS[n]: 0 ... 1		
MD number	Lower limit value for safe limit position		
Default value: -100 000		Min. input limit: -2 147 000	Max. input limit: 2 147 000
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: Degrees, mm
Data type: DOUBLE			
Significance:	This MD specifies the lower limit value for safe end positions 1 and 2. When SE1 or SE2 is selected and the actual position is less than this limit value, then the control system outputs Alarm 27012 with the stop response configured in \$MA_SAFE_POS_STOP_MODE and changes over into the SBH mode. If SBH is violated, STOP B and A are initiated as stop response. n = 0, 1 stand for the lower limit value of SE1, SE2		
Special cases, errors,...	If a lower or identical value is entered in MD \$MD_SAFE_POS_LIMIT_PLUS[n] than in MD \$MA_SAFE_POS_LIMIT_MINUS[n], then a parameterizing error is displayed.		
corresponds with ...	MD 36962: \$MA_SAFE_POS_STOP_MODE MD 36934: \$MA_SAFE_POS_LIMIT_PLUS[n]		
Additional references	/FBSI/ see Chapter 6.7: "Safe software limit switches (SE)"		

36936	\$MA_SAFE_CAM_POS_PLUS[n]: 0 ... 29		
MD number	Plus cam position for safe cams		
Default value: 10		Min. input limit: -2 147 000	Max. input limit: 2 147 000
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm, inches, degrees
Data type: DOUBLE			
Significance:	This MD specifies the plus cam position for safe cams SN1+, SN2+, SN3+, ...		
	For the "safe cams" function, the following applies: If the actual position is greater than this value when the safe cam function is active (\$MA_SAFE_FUNCTION_ENABLE), then the appropriate safety-related output signal (SGA) is set to 1. If the actual position falls below this value, SGA is set to 0. n = 0, 1, 2, 3 stand for the plus cam position of SN1+, SN2+, SN3+, SN4+		
	For the "safe cam track" function, the following applies: If the "safe cam track" function is enabled (\$MA_SAFE_CAM_ENABLE), then the safety-related output signals "cam track" and "cam range" are set corresponding to the parameterization in MD \$MA_SAFE_CAM_TRACK_ASSIGN[n]. n = 0 ... 29 stand for the plus cam position of SN1+, ..., SN30+		
corresponds with ...	MD 37901: \$MA_SAFE_FUNCTION_ENABLE MD 37903: \$MA_SAFE_CAM_ENABLE MD 36937: \$MA_SAFE_CAM_POS_MINUS[n] MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[n] MD 36988: \$MA_SAFE_CAM_PLUS_OUTPUT[n] MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT[n] MD 37901/37902/37903/37904: \$MA_SAFE_CAM_RANGE_OUTPUT_1/2/3/4[n] MD 37906/37907/37908/37909: \$MA_SAFE_CAM_RANGE_BIN_OUTPUT_1/2/3/4[m]		
Additional references	/FBSI/ see Chapter 6.8: "Safe software cams, safe cam track (SN)"		

8.1 Machine data for SINUMERIK 840D sl

36937	\$MA_SAFE_CAM_POS_MINUS[n]: 0 ... 29		
MD number	Minus cam position for safe cams		
Default value: -10		Min. input limit: -2 147 000	Max. input limit: 2 147 000
Change becomes effective after: Power On		Protection level: 7/2	Unit: mm, degrees
Data type: DOUBLE			
Significance:	This MD specifies the minus cam position for safe cams SN1-, SN2-, SN3-, ...		
	For the "safe cams" function, the following applies: If the actual position is greater than this value when the safe cam function is active (\$MA_SAFE_FUNCTION_ENABLE), then the appropriate safety-related output signal (SGA) is set to 1. If the actual position falls below this value, SGA is set to 0. n = 0, 1, 2, 3 stand for the minus cam position of SN1-, SN2-, SN3-, SN4-		
	For the "safe cam track" function, the following applies: If the "safe cam track" function is enabled (\$MA_SAFE_CAM_ENABLE), then the safety-related output signals "cam track" and "cam range" are set corresponding to the parameterization in MD \$MA_SAFE_CAM_TRACK_ASSIGN[n]. n = 0 ... 29 stand for the plus cam position of SN1-, ..., SN30-		
corresponds with ...	MD 37901: \$MA_SAFE_FUNCTION_ENABLE MD 37903: \$MA_SAFE_CAM_ENABLE MD 36937: \$MA_SAFE_CAM_POS_PLUS[n] MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[n] MD 36988: \$MA_SAFE_CAM_PLUS_OUTPUT[n] MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT[n] MD 37901/37902/37903/37904: \$MA_SAFE_CAM_RANGE_OUTPUT_1/2/3/4[n] MD 37906/37907/37908/37909: \$MA_SAFE_CAM_RANGE_BIN_OUTPUT_1/2/3/4[m]		
Additional references	/FBSI/ see Chapter 6.8: "Safe software cams, safe cam track (SN)"		

8.1 Machine data for SINUMERIK 840D sl

36938	\$MA_SAFE_CAM_TRACK_ASSIGN[n]: 0 ... 29		
MD number	Cam track assignment		
Default value: 100, 101, ... , 114; 200, 201, ..., 214		Min. input limit: 100	Max. input limit: 414
Change becomes effective after: Power On		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>Assigns the individual cams to a maximum of 4 cam tracks including defining the numerical value for the SGA "cam range".</p> <p>The "hundreds" position defines which cam track is assigned to the cams. Valid values are 1, 2 or 3 or 4.</p> <p>The "tens" and "ones" positions contain the numerical value that should be signaled to the safe logic as SGA "cam range" and processed there. Valid values are 0 to 14, whereby each numerical value may only be used once for each cam.</p> <p>Therefore the valid value range of this machine data is: 100...114, 200...214, 300...314, 400...414</p> <p>Examples: MD 36938[0] = 207: Cam 1 (index 0) is assigned to cam track 2. If the position is in the range of this cam, then 7 is entered in the SGA "cam range" of the 2nd cam track. MD 36938[5] = 100: Cam 6 (index 5) is assigned to cam track 1. If the position is in the range of this cam, then 0 is entered in the SGA "cam range" of the 1st cam track.</p>		
corresponds with ...	<p>MD 37903: \$MA_SAFE_CAM_ENABLE MD 36936: \$MA_SAFE_CAM_POS_PLUS[n] MD 36937: \$MA_SAFE_CAM_POS_MINUS[n] MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT[n] MD 37901/37902/37903/37904: \$MA_SAFE_CAM_RANGE_OUTPUT_1/2/3/4[n] MD 37906/37907/37908/37909: \$MA_SAFE_CAM_RANGE_BIN_OUTPUT_1/2/3/4[m]</p>		
Additional references	/FBSI/ see Chapter 6.8: "Safe software cams, safe cam track (SN)"		

36940	\$MA_SAFE_CAM_TOL		
MD number	Tolerance for safe cams		
Default value: 0.1		Min. input limit: 0.001	Max. input limit: 10
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm, degrees
Data type: DOUBLE			
Significance:	Due to the different mounting locations of the encoders and variations in clock cycle and signal transit (propagation times), the cam signals of the two monitoring channels never switch at precisely the same position and never simultaneously. This data specifies the tolerances for all cams as a load-side distance. The monitoring channels may have different signal states for the same cam within this tolerance bandwidth without generating Alarm 27001. Recommendation: Enter an identical or slightly higher value than that set in MD 36942.		
Special cases, errors,...			
Additional references	/FBSI/ see Chapter 6.8: "Safe software cams, safe cam track (SN)"		

8.1 Machine data for SINUMERIK 840D sl

36942	\$MA_SAFE_POS_TOL		
MD number	Tolerance, actual value comparison (crosswise)		
Default value: 0.1		Min. input limit: 0.001	Max. input limit: 360
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm, degrees
Data type: DOUBLE			
Significance:	Due to the fact that encoders are not mounted at identical locations and the effect of backlash, torsion, leadscrew errors etc. the actual positions sensed simultaneously by the NCK and drive may differ from one another. The tolerance bandwidth for the crosswise comparison of the actual positions in the two monitoring channels is specified in this machine data.		
Special cases, errors,...	<ul style="list-style-type: none">• "Finger protection" (approx. 10 mm) is the primary consideration when setting this tolerance value.• Stop response STOP F is activated when the tolerance bandwidth is violated.		

36944	\$MA_SAFE_REFP_POS_TOL		
MD number	Tolerance, actual value comparison (referencing)		
Default value: 0.01		Min. input limit: 0	Max. input limit: 36
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm, degrees
Data type: DOUBLE			
Significance:	<p>This machine data specifies the tolerance for checking the actual values after referencing (for incremental encoders) or when powering-up (for absolute encoders). An absolute actual axis position is determined by referencing. A second absolute actual position is calculated from the last stop position that was saved prior to the control being powered-down and the distance traversed since power-on. The control system checks the actual values after referencing on the basis of the two actual positions, the traversed distance and this machine data. The following factors must be taken into consideration when calculating tolerance values: Backlash, leadscrew errors, compensation (max. compensation values for SSFK, sag and temperature compensation), temperature errors, torsion (2-encoder system), gearbox play for control gears, coarser resolution (2-encoder system), oscillating distance/range for control gears.</p>		
Special cases, errors,...	<p>If these two absolute actual positions deviate from one another by more than the value set in this data – with a valid user agreement – then Alarm 27001 is output with Fault code 1003 and a new user agreement is required for referencing.</p>		

8.1 Machine data for SINUMERIK 840D sl

36946	\$MA_SAFE_VELO_X		
MD number	Speed limit n_x		
Default value: 20.		Min. input limit: 0.	Max. input limit: 6 000.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm/min, rev/min
Data type: DOUBLE			
Significance:	This machine data defines the limit speed n_x for the SGA " $n < n_x$ ". If this velocity limit is fallen below, SGA " $n < n_x$ " is set.		
corresponds with ...			
Additional references	/FBSI/ see Chapter 6.6: "SGA " $n < n_x$ " and "SG active""		

36948		\$MA_SAFE_STOP_VELO_TOL	
MD number		Speed tolerance for safe acceleration monitoring	
Default value: 300.		Min. input limit: 0.	Max. input limit: 120 000.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm/min, rev/min
Data type: DOUBLE			
Significance:	Actual speed tolerance for safe acceleration monitoring (SBR). After the safe acceleration monitoring has been activated (by initiating a Stop B or C), then this tolerance is applied to the actual speed. It is not permissible that the actual velocity is greater than the limit that is therefore specified. Otherwise, a Stop A will be initiated. This means that if the drive accelerates, this will be identified very quickly.		
corresponds with ...			
Additional references	/FBSI/ see Chapter 6.4: "Safe acceleration monitoring (SBR)" (a recommended setting and setting formula are specified in this Chapter).		

36949	\$MA_SAFE_SLIP_VELO_TOL		
MD number	Speed tolerance, slip		
Default value: 6.		Min. input limit: 0.	Max. input limit: 6000.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm/min, rev/min
Data type: DOUBLE			
Significance:	Speed difference that, for a 2–encoder system, is tolerated between the motor and load sides without the crosswise data comparison between the drive and NCK signaling an error. MD 36949 is only evaluated if MD \$MA_SAFE_FUNCTION_ENABLE, bit 3 is set.		
corresponds with ...			
Additional references	/FBSI/ see Chapter 5.4.6: Actual value synchronization		

8.1 Machine data for SINUMERIK 840D sl

36950	\$MA_SAFE_MODE_SWITCH_TIME		
MD number	Tolerance time for SGE changeover		
Default value: 0.5		Min. input limit: 0	Max. input limit: 10.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	<p>SGE changeover operations do not take effect simultaneously owing to variations in run times (propagation times) for SGE data transmission in the two monitoring channels. A crosswise data comparison would, in this case, output an error message.</p> <p>This data is used to specify the period of time after SGE changeover operations during which no crosswise comparison of actual values and monitoring results is carried out (machine data is still compared!). The selected monitoring functions continue to operate unhindered in both monitoring channels.</p> <p>A safety-related function is immediately activated in a monitoring channel if selection or changeover is detected in this channel.</p> <p>The different run time (propagation time) is mainly caused by the PLC cycle time.</p> <p>System-related minimum tolerance time 2 x PLC cycle time (maximum cycle) + 1 x IPO cycle time.</p> <p>The variations in the run times in the external circuitry (e.g. relay operating times) must also be taken into account.</p>		
Special cases, errors,...			
Additional references	/FBSI/ see Chapter 7.1: "safety-related input/output signals (SGE/SGA)"		

36951	\$MA_SAFE_VELO_SWITCH_DELAY		
MD number	Delay time, speed changeover		
Default value: 0.1		Min. input limit: 0	Max. input limit: 600.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	<p>A timer with this value is started when changing from a higher to a lower safely reduced speed – or when a safe operating stop is selected when the safely reduced speed function is active.</p> <p>The parameterized value must be selected as low as possible.</p> <p>While the timer is running, the speed continues to be monitored against the last selected speed limit value. During this period, the axis/spindle can be braked, for example, from the PLC user program, without the monitoring function signaling an error and initiating a stop response.</p>		
Special cases, errors,...	<ol style="list-style-type: none"> 1. The timer is immediately interrupted as soon as a higher or identical SG limit (i.e. to that which was previously active) is selected. 2. The timer is immediately interrupted if "non-safe operation" (SGE "deselect SBH/ SG=1) is selected. 3. The timer is re-triggered (restarted) if, while the timer is running, a changeover is made to a lower SG limit than was previously active or to SBH. 		
corresponds with ...			

8.1 Machine data for SINUMERIK 840D sl

36952	\$MA_SAFE_STOP_SWITCH_TIME_C		
MD number	Transition time, STOP C to safe standstill		
Default value: 0.1		Min. input limit: 0	Max. input limit: 600.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	This machine data defines the time period between the initiation of a STOP C and the activation of a safe operating stop. The parameterized value must be selected as low as possible. After the time has expired, the drive is monitored for a safe operating stop. If the axis/spindle was still not able to be stopped, STOP B is initiated.		
corresponds with ...			

36953	\$MA_SAFE_STOP_SWITCH_TIME_D		
MD number	Transition time, STOP D to safe standstill		
Default value: 0.1		Min. input limit: 0	Max. input limit: 600.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	This machine data defines the time period between the initiation of a STOP D and the activation of a safe operating stop. The parameterized value must be selected as low as possible. After the time has expired, the drive is monitored for a safe operating stop. If the axis/spindle was still not able to be stopped, STOP B is initiated.		
corresponds with ...			

36954		\$MA_SAFE_STOP_SWITCH_TIME_E	
MD number		Transition time, STOP E to safe standstill	
Default value: 0.1		Min. input limit: 0	Max. input limit: 600.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	Time after which a changeover is made from STOP E to a safe operating stop. The parameterized value must be selected as low as possible.		
Special cases, errors,...			
corresponds with ...			

8.1 Machine data for SINUMERIK 840D sl

36955	\$MA_SAFE_STOP_SWITCH_TIME_F		
MD number	Transition time STOP F to STOP B		
Default value: 0.0		Min. input limit: 0	Max. input limit: 600.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	Time after which, for a STOP F with active monitoring functions, a change is made to STOP B. The parameterized value must be selected as low as possible. During this time, e.g., another braking response can be activated using synchronous actions. The changeover is also made if a STOP C/D/E occurs during this time.		
Special cases, errors,...			
corresponds with ...			

36956	\$MA_SAFE_PULSE_DISABLE_DELAY		
MD number	Delay time, pulse cancellation		
Default value: 0.1		Min. input limit: 0	Max. input limit: 600
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	For a STOP B, the axis is braked along the current limit with speed setpoint 0. After the delay time defined in this data, the braking mode changes to STOP A for pulse cancellation. The parameterized value must be selected as low as possible.		
Special cases, errors,...	The pulses are cancelled earlier than defined in this machine data if the condition for the pulse cancellation is present via MD 36960: \$MA_SAFE_STANDSTILL_VELO_TOL or MD 36620: \$MA_SERVO_DISABLE_DELAY_TIME. If the timer in this machine data is set to zero, then an immediate transition is made from STOP B to a STOP A (immediate pulse cancellation).		
corresponds with ...	MD 36960: \$MA_SAFE_STANDSTILL_VELO_TOL MD 36620: \$MA_SERVO_DISABLE_DELAY_TIME MD 36060: \$MA_STANDSTILL_VELO_TOL		

36957	\$MA_SAFE_PULSE_DIS_CHECK_TIME		
MD number	Time to check pulse cancellation		
Default value: 0.1		Min. input limit: 0	Max. input limit: 10
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	This machine data specifies the time when, after pulse cancellation has been requested, the pulses must be actually cancelled. The time that elapses between setting the SGA "enable pulses" and detecting the SGE "pulses cancelled status" may not exceed the time limit set in this data.		
Special cases, errors,...	If this time is exceeded, a STOP A is initiated.		

8.1 Machine data for SINUMERIK 840D sl

36958	\$MA_SAFE_ACCEPTANCE_TST_TIMEOUT		
MD number	Time limit for the acceptance test duration		
Default value: 40.0		Min. input limit: 5	Max. input limit: 100
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: s
Data type: DOUBLE			
Significance:	<p>On the NCK side, a time limit can be entered for the duration of an acceptance test. If an acceptance test takes longer than the time specified in MD 36958, then the NCK terminates the test.</p> <p>The acceptance test status is set to zero on the NCK side. If the acceptance test has been reset, then on the NCK and drive sides, SI Power On alarms are again changed over from being able to be acknowledged with a reset to being able to be acknowledged with Power On.</p> <p>NCK clears Alarm 27007 and the drive clears Alarm 300952.</p> <p>This MD is also used to limit the duration of an acceptance test SE (safe limit positions). After the programmed time has expired, the acceptance test SE is interrupted and Alarm 27008 is cleared. The software limit positions are then again effective – the same as they are entered in the machine data.</p>		
corresponds with ...			

36960		\$MA_SAFE_STANDSTILL_VELO_TOL	
MD number		Shutoff speed for pulse suppression	
Default value: 0.0		Min. input limit: 0.0	Max. input limit: 6 000.
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm/min, rev/min
Data type: DOUBLE			
Significance:	When the axis/spindle speed drops below this limit, it is considered to be at a "standstill". In the STOP B mode the pulses are then cancelled (as a result of the transition to STOP A).		
corresponds with ...	MD 36956: \$MA_SAFE_PULSE_DISABLE_DELAY		

8.1 Machine data for SINUMERIK 840D sl

36961		\$MA_SAFE_VELO_STOP_MODE	
MD number		Stop response, safely reduced speed	
Default value: 5		Min. input limit: 0	Max. input limit: 14
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	<p>The stop response programmed in this machine data is initiated if a limit value for safely reduced speed 1, 2, 3 or 4 is exceeded. = 0, 1, 2, 3 correspond to STOP A, B, C, D – common for each SG level = 5 means that the stop response can be configured for specific SGs in MD 36963. The ones position defines the selection of the stop response when the safely reduced speed is exceeded. The tens position defines the behavior when the drive bus fails if a time greater than 0 was parameterized in \$MN_SAFE_PULSE_DIS_TIME_BUSFAIL. 0: Stop A 1: Stop B 2: Stop C 3: Stop D 4: Stop E 5: SAFE_VELO_STOP_MODE not valid – the stop response is parameterized using MD SAFE_VELO_STOP_REACTION 10: Stop A, in addition when the drive bus fails and SG is active, the pulses are not immediately cancelled 11: Stop B, in addition when the drive bus fails and SG is active, the pulses are not immediately cancelled 12: Stop C, in addition when the drive bus fails and SG is active, the pulses are not immediately cancelled 13: Stop D, in addition when the drive bus fails and SG is active, the pulses are not immediately cancelled 14: Stop E, in addition when the drive bus fails and SG is active, the pulses are not immediately cancelled</p>		
Special cases, errors,...	For a value of 5 in this MD, the stop response for each SG stage is selectively defined \$MA_SAFE_VELO_STOP_REACTION.		
corresponds with ...	MD 36931: \$MA_SAFE_VELO_LIMIT[n] MD 36963: \$MA_SAFE_VELO_STOP_REACTION[n]		

36962		\$MA_SAFE_POS_STOP_MODE	
MD number		Stop response, safe limit position	
Default value: 2		Min. input limit: 2	Max. input limit: 4
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	When passing a safe limit position 1 or 2, then the stop response specified in this machine data is initiated. 2: STOP C 3 STOP D 4 STOP E		
corresponds with ...	MD 36934: \$MA_SAFE_POS_LIMIT_PLUS[n] MD 36935: \$MA_SAFE_POS_LIMIT_MINUS[n]		

8.1 Machine data for SINUMERIK 840D sl

36963		\$MA_SAFE_VELO_STOP_REACTION[n]: 0 ... 3	
MD number		Stop response, safely reduced speed	
Default value: 2		Min. input limit: 0	Max. input limit: 14
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	<p>The stop response programmed in this machine data is initiated if a limit value for safely reduced speed 1, 2, 3 or 4 is exceeded. n = 0, 1, 2, 3 stands for SG1, SG2, SG3, SG4 The ones position defines the SG-specific selection of the stop response when the safely reduced speed is exceeded. The tens position defines the behavior when the drive bus fails on an SG-specific basis if a time greater than 0 was parameterized in \$MN_SAFE_PULSE_DIS_TIME_BUSFAIL. Value means: 0: Stop A 1: Stop B 2: Stop C 3: Stop D 4: Stop E 10: Stop A, in addition, when the drive bus fails, the pulses are not immediately cancelled if this SG stage is active. 11: Stop B, in addition, when the drive bus fails, the pulses are not immediately cancelled if this SG stage is active. 12: Stop C, in addition, when the drive bus fails, the pulses are not immediately cancelled if this SG stage is active. 13: Stop D, in addition, when the drive bus fails, the pulses are not immediately cancelled if this SG stage is active. 14: Stop E, in addition, when the drive bus fails, the pulses are not immediately cancelled if this SG stage is active.</p>		
Special cases, errors,...	This function is only active when MD 36961 and MD 1361 have the value 5.		
corresponds with ...	MD 10089: \$MA_SAFE_PULSE_DIS_TIME_BUSFAIL MD 36961: \$MA_SAFE_VELO_STOP_MODE		

8.1 Machine data for SINUMERIK 840D sl

36964	\$MA_SAFE_IPO_STOP_GROUP		
MD number	Grouping, safety IPO response		
Default value: 0		Min. input limit: 0	Max. input limit: 1
Change becomes effective after: RESET		Protection level: 7/2	Unit: -
Data type: BYTE			
Significance:	<p>This MD is only effective for Safety Integrated axes/spindles.</p> <p>It influences the channel-wide IPO response distribution of Safety Integrated.</p> <p>0 = default:</p> <p>All other axes/spindles in the channel are notified of the IPO stop response of this axis.</p> <p>1 =</p> <p>For internal stops, the axes and machining spindles, interpolating with the axis involved, are also additionally influenced via the initiated safety alarms. On the other hand, other axes/spindles in the channel continue to operate without any disturbance.</p> <p>For external stops (without alarm) all of the other axes/spindles remain unaffected by the safety axis/spindle stop. This allows, for example, the pulses of the spindle to be safely cancelled (using an external Stop A). This means that the spindle can be manually rotated and the axes can still be safely monitored while it is moving.</p> <p>If, in some machining situations, the other axes/spindles should stop together with the safety axis/spindle, then the user is responsible in implementing this using PLC or synchronous action logic combinations.</p>		
corresponds with ...			

36965		\$MA_SAFE_PARK_ALARM_SUPPRESS	
MD number		Alarm suppression for parking axis	
Default value: FALSE		Min. input limit: -	Max. input limit: -
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: -
Data type: BOOLEAN			
Significance:	This MD is only effective for Safety Integrated axes/spindles. 0: Default: Alarms 27000/A01797 are displayed when selecting parking. 1: Alarms 27000/A01797 are not displayed when selecting parking. This is necessary for axes that are disconnected from one another on the encoder side during the machining process (e.g. dressing axes). Alarms are displayed when parking operation is subsequently deselected.		
corresponds with ...			

8.1 Machine data for SINUMERIK 840D sl

36966	\$MA_SAFE_BRAKETEST_TORQUE		
MD number	Holding torque, brake test		
Default value: 5.0		Min. input limit: 0.0	Max. input limit: 800.0
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: %
Data type: DOUBLE			
Significance:	<p>This MD specifies the torque or force when testing the mechanical brake system. This torque or this force is generated during the test against the closed brake and it is not permissible that the axis moves.</p> <p>The percentage value entered here refers to drive parameter p2003 of the axis.</p> <p>When selecting the brake test (i.e. with the brake open), if the actual torque is more than 85% of the test torque, the brake test is interrupted with Alarm 20095. This therefore ensures that the motor can hold the axis even if the brake is defective.</p> <p>If the brake test is performed using drive parameter p1532 (\$MA_SAFE_BRAKETEST_CONTROL bit 0 = 0), the required safety margin is increased by twice the difference between the actual holding torque and the value in parameter p1532.</p> <p>The corresponding test function is enabled using MD \$MA_FIXED_STOP_MODE bit 1.</p>		
corresponds with ...	MD 36969: \$MN_SAFE_BRAKETEST_TORQUE_NORM		
Additional references	/FBSI/ see Chapter 7.4: "Safe brake test (SBT)"		

36967	\$MA_SAFE_BRAKETEST_POS_TOL		
MD number	Position tolerance, brake test		
Default value: 1.0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: mm/deg.
Data type: DOUBLE			
Significance:	Maximum position tolerance when testing the mechanical brake system. If the axis position deviates from the position by more than this tolerance, when the brake test is selected, then the brake test is aborted. The corresponding test function is enabled using MD \$MA_FIXED_STOP_MODE bit 1.		
corresponds with ...			
Additional references	/FBSI/ see Chapter 7.4: "Safe brake test (SBT)"		

36968	\$MA_SAFE_BRAKETEST_CONTROL		
MD number	Expanded setting for the brake test		
Default value: 0		Min. input limit: 0	Max. input limit: 1
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Expanded settings for the brake test. Bit 0: Select the average value for the torque limiting 0: Drive parameter p1532 is used as the average value of the torque limiting. 1: The measured torque at the instant in time that the brake test is selected is used as the average value of the torque limit.		
corresponds with ...			
Additional references	/FBSI/ see Chapter 7.4: "Safe brake test (SBT)"		

8.1 Machine data for SINUMERIK 840D sl

36969		\$MA_SAFE_BRAKETEST_TORQUE_NORM	
MD number		Reference quantity for the holding torque, brake test	
Default value: 0.0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: Nm
Data type: DOUBLE			
Significance:	Setting the reference quantity for torques. All of the torques specified as relative value refer to this reference quantity. This MD involves an image of drive parameter p2003.		
corresponds with ...			
Additional references			

Description of the parameterization of the SGE machine data MD 36970 to MD 36978

This machine data involves eight-digit hexadecimal numbers, where each digit has a different significance that is now explained:

Coding of the input assignment

is	mm	xx	nn	Permissible values	Explanation
i	Inversion			0, 8	0: No inversion 8: Inversion before processing
s	Segment No.			0, 4	4: Internal image in the system memory (system variable)
mm	Module No.			01–02	01: Addressing the internal SPL interface \$A_OUTSI 02: Addressing the external SPL interface (only for input signals, \$A_INSE)
xx	Sub-module No.			01–02	Index of the system variable word (each 32 bit)
nn	I/O No.			01–20	Bit number in the system variable word \$A_OUTSID[xx], \$A_INSED[xx]

If several output signals are set, then the signal involved is first inverted. The (in some cases inverted) output signals are then AND'ed and the result is output at the terminal.

8.1 Machine data for SINUMERIK 840D sl

Note

The maximum input value for all axial NCK_SGE configured machine data is 84020220

An incorrect entry will be detected the next time the system boots and flagged using Alarm 27033.

36970	\$MA_SAFE_SVSS_DISABLE_INPUT		
MD number	Input assignment, SBH/SG deselection		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	This machine data defines the NCK input to select/deselect the SBH and SG functions		
Configuration:	Signal means = 0, SG or SBH is selected = 1, SG and SBH are deselected Configuration: Refer to the coding of the input assignment		
Special cases, errors,...	<ul style="list-style-type: none">Input value of 0 means: There is no assignment, the input remains fixed at 0, SG and SBH cannot be deselectedInput value of 80 00 00 00 means: There is no assignment, the input remains fixed at 1If MD bit 31 is set, then the signal is processed inverted (i = 8).		
corresponds with ...			
References:			

36971	\$MA_SAFE_SS_DISABLE_INPUT		
MD number	Input assignment, SBH deselection		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Assignment of the NCK input to deselect the safe operating stop function. Configuration: Refer to the coding of the input assignment Assignment of the terminal signal level to the safe functions if safely reduced speed or safe operating stop has been activated. Signal means = 0, safe operating stop is selected = 1, safe operating stop is deselected (only if STOP C, D or E has not been activated by other functions)		
Special cases, errors,...	<ul style="list-style-type: none">If MD bit 31 is set, then the signal is processed inverted (i = 8).This input is of no significance if SG and SBH have been deselected (refer to \$MA_SAFE_SVSS_DISABLE_INPUT).		
corresponds with ...	MD 36970: \$MA_SAFE_SVSS_DISABLE_INPUT		

8.1 Machine data for SINUMERIK 840D sl

36972	\$MA_SAFE_VELO_SELECT_INPUT[n]: 0 ... 1																	
MD number	Input assignment, SG selection																	
Default value: 0		Min. input limit: –	Max. input limit: –															
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –															
Data type: DWORD																		
Significance:	This machine data defines the two inputs to select SG1, SG2, SG3 or SG4. Configuration: Refer to the coding of the input assignment n = 1, 0 stand for bit 1, 0 to select from SG1 to SG4 Assignment of the input bits to the safely reduced speeds: <table><tr><td>Bit 1</td><td>Bit 0</td><td>Selected SG</td></tr><tr><td>0</td><td>0</td><td>SG1</td></tr><tr><td>0</td><td>1</td><td>SG2</td></tr><tr><td>1</td><td>0</td><td>SG3</td></tr><tr><td>1</td><td>1</td><td>SG4</td></tr></table>			Bit 1	Bit 0	Selected SG	0	0	SG1	0	1	SG2	1	0	SG3	1	1	SG4
Bit 1	Bit 0	Selected SG																
0	0	SG1																
0	1	SG2																
1	0	SG3																
1	1	SG4																
Special cases, errors,...	If the MD bits 31 are set, then the signal is processed inverted (i = 8).																	
corresponds with ...	MD 36970: \$MA_SAFE_SVSS_DISABLE_INPUT																	

36973	\$MA_SAFE_POS_SELECT_INPUT		
MD number	Input assignment, SE selection		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	This machine data defines the input to select the safe limit position 1 or 2. Configuration: Refer to the coding of the input assignment Signal means = 0, SE1 is active = 1, SE2 is active		
Special cases, errors,...	If MD bit 31 is set, then the signal is processed inverted (i = 8).		
corresponds with ...	MD 36970: \$MA_SAFE_SVSS_DISABLE_INPUT		

36974	\$MA_SAFE_GEAR_SELECT_INPUT[n]: 0 ... 2																										
MD number	Input assignment, gearbox ratio selection																										
Default value: 0		Min. input limit: –	Max. input limit: –																								
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																								
Data type: DWORD																											
Significance:	Assignment of the input terminals for selecting the gear ratio (gear stage). Configuration: Refer to the coding of the input assignment n= 2, 1, 0 stand for bit 2, 1, 0 to select gearbox stages 1 to 8 <table><tr><td>Bit 2</td><td>Bit 1</td><td>Bit 0</td><td>active gearbox stage</td></tr><tr><td>0</td><td>0</td><td>0</td><td>Stage 1</td></tr><tr><td>0</td><td>0</td><td>1</td><td>Stage 2</td></tr><tr><td>0</td><td>1</td><td>0</td><td>Stage 3</td></tr><tr><td>...</td><td>...</td><td>...</td><td>...</td></tr><tr><td>1</td><td>1</td><td>1</td><td>Stage 8</td></tr></table>			Bit 2	Bit 1	Bit 0	active gearbox stage	0	0	0	Stage 1	0	0	1	Stage 2	0	1	0	Stage 3	1	1	1	Stage 8
Bit 2	Bit 1	Bit 0	active gearbox stage																								
0	0	0	Stage 1																								
0	0	1	Stage 2																								
0	1	0	Stage 3																								
...																								
1	1	1	Stage 8																								
Special cases, errors,...	If the MD bits 31 are set, then the signal is processed inverted (i = 8).																										
corresponds with ...	MD 36970: \$MA_SAFE_SVSS_DISABLE_INPUT																										

8.1 Machine data for SINUMERIK 840D sl

36977	\$MA_SAFE_EXT_STOP_INPUT[n]: 0 ... 3		
MD number	Input assignment, external brake request		
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	This data defines the NCK inputs to select/deselect the external brake requests. n = 0, 1, 2, 3 stands for various braking types n = 0: Assignment for "deselect external STOP A" (SH, pulse cancellation) n = 1: Assignment for "deselect external STOP C" (braking at the current limit) n = 2: Assignment for "deselect external STOP D" (braking along a path) n = 3: Assignment for "deselect external STOP E" (ESR, braking along a path)		
Special cases, errors,...	If the MD bits 31 are set, then the signal is processed inverted (i = 8). The signal "deselect external STOP A" can not be parameterized inverted. In the case of an error, a parameterizing error is signaled		
corresponds with ...	MD 36970: \$MA_SAFE_SVSS_DISABLE_INPUT		
Additional references			

36978	\$MA_SAFE_OVR_INPUT[n]: 0 ... 3																											
MD number	Input assignment, SG override																											
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –																									
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																									
Data type: DWORD																												
Significance:	Assigns the NCK inputs for the correction of the limit value of the safely reduced speeds 2 and 4. Configuration: Refer to the coding of the input assignment n = 3, 2, 1, 0 stand for correction selection bits 3, 2, 1, 0 Assigns the input bits to the SG correction values: <table><tr><td>Bit 3</td><td>Bit 2</td><td>Bit 1</td><td>Bit 0</td><td></td></tr><tr><td>0</td><td>0</td><td>0</td><td>0</td><td>Correction 0 is selected</td></tr><tr><td>0</td><td>0</td><td>0</td><td>1</td><td>Correction 1 is selected</td></tr><tr><td colspan="5">to</td></tr><tr><td>1</td><td>1</td><td>1</td><td>1</td><td>Correction 15 is selected</td></tr></table> The correction factor itself (percentage) is defined using the following machine data: MD 36932: \$MA_SAFE_VELO_OVR_FACTOR[n]			Bit 3	Bit 2	Bit 1	Bit 0		0	0	0	0	Correction 0 is selected	0	0	0	1	Correction 1 is selected	to					1	1	1	1	Correction 15 is selected
Bit 3	Bit 2	Bit 1	Bit 0																									
0	0	0	0	Correction 0 is selected																								
0	0	0	1	Correction 1 is selected																								
to																												
1	1	1	1	Correction 15 is selected																								
Special cases, errors,...	<ul style="list-style-type: none">– The function "correction, safely reduced speed" is enabled using MD 36901: \$MA_SAFE_FUNCTION_ENABLE, bit 5.– If the MD bits 31 are set, then the signal is processed inverted (i = 8).																											
corresponds with ...	MD 36932: \$MA_SAFE_VELO_OVR_FACTOR[n]																											
Additional references	/FBSI/ see Chapter 6.5.4: "Override for safely reduced speed", refer to MD 36970: \$MA_SAFE_SVSS_DISABLE_INPUT																											

Description of the parameterization of the SGA machine data MD 36980 to MD 36990**Coding of the output assignment**

is	mm	xx	nn	Permissi- ble values	Explanation
i	Inversion			0, 8	0: No inversion 8: Inversion before processing
s	Segment No.			0, 4	4: Internal image in the system memory (system variable)
mm	Module No.			01	01: Addressing the internal SPL interface \$A_INSI
xx	Sub- module No.			01–02	Index of the system variable word (each 32 bit)
nn	I/O No.			01–20	Bit number in the system variable word \$A_INSID[xx]

Note

The maximum input value for all axial NCK_SGA configuring machine data is 84010220

An incorrect entry will be detected the next time the system boots and flagged using Alarm 27033.

8.1 Machine data for SINUMERIK 840D sl

36980	\$MA_SAFE_SVSS_STATUS_OUTPUT		
MD number	Output assignment, SBH/SG active		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Assigns the output to signal the status of the functions safely reduced speed and safe operating stop. Signal means: = 0, SG and SBH are not active = 1, SG or SBH is active		
Special cases, errors,...	<ul style="list-style-type: none">– Input value of 0 means: There is no assignment, the output remains unaffected– Input value of 80 00 00 00 means: There is no assignment, the output remains fixed at 1– If a single output signal is connected to a terminal, the following applies: If MD bit 31 is set, then the signal is processed inverted (i = 8).– If several output signals are connected to the same terminal, the following applies: If MD bit 31 is set (i = 8), then the relevant signal is initially inverted. The (in some cases inverted) output signals are then AND'ed and the result is output at the terminal.		
corresponds with ...			
Additional references	Refer to MD 36970: \$MA_SAFE_SVSS_DISABLE_INPUT		

36981	\$MA_SAFE_SS_STATUS_OUTPUT		
MD number	Output assignment for SBH active		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	This machine data defines the output or the system variable for the "SBH active" signal. Configuration: Refer to the coding of the output assignment Signal means = 0, SBH is not active = 1, SBH is active		
Special cases, errors,...	If MD bit 31 is set, then the signal is processed inverted.		
Additional references	Refer to MD 36980: \$MA_SAFE_SVSS_DISABLE_OUTPUT		

8.1 Machine data for SINUMERIK 840D sl

36982	\$MA_SAFE_VELO_STATUS_OUTPUT[n]: 0 ... 1		
MD number	Output assignment active SG selection		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	This machine data defines the outputs or the system variables for the signals "SG active bit 0" and "SG active bit 1". Configuration: Refer to the coding of the output assignment n = 1, 0 stands for SG active, bits 1, 0 SG active Bit 1 Bit 0 means = 0 = 0 SG1 active, if SBH/SG is active and SBH is not active SBH active, if SBH/SG are active and SBH is active = 1 = 0 SG2 active = 0 = 1 SG3 active = 1 = 1 SG4 active		
Special cases, errors,...	If MD bit 31 is set, then the signal is processed inverted.		
Additional references	Refer to MD 36980: \$MA_SAFE_SVSS_DISABLE_OUTPUT		

36985	\$MA_SAFE_VELO_X_STATUS_OUTPUT		
MD number	Output assignment for n < n _x		
Default value: 0		Min. input limit: –	Max. input limit:
Change becomes effective after: POWER ON		Protection level: 7/2	Unit:
Data type: DWORD			
Significance:	<p>This machine data defines the output or the system variable for the signal "n < n_x".</p> <p>Configuration: Refer to the coding of the output assignment</p> <p>Signal means</p> <p>= 0, actual speed is higher than the limit speed in \$MA_SAFE_VELO_X</p> <p>= 1, actual speed is lower or equal to the limit speed</p>		
Special cases, errors,...	If MD bit 31 is set, then the signal is processed inverted.		
corresponds with ...	MD 36946: \$MA_SAFE_VELO_X		
Additional references	Refer to MD 36980: \$MA_SAFE_SVSS_DISABLE_OUTPUT		

36987	\$MA_SAFE_REFP_STATUS_OUTPUT		
MD number	Output assignment, axis safely referenced		
Default value: 0		Min. input limit: 0	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>This machine data specifies the output for the "axis safely referenced" signal.</p> <p>Signal</p> <p>= 0</p> <p>Axis is not safely referenced (i.e. the safe limit position monitoring is inactive!)</p> <p>= 1</p> <p>Axis is safely referenced</p>		
Special cases, errors,...	If MD bit 31 is set, then the signal is processed inverted.		
Additional references	Refer to MD 36980: \$MA_SAFE_SVSS_DISABLE_OUTPUT		

8.1 Machine data for SINUMERIK 840D sl

36988	\$MA_SAFE_CAM_PLUS_OUTPUT[n]: 0 ... 3		
MD number	Output assignment, SN1+ to SN4+		
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	This machine data specifies the outputs for the cam signals SN1+ to SN4+. n = 0, 1, 2, 3 stands for the assignment of plus cams SN1+, SN2+, SN3+, SN4+ Signal means = 0 Axis is located to the left of the cam (actual value < cam position) = 1 Axis is located to the right of the cam (actual value > cam position)		
Special cases, errors,...	If MD bit 31 is set, then the signal is processed inverted.		
Additional references	Refer to MD 36980: \$MA_SAFE_SVSS_DISABLE_OUTPUT (/FBSI/ see Chapter 6.8: Safe software cams, output assignment)		

36989	\$MA_SAFE_CAM_MINUS_OUTPUT[n]: 0 ... 3		
MD number	Output assignment, SN1– to SN4–		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit:
Data type: DWORD			
Significance:	This machine data defines the outputs for the minus cams SN1– to SN4–. n = 0, 1, 2, 3 corresponds to the assignment for minus cams SN1–, SN2–, SN3–, SN4– Signal means = 0 Axis is located to the left of the cam (actual value < cam position) = 1 Axis is located to the right of the cam (actual value > cam position)		
Special cases, errors,...	– In order to generate a cam signal to identify the range, a cam must be negated and must be parameterized with another cam at the same output.		
Additional references	Refer to MD 36980: \$MA_SAFE_SVSS_DISABLE_OUTPUT (/FBSI/ see Chapter 6.8: Safe software cams, output assignment)		

36990	\$MA_SAFE_ACT_STOP_OUTPUT[n]: 0...3		
MD number	Output assignment of the active stop		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	Assignment of the output terminals to display the stops that are presently active. Index = 0: Assignment for "STOP A/B is active" Index = 1: Assignment for "STOP C is active" Index = 2: Assignment for "STOP D is active" Index = 3: Assignment for "STOP E is active"		
Special cases, errors,...			
corresponds with ...			
Additional references	Refer to MD 36980: \$MA_SAFE_SVSS_DISABLE_OUTPUT		

8.1 Machine data for SINUMERIK 840D sl

36992		\$MA_SAFE_CROSSCHECK_CYCLE	
MD number		Displays the axial crosswise comparison clock cycle	
Default value: 0.0		Min. input limit: 0	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: s
Data type: DOUBLE			
Significance:	Safety system, display date: Indicates the effective axial comparison clock cycle in seconds. The clock cycle is obtained from INFO_SAFETY_CYCLE_TIME and the number of data to be compared crosswise. The axial value displayed depends on the associated drive module, as the length of the crosswise comparison list differs between performance–1/Standard–2 and Performance–2 modules.		
Special cases, errors,...			

36993	\$MA_SAFE_CONFIG_CHANGE_DATE[n]: n = 0...7		
MD number	Date/time of the last change SI–NCK–MD		
Default value: ""		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: –
Data type: STRING			
Significance:	Safety system, display date: Date and time of the last configuration change of safety–related NCK machine data. Changes made to the machine data that are calculated into the axial checksums SAFE_ACT_CHECKSUM are recorded.		
Special cases, errors,...			

36994	\$MA_SAFE_PREV_CONFIG[n]: n = 0...8		
MD number	Data, previous safety configuration		
Default value: 0		Min. input limit: –	Max. input limit: FFFFFFFF
Change becomes effective after: POWER ON		Protection level: 0/0	Unit: –
Data type: DWORD			
Significance:	Buffer memory to save previous safety configuration data Index[0]: Status flag bit of the change history Index[1]: Previous value, function enable Index[2]: Previous value, reference checksum Index[3]: Last value, function enable before loading standard data Index[4]: Last value, reference checksum before loading standard data Index[5]: Previous value, reference checksum[1] Index[6]: Last value, reference checksum [1] before loading standard data Index[7]: Previous value, reference checksum[2] Index[8]: Last value, reference checksum [2] before loading standard data		
Special cases, errors,...			

8.1 Machine data for SINUMERIK 840D sl

36995	\$MA_SAFE_STANDSTILL_POS		
MD number	Standstill position		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 0/0	Unit: –
Data type: DWORD			
Significance:	<p>The position at which the axis has currently stopped is displayed in this MD.</p> <p>To be able to perform a plausibility check on the axis referencing when the control system is powered-up the next time, the current axis position is permanently saved (in a non-volatile fashion) when the following events take place:</p> <ul style="list-style-type: none"> – When safe operating stop (SBH) is selected – Cyclically when SE/SN is active 		
Special cases, errors,...	Any manual changes to the MD are detected the next time that the control is powered-up (plausibility check). A new user agreement is required after referencing.		

36997	\$MA_SAFE_ACKN		
MD number	User acknowledgement		
Default value: 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>The status of the user agreement is displayed in this machine data.</p> <p>The user can confirm or cancel his "user agreement" using an appropriate screen.</p> <p>If it is internally detected in the software that the reference to the machine has been lost, then it is automatically cancelled (e.g. when changing over gear ratios or when referencing, the plausibility check when comparing with the saved stop position fails).</p>		
Special cases, errors,...	Any manual changes to the MD are detected the next time that the control is powered-up (plausibility check). A new user agreement is required after referencing.		

36998	\$MA_SAFE_ACT_CHECKSUM[0,1,2]		
MD number	Actual checksum		
Default value: 0, 0, 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/0	Unit: –
Data type: DWORD			
Significance:	<p>The actual checksum – calculated after power on or a reset – over the current values of safety-related machine data is entered here.</p> <p>Assigning the indices:</p> <p>Index 0: Axial monitoring functions and global NC machine data for Safety Integrated</p> <p>Index 1: HW component IDs</p> <p>Index 2: PROFIsafe parameters from the S7 configuring</p>		

8.1 Machine data for SINUMERIK 840D sl

36999	\$MA_SAFE_DES_CHECKSUM[0,1,2]		
MD number	Reference checksum		
Default value: 0, 0, 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/1	Unit: –
Data type: DWORD			
Significance:	<p>This machine data contains the reference checksum over the actual values of safety-related machine data that was saved during the last machine acceptance test.</p> <p>Assigning the indices:</p> <p>Index 0: Axial monitoring functions and global NC machine data for Safety Integrated</p> <p>Index 1: HW component IDs</p> <p>Index 2: PROFIsafe parameters from the S7 configuring</p>		

37000	\$MA_FIXED_STOP_MODE		
MD number	Travel to fixed stop mode		
Default value: 0		Min. input limit: 0	Max. input limit: 3
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: BYTE			
Significance:	<p>This machine data defines how the "Travel to fixed stop" function can be started.</p> <p>0: Travel to fixed stop not available.</p> <p>1: Travel to fixed stop can be started from the NC program with command FXS[0,1] = 1.</p> <p>2: The function is only controlled from the PLC</p> <p>3: NCK and PLC are peers [same priority] (user ensures synchronization)</p>		

37900	\$MA_SAFE_CAM_TRACK_OUTPUT[0...3]		
MD number	Output assignment cam tracks 1 to 4		
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>This machine data specifies the outputs for cam tracks 1 to 4.</p> <p>Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT</p> <p>n = 0, 1, 2, 3 corresponds to the assignment for cam tracks 1 to 4</p> <p>Signal means</p> <p>= 0, axis is not located on a cam of cam track n</p> <p>= 1, axis is located on a cam of cam track n</p>		
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE.</p> <p>If MD bit 31 is set, then the signal is processed inverted.</p>		

8.1 Machine data for SINUMERIK 840D sl

37901	\$MA_SAFE_CAM_RANGE_OUTPUT_1[0...3]																						
MD number	Output assignment, cam range for cam track 1																						
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –																				
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																				
Data type: DWORD																							
Significance:	<p>This machine data specifies the outputs for the cam range of cam track 1. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT n = 0, 1, 2, 3 corresponds to the 4 bits to specify the range on cam track 1</p> <table><tr><td>Bit 3</td><td>Bit 2</td><td>Bit 1</td><td>Bit 0</td><td></td></tr><tr><td>0</td><td>0</td><td>0</td><td>0</td><td>Cam range 0 is active</td></tr><tr><td>0</td><td>0</td><td>0</td><td>1</td><td>Cam range 1 is active</td></tr></table> <p>up to ...</p> <table><tr><td>1</td><td>1</td><td>1</td><td>1</td><td>Cam range 15 is active</td></tr></table> <p>The cam range is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[n] Signal means = 0...14, axis is located in the range of the cam that was assigned to range ID 0...14 on cam track 1. = 15 axis is located in the range to the right of the outermost cam of cam track 1</p>			Bit 3	Bit 2	Bit 1	Bit 0		0	0	0	0	Cam range 0 is active	0	0	0	1	Cam range 1 is active	1	1	1	1	Cam range 15 is active
Bit 3	Bit 2	Bit 1	Bit 0																				
0	0	0	0	Cam range 0 is active																			
0	0	0	1	Cam range 1 is active																			
1	1	1	1	Cam range 15 is active																			
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If not all of the 4 bits are assigned, then under certain circumstances, it cannot be uniquely and clearly identified as to which cam range is active.</p>																						
corresponds with ...	MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT																						

37902	\$MA_SAFE_CAM_RANGE_OUTPUT_2[0...3]																						
MD number	Output assignment, cam range for cam track 2																						
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –																				
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																				
Data type: DWORD																							
Significance:	<p>This machine data specifies the outputs for the cam range of cam track 2. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT n = 0, 1, 2, 3 corresponds to the 4 bits to specify the range on cam track 2</p> <table><tr><td>Bit 3</td><td>Bit 2</td><td>Bit 1</td><td>Bit 0</td><td></td></tr><tr><td>0</td><td>0</td><td>0</td><td>0</td><td>Cam range 0 is active</td></tr><tr><td>0</td><td>0</td><td>0</td><td>1</td><td>Cam range 1 is active</td></tr></table> <p>up to ...</p> <table><tr><td>1</td><td>1</td><td>1</td><td>1</td><td>Cam range 15 is active</td></tr></table> <p>The cam range is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[n] Signal means = 0...14, axis is located in the range of the cam that was assigned to range ID 0...14 on cam track 2. = 15 axis is located in the range to the right of the outermost cam of cam track 2</p>			Bit 3	Bit 2	Bit 1	Bit 0		0	0	0	0	Cam range 0 is active	0	0	0	1	Cam range 1 is active	1	1	1	1	Cam range 15 is active
Bit 3	Bit 2	Bit 1	Bit 0																				
0	0	0	0	Cam range 0 is active																			
0	0	0	1	Cam range 1 is active																			
1	1	1	1	Cam range 15 is active																			
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If not all of the 4 bits are assigned, then under certain circumstances, it cannot be uniquely and clearly identified as to which cam range is active.</p>																						
corresponds with ...	MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT																						

8.1 Machine data for SINUMERIK 840D sl

37903	\$MA_SAFE_CAM_RANGE_OUTPUT_3[0...3]																						
MD number	Output assignment, cam range for cam track 3																						
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –																				
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																				
Data type: DWORD																							
Significance:	<p>This machine data specifies the outputs for the cam range of cam track 3. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT n = 0, 1, 2, 3 corresponds to the 4 bits to specify the range on cam track 3</p> <table><tr><td>Bit 3</td><td>Bit 2</td><td>Bit 1</td><td>Bit 0</td><td></td></tr><tr><td>0</td><td>0</td><td>0</td><td>0</td><td>Cam range 0 is active</td></tr><tr><td>0</td><td>0</td><td>0</td><td>1</td><td>Cam range 1 is active</td></tr></table> <p>up to ...</p> <table><tr><td>1</td><td>1</td><td>1</td><td>1</td><td>Cam range 15 is active</td></tr></table> <p>The cam range is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[n] Signal means = 0...14, axis is located in the range of the cam that was assigned to range ID 0...14 on cam track 3. = 15 axis is located in the range to the right of the outermost cam of cam track 3</p>			Bit 3	Bit 2	Bit 1	Bit 0		0	0	0	0	Cam range 0 is active	0	0	0	1	Cam range 1 is active	1	1	1	1	Cam range 15 is active
Bit 3	Bit 2	Bit 1	Bit 0																				
0	0	0	0	Cam range 0 is active																			
0	0	0	1	Cam range 1 is active																			
1	1	1	1	Cam range 15 is active																			
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If not all of the 4 bits are assigned, then under certain circumstances, it cannot be uniquely and clearly identified as to which cam range is active.</p>																						
corresponds with ...	MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT																						

37904	\$MA_SAFE_CAM_RANGE_OUTPUT_4[0...3]																						
MD number	Output assignment, cam range for cam track 4																						
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –																				
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –																				
Data type: DWORD																							
Significance:	<p>This machine data specifies the outputs for the cam range of cam track 4. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT n = 0, 1, 2, 3 corresponds to the 4 bits to specify the range on cam track 4</p> <table><tr><td>Bit 3</td><td>Bit 2</td><td>Bit 1</td><td>Bit 0</td><td></td></tr><tr><td>0</td><td>0</td><td>0</td><td>0</td><td>Cam range 0 is active</td></tr><tr><td>0</td><td>0</td><td>0</td><td>1</td><td>Cam range 1 is active</td></tr></table> <p>up to ...</p> <table><tr><td>1</td><td>1</td><td>1</td><td>1</td><td>Cam range 15 is active</td></tr></table> <p>The cam range is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[n] Signal means = 0...14, axis is located in the range of the cam that was assigned to range ID 0...14 on cam track 4. = 15 axis is located in the range to the right of the outermost cam of cam track 4</p>			Bit 3	Bit 2	Bit 1	Bit 0		0	0	0	0	Cam range 0 is active	0	0	0	1	Cam range 1 is active	1	1	1	1	Cam range 15 is active
Bit 3	Bit 2	Bit 1	Bit 0																				
0	0	0	0	Cam range 0 is active																			
0	0	0	1	Cam range 1 is active																			
1	1	1	1	Cam range 15 is active																			
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If not all of the 4 bits are assigned, then under certain circumstances, it cannot be uniquely and clearly identified as to which cam range is active.</p>																						
corresponds with ...	MD 37900: \$MA_SAFE_CAM_TRACK_OUTPUT																						

37906	\$MA_SAFE_CAM_RANGE_BIN_OUTPUT_1[0...14]
MD number	Output assignment, cam range bit for cam track 1
Default value: 0, 0, 0, 0	Min. input limit: 0
	Max. input limit: –

8.1 Machine data for SINUMERIK 840D sl

37906	\$MA_SAFE_CAM_RANGE_BIN_OUTPUT_1[0...14]
MD number	Output assignment, cam range bit for cam track 1
Change becomes effective after: POWER ON	
Protection level: 7/2	
Unit: –	
Data type: DWORD	
Significance:	<p>This machine data specifies the outputs for the cam range bits of cam track 1. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT Field index n corresponds to the parameterizable cam range numbers on cam track 1.</p> <p>The cam range number is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[0...29]</p> <p>Signal means = 0, axis is not located on the cam with cam range number n = 1, axis is located on the cam with cam range number n Example: The signal that is addressed using field index 5 goes to 1 if the axis is located at the cam that is assigned to cam track 1 by parameterizing the cam range number 5.</p>
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If the cam range number n is not parameterized on cam track 1 then the signal of field index n can never go to 1. The output MD with field index n must in this case not be parameterized.</p>

37907	\$MA_SAFE_CAM_RANGE_BIN_OUTPUT_2[0...14]
MD number	Output assignment, cam range bit for cam track 2
Default value: 0, 0, 0, 0	
Min. input limit: 0	
Max. input limit: –	
Change becomes effective after: POWER ON	
Protection level: 7/2	
Unit: –	
Data type: DWORD	
Significance:	<p>This machine data specifies the outputs for the cam range bits of cam track 2. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT Field index n corresponds to the parameterizable cam range numbers on cam track 2.</p> <p>The cam range number is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[0...29]</p> <p>Signal means = 0, axis is not located on the cam with cam range number n = 1, axis is located on the cam with cam range number n Example: The signal that is addressed using field index 5 goes to 1 if the axis is located at the cam that is assigned to cam track 2 by parameterizing the cam range number 5.</p>
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If the cam range number n is not parameterized on cam track 2 then the signal of field index n can never go to 1. The output MD with field index n must in this case not be parameterized.</p>

8.1 Machine data for SINUMERIK 840D sl

37908	\$MA_SAFE_CAM_RANGE_BIN_OUTPUT_3[0...14]		
MD number	Output assignment, cam range bit for cam track 3		
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>This machine data specifies the outputs for the cam range bits of cam track 3. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT Field index n corresponds to the parameterizable cam range numbers on cam track 3.</p> <p>The cam range number is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[0...29]</p> <p>Signal means = 0, axis is not located on the cam with cam range number n = 1, axis is located on the cam with cam range number n Example: The signal that is addressed using field index 5 goes to 1 if the axis is located at the cam that is assigned to cam track 3 by parameterizing the cam range number 5.</p>		
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If the cam range number n is not parameterized on cam track 3 then the signal of field index n can never go to 1. The output MD with field index n must in this case not be parameterized.</p>		

37909	\$MA_SAFE_CAM_RANGE_BIN_OUTPUT_4[0...14]		
MD number	Output assignment, cam range bit for cam track 3		
Default value: 0, 0, 0, 0		Min. input limit: –	Max. input limit: –
Change becomes effective after: POWER ON		Protection level: 7/2	Unit: –
Data type: DWORD			
Significance:	<p>This machine data specifies the outputs for the cam range bits of cam track 4. Configuration: see \$MA_SAFE_SVSS_STATUS_OUTPUT Field index n corresponds to the parameterizable cam range numbers on cam track 4.</p> <p>The cam range number is defined using the following machine data: MD 36938: \$MA_SAFE_CAM_TRACK_ASSIGN[0...29]</p> <p>Signal means = 0, axis is not located on the cam with cam range number n = 1, axis is located on the cam with cam range number n Example: The signal that is addressed using field index 5 goes to 1 if the axis is located at the cam that is assigned to cam track 4 by parameterizing the cam range number 5.</p>		
Special cases, errors,...	<p>The "safe cam track" function is enabled using MD 36903 \$MA_SAFE_CAM_ENABLE. If the MD bits 31 are set, then the signal is processed inverted. If the cam range number n is not parameterized on cam track 4 then the signal of field index n can never go to 1. The output MD with field index n must in this case not be parameterized.</p>		

8.2 Parameters for SINAMICS S120

Note

Some safety parameters for the motion monitoring functions on the CU are protected with access level 4 (manufacturer access) which means that as standard, they are not visible in the expert list of the STARTER drive commissioning tool. However, the access stage is reduced as a result of a user-specific view for SINUMERIK 840D sl to 3 (expert access) so that the safety parameters for the motion monitoring functions are visible on the HMI without having to enter a password for the access stage.

This comment must be taken into account for all safety parameters for the motion monitoring functions (name "SI Motion...") that are listed in the following Chapters: There, standard access level 4 is sometimes specified, while in operation with SINUMERIK 840D sl, access level 3 is actually effective.

The following parameters are available:

- Safety parameters for the Control Unit
- Safety parameters for the Motor Module

Parameter number

The parameter number consists of a "p" or "r", followed by the parameter number and the index (optional).

Examples of how the number is represented in the parameter list:

- p... Setting parameters (can be read and written to)
- r... Visualization parameters (read-only)
- p0918 Setting parameter 918
- p0099[0...3] Setting parameter 99, indices 0 to 3
- p1001[0...n] Setting parameter 1001, indices 0 to n (n = configurable)
- r0944 Visualization parameter 944

Other examples of the notation used in the documentation:

- p1070[1] Setting parameter 1070, index 1
- p2098[1].3 Setting parameter 2098, index 1, bit 3
- r0945[2](3) Visualization parameter 945, index 2 of drive object 3
- p0795.4 Setting parameter 795, bit 4

The possible data types of parameter values are as follows:

I8	Integer8	8 Bit integer number
I16	Integer16	16 Bit integer number
I32	Integer32	32 Bit integer number
U8	Unsigned8	8 Bit without sign
U16	Unsigned16	16 Bit without sign

8.2 Parameters for SINAMICS S120

U32	Unsigned32	32 Bit without sign
REAL32	REAL32	Floating-point number (32 bits)

For a complete list of the parameters in the SINAMICS S120 drive system, refer to:

References: /LH1/ SINAMICS S List Manual

8.2.1 Parameter overview

When copying, the parameters with grey background are not taken into consideration. The machine manufacturer must manually enter this data.

Table 8-2 Parameters for SINAMICS S120

Designators for SINAMICS S120		Equivalent MD for 840D sl	
No.	Name	No.	Name
p2003	Reference torque	36969	\$MN_SAFE_BRAKETEST_TORQUE_NORM
Parameters for motion monitoring functions			
p9500	SI motion monitoring clock cycle (Control Unit)	10090	\$MN_SAFETY_SYSCLOCK_TIME_RATIO
p9501	SI motion enable safety functions (Control Unit)	36901	\$MA_SAFE_FUNCTION_ENABLE
p9502	SI motion axis type (Control Unit)	36902	\$MA_SAFE_IS_ROT_AX
p9503	SI motion SCA (SN) enable (Control Unit)	36903	\$MA_SAFE_CAM_ENABLE
p9505	SI motion SCA (SN) enable (Control Unit)	36905	\$MA_SAFE_MODULO_RANGE
p9516	SI motion, motor encoder configuration, safety-related functions (CU)	36916	\$MA_SAFE_ENC_IS_LINEAR
p9517	SI motion linear scale, grid division (Control Unit)	36917	\$MA_SAFE_ENC_GRID_POINT_DIST
p9518	SI motion encoder pulses per revolution (Control Unit)	36918	\$MA_SAFE_ENC_RESOL
p9519	SI motion fine resolution G1_XIST1 (Control Unit)	36919	\$MA_SAFE_ENC_PULSE_SHIFT
p9520	SI motion spindle pitch (Control Unit)	36920	\$MA_SAFE_ENC_GEAR_PITCH
p9521	SI motion, gearbox, encoder/load, denominator (Control Unit)	36921	\$MA_SAFE_ENC_GEAR_DENOM[n]
p9522	SI motion, gearbox, encoder/load, numerator (Control Unit)	36922	\$MA_SAFE_ENC_GEAR_NUMERA[n]
p9526	SI motion, encoder assignment control (Control Unit)		
p9530	SI motion standstill tolerance (Control Unit)	36930	\$MA_SAFE_STANDSTILL_TOL
p9531	SI motion SLS (SG) limits (Control Unit)	36931	\$MA_SAFE_VELO_LIMIT[n]
p9532	SI motion SLS (SG) override factor (Control Unit)	36932	SAFE_VELO_OVR_FACTOR[n]
p9534	SI motion SLP (SE) upper limit values (Control Unit)	36934	\$MA_SAFE_POS_LIMIT_PLUS[n]
p9535	SI motion SLP (SE) lower limit values (Control Unit)	36935	\$MA_SAFE_POS_LIMIT_MINUS[n]
p9536	SI motion SCA (SN) plus cam position (Control Unit)	36936	\$MA_SAFE_CAM_POS_PLUS[n]
p9537	SI motion, SCA (SN) minus cam position	36937	\$MA_SAFE_CAM_POS_MINUS[n]

8.2 Parameters for SINAMICS S120

Table 8-2 Parameters for SINAMICS S120

No.	Name	No.	Name
p9538	SI motion SCA (SN) cam track assignment (Control Unit)	36938	\$MA_SAFE_CAM_TRACK_ASSIGN
p9540	SI motion SCA (SN) tolerance (Control Unit)	36940	\$MA_SAFE_CAM_TOL
p9542	SI motion actual value comparison tolerance (crosswise) (Control Unit)	36942	\$MA_SAFE_POS_TOL
p9544	SI motion actual value comparison tolerance (referencing) (CU)	36944	\$MA_SAFE_REFP_POS_TOL
p9546	SI motion SSM (SGA n < nx) speed limit n_x (CU)	36946	\$MA_SAFE_VELO_X
p9548	SI motion SBR actual speed tolerance (Control Unit)	36948	\$MA_SAFE_STOP_VELO_TOL
p9549	SI motion slip speed tolerance (Control Unit)	36949	\$MA_SAFE_SLIP_VELO_TOL
p9550	SI motion SGE changeover tolerance time (Control Unit)	36950	\$MA_SAFE_MODE_SWITCH_TIME
p9551	SI motion SGE changeover delay time (Control Unit)	36951	\$MA_SAFE_VELO_SWITCH_DELAY
p9552	SI motion transition time STOP C to SOS (SBH) (Control Unit)	36952	\$MA_SAFE_STOP_SWITCH_TIME_C
p9553	SI motion transition time STOP D to SOS (SBH) (Control Unit)	36953	\$MA_SAFE_STOP_SWITCH_TIME_D
p9554	SI motion transition time STOP E to SOS (SBH) (Control Unit)	36954	\$MA_SAFE_STOP_SWITCH_TIME_E
p9555	SI motion transition time STOP F to STOP B (Control Unit)	36955	\$MA_SAFE_STOP_SWITCH_TIME_F
p9556	SI motion pulse cancelation delay time (Control Unit)	36956	\$MA_SAFE_PULSE_DISABLE_DELAY
p9557	SI motion pulse cancelation checking time (Control Unit)	36957	\$MA_SAFE_PULSE_DIS_CHECK_TIME
p9558	SI motion acceptance test time limit (Control Unit)	36958	\$MA_SAFE_ACCEPTANCE_TST_TIMEOUT
p9560	SI motion pulse cancelation shutdown speed (Control Unit)	36960	\$MA_SAFE_STANDSTILL_VELO_TOL
p9561	SI motion SLS (SG) stop response (Control Unit)	36961	\$MA_SAFE_VELO_STOP_MODE
p9562	SI motion SLP (SE) stop response (Control Unit)	36962	\$MA_SAFE_POS_STOP_MODE
p9563	SI motion SLS (SG)-specific stop response (Control Unit)	36963	\$MA_SAFE_VELO_STOP_REACTION[n]
p9570	SI motion acceptance test mode (Control Unit)		Corresponds to BTSS variables for NCK
p9571	SI motion acceptance test status (Control Unit)		Corresponds to BTSS variables for NCK
p9590	SI motion version safe motion monitoring (Control Unit)		
Parameters for basic safety functions integrated in the drive			
p9601	SI enable functions integrated in the drive (Control Unit)		
p9602	SI enable safe brake control (Control Unit)		
p9620	BI: SI signal source for STO (SH)/SBC/SS1 (Control Unit)		
p9650	SI SGE changeover tolerance time (Control Unit)		
p9652	SI Safe Stop 1 delay time (Control Unit)		
p9658	SI transition time STOP F to STOP A (Control Unit)		
p9659	SI forced checking procedure, timer		

8.2 Parameters for SINAMICS S120

Table 8-2 Parameters for SINAMICS S120

No.	Name	No.	Name
General diagnostic parameters on the CU			
r9710	SI motion, diagnostics result list 1		Not available for NCK
r9711	SI motion, diagnostics result list 2		Not available for NCK
r9712	SI motion diagnostics position actual value motor side		Not available for NCK
r9713	SI motion diagnostics position actual value load side		Not available for NCK
r9714	SI motion diagnostics speed actual value load side		Not available for NCK
r9718	CO/BO: SI motion, control signals 1		
r9719	CO/BO: SI motion, control signals 2		
r9721	SI motion, status signals		
r9725	SI motion, diagnostics STOP F		For 840D, integrated into the alarm text
p9726	SI motion, user agreement, select/deselect		Corresponds to BTSS variables for NCK
r9727	SI motion, internal drive user agreement	36997	\$MA_SAFE_ACKN
r9728	SI motion, actual checksum, SI parameters	36998	\$MA_SAFE_ACT_CHECKSUM
p9729	SI motion, reference checksum, SI parameters	36999	\$MA_SAFE_DES_CHECKSUM
p9735	SI motion, diagnostics result list 3		
p9736	SI motion, diagnostics result list 4		
p9737	SI motion, diagnostics result list 5		
p9738	SI motion, diagnostics result list 6		
p9739	SI motion, diagnostics result list 7		
r9744	SI message buffer changes, counter		
r9747	SI message code		
r9748	SI message time received in milliseconds		
r9749	SI message value		
p9752	SI message cases, counter		
r9753	SI message value for float values		
r9754	SI message time received in days		
r9755	SI message time removed in milliseconds		
r9756	SI message time removed in days		
p9759	SI acknowledge messages, drive object		
p9761	SI password input		
p9762	SI password, new		
p9763	SI password acknowledgment		
r9770	SI version, safety functions integrated in the drive (Control Unit)		
r9771	SI common functions (Control Unit)		
r9772	CO/BO: SI status (Control Unit)		
r9773	CO/BO: SI status (Control Unit+Motor Module)		
r9774	CO/BO: SI status (safe standstill group)		
r9780	SI monitoring clock cycle (Control Unit)		
r9794	SI crosswise comparison list (Control Unit)		
r9795	SI diagnostics, STOP F (Control Unit)		
r9798	SI actual checksum SI parameters (Control Unit)		
p9799	SI reference checksum SI parameters (Control Unit)		

Table 8-2 Parameters for SINAMICS S120

No.	Name	No.	Name
Parameters for functions integrated in the drive MM			
p9801	SI enable safety functions (Motor Module)		
p9802	SI enable safe brake control (Motor Module)		
p9810	SI PROFIsafe address (Motor Module)		
p9850	SI SGE changeover, tolerance time (Motor Module)		
p9852	SI Safe Stop 1 delay time (Motor Module)		
p9858	SI transition time STOP F to STOP A (Motor Module)		
r9870	SI version (Motor Module)		
r9871	SI common functions (Motor Module)		
r9872	CO/BO: SI status (Motor Module)		
r9880	SI monitoring clock cycle (Motor Module)		
r9881	SI Sensor Module Node Identifier control		
r9890	SI version (Sensor Module)		
r9894	SI crosswise comparison list (Motor Module)		
r9895	SI diagnostics, STOP F (Motor Module)		
r9898	SI actual checksum SI parameters (Motor Module)		
p9899	SI reference checksum SI parameters (Motor Module)		

Downloading standard motor data

When standard motor data is downloaded some drive parameters are overwritten. If another type of motor is installed (e.g. after repairs have been carried out) and the associated motor default data is downloaded, then the encoder data must be changed back to its original value.

8.2 Parameters for SINAMICS S120

8.2.2 Description of parameters

r0979[0....30] PROFIdrive encoder format/PD encoder format					
Displays the position actual value encoder according to PROFIdrive that is being used. [0] = header [1] = type, encoder 1 [2] = resolution, encoder 1 [3] = shift factor G1_XIST1 [4] = shift factor G1_XIST2 [5] = revolutions that can be distinguished, encoder 1 [6] = reserved [7] = reserved [8] = reserved [9] = reserved [10] = reserved [11] = type, encoder 2 [12] = resolution, encoder 2 [13] = shift factor G2_XIST1 [14] = shift factor G2_XIST2 [15] = revolutions that can be distinguished, encoder 2 [16] = reserved [17] = reserved [18] = reserved [19] = reserved [20] = reserved [21] = type, encoder 3 [22] = resolution, encoder 3 [23] = shift factor G3_XIST1 [24] = shift factor G3_XIST2 [25] = revolutions that can be distinguished, encoder 3 [26] = reserved [27] = reserved [28] = reserved [29] = reserved [30] = reserved				Checksum:	Protection level: 3
Unit: —	Default value: —	Minimum value:	Maximum value: —	Data type: U32	Effective: POWER ON

p1532[0...n] CO: Torque limit offset/M_max offset, CO: Force offset force limit/F_max offset					
Sets the torque offset for the torque limit. Sets the force offset for the force limit.				Checksum:	Protection level: 3
Unit: —	Default value: —	Minimum value: –100000.00 [Nm] –100000.00 [N]	Maximum value: 100000.00 [Nm] 100000.00 [N]	Data type: Floating point	Effective: POWER ON

8.2 Parameters for SINAMICS S120

p2003 Reference torque					
<p>Setting the reference quantity for torques. All of the torques specified as relative value refer to this reference quantity. The reference quantity in this parameter corresponds to 100% or 4000 hex or 4000 0000 hex.</p> <p>Note: For the automatic calculation (p0340 = 1, p3900 > 0) the corresponding pre-assignment is only made if the parameter is not inhibited from being overwritten using p0573 = 1 (i.e. is not write protected). If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.</p> <p>Example: The actual value of the total torque (r0079) is interconnected to a test socket (e.g. p0771[0]). The actual torque value is cyclically converted into a percentage of the reference torque (p2003) and is output corresponding to the selected scaling.</p>				Checksum:	Protection level: 3
Unit: Nm	Default value: 1.0	Minimum value: 0.01	20000000.0	Data type: Floating point	Effective: POWER ON

Parameters for motion monitoring functions

p9500 SI motion monitoring clock cycle (Control Unit)					
Sets the monitoring clock cycle for safety motion monitoring functions.				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 12	Minimum value: 0.5	Maximum value: 25	Data type: Floating point	Effective: POWER ON

Using p9500, the monitoring clock cycle for safety-related operation with a higher-level control is defined. p9500 must be an integer multiple of the position controller clock cycle. If a value is entered into p9500 that is not an integer multiple of the position controller clock cycle, then the value entered is rounded-off to the next multiple (integer multiple) of the position controller clock cycle and Fault F01652 ("SI CU:Monitoring clock cycle not permissible") is output with fault value 101.

Each time that a new connection is established for the clock-cycle synchronous PROFIBUS, the PROFIBUS master can specify a new position controller clock cycle; this is the reason that the check "p9500 multiple integer of the position controller clock cycle" is repeated. Fault F01652 is output if an error occurs.

The Safety Integrated monitoring clock cycle is, just like all other SI drive parameters, a drive-specific monitoring clock cycle. However, different SI monitoring clock cycles within a drive system are not supported.

8.2 Parameters for SINAMICS S120

p9501 SI motion enable safety functions (Control Unit)					
Sets the enable signals for the safety-related motion monitoring functions Bit, signal name 00 enable SOS/SLS (SBH/SG) 01 enable SLP (SE) 03 enable actual value synchronization 04 enable external ESR activation 05 enable override SLS (SG) 06 enable external STOPs 07 enable cam synchronization 08 enable SCA1+ (SN1+) 09 enable SCA1- (SN1-) 10 enable SCA2+ (SN2+) 11 enable SCA2- (SN2-) 12 enable SCA3+ (SN3+) 13 enable SCA3- (SN3-) 14 enable SCA4+ (SN4+) 15 enable SCA4- (SN4-)				Checksum: Yes	Protection level: 3
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 0xFFFF FFFF	Data type: Unsigned32	Effective: POWER ON

The individual SI monitoring functions for a drive are enabled using p9501.

If one of the bits from bit 1 is set, then bit 0 must also be set. This is because for a STOP C/D/E, the system changes into a safe operating stop. If this is not the case, Fault F01683 ("SI motion: SBH/SG enable missing") is output.

p9502 SI motion axis type (Control Unit)					
Sets the axis type (linear axis or rotary axis/spindle) Linear axis = 0 1 = rotary axis/spindle				Checksum: Yes	Protection level: 4
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 1	Data type: Integer16	Effective: POWER ON

For the commissioning software, after the axis type has been changed over, the units that are dependent on the axis type are only updated after a project upload.

8.2 Parameters for SINAMICS S120

p9503 SI motion SCA (SN) enable (Control Unit)					
Setting to enable the "Safe software cams" function (SN) Bit, signal name 00 enable SCA1 (SN1) 01 enable SCA2 (SN2) 02 enable SCA3 (SN3) 03 enable SCA4 (SN4) 04 enable SCA5 (SN5) 05 enable SCA6 (SN6) 06 enable SCA7 (SN7) 07 enable SCA8 (SN8) 08 enable SCA9 (SN9) 09 enable SCA10 (SN10) 10 enable SCA11 (SN11) 11 enable SCA12 (SN12) 12 enable SCA13 (SN13) 13 enable SCA14 (SN14) 14 enable SCA15 (SN15) 15 enable SCA16 (SN16) 16 enable SCA17 (SN17) 17 enable SCA18 (SN18) 18 enable SCA19 (SN19) 19 enable SCA20 (SN20) 20 enable SCA21 (SN21) 21 enable SCA22 (SN22) 22 enable SCA23 (SN23) 23 enable SCA24 (SN24) 24 enable SCA25 (SN25) 25 enable SCA26 (SN26) 26 enable SCA27 (SN27) 27 enable SCA28 (SN28) 28 enable SCA29 (SN29) 29 enable SCA30 (SN30)				Checksum: Yes	Protection level: 4
Unit: —	Default value: 0	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: POWER ON

The cam pairs 1 to 4 can also be enabled in p9501, bits 8–15. In this case, a 0 must be in p9503. Vice versa, a 0 must be in p9501, bits 8–15 if cams are enabled in p9503. This is checked during booting and where relevant C01681 ("SI Motion: Monitoring function not supported") is output with fault value 2.

p9505 SI motion SCA (SN) modulo value (Control Unit)					
Sets the modulo range of the safety position actual value in degrees for the function "Safe cams" (SCA) for rotary axes.				Checksum: Yes	Protection level: 4
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 737280	Data type: Floating point	Effective: POWER ON

8.2 Parameters for SINAMICS S120

p9516 SI motion, motor encoder configuration, safety-related functions (CU)					
Sets the configuration for motor encoders and position actual value Bit 00: Motor encoder, rotary/linear 1 signal: Linear, 0 signal: Rotary Bit 01: Position actual value sign change 1 signal: Yes, 0 signal: No				Checksum: Yes	Protection level: 3
Unit: –	Default value: 0	Minimum value: –	Maximum value: –	Data type: Unsigned16	Effective: POWER ON

The information whether a 1–encoder system or 2–encoder system is not included in this parameter. This is derived from the parameter p9526 "SI motion encoder assignment control".

p9516.0 corresponds to p0404.0. p9516.1 corresponds to p0410.1, but must be able to be parameterized independent of p0410.1.

p9517 SI motion linear scale, grid division (Control Unit)					
Sets the grid division for a linear motor encoder				Checksum: Yes	Protection level: 3
Unit: nm	Default value: 10 000	Minimum value: 0	Maximum value: 250 000 000	Data type: REAL32	Effective: POWER ON

Grid spacing of the linear motor encoder (this only applies to linear motor encoders). Corresponds to p0407.

The following applies to safety–related functions that have been enabled (p9501 > 0): p9517 is checked to ensure that it coincides with p0407.

p9518 SI motion encoder pulses per revolution (Control Unit)					
Sets the number of encoder pulses per revolution for rotary motor encoders				Checksum: Yes	Protection level: 3
Unit: –	Default value: 2048	Minimum value: 0	Maximum value: 100 000	Data type: Unsigned32	Effective: POWER ON

Number of pulses per encoder revolution for motor encoders (only applies to rotary motor encoders). Corresponds to p0408.

The following applies to safety–related functions that have not been enabled (p9501 = 0): p9518 is automatically set the same as p0408 during booting.

The following applies to safety–related functions that have been enabled (p9501 > 0): p9518 is checked to ensure that it coincides with p0408.

8.2 Parameters for SINAMICS S120

p9519 SI motion fine resolution G1_XIST1 (Control Unit)					
Sets the fine resolution for G1_XIST1 in bits The following applies to safety-related functions that have not been enabled (p9501 = 0): when booting, p9519 is automatically set the same as p0418. The following applies to safety-related functions that have been enabled (p9501 > 0): p9519 is checked to ensure that it coincides with p0418.				Checksum: Yes	Protection level: 3
Unit: –	Default value: 11	Minimum value: 2	Maximum value: 18	Data type: Unsigned32	Effective: POWER ON

Sets the fine resolution in bits of incremental position actual values for the PROFIBUS encoder interface. Corresponds to p0418.

Comments regarding minimum and maximum value:

- The minimum value is 2 so that the complete segment information is always included in the position actual value and the check with the redundant coarse position can always be made with the full 16-bit resolution.
- The maximum value is 18 so that at least 16 bits of coarse position information are always included in the position actual value and the check with the redundant coarse position can always be made with the full 16-bit resolution.

p9520 SI motion spindle pitch (Control Unit)					
Sets the ratio between the encoder and load in mm/rev for a linear axis with rotary encoder				Checksum: Yes	Protection level: 3
Unit: mm	Default value: 10	Minimum value: 0.1	Maximum value: 8388	Data type: REAL32	Effective: POWER ON

p9521[0...7] SI motion, gearbox, encoder/load, denominator (Control Unit)					
Sets the denominator for the gearbox between the encoder and load. The actual stage is selected using safety-related inputs (SGE).				Checksum: Yes	Protection level: 3
Unit: –	Default value: 1	Minimum value: 1	Maximum value: 2 147 000 000	Data type: Unsigned32	Effective: POWER ON

Denominator of the fraction "number of encoder revolutions/**number of load revolutions**".

There are a total of 8 values (8 indices of p9521), whereby, the actual value is selected using SGEs.

p9522[0...7] SI motion, gearbox, encoder/load, numerator (Control Unit)					
Sets the numerator for the gearbox between the encoder and load. The actual stage is selected using safety-related inputs (SGE).				Checksum: Yes	Protection level: 3
Unit: –	Default value: 1	Minimum value: 1	Maximum value: 2 147 000 000	Data type: Unsigned32	Effective: POWER ON

Numerator of the fraction "**number of encoder revolutions**/number of load revolutions".

There are a total of 8 values (8 indices of p9522), whereby, the actual value is selected using SGEs.

8.2 Parameters for SINAMICS S120

p9526 SI motion encoder assignment second channel					
Sets the number of the encoder that is used in the second channel (control, Motor Module) for safe motion monitoring functions. Note: For safety-related motion monitoring functions the redundant safety position actual value sensing must be activated in the appropriate encoder data set (p0430.19 = 1). For p9526 = 1, the encoder for the closed-loop speed control is used for the second channel of the motion monitoring functions (1–encoder system).				Checksum: Yes	Protection level: 3
Unit: –	Default value: 1	Minimum value: 1	Maximum value: 3	Data type: Unsigned32	Effective: POWER ON

p9530 SI motion standstill tolerance (Control Unit)					
Sets the tolerance for the "safe operating stop" function (SOS).				Checksum: Yes	Protection level: 3
Unit: mm	Default value: 1	Minimum value: 0	Maximum value: 100	Data type: REAL32	Effective: POWER ON

If safe operating stop (SBH) is selected, and the difference between the position setpoint and the position actual value is greater than the tolerance set in this parameter, the drive issues the fault C01707 ("SI motion: Tolerance for safe operating stop exceeded") and activates the stop response STOP B/A.

p9531[0...3] SI motion SLS (SG) limits (Control Unit)					
Sets the limit values for the "safely limited speed" function (SLS). Index: [0] = limit value SLS1 [1] = limit value SLS2 [2] = limit value SLS3 [3] = limit value SLS4				Checksum: Yes	Protection level: 3
Unit: mm/min	Default value: 2000	Minimum value: 0	Maximum value: 1 000 000	Data type: REAL32	Effective: POWER ON

If one of the monitoring functions SG1, SG2, SG3 or SG4 is selected then the actual velocity exceeds the limit value set in this parameter, the drive issues fault C01714 ("SI motion: Safely reduced speed exceeded") and activates the stop response parameterized in p9561 or p9563.

8.2 Parameters for SINAMICS S120

p9532[0...15] SI motion SLS (SG) override factor (Control Unit)					
Sets the override factor for the limit value for SG2 and SG4 of the function "safely reduced speed" (SG). [0] = SLS (SG) override factor 0 [1] = SLS (SG) override factor 1 [2] = SLS (SG) override factor 2 [3] = SLS (SG) override factor 3 [4] = SLS (SG) override factor 4 [5] = SLS (SG) override factor 5 [6] = SLS (SG) override factor 6 [7] = SLS (SG) override factor 7 [8] = SLS (SG) override factor 8 [9] = SLS (SG) override factor 9 [10] = SLS (SG) override factor 10 [11] = SLS (SG) override factor 11 [12] = SLS (SG) override factor 12 [13] = SLS (SG) override factor 13 [14] = SLS (SG) override factor 14 [15] = SLS (SG) override factor 15				Checksum: Yes	Protection level: 4
Unit: %	Default value: 100	Minimum value: 0	Maximum value: 100	Data type: Floating point	Effective: POWER ON

The actual override factor for SG2 and SG4 is selected using safety-related inputs (SGE).

p9534[0...1] SI motion SLP (SE) upper limit values (Control Unit)					
Sets the upper limit values for the "safely limited position" function (SLP). Index: [0] = limit value SLP1 (SE1) [1] = limit value SLP2 (SE2)				Checksum: Yes	Protection level: 4
Unit: mm, degrees	Default value: 100 000	Minimum value: -2 147 000	Maximum value: 2 147 000	Data type: REAL32	Effective: POWER ON

The following applies when setting the SE limit values: p9534 > p9535. If this condition is not fulfilled, the limit values are internally exchanged and fault F01684 ("SI Motion: Safe software limit switch values interchanged") is output.

See also: p9501, p9535, p9562 and C01715 "SI motion: Safe limit position exceeded".

8.2 Parameters for SINAMICS S120

p9535[0...1] SI motion SLP (SE) lower limit values (Control Unit)					
Sets the lower limit values for the "safely limited position" function (SLP). Index: [0] = limit value SLP1 (SE1) [1] = limit value SLP2 (SE2)				Checksum: Yes	Protection level: 4
Unit: mm, degrees	Default value: -100 000	Minimum value: -2 147 000	Maximum value: 2 147 000	Data type: REAL32	Effective: POWER ON

The following applies when setting the SE limit values: p9534 > p9535. If this condition is not fulfilled, the limit values are internally exchanged and fault F01684 ("SI Motion: Safe software limit switch values interchanged") is output.

See also: p9501, p9534, p9562 and C01715 "SI motion: Safe limit position exceeded".

p9536[0...29] SI motion SCA (SN) plus cam position (Control Unit)					
Sets the plus cam position for the "safe cam" function (SCA). Index: [0] = cam position SCA1 (SN1) [1] = cam position SCA2 (SN2) [2] = cam position SCA3 (SN3) [3] = cam position SCA4 (SN4) [4] = cam position SCA5 (SN5) [5] = cam position SCA6 (SN6) [6] = cam position SCA7 (SN7) [7] = cam position SCA8 (SN8) [8] = cam position SCA9 (SN9) [9] = cam position SCA10 (SN10) [10] = cam position SCA11 (SN11) [11] = cam position SCA12 (SN12) [12] = cam position SCA13 (SN13) [13] = cam position SCA14 (SN14) [14] = cam position SCA15 (SN15) [15] = cam position SCA16 (SN16) [16] = cam position SCA17 (SN17) [17] = cam position SCA18 (SN18) [18] = cam position SCA19 (SN19) [19] = cam position SCA20 (SN20) [20] = cam position SCA21 (SN21) [21] = cam position SCA22 (SN22) [22] = cam position SCA23 (SN23) [23] = cam position SCA24 (SN24) [24] = cam position SCA25 (SN25) [25] = cam position SCA26 (SN26) [26] = cam position SCA27 (SN27) [27] = cam position SCA28 (SN28) [28] = cam position SCA29 (SN29) [29] = cam position SCA30 (SN30)				Checksum: Yes	Protection level: 4
Unit: mm, degrees	Default value: 10	Minimum value: -2 147 000	Maximum value: 2 147 000	Data type: Floating point	Effective: POWER ON

See also: p9501, p9503, p9537

8.2 Parameters for SINAMICS S120

p9537[0...29]		SI motion SCA (SN) minus cam position (Control Unit)			
Sets the minus cam position for the "Safe Cam" function (SCA). Index: [0] = cam position SCA1 (SN1) [1] = cam position SCA2 (SN2) [2] = cam position SCA3 (SN3) [3] = cam position SCA4 (SN4) [4] = cam position SCA5 (SN5) [5] = cam position SCA6 (SN6) [6] = cam position SCA7 (SN7) [7] = cam position SCA8 (SN8) [8] = cam position SCA9 (SN9) [9] = cam position SCA10 (SN10) [10] = cam position SCA11 (SN11) [11] = cam position SCA12 (SN12) [12] = cam position SCA13 (SN13) [13] = cam position SCA14 (SN14) [14] = cam position SCA15 (SN15) [15] = cam position SCA16 (SN16) [16] = cam position SCA17 (SN17) [17] = cam position SCA18 (SN18) [18] = cam position SCA19 (SN19) [19] = cam position SCA20 (SN20) [20] = cam position SCA21 (SN21) [21] = cam position SCA22 (SN22) [22] = cam position SCA23 (SN23) [23] = cam position SCA24 (SN24) [24] = cam position SCA25 (SN25) [25] = cam position SCA26 (SN26) [26] = cam position SCA27 (SN27) [27] = cam position SCA28 (SN28) [28] = cam position SCA29 (SN29) [29] = cam position SCA30 (SN30)		Checksum: Yes		Protection level: 4	
Unit: mm, degrees	Default value: -10	Minimum value: -2 147 000	Maximum value: 2 147 000	Data type: Floating point	Effective: POWER ON

See also: p9501, p9503, p9537

8.2 Parameters for SINAMICS S120

p9538[0...29]	SI motion SCA (SN) cam track assignment (Control Unit)	
<p>Assigns the individual cams to a maximum of 4 cam tracks and defines the numerical value for the SGA "cam range".</p> <p>p9538[0...29] = CBA dec</p> <p>C = assigns the cam to the cam track.</p> <p>Valid values are 1, 2, 3, 4.</p> <p>BA = numerical value for the SGA "cam range".</p> <p>If the position is in the range of this cam, value BA is signaled to the safety logic via SGA "cam range" of the cam track that is set using C.</p> <p>Valid values are 0 ... 14. Every numerical value can only be used once for each cam track.</p> <p>Examples:</p> <p>p9538[0] = 207</p> <p>Cam 1 (index 0) is assigned to cam track 2. If the position is in the range of this cam, then a value of 7 is entered into SGA "cam range" of the second cam track.</p> <p>p9538[5] = 100</p> <p>Cam 6 (index 5) is assigned to cam track 1. If the position is in the range of this cam, then a value of 0 is entered into SGA "cam range" of the first cam track.</p> <p>Index:</p> <p>[0] = track assignment SCA1</p> <p>[1] = track assignment SCA2</p> <p>[2] = track assignment SCA3</p> <p>[3] = track assignment SCA4</p> <p>[4] = track assignment SCA5</p> <p>[5] = track assignment SCA6</p> <p>[6] = track assignment SCA7</p> <p>[7] = track assignment SCA8</p> <p>[8] = track assignment SCA9</p> <p>[9] = track assignment SCA10</p> <p>[10] = track assignment SCA11</p> <p>[11] = track assignment SCA12</p> <p>[12] = track assignment SCA13</p> <p>[13] = track assignment SCA14</p> <p>[14] = track assignment SCA15</p> <p>[15] = track assignment SCA16</p> <p>[16] = track assignment SCA17</p> <p>[17] = track assignment SCA18</p> <p>[18] = track assignment SCA19</p> <p>[19] = track assignment SCA20</p> <p>[20] = track assignment SCA21</p> <p>[21] = track assignment SCA22</p> <p>[22] = track assignment SCA23</p> <p>[23] = track assignment SCA24</p> <p>[24] = track assignment SCA25</p> <p>[25] = track assignment SCA26</p> <p>[26] = track assignment SCA27</p> <p>[27] = track assignment SCA28</p> <p>[28] = track assignment SCA29</p> <p>[29] = track assignment SCA30</p>	<p>Checksum:</p> <p>Yes</p>	<p>Protection level:</p> <p>4</p>

8.2 Parameters for SINAMICS S120

Unit:	Default value:	Minimum value:	Maximum value:	Data type:	Effective:
	[0] 100	100	414	U32	POWER ON
	[1] 101				
	[2] 102				
	[3] 103				
	[4] 104				
	[5] 105				
	[6] 106				
	[7] 107				
	[8] 108				
	[9] 109				
	[10] 110				
	[11] 111				
	[12] 112				
	[13] 113				
	[14] 114				
	[15] 200				
	[16] 201				
	[17] 202				
	[18] 203				
	[19] 204				
	[20] 205				
	[21] 206				
	[22] 207				
	[23] 208				
	[24] 209				
	[25] 210				
	[26] 211				
	[27] 212				
	[28] 213				
	[29] 214				

p9540		SI motion SCA (SN) tolerance (Control Unit)			
Sets the tolerance for the "Safe Cam" function (SCA). Within this tolerance, both monitoring channels may signal different signal states of the same safe cam.				Checksum: Yes	Protection level: 4
Unit: mm, degrees	Default value: 0.1	Minimum value: 0.001	Maximum value: 10 mm or 10 degrees	Data type: Floating point	Effective: POWER ON

p9542		SI motion actual value comparison tolerance (crosswise) (Control Unit)			
Sets the tolerance in mm or Degrees for the crosswise comparison of the actual position between the two monitoring channels				Checksum: Yes	Protection level: 3
Unit: mm	Default value: 0.1	Minimum value: 0.001	Maximum value: 10 mm or 360 de- grees	Data type: Floating point	Effective: POWER ON

See also: C01711 "SI motion: Defect in a monitoring channel".

8.2 Parameters for SINAMICS S120

p9544 SI motion actual value comparison tolerance (referencing) (Control Unit)					
Sets the tolerance in mm or Degrees to check the actual values after referencing (incremental encoder) or when powering-up (absolute encoder).				Checksum: Yes	Protection level: 4
Unit: mm, inches, degrees	Default value: 0.01	Minimum value: 0	Maximum value: 36 mm or 36 degrees	Data type: REAL32	Effective: POWER ON

See also: C01711 "SI motion: Defect in a monitoring channel".

p9546 SI motion SSM (SGA n < n_x) speed limit n_x (CU)					
Sets the speed limit for the SSM feedback signal (n < n_x) to identify zero speed. If this limit value is fallen below, the signal "SSM feedback signal active" (SGA n < n_x) is set. Caution: After the set threshold value is fallen below, the "safety acceleration monitor" function (SBR) is switched out				Checksum: Yes	Protection level: 3
Unit: mm/min RPM	Default value: 20	Minimum value: 0	Maximum value: 1000 000	Data type: Floating point	Effective: POWER ON

p9548 SI motion SBR actual speed tolerance (Control Unit)					
Sets the speed tolerance for the "safe acceleration monitoring" (SBR)				Checksum: Yes	Protection level: 3
Unit: mm/min RPM	Default value: 300	Minimum value: 0	Maximum value: 120 000	Data type: Floating point	Effective: POWER ON

See also: C01706 "SI motion: Safe acceleration monitoring limit exceeded".

After initiating the safe acceleration monitoring (SBR) for the stop responses STOP B and STOP C, the actual velocity plus the tolerance value parameterized in p9548 may not exceed the actual speed sensed in the last monitoring clock cycle. If $p9548 > 0$, then the value converted into the internal format is limited to greater than or equal to 1.

p9549 SI motion slip speed tolerance (Control Unit)					
Sets the velocity tolerance in mm/min or rpm, that is used for a 2-encoder system in a crosswise comparison between the drive and control. If the actual value synchronization is not enabled (p9501 3 = 0), then the value parameterized in p9542 is used as tolerance in the crosswise data comparison.				Checksum: Yes	Protection level: 3
Unit: mm/min RPM	Default value: 6	Minimum value: 0	Maximum value: 6000	Data type: Floating point	Effective: POWER ON

8.2 Parameters for SINAMICS S120

p9550 SI motion SGE changeover tolerance time (Control Unit)					
Sets the tolerance time to change over the safety-related inputs (SGE)				Checksum: Yes	Protection level: 4
Unit: ms	Default value: 500	Minimum value: 0	Maximum value: 10 000	Data type: REAL32	Effective: POWER ON

Because of the different runtimes of the two monitoring channels – drive and control – a SGE changeover is not effective at the same time. After a SGE changeover, a crosswise data comparison of the dynamic data is not carried out during this tolerance time (actual values, result lists, ...). However, the monitoring functions remain active during this time.

p9551 SI motion SLS(SG) changeover delay time (Control Unit)					
Sets the delay time for the SLS changeover or for the changeover from SLS to SOS for the "safely limited speed" function (SLS). At the transition from a higher to a lower safely limited speed stage or to a safe operating stop (SOS), the "old" speed stage remains active for this delay time. Also from non safety-related operation, when SLS or SOS is activated, this delay still applies.				Checksum: Yes	Protection level: 4
Unit: ms	Default value: 100	Minimum value: 0	Maximum value: 600 000	Data type: Floating point	Effective: POWER ON

p9552 SI motion transition time STOP C to SOS (SBH) (Control Unit)					
Sets the transition time from STOP C to "Safe Operating Stop" (SOS).				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 100	Minimum value: 0	Maximum value: 600 000	Data type: Floating point	Effective: POWER ON

p9553 SI motion transition time STOP D to SOS (SBH) (Control Unit)					
Sets the transition time from STOP D to "Safe Operating Stop" (SOS)				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 100	Minimum value: 0	Maximum value: 600 000	Data type: Floating point	Effective: POWER ON

p9554 SI motion transition time STOP E to SOS (SBH) (Control Unit)					
Sets the transition time from STOP E to "Safe Operating Stop" (SOS)				Checksum: Yes	Protection level: 4
Unit: ms	Default value: 100	Minimum value: 0	Maximum value: 600 000	Data type: REAL32	Effective: POWER ON

8.2 Parameters for SINAMICS S120

p9555 SI motion transition time STOP F to STOP B (Control Unit)					
Sets the transition time from STOP F to STOP B				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 0	Minimum value: 0	Maximum value: 600 000	Data type: Floating point	Effective: POWER ON

See also: C01711 "SI motion defect in a monitoring channel"

p9556 SI motion pulse cancellation delay time (Control Unit)					
Sets the delay time for the safe pulse cancellation after STOP B				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 100	Minimum value: 0	Maximum value: 600 000	Data type: Floating point	Effective: POWER ON

STOP B causes the drive to brake along the OFF3 ramp. Stop response STOP A is initiated after the time parameterized in p9556 has expired or after the speed threshold parameterized in p9560 has been fallen below.

See also: C01701 "SI motion, STOP B initiated".

p9557 SI motion pulse cancellation checking time (Control Unit)					
Sets the time after which the pulses must have been cancelled after initiating the test stop.				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 100	Minimum value: 0	Maximum value: 10 000	Data type: Floating point	Effective: POWER ON

If the pulses have been correctly cancelled via the shutdown path of the monitoring channel after the time parameterized in p9557, then this is communicated to the user by setting SGA "pulses are cancelled". If an error occurred while testing the shutdown path, stop response STOP A is initiated.

See also: C01798 "SI motion: "Test stop running".

p9558 SI motion acceptance test mode time limit (Control Unit)					
Sets the maximum time for the acceptance test mode. If the acceptance test mode lasts longer than the selected time limit, then the mode is automatically exited.				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 40 000	Minimum value: 5 000	Maximum value: 100 000	Data type: Floating point	Effective: POWER ON

See also: C01799 "SI motion: Acceptance test mode is active".

8.2 Parameters for SINAMICS S120

p9560 SI motion pulse cancelation shutdown speed (Control Unit)					
Sets the shutdown speed for pulse cancellation. "Standstill" (zero speed) is assumed below this speed and for STOP B, the pulses are cancelled (as a result of a transition to STOP A).				Checksum: Yes	Protection level: 3
Unit: mm/min, RPM	Default value: 0	Minimum value: 0	Maximum value: 6000	Data type: Floating point	Effective: POWER ON

STOP B causes the drive to brake along the OFF3 ramp. Stop response STOP A is initiated after the time parameterized in p9556 has expired or after the speed threshold parameterized in p9560 has been fallen below.

p9561 SI motion SLS (SG) stop response (Control Unit)					
Sets the stop response for the "safely limited speed" function (SLS). This setting applies to all SLS limit values. An input value of less than 5 signifies protection for personnel, from 10 and onwards, machine protection. 0: STOP A 1: STOP B 2: STOP C 3: STOP D 4: STOP E 5: Set the stop response using p9563 (SG-specific) 10: STOP A with delayed pulse cancellation when the bus fails 11: STOP B with delayed pulse cancellation when the bus fails 12: STOP C with delayed pulse cancellation when the bus fails 13: STOP D with delayed pulse cancellation when the bus fails 14: STOP E with delayed pulse cancellation when the bus fails				Checksum: Yes	Protection level: 4
Unit: —	Default value: 5	Minimum value: 0	Maximum value: 14	Data type: Integer16	Effective: POWER ON

See also: p9531, p9563

p9562 SI motion SLP (SE) stop response (Control Unit)					
Sets the stop response for the "safely limited position" function (SLP). 2: STOP C 3: STOP D 4: STOP E				Checksum: Yes	Protection level: 4
Unit: —	Default value: 2	Minimum value: 2	Maximum value: 4	Data type: Integer16	Effective: POWER ON

See also: p9536, p9537

8.2 Parameters for SINAMICS S120

p9563[0...3] SI motion SLS (SG)–specific stop response (Control Unit)					
Sets the SLS–specific stop response for the "safely limited speed" function (SLS). These settings apply to the individual limit values for SLS. 0: STOP A 1: STOP B 2: STOP C 3: STOP D 4: STOP E 10: STOP A with delayed pulse cancellation when the bus fails 11: STOP B with delayed pulse cancellation when the bus fails 12: STOP C with delayed pulse cancellation when the bus fails 13: STOP D with delayed pulse cancellation when the bus fails 14: STOP E with delayed pulse cancellation when the bus fails Index: [0] = limit value SG1 [1] = limit value SG2 [2] = limit value SG3 [3] = limit value SG4				Checksum: Yes	Protection level: 3
Unit: –	Default value: 2	Minimum value: 0	Maximum value: 14	Data type: Integer16	Effective: POWER ON

When the speed limit, parameterized in p9531 is exceeded, if the SG monitoring is active, the stop response parameterized in p9563 is initiated.

p9570 SI motion acceptance test mode (Control Unit)					
Setting to select/deselect the acceptance test mode 0: [00 hex] Deselect acceptance test mode 0xAC: [AC hex] Select acceptance mode				Checksum: No	Protection level: 3
Unit: –	Default value: 0	Minimum value: 0	Maximum value: 0xAC	Data type: Integer16	Effective: Immediately

See also: p9558, r9571

r9571 SI motion acceptance test status (Control Unit)					
Displays the status of the acceptance test mode 0: [00 hex] accept_mode inactive 12: [0C hex] accept_mode not possible due to power on fault 13: [0D hex] accept_mode not possible due to incorrect ID in p9570 15: [0F hex] accept_mode not possible due to expired accept_timer 172: [AC hex] accept_mode active				Checksum: No	Protection level: 3
Unit: –	Default value: 0	Minimum value: 0	Maximum value: 0xAC	Data type: U16	Effective: –

See also: C01799 "SI motion, acceptance test mode active"

8.2 Parameters for SINAMICS S120

r9590[0...2] SI motion version safe motion monitoring functions (Control Unit)					
Displays the Safety Integrated version for safe motion monitoring functions on the Control Unit. [0] = Safety Version (major release) [1] = Safety Version (minor release) [2] = Safety Version (baselevel or patch) Example: r9590[0] = 2, r9590[1] = 3, r9590[2] = 1 —> SI motion version V02.03.01			Checksum:		Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective:

See also: r9770, r9870, r9890

Parameters for basic safety functions integrated in the drive

These parameters are also relevant for the motion monitoring functions as the safe standstill is carried out by monitoring functions integrated in the drive. See Chapter 6.1 "Safe standstill (SH)".

p9601 SI enable functions integrated in the drive (Control Unit)					
Sets the enable signals for safety functions integrated in the drive on the Control Unit Bit Signal name 00 STO (SH) enable via terminals (Control Unit)			Checksum: Yes		Protection level: 3
Unit: —	Default value: 0000 bin	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: When exiting the SI commissioning mode

It is permissible to simultaneously enable the safety functions integrated in the drive (p9601/p9801 < > 0) and the motion monitoring functions (p9501 < > 0).
See also: p9801

8.2 Parameters for SINAMICS S120

p9602		SI enable safe brake control (Control Unit)			
Sets the enable signal for the function safe brake control (SBC) on the Control Unit. 0: SBC not enabled 1: Close the holding brake when SH is selected or when SI errors occur The safe brake control function only becomes active if at least one safety monitoring function is enabled (i.e. p9501 not equal to 0 and/or p9601/p9801 not equal to 0). If a motor holding brake is not being used then it does not make any sense to enable the parameterization "no motor holding brake available" and "safe brake control" (p1215 = 0, p9602 = p9802 = 1). The parameterization "motor holding brake the same as sequence control, connection via BICO" and "safe brake control" enabled (p1215 = 3, p9602 = 1, p9802 = 1) does not make sense. The parameterization "motor holding brake without feedback signals" and "safe brake control" enabled (p1278 = 1, p9602 = 1, p9802 = 1) is not permissible.		Checksum: Yes		Protection level: 3	
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 1	Data type: Integer16	Effective: When exiting the SI commissioning mode

If p9602 = 1, the holding braking is closed when SH is selected or SI errors occur. P9602 has priority over p1215 ("holding brake setting").

See also: p9802

p9620		BI: SI signal source for STO (SH)/SBC/SS1 (Control Unit)			
Sets the signal source for the following functions on the Control Unit: STO: Safe Torque Off/SH: Safe standstill SBC: Safe Brake Control SS1: Safe Stop 1 (SS1, time monitored) Depends on: See also: p9601 Note: The following signal sources are permitted: — fixed zero (standard setting). — digital inputs (DI 0 to DI 7 on the Control Unit NCU7xx. — digital inputs DI 0 to DI 3 on the Controller Extensions (CX32, NX10, NX15). — digital inputs (DI 0 to DI 3 on the Control Unit 310 (CU310). It is not permitted to interconnect to a digital input in simulation mode.		Checksum: No		Protection level: 3	
Unit: —	Default value: 0	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective:

8.2 Parameters for SINAMICS S120

p9650 SI tolerance time SGE changeover integrated in the drive (Control Unit)					
<p>Sets the tolerance time to change over the safety-related inputs (SGE) for the monitoring functions integrated in the drive on the Control Unit. Because of the different runtimes of the two monitoring channels, an SIS switchover is not effective at the same time. After an SIS switchover, a cross-comparison of the dynamic data is not carried out during this tolerance time.</p> <p>For a crosswise data comparison between p9650 and p9850, a difference of one safety monitoring clock cycle is tolerated. The parameterized time is internally rounded-off to an integer multiple of the monitoring clock cycle.</p>				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 500	Minimum value: 0	Maximum value: 2 000.00	Data type: REAL32	Effective: When exiting the SI commissioning mode

See also: p9850

p9652 SI Safe Stop 1 delay time (Control Unit)					
<p>Sets the delay time of the pulse cancellation for the function "Safe Stop 1" (SS1) on the Control Unit to brake along the OFF3 down ramp (p1135).</p> <p>For a crosswise data comparison between p9652 and p9852, a difference of one safety monitoring clock cycle is tolerated. The parameterized time is internally rounded-off to an integer multiple of the monitoring clock cycle.</p>				Checksum: Yes	Protection level: 3
Unit: s	Default value: 0.00	Minimum value: 0.00	Maximum value: 300.00	Data type: Floating point	Effective:

See also: p1135, p9852

p9658 SI transition time STOP F to STOP A (Control Unit)					
<p>Sets the transition time from STOP F to STOP A on the Control Unit.</p> <p>For a crosswise data comparison between p9658 and p9858, a difference of one safety monitoring clock cycle is tolerated. The parameterized time is internally rounded-off to an integer multiple of the monitoring clock cycle.</p> <p>STOP F: Defect in a monitoring channel (error in the crosswise data comparison)</p> <p>STOP A: Pulse deletion via safety shutdown path</p>				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 0	Minimum value: 0	Maximum value: 30 000.00	Data type: Floating point	Effective: When exiting the SI commissioning mode

See also: F01611

8.2 Parameters for SINAMICS S120

p9659 SI forced checking procedure, timer					
Sets the time to carry out the dynamic update and testing the safety shutdown paths (forced checking procedure). Within the parameterized time, safe standstill must have been deselected at least once. The monitoring time is reset at every SH deselection.			Checksum: Yes		Protection level: 3
Unit: h	Default value: 8	Minimum value: 0	Maximum value: 9 000	Data type: Floating point	Effective: Immediately

Within the parameterized time grid, the user must subject the safety shutdown paths to a forced checking procedure and test them; this means he must carry out an SH selection/deselection. If the user does not do this, then after this time using the Alarm A01699 ("SI CU: Necessary to test the shutdown paths") he will be requested to test the shutdown paths, i.e. select/deselect SH. In so doing, r9773, bit 31 is set to 1.

The timer to carry out the forced checking procedure is reset to the parameterized value:

- each time the drive has booted
- each time that SH is selected
- each time that p9659 is set

General diagnostic parameters on the CU

r9710[0...1] SI motion, diagnostics result list 1					
Display of result list 1 which led to an error for a crosswise data comparison between the two monitoring channels. [0]: Result list second channel [1]: Result list drive Bit 00: Actual value > Upper limit SOS Bit 01: Actual value > Lower limit SOS Bit 02: Actual value > Upper limit SE1 Bit 03: Actual value > Lower limit SE1 Bit 04: Actual value > Upper limit SE2 Bit 05: Actual value > Lower limit SE2 Bit 06: Actual value > Upper limit SG1 Bit 07: Actual value > Lower limit SG1 Bit 08: Actual value > Upper limit SG2 Bit 09: Actual value > Lower limit SG2 Bit 10: Actual value > Upper limit SG3 Bit 11: Actual value > Lower limit SG3 Bit 12: Actual value > Upper limit SG4 Bit 13: Actual value > Lower limit SG4 Bit 16: Actual value > Upper limit SBR Bit 17: Actual value > Lower limit SBR			Checksum: No		Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

See also: C01711 "SI motion: Defect in a monitoring channel".

8.2 Parameters for SINAMICS S120

r9711[0...1]		SI motion, diagnostics result list 2			
Display of result list 2, which led to an error between the two monitoring channels for a crosswise data comparison. [0]: Result list second channel [1]: Result list drive Bit 00 Actual value > Upper limit SN1+ Bit 01 Actual value > Lower limit SN1+ Bit 02 Actual value > Upper limit SN1– Bit 03 Actual value > Lower limit SN1– Bit 04 Actual value > Upper limit SN2+ Bit 05 Actual value > Lower limit SN2+ Bit 06 Actual value > Upper limit SN2– Bit 07 Actual value > Lower limit SN2– Bit 08 Actual value > Upper limit SN3+ Bit 09 Actual value > Lower limit SN3+ Bit 10 Actual value > Upper limit SN3– Bit 11 Actual value > Lower limit SN3– Bit 12 Actual value > Upper limit SN4+ Bit 13 Actual value > Lower limit SN4+ Bit 14 Actual value > Upper limit SN4– Bit 15 Actual value > Lower limit SN4– Bit 16 Actual value > Upper limit n_x + Bit 17 Actual value > Lower limit n_x + Bit 18 Actual value > Upper limit n_x – Bit 19 Actual value > Lower limit n_x – Bit 20 Actual value > Upper limit modulo Bit 21 Actual value > Lower limit modulo		Checksum: No		Protection level: 3	
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned32	Effective: –

See also: C01711 "SI motion: Defect in a monitoring channel"

r9712		SI motion diagnostics position actual value motor side			
Display of the actual position actual value on the motor side for the motion monitoring functions on the Control Unit.		Checksum:		Protection level: 3	
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned32	Effective: –

r9713		SI motion diagnostics position actual value load side			
Displays the actual position actual value on the load side of the two monitoring channels and their difference. [0] = load side actual value on the Control Unit [1] = load side actual value on the second channel [2] = load side actual value difference Control Unit – second channel re r9713[0]: The display of the load side position actual value on the Control Unit is updated in the monitoring clock cycle. re r9713[0]: The display of the load side position actual value on the second channel is updated in the crosswise data comparison clock cycle (r9724) and is realized, delayed by one crosswise data comparison clock cycle. re r9713[2]: The difference between the load side position actual value on the Control Unit and the load side position actual value on the second channel is updated in the crosswise data comparison clock cycle (r9724) and is realized, delayed by one crosswise data comparison clock cycle.		Checksum:		Protection level: 3	
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned32	Effective: –

8.2 Parameters for SINAMICS S120

r9714 SI motion diagnostics speed actual value load side					
Display of the actual load side speed value for the motion monitoring functions on the Control Unit. For linear axes, the following units apply: Micrometers per monitoring clock cycle (p9500). For rotary axes, the following units apply: Millidegrees per monitoring clock cycle (p9500).				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Integer32	Effective: —

r9718 CO/BO: SI motion, control signals 1					
Control signals 1 for the safe motion monitoring functions. Bit 23: Set the offset for travel to fixed stop to the actual torque 1 signal: Set, 0 signal: Reset				Checksum: No	Protection level: 4
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9719 CO/BO: SI motion, control signals 2					
Control signals 2 for the safe motion monitoring functions. Bit, signal name 00 deselect SOS/SLS (SBH/SG) 1 signal: Yes, 0 signal: No 01 deselect SOS (SBH) 1 signal: Yes, 0 signal: No 03 select SLS (SG) bit 0, 1 signal: Set, 0 signal: Not set 04 select SLS (SG) bit 1, 1 signal: Set, 0 signal: Not set 08 gear selection bit 0, 1 signal: Set, 0 signal: Not set 09 gear selection bit 1, 1 signal: Set, 0 signal: Not set 10 gear selection bit 2, 1 signal: Set, 0 signal: Not set 12 select SLP (SE) 1 signal: SLP2 (SE2), 0 signal: SLP1 (SE1) 13 close brake from control 1 signal: Yes, 0 signal: No 15 select test stop 1 signal: Yes, 0 signal: No 16 SGE valid 1 signal: Yes, 0 signal: No 18 deselect external STOP A, 1 signal: Yes, 0 signal: No 19 deselect external STOP C, 1 signal: Yes, 0 signal: No 20 deselect external STOP D, 1 signal: Yes, 0 signal: No 21 deselect external STOP E, 1 signal: Yes, 0 signal: No 28 SLS (SG) override bit 0, 1 signal: Set, 0 signal: Not set 29 SLS (SG) override bit 1, 1 signal: Set, 0 signal: Not set 30 SLS (SG) override bit 2, 1 signal: Set, 0 signal: Not set 31 SLS (SG) override bit 3, 1 signal: Set, 0 signal: Not set re r9719.0 and r9719.1: These two bits must be considered together. If SOS/SLS (SBH/SG) is deselected using bit 0, then the assignment of bit 1 is irrelevant. If SOS/SLS (SBH/SG) is selected using bit 0, then bit 1 is used to change over between SOS (SBH) and SLS (SG).				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

8.2 Parameters for SINAMICS S120

r9721 SI motion, status signals					
Status signals for the safety motion monitoring functions. Bit, signal name 00 SOS or SLS active, 1 signal: Yes, 0 signal: No 01 SOS active, 1 signal: Yes, 0 signal: No 02 pulse enable, 1 signal: Deleted, 0 signal: Enabled 03 active SLS stage bit 0, 1 signal: Set, 0 signal: Not set 04 active SLS stage bit 1, 1 signal: Set, 0 signal: Not set 05 speed below limit value n_x 1 signal: Yes, 0 signal: No 06 status signals valid, 1 signal: Yes, 0 signal: No 07 referenced in a safety-related fashion, 1 signal: Yes, 0 signal: No 12 STOP A or B active, 1 signal: Yes, 0 signal: No 13 STOP C active, 1 signal: Yes, 0 signal: No 14 STOP D active, 1 signal: Yes, 0 signal: No 15 STOP E active, 1 signal: Yes, 0 signal: No				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9725 SI motion, diagnostics STOP F					
Displays the message value that resulted to a STOP F on the drive. A value of 0 means: STOP F was signaled from the control. A value of 1 ... 999 means: Number of the incorrect crosswise compared data between the drive and control. A value >of 1000 means: Additional diagnostic values of the drive. Note: The significance of the individual values is described in Alarm 27001 of the higher-level control.				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

See also: C01711

Table 8-3 Diagnostic values for STOP F

Value	Description of errors	Explanation	Remedy
1000	Check (watchdog) timer has expired	Change timer in the CU was active too long (too many switching operations to the SGEs of the control)	Check SGEs
1001	Check (watchdog) timer initialization error	When starting the change timer, the control did not set the change counter	Upgrade the SW version
1002	User agreement expired	Control or drive has a different user agreement status. This difference was present for a longer time than the timer for the user agreement allows.	Set the user agreement again Upgrade the SW version
1003	Reference tolerance violated	In the powered-down state, the axis has moved outside the permissible tolerance	Check the position and if required issue a user agreement Carry out a power on and re-reference

8.2 Parameters for SINAMICS S120

Table 8-3 Diagnostic values for STOP F

Value	Description of errors	Explanation	Remedy
1004	Violated plausibility, user agreement	The value in p9726 violates the internal value for the user agreement	Reference the axis if this has not already been done
1005	Select test stop if the pulses have already been cancelled	It does not make sense to select a test stop if the pulses are already cancelled	Wait until the pulses have been enabled and then again initiate a test stop
1006	Reserved	—	—
1007	Communications failure between the PLC and drive	Sign of life failure in SGE/SGA between the PLC and drive	Check communications between the drive and control or NCK and PLC (SPL)
1008	Data transfer error between the PLC and drive	CRC error in SGE or SGA	Check communications between the drive and control or NCK and PLC (SPL)
1011	Acceptance test status different	The acceptance test status between the drive and control is different.	End the acceptance test mode and select again
1012	Plausibility violation of the actual value for the control	The redundant coarse position does not match the actual value.	Upgrade Sensor Module SW Replace the Sensor Module
1016	Telegram has failed three times with the same crosswise data comparison data	In the crosswise comparison clock cycle (= monitoring clock cycle * number of crosswise comparison data) the comparison of the same list data was missed three times in a row due to telegram failures.	Check communications between the drive and control
1020	Telegram has failed twice	An incorrect sign of life was identified in the safety data two times in a row.	Check communications between the drive and control
1021	Sign of life error in the communications with the Sensor Module	Communications failure with the Sensor Module was identified two times in a row.	Check communications between the Sensor Module and the drive

p9726 SI motion, user agreement, select/deselect					
Setting to select/deselect the user agreement 0: [00 hex] Deselect user agreement 172: [AC hex] Select user agreement				Checksum: No	Protection level: 4
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: 00AC hex	Data type: Integer16	Effective: POWER ON

8.2 Parameters for SINAMICS S120

r9727 SI motion, internal drive user agreement					
Displays the internal status of the user agreement Value = 0: User agreement is not set Value = AC hex: User agreement is set				Checksum: No	Protection level: 4
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Integer16	Effective:

r9728[0...1] SI motion, actual checksum, SI parameters					
Displays the checksum over the checked Safety Integrated parameters of the motion monitoring functions (actual checksum). [0]: Checksum over SI parameters for motion monitoring [1]: Checksum over SI parameters for actual values				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective:

See also: F01680 "SI motion: Checksum error safe monitoring functions".

r9729[0...1] SI motion, reference checksum, SI parameters					
Sets the checksum over the checked Safety Integrated parameters of the motion monitoring functions (reference checksum). [0]: Checksum over SI parameters for motion monitoring [1]: Checksum over SI parameters for actual values See also: r9728				Checksum: No	Protection level: 3
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: 0xFFFF FFFF	Data type: Unsigned32	Effective: POWER ON

See also: F01680 "SI motion: Checksum error safe monitoring functions".

8.2 Parameters for SINAMICS S120

r9735[0...1]	SI motion, diagnostics result list 3				
<p>Displays result list 3 where for a crosswise data comparison with the control, led to an error.</p> <p>[0]: Result list second channel</p> <p>[1]: Result list drive</p> <p>Bit field</p> <p>Bit 00 Actual value > Upper limit SN1+</p> <p>Bit 01 Actual value > Lower limit SN1+</p> <p>Bit 02 Actual value > Upper limit SN1–</p> <p>Bit 03 Actual value > Lower limit SN1–</p> <p>Bit 04 Actual value > Upper limit SN2+</p> <p>Bit 05 Actual value > Lower limit SN2+</p> <p>Bit 06 Actual value > Upper limit SN2–</p> <p>Bit 07 Actual value > Lower limit SN2–</p> <p>Bit 08 Actual value > Upper limit SN3+</p> <p>Bit 09 Actual value > Lower limit SN3+</p> <p>Bit 10 Actual value > Upper limit SN3–</p> <p>Bit 11 Actual value > Lower limit SN3–</p> <p>Bit 12 Actual value > Upper limit SN4+</p> <p>Bit 13 Actual value > Lower limit SN4+</p> <p>Bit 14 Actual value > Upper limit SN4–</p> <p>Bit 15 Actual value > Lower limit SN4–</p> <p>Bit 16 Actual value > Upper limit SN5+</p> <p>Bit 17 Actual value > Lower limit SN5+</p> <p>Bit 18 Actual value > Upper limit SN5–</p> <p>Bit 19 Actual value > Lower limit SN5–</p> <p>Bit 20 Actual value > Upper limit SN6+</p> <p>Bit 21 Actual value > Lower limit SN6+</p> <p>Bit 22 Actual value > Upper limit SN6–</p> <p>Bit 23 Actual value > Lower limit SN6–</p> <p>See also: C01711</p>				Checksum: Yes	Protection level: 3
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned32	Effective: POWER ON

8.2 Parameters for SINAMICS S120

r9736[0...1]	SI motion, diagnostics result list 4				
<p>Displays result list 4 where for a crosswise data comparison with the control, led to an error.</p> <p>[0]: Result list second channel</p> <p>[1]: Result list drive</p> <p>Bit field</p> <p>Bit 00 Actual value > Upper limit SN7+</p> <p>Bit 01 Actual value > Lower limit SN7+</p> <p>Bit 02 Actual value > Upper limit SN7–</p> <p>Bit 03 Actual value > Lower limit SN7–</p> <p>Bit 04 Actual value > Upper limit SN8+</p> <p>Bit 05 Actual value > Lower limit SN8+</p> <p>Bit 06 Actual value > Upper limit SN8–</p> <p>Bit 07 Actual value > Lower limit SN8–</p> <p>Bit 08 Actual value > Upper limit SN9+</p> <p>Bit 09 Actual value > Lower limit SN9+</p> <p>Bit 10 Actual value > Upper limit SN9–</p> <p>Bit 11 Actual value > Lower limit SN9–</p> <p>Bit 12 Actual value > Upper limit SN10+</p> <p>Bit 13 Actual value > Lower limit SN10+</p> <p>Bit 14 Actual value > Upper limit SN10–</p> <p>Bit 15 Actual value > Lower limit SN10–</p> <p>Bit 16 Actual value > Upper limit SN11+</p> <p>Bit 17 Actual value > Lower limit SN11+</p> <p>Bit 18 Actual value > Upper limit SN11–</p> <p>Bit 19 Actual value > Lower limit SN11–</p> <p>Bit 20 Actual value > Upper limit SN12+</p> <p>Bit 21 Actual value > Lower limit SN12+</p> <p>Bit 22 Actual value > Upper limit SN12–</p> <p>Bit 23 Actual value > Lower limit SN12–</p> <p>See also: C01711</p>					<p>Checksum: Yes</p> <p>Protection level: 3</p>
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned32	Effective: POWER ON

8.2 Parameters for SINAMICS S120

r9737[0...1]	SI motion, diagnostics result list 5				
<p>Displays result list 5 where for a crosswise data comparison with the control, led to an error.</p> <p>[0]: Result list second channel</p> <p>[1]: Result list drive</p> <p>Bit field</p> <p>Bit 00 Actual value > Upper limit SN13+</p> <p>Bit 01 Actual value > Lower limit SN13+</p> <p>Bit 02 Actual value > Upper limit SN13–</p> <p>Bit 03 Actual value > Lower limit SN13–</p> <p>Bit 04 Actual value > Upper limit SN14+</p> <p>Bit 05 Actual value > Lower limit SN14+</p> <p>Bit 06 Actual value > Upper limit SN14–</p> <p>Bit 07 Actual value > Lower limit SN14–</p> <p>Bit 08 Actual value > Upper limit SN15+</p> <p>Bit 09 Actual value > Lower limit SN15+</p> <p>Bit 10 Actual value > Upper limit SN15–</p> <p>Bit 11 Actual value > Lower limit SN15–</p> <p>Bit 12 Actual value > Upper limit SN16+</p> <p>Bit 13 Actual value > Lower limit SN16+</p> <p>Bit 14 Actual value > Upper limit SN16–</p> <p>Bit 15 Actual value > Lower limit SN16–</p> <p>Bit 16 Actual value > Upper limit SN17+</p> <p>Bit 17 Actual value > Lower limit SN17+</p> <p>Bit 18 Actual value > Upper limit SN17–</p> <p>Bit 19 Actual value > Lower limit SN17–</p> <p>Bit 20 Actual value > Upper limit SN18+</p> <p>Bit 21 Actual value > Lower limit SN18+</p> <p>Bit 22 Actual value > Upper limit SN18–</p> <p>Bit 23 Actual value > Lower limit SN18–</p> <p>See also: C01711</p>				Checksum: Yes	Protection level: 3
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned32	Effective: POWER ON

8.2 Parameters for SINAMICS S120

r9738[0...1]	SI motion, diagnostics result list 6				
<p>Displays result list 6 where for a crosswise data comparison with the control, led to an error.</p> <p>[0]: Result list second channel</p> <p>[1]: Result list drive</p> <p>Bit field</p> <p>Bit 00 Actual value > Upper limit SN19+</p> <p>Bit 01 Actual value > Lower limit SN19+</p> <p>Bit 02 Actual value > Upper limit SN19–</p> <p>Bit 03 Actual value > Lower limit SN19–</p> <p>Bit 04 Actual value > Upper limit SN20+</p> <p>Bit 05 Actual value > Lower limit SN20+</p> <p>Bit 06 Actual value > Upper limit SN20–</p> <p>Bit 07 Actual value > Lower limit SN20–</p> <p>Bit 08 Actual value > Upper limit SN21+</p> <p>Bit 09 Actual value > Lower limit SN21+</p> <p>Bit 10 Actual value > Upper limit SN21–</p> <p>Bit 11 Actual value > Lower limit SN21–</p> <p>Bit 12 Actual value > Upper limit SN22+</p> <p>Bit 13 Actual value > Lower limit SN22+</p> <p>Bit 14 Actual value > Upper limit SN22–</p> <p>Bit 15 Actual value > Lower limit SN22–</p> <p>Bit 16 Actual value > Upper limit SN23+</p> <p>Bit 17 Actual value > Lower limit SN23+</p> <p>Bit 18 Actual value > Upper limit SN23–</p> <p>Bit 19 Actual value > Lower limit SN23–</p> <p>Bit 20 Actual value > Upper limit SN24+</p> <p>Bit 21 Actual value > Lower limit SN24+</p> <p>Bit 22 Actual value > Upper limit SN24–</p> <p>Bit 23 Actual value > Lower limit SN24–</p> <p>See also: C01711</p>				<p>Checksum:</p> <p>Yes</p>	<p>Protection level:</p> <p>3</p>
<p>Unit:</p> <p>–</p>	<p>Default value:</p> <p>–</p>	<p>Minimum value:</p> <p>–</p>	<p>Maximum value:</p> <p>–</p>	<p>Data type:</p> <p>Unsigned32</p>	<p>Effective:</p> <p>POWER ON</p>

8.2 Parameters for SINAMICS S120

r9739[0...1]		SI motion, diagnostics result list 7			
Displays result list 7 where for a crosswise data comparison with the control, led to an error. [0]: Result list second channel [1]: Result list drive Bit field Bit 00 Actual value > Upper limit SN25+ Bit 01 Actual value > Lower limit SN25+ Bit 02 Actual value > Upper limit SN25– Bit 03 Actual value > Lower limit SN25– Bit 04 Actual value > Upper limit SN26+ Bit 05 Actual value > Lower limit SN26+ Bit 06 Actual value > Upper limit SN26– Bit 07 Actual value > Lower limit SN26– Bit 08 Actual value > Upper limit SN27+ Bit 09 Actual value > Lower limit SN27+ Bit 10 Actual value > Upper limit SN27– Bit 11 Actual value > Lower limit SN27– Bit 12 Actual value > Upper limit SN28+ Bit 13 Actual value > Lower limit SN28+ Bit 14 Actual value > Upper limit SN28– Bit 15 Actual value > Lower limit SN28– Bit 16 Actual value > Upper limit SN29+ Bit 17 Actual value > Lower limit SN29+ Bit 18 Actual value > Upper limit SN29– Bit 19 Actual value > Lower limit SN29– Bit 20 Actual value > Upper limit SN30+ Bit 21 Actual value > Lower limit SN30+ Bit 22 Actual value > Upper limit SN30– Bit 23 Actual value > Lower limit SN30– See also: C01711		Checksum: Yes		Protection level: 3	
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned32	Effective: POWER ON

r9744		SI message buffer changes, counter			
Displays the changes of the safety message buffer. This counter is incremented every time that the safety message buffer changes. This is used to check whether the safety message buffer has been read out consistently. See also r9747, r9748, r9749, p9752, r9754, r9755, r9756, r9759		Checksum: –		Protection level: 3	
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned16	Effective: –

r9747[0...63]		SI message code			
Displays the number of the safety messages that have occurred. See also r9744, r9748, r9749, r9754, p9752, r9753, r9754, r9755, r9756, r9759		Checksum: –		Protection level: 3	
Unit: –	Default value: –	Minimum value: –	Maximum value: –	Data type: Unsigned16	Effective: –

8.2 Parameters for SINAMICS S120

r9748[0...63] SI message time received in milliseconds					
Displays the relative system runtime in milliseconds when the safety message occurred. See also r9744, r9747, r9749, p9752, r9753, r9754, r9755, r9756, p9759				Checksum: —	Protection level: 3
Unit: ms	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9749[0...63] SI message value					
Displays the additional information about the safety message that occurred (as integer number). See also r9744, r9747, r9748, p9752, r9753, r9754, r9755, r9756, p9759				Checksum: —	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Integer32	Effective: —

p9752 SI message cases, counter					
Number of safety message cases that have occurred since the last reset. The safety message buffer is cleared by resetting the parameter to 0. See also r9745, r9748, r9749, r9754, r9755, r9756				Checksum: —	Protection level: 3
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 65535	Data type: Unsigned16	Effective: POWER ON

r9753[0...63] SI message value for float values					
Displays additional information about the safety message that has occurred for float values. See also r9744, r9747, r9748, p9752, r9754, r9755, r9756, p9759				Checksum: —	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Floating point	Effective: —

r9754[0...63] SI message time received in days					
Displays the relative system runtime in days when the safety message occurred. See also r9744, r9747, r9748, r9749, p9752, r9753, r9755, r9756, p9759				Checksum: —	Protection level: 3
Unit: days	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective: —

r9755[0...63] SI message time removed in milliseconds					
Displays the relative system runtime in milliseconds when the safety message was removed. See also r9744, r9747, r9748, r9749, p9752, r9753, r9754, r9756, p9759				Checksum: —	Protection level: 3
Unit: ms	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

8.2 Parameters for SINAMICS S120

r9756[0...63] SI message time removed in days					
Displays the relative system runtime in days when the safety message was removed. See also r9744, r9747, r9748, r7949, p9752, r9753,r9754, r9755, p9759				Checksum: —	Protection level: 3
Unit: days	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective: —

p9759 SI acknowledge messages, drive object					
Acknowledges all safety messages present for a drive object. Parameter should be set from 0 to 1 to acknowledge. After acknowledgement, the parameter is automatically reset to 0. See also r9744, r9747, r9748, r7949, p9752, r9753,r9754, r9755, p9759				Checksum: —	Protection level: 3
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 1	Data type: Unsigned8	Effective: —

p9761 SI password input					
Enters the Safety Integrated password. It is not permissible to change Safety Integrated parameter settings until the Safety Integrated password has been entered.				Checksum: No	Protection level: 3
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: FFFF FFFF hex	Data type: Unsigned32	Effective: Immediately

See also: F01659 "SI CU: Write task for parameter rejected"

p9762 SI password, new					
Enters a new Safety Integrated password. If the Safety Integrated password is changed it must be acknowledged in the following parameter: See also: p9763				Checksum: No	Protection level: 3
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: FFFF FFFF hex	Data type: Unsigned32	Effective: Immediately

p9763 SI password acknowledgment					
Acknowledges the new Safety Integrated password. The new password entered into p9762 must be re-entered in order to acknowledge. After successfully acknowledged, the new Safety Integrated password is set with p9762=p9763=0. See also: p9762				Checksum: No	Protection level: 3
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: FFFF FFFF hex	Data type: Unsigned32	Effective: Immediately

8.2 Parameters for SINAMICS S120

r9770[0...2]		SI version, safety-related functions integrated in the drive (Control Unit)			
Displays the Safety Integrated version on the Control Unit. Index 0: Safety Version (major release) Index 1: Safety Version (minor release) Index 2: Safety Version (baselevel or patch) See also: r9870, r9890 Example: r9770[0]=2, r9770[1]=3, r9770[2]=1—> Safety Version V02.03.01		Checksum: No		Protection level: 3	
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective: —

r9771		SI common functions (Control Unit)			
Displays the Safety Integrated monitoring functions supported on the Control Unit and Motor Module. The Control Unit determines this display. Bit 00: STO is supported via terminals 1 signal: Yes, 0 signal: No Bit 01: SBC supported 1 signal: Yes, 0 signal: No Bit 02: SI motion supported 1 signal: Yes, 0 signal: No Bit 03: SS1 supported 1 signal: Yes, 0 signal: No		Checksum: No		Protection level: 3	
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9772		CO/BO: SI status (Control Unit)			
Displays the Safety Integrated status on the Control Unit. Bit 00: STO selected on the Control Unit Bit 01: STO active on the Control Unit Bit 02: SS1 active on the Control Unit Bit 04: SBC requested Bit 09: STOP A cannot be acknowledged, active Bit 10: STOP A active Bit 15: STOP F active		1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No		Checksum: No Protection level: 2	
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9773		CO/BO: SI status (Control Unit + Motor Module)			
Displays the Safety Integrated status on the drive (Control Unit + Motor Module). Bit 00: STO selected in the drive Bit 01: STO active in the drive Bit 02: SS1 active in the drive Bit 04: SBC requested Bit 09: STOP A cannot be acknowledged, active Bit 31: Shutdown path test required This status is formed from the AND operation of the relevant status of the two monitoring channels.		1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No 1 signal: Yes, 0 signal: No		Checksum: No Protection level: 2	
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

8.2 Parameters for SINAMICS S120

r9774 CO/BO: SI status (safe standstill group)					
Displays the status for Safety Integrated of the group to which this drive belongs. This signals are an AND logic operation of the individual status signals of the drives included in this group Bit 00: STO selected in the group 1 signal: Yes, 0 signal: No Bit 01: STO active in the group 1 signal: Yes, 0 signal: No Bit 02: SS1 active in the group 1 signal: Yes, 0 signal: No Bit 04: SBC requested in the group 1 signal: Yes, 0 signal: No Bit 31: Shutdown paths of the group must be tested 1 signal: Yes, 0 signal: No A group is formed by appropriately grouping the terminals for "safe standstill". The status of a group of n drives is, for drives 1 to n-1 displayed with a delay of one monitoring clock cycle; this is a system-related effect.				Checksum: No	Protection level: 2
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9780 SI monitoring clock cycle (Control Unit)					
Displays the clock cycle time for the safety functions integrated in the drive on the Control Unit. See also: r9880				Checksum: No	Protection level: 3
Unit: ms	Default value: —	Minimum value: —	Maximum value: —	Data type: Floating point	Effective: —

r9794[0...19] SI crosswise comparison list (Control Unit)					
Displays the number of the data that are being presently compared crosswise on the Control Unit. r9794[0] = 1 (monitoring clock cycle) r9794[1] = 2 (enable safety-related functions) r9794[2] = 3 (SGE changeover, tolerance time) r9794[3] = 4 (transition time, STOP F to STOP A) ... The list of crosswise compared data depends on the particular application.				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective: —

r9795 SI diagnostics, STOP F (Control Unit)					
Displays the number of the cross-checked data which has caused STOP F on the Control Unit.				Checksum: No	Protection level: 2
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

8.2 Parameters for SINAMICS S120

Cross-wise data comparison ID	Crosswise comparison data	Associated parameters
1	SI monitoring clock cycle, integrated in the drive	r9780
2	SI enable parameters (CU/MM)	p9601/p9801
3	Tolerance time changeover, safety-related input signals (CU/MM)	p9650/p9850
4	Transition time from STOP F to STOP A (CU/MM)	p9658/p9858
5	Safe brake control (CU/MM)	p9602/p9802
6	Enable, safe motion monitoring	p9501/p29822

Additional diagnostic values (from 1000 onwards):

Value	Description of errors	Explanation
1000	Check (watchdog) timer has expired	Change timer in the MM has been active too long
1001	Change timer initialization error	When starting the change timer, MM has not set the "timer running bit"
1002	Check (watchdog) timer initialization error	The CU had not started the check (watchdog) timer although in MM the change timer is presently running
2000	Error when comparing the SH terminals	Status of the SH terminals on the Control Unit and Motor Module are different.
2001	Error when comparing the feedback signals DIAG_U and DIAG_L	Status of the feedback signals of the safety shut-down paths on the Control Unit and Motor Module are different.

r9798 SI actual checksum SI parameters (Control Unit)					
Displays the checksum over the checked Safety Integrated parameters on the Control Unit (actual checksum).				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9799 SI reference checksum SI parameters (Control Unit)					
Sets the checksum for the checked Safety Integrated parameters on the Control Unit (reference checksum).				Checksum: No	Protection level: 3
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: FFFF FFFF hex	Data type: Unsigned32	Effective:

The actual checksum (r9798) calculated by the CU must be entered into the reference checksum p9799. This therefore acknowledges the safety commissioning on the Control Unit.

8.2 Parameters for SINAMICS S120

Parameters for functions integrated in the drive MM

p9801 SI enable safety functions (Motor Module)					
Sets the enable signals for safety functions on the Motor Module Bit 00: STO enabled via terminals (Motor Module) 1 signal: Enabled, 0 signal: Locks				Checksum: Yes	Protection level: 3
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 1h	Data type: Unsigned16	Effective:

It is permissible to simultaneously enable the safety functions integrated in the drive (p9601/p9801 < > 0) and the motion monitoring functions (p9501 < > 0).

p9802 SI enable safe brake control (Motor Module)					
Sets the enable signal for the "Safe brake control" function (SBC) on the Motor Module. 0: SBC not enabled 1: Close the holding brake when SH is selected or when SI errors occur The "safe brake control" function only becomes active if at least one safety monitoring function is enabled (i.e. p9501 not equal to 0 and/or p9801 not equal to 0). If a motor holding brake is not being used then it does not make any sense to enable the parameterization "no motor holding brake available" and "safe brake control" (p1215 = 0, p9602 = p9802 = 1). The parameterization "motor holding brake the same as sequence control, connection via BICO" and "safe brake control" enabled (p1215 = 3, p9602 = 1, p9802 = 1) does not make sense. The parameterization "motor holding brake without feedback signals" and "safe brake control" enabled (p1278 = 1, p9602 = 1, p9802 = 1) is not permissible.				Checksum: Yes	Protection level: 3
Unit: —	Default value: 0	Minimum value: 0	Maximum value: 1	Data type: Integer32	Effective:

If p9802 = 1, the holding braking is closed when SH is selected or SI errors occur. p9602 has priority over p1215.

p9810 SI PROFIsafe address (Motor Module)					
Sets the PROFIsafe address of the Motor Module.				Checksum: Yes	Protection level: 3
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: FFFF hex	Data type: Unsigned16	Effective:

8.2 Parameters for SINAMICS S120

p9850 SI SGE changeover, tolerance time (Motor Module)					
<p>Sets the tolerance time to changeover the safety-related inputs (SGE) on the Motor Module. Because of the different runtimes of the two monitoring channels, an SIS switchover is not effective at the same time. After an SIS switchover, a cross-comparison of the dynamic data is not carried out during this tolerance time.</p> <p>For a crosswise data comparison between p9650 and p9850, a difference of one safety monitoring clock cycle is tolerated.</p> <p>The parameterized time is internally rounded-off to an integer multiple of the monitoring clock cycle.</p>				Checksum: Yes	Protection level: 3
Unit: µs	Default value: 500 000	Minimum value: 0	Maximum value: 2 000 000	Data type: Floating point	Effective:

p9852 SI Safe Stop 1 delay time (Motor Module)					
<p>Sets the delay time of the pulse cancellation for the function "Safe Stop 1" (SS1) on the Motor Module to brake along the OFF3 down ramp (p1135). Also refer to: p1135, p9652</p> <p>For a crosswise data comparison between p9652 and p9852, a difference of one safety monitoring clock cycle is tolerated.</p> <p>The parameterized time is internally rounded-off to an integer multiple of the monitoring clock cycle.</p>				Checksum: Yes	Protection level: 3
Unit: ms	Default value: 0	Minimum value: 0	Maximum value: 300000.00	Data type: Floating point	Effective:

p9858 SI transition time STOP F to STOP A (Motor Module)					
<p>Sets the transition time from STOP F to STOP A on the Motor Module. For a crosswise data comparison between p9658 and p9858, a difference of one safety monitoring clock cycle is tolerated.</p> <p>The parameterized time is internally rounded-off to an integer multiple of the monitoring clock cycle.</p> <p>STOP F: Defect in a monitoring channel (error in the crosswise data comparison)</p> <p>STOP A: Pulse deletion via safety shutdown path</p>				Checksum: Yes	Protection level: 3
Unit: µs	Default value: 0	Minimum value: 0	Maximum value: 30 000 000.00	Data type: Floating point	Effective:

r9870[0...2] SI version, safety functions integrated in the drive (Motor Module)					
<p>Displays the Safety Integrated version on the Motor Module.</p> <p>[0]: Safety Version (major release)</p> <p>[1]: Safety Version (minor release)</p> <p>[2]: Safety Version (baselevel or patch)</p> <p>Example: r9870[0]=2, r9870[1]=3, r9870[2]=1—> Safety Version V02.03.01</p>				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective: —

8.2 Parameters for SINAMICS S120

r9871 SI common functions (Motor Module)					
Displays the Safety Integrated monitoring functions supported on the Control Unit and Motor Module. The Motor Module determines this display. Bit 00: SH supported via terminal 1 signal: Yes, 0 signal: No Bit 01: SBC is supported 1 signal: Yes, 0 signal: No Bit 02: SI motion supported 1 signal: Yes, 0 signal: No Bit 03: SS1 supported 1 signal: Yes, 0 signal: No				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9872 CO/BO: SI status (Motor Module)					
Displays the Safety Integrated status on the Motor Module. Bit 00: SH selected on the Motor Module 1 signal: Yes, 0 signal: No Bit 01: SH active on the Motor Module 1 signal: Yes, 0 signal: No Bit 02: SS1 active on the Motor Module 1 signal: Yes, 0 signal: No Bit 04: SBC requested 1 signal: Yes, 0 signal: No Bit 09: STOP A cannot be acknowl., active 1 signal: Yes, 0 signal: No Bit 10: STOP A active 1 signal: Yes, 0 signal: No Bit 15: STOP F active 1 signal: Yes, 0 signal: No				Checksum: No	Protection level: 2
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9880 SI monitoring clock cycle (Motor Module)					
Displays the clock cycle time for the Safety Integrated Basic Functions on the Motor Module.				Checksum: No	Protection level: 3
Unit: ms	Default value: —	Minimum value: —	Maximum value: —	Data type: Floating point	Effective: —

r9881[0...11] SI motion Sensor Module Node Identifier, second channel					
Displays the Node Identifier of the Sensor Module that is used by the second channel for the motion monitoring functions.				Checksum: No	Protection level: 4
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned8	Effective: —

8.2 Parameters for SINAMICS S120

r9890[0...2] SI version (Sensor Module)					
Displays the Safety Integrated version on the Sensor Module. [0]: Safety Version (major release) [1]: Safety Version (minor release) [2]: Safety Version (baselevel or patch) Example: r9890[0]=2, r9890[1]=3, r9890[2]=1—> Safety Version V02.03.01				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective: —

r9894[0...19] SI crosswise comparison list (Motor Module)					
Displays the number of the data that are being presently compared crosswise on the Motor Module. Example: r9894[0] = 1 (monitoring clock cycle) r9894[1] = 2 (enable safety-related functions) r9894[2] = 3 (SGE changeover, tolerance time) r9894[3] = 4 (transition time, STOP F to STOP A) ... The list of crosswise compared data depends on the particular application.				Checksum: No	Protection level: 2
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned16	Effective: —

r9895 SI diagnostics, STOP F (Motor Module)					
Displays the number of the cross-checked data which has caused STOP F on the Motor Module.				Checksum: No	Protection level: 2
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

Diagnostics data that provides more information on Fault F30611 ("SI MM: Defect in a monitoring channel").

Crosswise data comparison ID	Crosswise comparison data	Associated parameters
1	SI monitoring clock cycle	r9780, r9880
2	SI enable safety functions	p9601, p9801
3	SI SGE changeover, tolerance time	p9650, p9850
4	SI transition time from STOP F to STOP A	p9658, p9858
5	SI enable safe brake control	p9602, p9802
6	SI motion, enable safety-related functions	p9501, p2982
7	SI delay time of the pulse cancellation for Safe Stop 1	p9652, p9852
8	SI PROFIsafe address	p9610, p9810

Additional diagnostic values (from 1000 onwards):

8.2 Parameters for SINAMICS S120

Value	Description of errors	Explanation
1000	Check (watchdog) timer has expired	Change timer in the CU has been active too long
1001	Change timer initialization error	When starting the change timer, the CU had not set the "timer running bit"
1002	Check (watchdog) timer initialization error	The MM had not started the check (watchdog) timer although the change timer is currently running in the CU
2000	Error when comparing the SH terminals	Status of the SH terminals on the Control Unit and Motor Module are different.
2001	Error when comparing the feedback signals DIAG_U and DIAG_L	Status of the feedback signals of the safety shutdown paths on the Control Unit and Motor Module are different.
2002	Error when comparing the feedback signals	Status of the delay timer SS1 on the Control Unit and Motor Module are different

r9898 SI actual checksum SI parameters (Motor Module)					
Displays the checksum for the checked Safety Integrated parameters on the Motor Module (actual checksum).				Checksum: No	Protection level: 3
Unit: —	Default value: —	Minimum value: —	Maximum value: —	Data type: Unsigned32	Effective: —

r9899 SI reference checksum SI parameters (Motor Module)					
Sets the checksum for the checked Safety Integrated parameters on the Motor Module (reference checksum).				Checksum: No	Protection level: 3
Unit: —	Default value: 0000 hex	Minimum value: 0000 hex	Maximum value: FFFF FFFF hex	Data type: Unsigned32	Effective: When exiting the SI commissioning mode

The actual checksum (r9898) calculated by the MM must be entered into the reference checksum p9899. This therefore acknowledges the safety commissioning on the Motor Module.

8.3 Interface signals

General information

The safety-related input and output signals (SGE and SGA) are signals that are sent to and received from the system through two channels.



Warning

A STOP F (displayed using Alarms 27001, 27101 and onwards or F01711) only results in a subsequent STOP B/A response, if at least one of the safety-related functions SBH, SG, SE or SN is active or selected. If only the function "n < nx" is active, then a STOP F does not result in a subsequent STOP B/A response. This means that if "n < nx" is used as a safety function, at least one of the SBH, SG, SE or SN functions must either be active or selected (e.g. by selecting a high SG level).

Note

The SGE/SGA in the drive monitoring channel are mapped in an area of the NC/PLC interface (signals to/from the drive) and must be supplied in the PLC user program.

As a result of the two-channel structure of Safety Integrated, the machine manufacturer must supply the SGE and SGA in both the NCK monitoring channel and the drive monitoring channel.

Unused SGE must be set to a defined state.

8.3 Interface signals

8.3.1 Interface signals for SINUMERIK 840D sl

Table 8-4 Interface signals for 840D sl

DB 31...	Signals from/to the drive							
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
...	...							
...	...							
...	...							
DBB 22				SG selection			SBH Deselection	SBH/SG Deselection
				Bit 1	Bit 0			
DBB 23	Test stop Selection		Close Brake	SE- Selection		Gear ratio selection		
						Bit 2	Bit 1	Bit 0
SGE (signals to the drive)								
DBB 32			Deselect ext. STOP_E	Deselect ext. STOP_D	Deselect ext. STOP_C	Deselect ext. STOP_A		
DBB 33	SG correction select/override							
	Bit 3	Bit 2	Bit 1	Bit 0				
...	...							
...	...							
...	...							
DBB 108	Axis safely referenced				Fault data transfer	"Pulses cancelled" status	Communication failure	SBH/SG active
DBB 109	SN4 –	SN4 +	SN3 –	SN3 +	SN2 –	SN2 +	SN1–	SN1+
Cam signals of the plus and minus cams Cam position								
DBB 110			$n < n_x$	SG active			SBH active	
				Bit 1	Bit 0			
DBB 111	STOP_E active	STOP_D active	STOP_C Active	STOP_A/B Active				
DBB 112	Cam range for cam track 1							
DBB 113	Cam range for cam track 2							
DBB 114	Cam range for cam track 3							
DBB 115	Cam range for cam track 4							
DBB 116								
DBB 117					Cam track 4	Cam track 3	Cam track 2	Cam track 1
Cam track 1								
DBB 118	Cam 8	Cam 7	Cam 6	Cam 5	Cam 4	Cam 3	Cam 2	Cam 1
Cam track 1								
DBB 119		Cam 15	Cam 14	Cam 13	Cam 12	Cam 11	Cam 10	Cam 9
Cam track 2								
DBB 120	Cam 8	Cam 7	Cam 6	Cam 5	Cam 4	Cam 3	Cam 2	Cam 1
Cam track 2								
DBB 121		Cam 15	Cam 14	Cam 13	Cam 12	Cam 11	Cam 10	Cam 9

	Cam track 3							
DBB 122	Cam 8	Cam 7	Cam 6	Cam 5	Cam 4	Cam 3	Cam 2	Cam 1
	Cam track 3							
DBB 123		Cam 15	Cam 14	Cam 13	Cam 12	Cam 11	Cam 10	Cam 9
	Cam track 4							
DBB 124	Cam 8	Cam 7	Cam 6	Cam 5	Cam 4	Cam 3	Cam 2	Cam 1
	Cam track 4							
DBB 125		Cam 15	Cam 14	Cam 13	Cam 12	Cam 11	Cam 10	Cam 9
Note: DB 31/32/33 ... contains the interface signals for axis/spindle 1/2/3 ...								

8.3.2 Description of the interface signal

Description of the signals sent to the monitoring channel

SGE, SBH/SG deselection, SBH deselection

The SBH and SG functions are selected/deselected using these signals.

Table 8-5 Selecting/deselecting SBH and SG

SGE		Description
SBH/SG deselection	SBH deselection	
= 1	x	SBH and SG are deselected
= 0	= 0	SBH is selected
= 0	= 1	SG is selected
x: Signal state is optional		

SGE – SG selection, bits 1, 0

By combining these signals when the SG function is activated it is possible to select the speed limit value for SG1, 2, 3 or 4.

Table 8-6 Selecting the speed limit values for SGn

SGE		Description
SG selection Bit 1	SG selection Bit 0	
= 0	=0	Speed limit value for SG1 is selected
= 0	=1	Speed limit value for SG2 is selected
= 1	=0	Speed limit value for SG3 is selected
=1	=1	Speed limit value for SG4 is selected

8.3 Interface signals

SGE gearbox ratio selection, bits 2, 1, 0

The combination of these signals determines the selected gearbox ratio 1, 2, ... ,8.

Table 8-7 Gearbox ratio selection

SGE gearbox ratio selection			
Bit 2	Bit 1	Bit 0	Description
0	0	0	Gearbox stage 1 is selected
0	0	1	Gearbox stage 2 is selected
0	1	0	Gearbox stage 3 is selected
...			...
1	1	1	Gearbox stage 8 is selected

SGE SE selection

When this signal is appropriately activated, and the SE function is activated, either SE1 or SE2 is selected.

0 signal: SE1 is selected

1 signal: SE2 is selected

SGE SG correction selection/override, bits 3, 2, 1, 0

16 overrides for the limit value of safely reduced speeds 2 and 4 can be defined using the SGEs. This means that the limit values for SG2 and SG4 can be more finely graduated.

An override factor of between 1 and 100% can be assigned to the selected override using the following machine data:

for 840D sl:

MD 36932: \$MA_SAFE_VELO_OVR_FACTOR[n]

for SINAMICS S120:

p9532[n]: SI motion, override factor

SGE test stop selection

This signal is used to initiate the shutdown path test for the drive monitoring channel (see Chapter 6.1.1 "Shutdown paths").

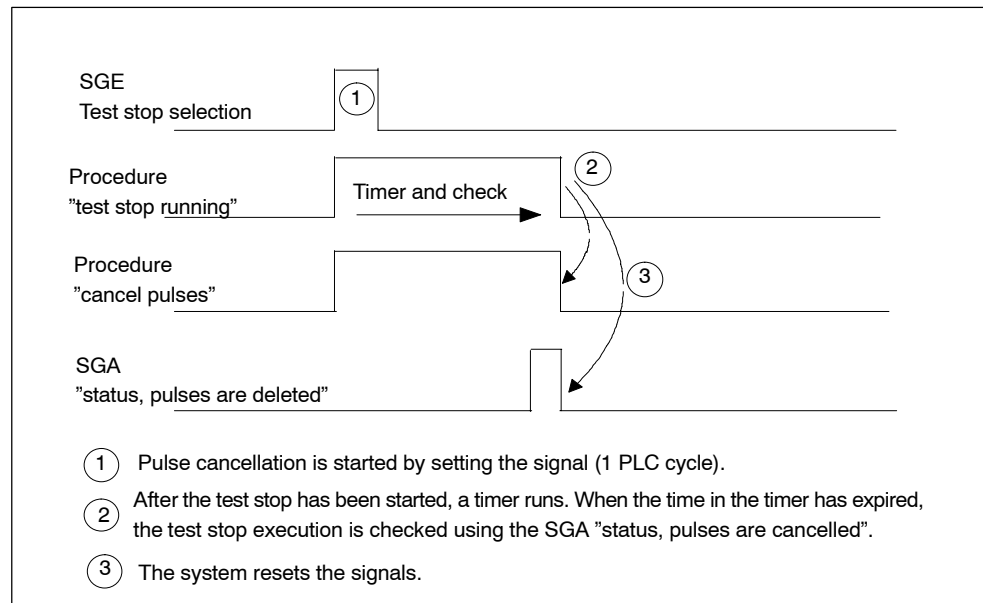


Fig. 8-1 Signal timing for SGE test stop selection

The test stop is also carried out at the same time in the NCK monitoring channel (see Chapter 6.1.2 "Testing the shutdown paths").

Test stop for external STOPS

See Chapter 6.3.8 "Forced checking procedure of the external STOPS".

SGE deselect ext. STOP A

"Pulse cancellation" can be requested and executed using this SGE.

The safe functions currently active (SG/SBH/SN/SE) are not influenced by this SGE.

If one of the currently active limits is violated, an appropriate alarm is initiated. The associated shutdown response cannot be activated because the pulses have already been cancelled. As soon as the stop request is cancelled via the SGE "deselect ext. STOP A" any queued shutdown responses become active.

If a stop request is active, SGA "STOP A/B is active" is set in the same way as it would be for an internally triggered STOP A.

0 signal: "Pulse cancellation" is requested
 1 signal: "Pulse cancellation" is not requested

8.3 Interface signals

SGE deselect ext. STOP C

This SGE requests "braking with $n_{\text{set}} = 0$ " (braking along the OFF3 down ramp). When this stopping type is initiated, the safe acceleration monitoring (SBR) is activated. In addition, the timer set in MD36952/p9552:

\$MA_SAFE_STOP_SWITCH_TIME_C/"SI motion transition time STOP C to SBH" is started.

After this time has elapsed, the system automatically changes over to SBH.

If a stop request is active, SGA "STOP C is active" is set in the same way as it would be for an internally triggered STOP C.

0 signal:	"Braking with $n_{\text{set}} = 0$ " is requested
1 signal:	No request for "braking with $n_{\text{set}} = 0$ "

Note

Stopping with an external STOP A (pulse cancellation) has a higher priority and can interrupt an external STOP C (braking along the OFF3 down ramp).

SGE deselect ext. STOP D

"Braking along a path" can be requested using this SGE.

When ext. STOP D is triggered, the timer set using MD 36953/p9553

\$MA_SAFE_STOP_SWITCH_TIME_D/"SI motion transition time STOP D to SBH" is started.

After this time has elapsed, the system automatically changes over to SBH.

If a stop request is active, SGA "STOP D is active" is set in the same way as it would be for an internally triggered STOP D.

0 signal:	"Braking along a path" is requested
1 signal:	"Braking along the path" is not requested

Note

Stopping with an external STOP A (pulse cancellation) and/or external STOP C (braking along the OFF3 down ramp) has a higher priority and can interrupt an external STOP D (braking along a path).

SGE deselect ext. STOP E

This SGE can be used to request a stop via the function "extended stopping and retraction" (ESR). When an external STOP E is initiated the timer set using MD 36954: \$MA_SAFE_STOP_SWITCH_TIME_E/p9554: "SI motion transition time STOP E to SBH" is started.

After this time has elapsed, the system automatically changes over to SBH.

If a stop request is active, SGA "STOP E is active" is set in the same way as it would be for an internally triggered STOP E.

0 signal: "Stop/retraction" is requested

1 signal: "Stop/retraction" is not requested

Note

Stopping with an external STOP A (pulse cancellation) and/or external STOP C (braking along the OFF3 down ramp) and/or ext. STOP D (braking along a path) has/have a higher priority and can interrupt an external STOP E.

STOP E only produces a different response than STOP D if the user has configured the ESR function – extended stop and retract – and initiation of the ESR is programmed depending on \$VA_STOPSI or \$A_STOPESI. If no ESR is active, the STOP E behaves like a STOP D. However, if the ESR was incorrectly configured, there is a delay up to the time \$MC_ESR_DELAY_TIME1 and \$MC_ESR_DELAY_TIME2 compared to STOP D until the braking operation is initiated.

After these times have expired, braking is initiated at the current limit.

Close SGE brake (only the drive)

Using this SGE, a mechanical brake, that is controlled from the drive brake control, is closed. It is used to check brake closing while testing the mechanical brake system.

- If this SGE is set, the brake is closed.
- If this SGE is deleted, then the brake assumes the status of the drive brake control – i.e. it is not forcibly opened (no positive opening).

Note

This SGE must be connected to the brake control using a BiCo interconnection in the drive (p0858 to source r9719, bit 13). This connection is parameterized as standard.

Description of signals from the monitoring channel

SGA SBH/SG active

This signal is used to signal the drive monitoring channel the status of the SBH and SG functions as follows:

- 0 signal: SBH/SG is not active
- 1 signal: SBH/SG is active

SGA status, pulses are cancelled (drive only)

After the shutdown path test has been initiated using the SGE test stop selection or if a limit value is violated with a resulting STOP A response, this signal is output to indicate that the drive pulses have been internally cancelled (refer to Chapter 6.1.1, "Shutdown paths").

- 0 signal: Pulses are enabled
- 1 signal: Pulses are cancelled

SGA axis safely referenced

This indicates as to whether the relevant axis/spindle has been safely referenced (see Chapter 5.4.3, "Axis states").

- 0 signal: Axis is not safely referenced
- 1 signal: Axis is safely referenced

SGA SN1+, SN1–, SN2+, SN2–, SN3+, SN3–, SN4+, SN4–

These signals are used to indicate which of the plus or minus cams of cam pair 1, 2, 3 or 4 is "actuated".

- 0 signal:
Axis/spindle is located to the left of the cam (actual value < cam position)
- 1 signal:
Axis/spindle is located to the right of the cam (actual value > cam position)

SGA safe cam track

These signals are used to display whether the axis is located on a cam that is assigned to this cam track (this only applies to the "safe cam track" function).

- 0 signal:
The axis is not located on a cam of this cam track
- 1 signal:
The axis is located on a cam of this cam track

SGA safe cam range

The bits (4 bits per cam track) display in which cam range the axis is presently located (this is only valid for the "safe cam track" function).

SGA safe cam range bits

This signal displays at which cam the axis is presently located (this is only valid for the "safe cam track" function).

0 signal: The axis is not located at this cam

1 signal: The axis is located at this cam

SGA SBH active

The signal indicates the status of the safe operating stop (SBH).

1 signal: SBH is active

0 signal: SBH is not active

SGA STOP A/B is active

This signal indicates that STOP A/B is active.

The signal must be used for the forced checking procedure for external STOPs.

0 signal: STOP A/B is not active

1 signal: STOP A/B is active

SGA STOP C is active

This signal indicates that STOP C is active.

The signal must be used for the forced checking procedure for external STOPs.

0 signal: STOP C is not active

1 signal: STOP C is active

SGA STOP D is active

This signal indicates that STOP D is active.

The signal must be used for the forced checking procedure for external STOPs.

0 signal: STOP D is not active

1 signal: STOP D is active

8.3 Interface signals

SGA STOP E is active

This signal indicates that STOP E is active.

The signal must be used for the forced checking procedure for external STOPs.

0 signal: STOP E is not active
 1 signal: STOP E is active

SGA "n < n_x"

This SGA indicates whether the absolute value of the actual speed is above or below a speed specified in the machine data.

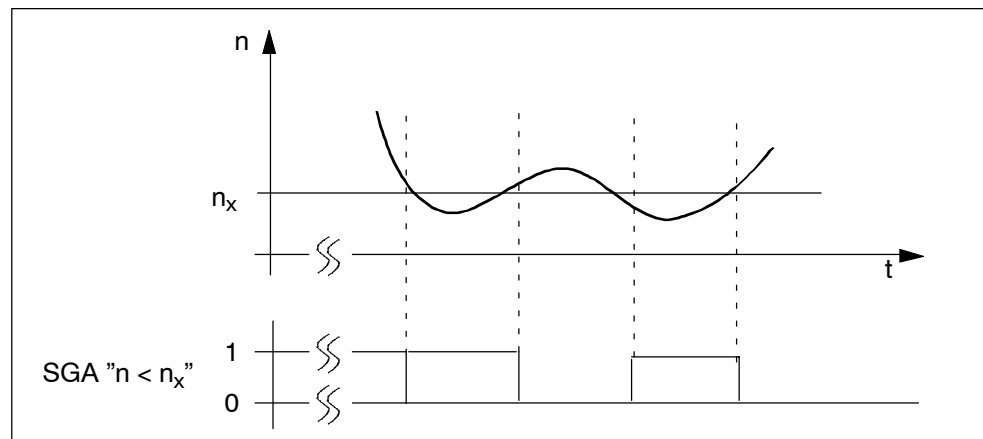


Fig. 8-2 Signal $n < n_x$, dependent on the speed characteristic

**Warning**

A STOP F (displayed using Alarms 27001, 27101 and onwards or F01711) only results in a subsequent STOP B/A response, if at least one of the safety-related functions SBH, SG, SE or SN is active or selected. If only the function "n < n_x" is active, then a STOP F does not result in a subsequent STOP B/A response. This means that if "n < n_x" is used as a safety function, at least one of the SBH, SG, SE or SN functions must either be active or selected (e.g. by selecting a high SG level).

Note

If the axis/spindle runs at a speed n_x , then as a result of actual differences in the two monitoring channels, the SGA "n < n_x" can have different states. This must be taken into account in the safe processing of the SGA.

SG active, bits 1, 0

The SGA "SG active bits 1, 0" displays which safely reduced speed and therefore which speed limit value is actively monitored. The SGAs are only updated if the function "SBH/SG" is enabled and SG is active (SGE "SBH/SG deselection" = 0 and "SBH deselection" = 1).

Table 8-8 Display of the active safely reduced speed

SG active Bit 1	SGA		SBH active	Description
	SG active Bit 0	SBH/ SG active		
=0	=0	1	1	SBH is active (safely reduced speed is not active)
=0	=0	1	0	Speed limit value for SG1 active
=0	=1	1	0	Speed limit value for SG2 active
=1	=0	1	0	Speed limit value for SG3 active
=1	=1	1	0	Speed limit value for SG4 active
=0	=0	0	0	Neither SBH nor SG is active
Note: The state "SG active bits 1, 0" = "0" has different meanings. A clear interpretation can be obtained by additionally evaluating the SGAs "SBH active" and "SBH/SG active".				

Communication failure

For a sign-of-life error or CRC error, this signal is set to TRUE. The PLC-SPL remains functional in so much that the drive monitoring channel is not required. SGE to the drive are effective. The SGA from the drive are frozen at the state before communications failed.

Response time when the sign of life character from the drive fails: 3 s

Response time for CRC errors from the drive: 3 PLC cycles

Fault, data transfer

For a CRC error, this signal is set to TRUE. The PLC-SPL remains functional in so much that the drive monitoring channel is not required. SGE to the drive are effective. The SGA from the drive are frozen at the state before communications failed.

Response time for CRC errors from the drive: 3 PLC cycles

8.3 Interface signals

8.3.3 PLC data block (DB 18)

Parameterization part

DB 18		Signals for safety SPL						
Data block		Interface PLC —> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
<i>INSEP Valid (valid bit)</i>								
DBB 0	8th input byte	7th input byte	6th input byte	5th input byte	4th input byte	3rd input byte	2nd input byte	1st input byte
DBB1								
<i>OUTSEP Valid (valid bit)</i>								
DBB 2	8th output byte	7th output byte	6th output byte	5th output byte	4th output byte	3rd output byte	2nd output byte	1st output byte
DBB 3								
INSEP_ADDR (address 1st input byte)								
DBW4								
INSEP_ADDR (address 2nd input byte)								
DBW6								
INSEP_ADDR (address 3rd input byte)								
DBW8								
INSEP_ADDR (address 4th input byte)								
DBW10								
INSEP_ADDR (address 5th input byte)								
DBW12								
INSEP_ADDR (address 6th input byte)								
DBW14								
INSEP_ADDR (address 7th input byte)								
DBW16								
INSEP_ADDR (address 8th input byte)								
DBW18								
OUTSEP_ADDR (address 1st output byte)								
DBW20								
OUTSEP_ADDR (address 2nd output byte)								
DBW22								

DB 18		Signals for safety SPL						
DBW24		OUTSEP_ADDR (address 3rd output byte)						
DBW26		OUTSEP_ADDR (address 4th output byte)						
DBW28		OUTSEP_ADDR (address 5th output byte)						
DBW30		OUTSEP_ADDR (address 6th output byte)						
DBW32		OUTSEP_ADDR (address 7th output byte)						
DBW34		OUTSEP_ADDR (address 8th output byte)						
DBB36							STOP_MODE	SPL_READY
DBB37								

Note

DBB 0–35 is not relevant for SINUMERIK 840D sl.

Data area/errors

DB 18		Signals for safety SPL						
Data block		Interface PLC —> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
	<i>Data area of SPL inputs/outputs</i>							
DBD 38	SPL_DATA.INSEP[1 ...32]							
DBD 42	SPL_DATA.INSEP[33 ...64]							
DBD 46	SPL_DATA.OUTSEP[1 ...32]							
DBD 50	SPL_DATA.OUTSEP[33 ...64]							
	<i>Data area for user SPL</i>							
	SPL_DATA.INSIP[1 ...32]							

8.3 Interface signals

DB 18		Signals for safety SPL						
DBD 54								
DBD 58	SPL_DATA.INSIP[33 ...64]							
DBD 62	SPL_DATA.OUTSIP[1 ...32]							
DBD 66	SPL_DATA.OUTSIP[33 ...64]							
DBD 70	SPL_DATA.MARKERSIP[1 ...32]							
DBD 74	SPL_DATA.MARKERSIP[33 ...64]							
	<i>Difference in signal level NCK – PLC for diagnostics</i>							
DBD 78	SPL_DELTA.INSEP[1 ...32]							
DBD 82	SPL_DELTA.INSEP[33 ...64]							
DBD 86	SPL_DELTA.OUTSEP[1 ...32]							
DBD 90	SPL_DELTA.OUTSEP[33 ...64]							
DBD 94	SPL_DELTA.INSIP[1 ...32]							
DBD 98	SPL_DELTA.INSIP[33 ...64]							
DBD 102	SPL_DELTA.OUTSIP[1 ...32]							
DBD 106	SPL_DELTA.OUTSIP[33 ...64]							
DBD 110	SPL_DELTA.MARKERSIP[1 ...32]							
DBD 114	SPL_DELTA.MARKERSIP[33 ...64]							
DBB 118								CMDSI
DBB 119			COMM_TO					

DB 18		Signals for safety SPL
DBD 120	Error code 0 = no error 1 – 320 = signal number starting from SPL_DATA.INSEP[1]	
DBD 124	Crosswise data comparison stack level display (diagnostics capability: How many SPL signals currently have different levels)	

Additional data areas

DB 18		Signals for safety SPL						
Data block		Interface PLC —> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
<i>Data area of single-channel inputs/outputs</i>								
DBB128	PLCSIOUT[1 ...8]							
DBB129	PLCSIOUT[9 ...16]							
DBB130	PLCSIOUT[17 ...24]							
DBB131	PLCSIOUT[25 ...32]							
DBB132	PLCSIIN[1 ...8]							
DBB133	PLCSIIN[9 ...16]							
DBB134	PLCSIIN[17 ...24]							
DBB135	PLCSIIN[25 ...32]							
DBW136	SPL status[1 ...16]							
DBB138	INSEP_PROFISAFE[1 ...8] PROFIsafe module(s) for							
	8th input byte	7th input byte	6th input byte	5th input byte	4th input byte	3rd input byte	2nd input byte	1st input byte
DBB139								
DBB140	OUTSEP_PROFISAFE[1 ...8] PROFIsafe module(s) for							
	8th output byte	7th output byte	6th output byte	5th output byte	4th output byte	3rd output byte	2nd output byte	1st output byte

8.3 Interface signals

DB 18		Signals for safety SPL							
DBB141									
DBB142 to DBB149									

DB 18		Signals for safety SPL							
DBB150 to DBB157									
DBB158 to DBB188									

SPL status signals for DB18.DBW136

DB18.DBX136.0	SPL_STATUS[1]	NCK–SPL interfaces parameterized
DB18.DBX136.1	SPL_STATUS[2]	NCK–SPL program file exists
DB18.DBX136.2	SPL_STATUS[3]	NCK waits for the PLC to boot
DB18.DBX136.3	SPL_STATUS[4]	NCK and PLC in cyclic operation
DB18.DBX136.4	SPL_STATUS[5]	Call FB4 processing for SPL
DB18.DBX136.5	SPL_STATUS[6]	End FB4 processing for SPL
DB18.DBX136.6	SPL_STATUS[7]	Call FC9 processing for SPL
DB18.DBX136.7	SPL_STATUS[8]	End FC9 processing for SPL
DB18.DBX137.0	SPL_STATUS[9]	SPL start implemented using PROG_EVENT mechanism
DB18.DBX137.1	SPL_STATUS[10]	Crosswise data comparison started, NCK
DB18.DBX137.2	SPL_STATUS[11]	Crosswise data comparison started, PLC
DB18.DBX137.3	SPL_STATUS[12]	NCK–SPL checksum checking active
DB18.DBX137.4	SPL_STATUS[13]	All SPL protective mechanisms active
DB18.DBX137.5	SPL_STATUS[14]	End of SPL program reached
DB18.DBX137.6	SPL_STATUS[15]	Not assigned
DB18.DBX137.7	SPL_STATUS[16]	Not assigned

Table 8-9 Overview of DB 18 signals

DB18				
Signal	r – read w – write	Type	Value range	Comment
Parameterization part				
INSEP_VALID[1..8] (no significance)	r/w	Bool		0 = INSEP[1..8] No automatic transfer, can be supplied from the user program (AWP) 1 = Transfer of input byte, specified in INSEP_ADDR[1..8] to INSEP[1..8] by the basic program

8.3 Interface signals

Table 8-9 Overview of DB 18 signals

Signal	r – read w – write	Type	Value range	Comment
OUT-SEP_VALID[1..8] (no significance)	r/w	Bool		0 = OUTSEP[1..8] No automatic transfer, can be retrieved from the user program (AWP) 1 = Transfer to the output byte, specified in OUTSEP[1..8] from OUT-SEP_ADDR[1..8] by the basic program
INSEP_ADDR[1..8] (no significance)	r/w	Int	1..EB max	Address, input byte
OUT-SEP_ADDR[1..8] (no significance)	r/w	Int	1..AB max	Address, output byte
SPL_READY	r/w	Bool		0 = commissioning phase (for a crosswise data comparison error, a STOP D is not initiated) 1 = commissioning completed (for a crosswise data comparison error, STOP D is initiated)
STOP_MODE	r/w	Bool		If DB18, DBX36.1 was set to 1, for a crosswise data comparison error, instead of an external STOP D, an external STOP E is transferred to the drive
Data area/status				
SPL_DATA				Net (useful) data:
INSEP[1..64]	r	Bool		External PLC input for the SPL
OUTSEP[1..64]	r/w	Bool		External PLC output for the SPL
INSIP[1..64]	r	Bool		Internal PLC input for the SPL
OUTSIP[1..64]	r/w	Bool		Internal PLC output for the SPL
MARKERSIP[1..64]	r/w	Bool		Marker for SPL
SPL_DELTA				Signal differences for diagnostics:
INSEP[1..64]	r	Bool		External PLC input for the SPL
OUTSEP[1..64]	r	Bool		External PLC output for the SPL
INSIP[1..64]	r	Bool		Internal PLC input for the SPL
OUTSIP[1..64]	r	Bool		Internal PLC output for the SPL
MARKERSIP[1..64]	r	Bool		Marker for SPL
CMDSI	r/w	Bool		The timeout value in the crosswise data comparison is extended by a factor of 10
COMM_TO	r	Bool		0 → 1 communications timeout detected, PLC will go to STOP in 5 s

Table 8-9 Overview of DB 18 signals

Signal	r – read w – write	Type	Value range	Comment
STATSI	r	Dint	1 – 320	Status: 0 – no error 1 – 320 error No. corresponds to signal from SPL_DATA whose signal level difference resulted in a crosswise data comparison error
LEVELSI	r	Dint		Crosswise data comparison stack level display (diagnostics capability: How many SPL signals currently have different levels)
PLCSIIN[1 ..32]	r/w	Bool		Single-channel signals from the PLC to NCK
PLCSIOUT[1 ..32]	r	Bool		Single-channel signals from the NCK to the PLC
SPL_STATUS	r	Bool		Status signals from NCK to PLC
INSEP_PROFI-SAFE	r	Bool		0 = no assignment from PROFIsafe F modules to INSEP [1..8] 1 = transfer from PROFIsafe F module to INSEP [1..8] using the basic program
OUTSEP_PROFI-SAFE	r	Bool		0 = no assignment from PROFIsafe F modules to OUTSEP [1..8] 1 = transfer from OUTSEP [1..8] to PROFIsafe F module using the basic program

8.4 System variables

8.4.1 System variable for SINUMERIK 840D sl

System variables

Table 8-10 Overview of system variables

System variables	Description	Value range	Data type	Possible access for			
				Part program		Synchronized action	
				r	w	r	w
Actual position							
\$VA_IS[axis]	Safe actual position for Safety Integrated	Axis identifier GEOAX CHANAX MACHAX SPINDLE	DOUBLE	x		x	
\$AA_IM[axis]	Actual position of the closed-loop control	Axis identifier GEOAX CHANAX MACHAX SPINDLE	DOUBLE	x		x	
\$VA_IM[axis]	Encoder actual value in the machine coordinate system	Axis identifier GEOAX CHANAX MACHAX SPINDLE	DOUBLE	x		x	
Internal inputs/outputs							
\$A_INSI[n]	NCK input	n = 1, 2, ... 64 stand for the No. of the input	BOOL	x		x	
\$A_INSID[n]	NCK inputs	n = 1, 2	INT	x		x	
\$A_INSIPI[n]	Image, PLC input	n = 1,2, ...64	BOOL	x		x	
\$A_INSIPI[n]	Image of the PLC – SPL inputs from the drive monitoring channel	n = 1, 2	INT	x		x	
\$A_OUTSI[n]	NCK output	n = 1, 2, ... 64 stand for the No. of the out- put	BOOL	x	x	x	x
\$A_OUTSID[n]	NCK outputs	n = 1, 2	INT	x	x	x	x
\$A_OUTSIPI[n]	Image, PLC output	n = 1, 2, ... 64	BOOL	x		x	
\$A_OUTSIPI[n]	Image of the PLC – SPL outputs from the drive monitoring channel	n = 1, 2	INT	x		x	
External inputs/outputs							
\$A_INSE[n]	NCK input	n = 1, 2, ... 64 stands for the No. of the input 1)	BOOL	x		x	
\$A_INSED[n]	NCK inputs	n = 1, 2 ¹⁾	INT	x		x	

8.4 System variables

Table 8-10 Overview of system variables

				r	w	r	w
\$A_INSEP[n]	Image of a PLC – SPL input from the PLC HW I/O	n = 1, 2, ... 64 stand for the No. of the input	BOOL	x		x	
\$A_INSEPD[n]	Image of the PLC – SPL inputs from PLC HW I/O	n = 1, 2	INT	x		x	
\$A_OUTSE[n]	NCK output	n = 1, 2, ... 64 stands for the No. of the output ¹⁾	BOOL	x	x	x	x
\$A_OUTSED[n]	NCK outputs	n = 1, 2 ¹⁾	INT	x	x	x	x
\$A_OUTSEP[n]	Image of a PLC – SPL output from the PLC HW I/O	n = 1, 2, ... 64 stand for the No. of the output	BOOL	x		x	
\$A_OUTSEPD[n]	Image of PLC – SPL outputs from PLC HW I/O	n = 1, 2	INT	x		x	
Markers and timers							
\$A_MARKERSI[n]	Markers	n = 1, 2, ... 64 stands for the No. of the marker	BOOL	x	x	x	x
\$A_MARKERSID[n]	Markers	n = 1, 2	INT	x	x	x	x
\$A_MARKERSIP[n]	Image of the PLC markers	n = 1, 2, ... 64	BOOL	x		x	
\$A_MARKER-SIPD[n]	Image of the PLC markers	n = 1, 2	INT	x		x	
\$A_TIMERSI[n]	Timer	n = 1, 2...16 stand for the No. of the timer	REAL	x	x	x	x
\$A_FRDP_DIAG[n]	The cause of the communication error determined from F_RECVDP is communicated	n = 1, 2, 3	INT	x		x	
\$A_FRDP_SEND-MODE[n]	Actual operating mode of the F-CPU of the F_SENDDP communication partner	n = 1, 2, 3	BOOL	x		x	
Miscellaneous							
\$A_STATSID	Crosswise data comparison error triggered if the value is not equal to 0	Bits 0...27 crosswise data comparison error in the I/O signals or flag bits Bit 28 crosswise data comparison error "SPL protection status" Bit 29 timeout in the communications between NCK and SPL Bit 30 PLC signals a stop to the NCK	INT	x		x	

8.4 System variables

Table 8-10 Overview of system variables

				r	w	r	w
\$A_CMDSI	10x change timer timeout value for long forced checking procedure pulses and/or single-channel test stop logic	Bit 0 = 1 10x time active	BOOL	x	x	x	x
\$A_LEVELSID	Crosswise data comparison stack level display: Number of signals for which NCK and PLC detect different signal levels	0...320	INT	x		x	
\$A_XFAULTSI	Bit 0=1: In a crosswise data comparison between NCK and drive of any particular safety axis, an actual value error was detected. Bit 1=1: In the crosswise data comparison between NCK and drive of any axis, an error was detected and the delay time until STOP B is initiated for this axis is either running or has already expired.	[0,3]	INT	x		x	
\$VA_XFAULTSI[axis]	Bit 0=1: The crosswise data comparison for this axis between NCK and drive has detected an actual value error Bit 1=1: In the crosswise data comparison between NCK and the drive of this axis, an error was detected and the delay time until STOP B is initiated in this axis is either running or has already expired.	[0,3]	INT	x		x	
\$VA_STOPSI[axis]	Current Safety Integrated stop of the relevant axis -1: No stop 0: Stop A 1: Stop B 2: Stop C 3: Stop D 4: Stop E 5: Stop F 10: Test stop 11: Test, external pulse cancellation	[-1,11]	INT	x		x	
\$A_STOPESI	Current Safety Integrated STOP E for any axis 0: No stop otherwise: For one of the axes, a Stop E is present	[0,MAX_INT]	INT	x		x	
\$A_PLCSIIN[1...32]	Single-channel direct communication between NCK and PLC-SPL. Signals can be written by the PLC and read by the NCK.	[FALSE, TRUE]	BOOL	x		x	
\$A_PLCSIOUT[1...32]	Single-channel direct communication between NCK and PLC-SPL. Signals can be read by the PLC, written and read by the NCK.	[FALSE, TRUE]	BOOL	x		x	

Table 8-10 Overview of system variables

				r	w	r	w
\$AC_SAFE_SYNA_MEM	Free safety synchronized action elements	[0,MAX_INT]		x		x	
Note: r → read, w → write An implicit preliminary stop is generated Only permitted in the commissioning phase 1) The number of these system variables depends on the option SI Basic or SI Comfort. For SI Basic, the following applies: 4 INSE[1..4] 4 OUTSE[1..4] 4 INSED[1] 4 OUTSED[1]							

8.4.2 Description of the system variables

System variable \$VA_IS

The safe actual value, used by SI, can be read and further processed by the NC part program for every axis/spindle.

Example:

When an NC part program is started, Safety Integrated checks whether axis X would move into the vicinity of shutdown limits as a result of the zero offsets when a program is processed. The part program can be programmed as follows, for example:

```
IF ($VA_IS[X] < 10000) GOTO POS_OK      ; if the actual value is too high,
MSG ("Axis has nearly reached limit switch!") ; then the following message,
POS_OK:                                ; otherwise, continue here
...
```

The variable can also be used in synchronous actions in order to reduce the override when the axis is nearly at the limit switch.

Difference between \$VA_IS and \$AA_IM

Both variable \$VA_IS and variable \$AA_IM can be used to read actual values.

8.4 System variables

Table 8-11 Difference between \$VA_IS and \$AA_IM

Variable	Description
\$VA_IS	Reading the actual value used by SI
\$AA_IM	Reading the actual value used by the closed-loop control (setpoint for the closed-loop position control)

References: /PGA/, Programming Manual Job Planning

System variables \$A_XFAULTSI and \$VA_XFAULTSI

For crosswise data comparison errors between the NCK and SINAMICS S120, the response depends on the actual operating state:

- SBH, SG, SE or SN active: A crosswise data comparison error causes a transition from Stop F to Stop B – which in turn initiates the fastest possible braking of the axis. A Stop A is then initiated and the pulse enable is cancelled.
- SBH and SG are not active and SE/SN is not used or Stop C/D/E has already been activated: In this case, a Stop F due to a crosswise data comparison error does not result in any further action – only Alarm 27001 is output that provides information. Processing then continues.

This chain of responses is not altered to ensure the appropriate level of safety for personnel.

To allow responses to a crosswise data comparison error, system variable \$A_XFAULTSI is used to display that a crosswise data comparison error has occurred on a particular SI axis. Retraction can then be initiated as a response to this system variable.

Further, an axis-specific system variable \$VA_XFAULTSI[<axis name>] has been introduced so that, if necessary, axis-specific responses can be applied.

The system variables are updated independent of whether SI monitoring functions are active or inactive.

\$A_XFAULTSI

Information about Stop F for a safety axis:

- Bit 0 = 1: In a crosswise data comparison between NCK and drive of any particular safety axis, an actual value error was detected.
- Bit 1 = 1: In the crosswise data comparison between NCK and drive of any axis, an error was detected and the delay time until Stop B is initiated for this axis is either running or has already expired.
(\$MA_SAFE_STOP_SWITCH_TIME_F)

\$VA_XFAULTSI[X] (X = axis identifier)

Information about Safety Integrated Stop F for this axis

Bit 0 set	In the crosswise data comparison between NCK and drive an actual value error was detected.
Bit 1 set	In the crosswise data comparison between NCK and drive – an error was detected and the delay time – up until a STOP B (\$MA_SAFE_STOP_SWITCH_TIME_F) is initiated – is either running or has expired.

System variable \$VA_STOPSI

Axial system variable that contains the present stop. For a value of 2, a Stop E is active for this axis.

System variable \$A_STOPESI

Global system variable that with a value not equal to 0 indicates that a Stop E is active for one particular axis.

System variables \$A_INSI[1...64]

The status signals of the NCK monitoring channel can be used in the NCK–SPL using these system variables. Each of the system variables \$A_INSI[1...64] can be assigned any safety-related output signal or the AND logic operation of several signals using axial MD \$MA_SAFE_XXX_OUTPUT. These system variables can only be read by the user program.

Parameterizing example:

– \$MA_SAFE_CAM_PLUS_OUTPUT[0] = 04010101H
=> the SGA "SN1+" can be evaluated in the SPL using the system variable \$A_INSI[1].

Programming example:

; Copying an SGA from the internal SPL interface into the external SPL interface

```
N1010 IDS = 01 DO $A_OUTSE[1] = $A_INSI[1]
```

These system variables can only be read by the user program.

System variable \$A_INSE[1...64]

The system variables \$A_INSE contain the input circuit of the NCK–SPL.

System variables \$A_INSED[1,2]

Image of the safety input signals (external NCK interface).

System variables \$A_INSID[1,2]

The status signals of the NCK monitoring channel can be evaluated in the NCK–SPL in a double–word–serial fashion using this system variable:

\$A_INSID[1] corresponds to \$A_INSI[1...32]

\$A_INSID[2] corresponds to \$A_INSI[33...64]

These system variables can only be read by the user program.

System variables \$A_OUTSE[1...64]

The system variables \$A_OUTSE contain the outputs of the NCK–SPL.

System variables \$A_OUTSI[1...64]

The control signals of the NCK monitoring channel can be addressed from the NCK–SPL using these system variables. Each of the system variables \$A_OUTSI[1...64] can be simultaneously assigned any one or several safety–related input signals by using the axial MD \$MA_SAFE_XXX_INPUT.

Parameterizing example:

– \$MA_SAFE_VELO_SELECT_INPUT[0] = 04010204H

=> The SGE "SG selection, bit 0" is controlled in the SPL using the system variable \$A_OUTSI[36].

Programming example:

```
; SGA "cam 1+" (refer above) controls the SG selection
;
N1020 IDS = 02 DO $A_OUTSI[36] = $A_INSI[1]
```

These system variables can be read by the user program and written into by SAFE.SPF.

System variables \$A_OUTSID[1,2]

The control signals of the NCK monitoring channel can be addressed in the NCK–SPL in a double–word–serial fashion using these system variables:

\$A_OUTSID[1] corresponds to \$A_OUTSI[1...32]

\$A_OUTSID[2] corresponds to \$A_OUTSI[33...64]

These system variables can be read by the user program and written into by SAFE.SPF.

System variables \$A_OUTSED[1,2]

The external status signals can be addressed by the NCK–SPL in a double–word–serial fashion using these system variables:

\$A_OUTSED[1] corresponds to \$A_OUTSE[1...32]

\$A_OUTSED[2] corresponds to \$A_OUTSE[33...64]

These system variables can be read by the user program and written into by SAFE.SPF.

System variables \$A_MARKERSI[1...64]

Up to 64 status bits of the SPL can be flagged using these system variables. The markers are read and written directly into the NCK–SPL.

Programming example:

```
N1030   IDS = 03 DO $A_MARKERSI[2] = $A_OUTSI[1] AND $A_INSE[2]
N1040   IDS = 04 DO $A_OUTSE[1] = $A_MARKERSI[2]
```

System variables \$A_MARKERSID[1,2]

The SPL status bits can be addressed in a word–serial fashion using these system variables.

\$A_MARKERSID[1] corresponds to \$A_MARKERSI[1...32]

\$A_MARKERSID[2] corresponds to \$A_MARKERSI[33...64]

System variables \$A_TIMERSI[1...16]

Up to sixteen timers can be programmed using these system variables.

Programming example:

```
; Set marker once after two seconds, reset the timer value and stop
the timer.
N1050 IDS = 05 WHENEVER $A_TIMERSI[1] > 2.0 DO
      $A_TIMERSI[1] = 0.0 $A_TIMERSI[1] = -1.0
      $A_MARKERSI[2] = 1
```

System variable \$A_STATSID

This system variable can be using in the NCK–SPL to evaluate whether, in the crosswise data comparison between NCK and PLC, an error was detected in the two–channel control/processing of the control and status signals. This gives the user the opportunity to respond to this error with specific synchronous actions.

8.4 System variables

- Bit 0... 27: Crosswise data comparison error in the input/output signals or markers.
- Bit 28: Crosswise data comparison error "SPL protection status" (status \$MN_PREVENT_SYNACT_LOCK not equal to DB18.DBX36.0).
- Bit 29: Time error in the communications between NCK and PLC (in 5 s, all ext. NCK–SPL outputs are set to zero, the PLC goes to stop).
- Bit 30: PLC signals a stop to the NCK.

Programming example:

```
; For a crosswise data comparison error, set ext. output  
N1060 IDS = 06 WHENEVER $A_STATSID <> 0 DO $A_OUTSE[1] = 1
```

These system variables can only be read by the user program.

System variable \$A_CMDSI[1]

This system variable can be used to increase the time up to 10 s monitoring the signal changes in the crosswise data comparison between NCK and PLC.

This means that signal differences between the NCK and PLC system variables can be tolerated for up to 10s without Alarm 27090 being output.

This system variable can be read and written into by the user program.

System variable \$A_LEVELSID

This system variable is used to display the stack level of the signal change monitoring in the crosswise data comparison between NCK and PLC. This variable indicates the current number of signals to be checked by the crosswise data comparison function.

System variables \$A_XXXP(D)

Images (mapping) of the PLC–SPL interface and markers are provided to make it easier to commission the SPL. The system variables are updated in the same clock cycle as the crosswise data comparison between the NCK and the PLC. These system variables can only be accessed reading.

These system variables may only be used in the commissioning phase.

As soon as commissioning has been signaled as completed, access to these system variables is blocked. If these program commands are processed, Alarm 17210 is output to indicate an error condition.

System variables \$A_INSIP[1...64]

Images of the PLC-side internal SPL input signals (status signals from the drive monitoring channel) can be read using these system variables.

Associated DB18 values: DB18.DBX54.0 ... DBX61.7

System variables \$A_INSIPD[1,2]

Images of the PLC-side internal SPL input signals (status signals from the drive monitoring channel) can be read in a double-word-serial fashion (32 bit) using these system variables.

Associated DB18 values: DB18.DBD54, DBD58

System variables \$A_OUTSIP[1...64]

Images of the PLC-side internal SPL output signals (control signals to the drive monitoring channel) can be read using these system variables.

Associated DB18 values: DB18.DBX62.0 ... DBX69.7

System variables \$A_OUTSIPD[1,2]

Images of the PLC-side internal SPL output signals (control signals to the drive monitoring channel) can be read in a double-word-serial fashion (32 bit) using these system variables.

Associated DB18 values: DB18.DBD62, DBD66

System variables \$A_INSEP[1...64]

Images of the PLC-side external SPL input signals (control signals to the PLC-SPL) can be read using these system variables.

Associated DB18 values: DB18.DBX38.0 ... DBX45.7

System variables \$A_INSEPD[1,2]

Images of the PLC-side external SPL input signals (control signals to the PLC-SPL) can be read in a double-word-serial fashion (32 bit) using these system variables.

Associated DB18 values: DB18.DBD38, DBD42

System variables \$A_OUTSEP[1...64]

Images of the PLC-side external SPL output signals (status signals from the PLC-SPL) can be read using these system variables.

Associated DB18 values: DB18.DBX46.0 ... DBX53.7

8.4 System variables

System variables \$A_OUTSEPD[1,2]

Images of the PLC-side external SPL output signals (status signals from the PLC-SPL) can be read in a double-word-serial fashion (32 bit) using these system variables.

Associated DB18 values: DB18.DBD46, DBD50

System variables \$A_MARKERSIP[1..64]

Images of the PLC-side SPL markers can be read using these system variables.

Associated DB18 values: DB18.DBX70.0 ... DBX77.7

System variables \$A_MARKERSIPD[1,2]

Images of the PLC-side SPL markers can be read in a double-word-serial fashion (32 bit) using these system variables.

Associated DB18 values: DB18.DBD70, DBD74

System variable \$A_PLCSIIN[1..32]

Single-channel direct communication between NCK and PLC-SPL. Signals can be written by the PLC and read by the NCK.

System variable \$A_PLCSIOUT[1..32]

Single-channel direct communication between NCK and PLC-SPL. Signals can be read by the PLC and read and written by the NCK.

System variable \$AC_SAFE_SYNA_MEM

Variable \$AC_SAFE_SYNA_MEM contains the number of free synchronizing action elements Safety Integrated. The number before and after SAFE.SPF has run is read in order to determine the value of the required elements. The difference between the two values is then the number that (with a safety margin) must be entered into machine data \$MC_MM_NUM_SAFE_SYNC_ELEMENTS.

Note

Write access operations to all named system variables are only possible from the program saved in program file /_N_CST_DIR/_N_SAFE_SPF reserved for the SPL. Access operations from other programs are flagged as an error with Alarm 17070.

Note

Not all of the HMI functions shown are available in all of the HMI versions (HMI Embedded, HMI sl, HMI Advanced).



Warning

After hardware and/or software components have been changed or replaced, it is only permissible to boot the system and activate the drives when the protective devices are closed. Personnel shall not be present within the danger zone.

Depending on the change or replacement, it may be necessary to carry out a new, partial or complete acceptance test (refer to Chapter 9.5 Acceptance report).

Before persons may re-enter the hazardous area, the drives should be tested to ensure that they exhibit stable behavior by briefly moving them in both the plus and minus directions (+/-).

It is especially important to carefully observe this for high-speed linear or torque motors.

Note

The function "safe software limit switches" (SE) is also called "safe limit positions" and the function "safe software cams" (SN) is also called "safe cams".



Warning

If SI functions SH, SBH or SG have been enabled, then they become operational after the control system has booted (basic display on screen). For the SE and SN functions safety-related position evaluation is only possible after safety-related referencing has been successfully completed.



Warning

Protection of operating personnel must be the primary consideration when configuring machine data for SINUMERIK Safety Integrated. This is this reason that the parameterizable tolerances, limit values and delay times should be determined and optimized during the commissioning phase dependent on the machine design and arrangement.

9.1 HMI screens and softkeys

Configuring safety-related functions

When selecting "Commissioning/NC/Safety-Integrated" you reach the starting screen for the Safety Integrated commissioning support. The following screen is displayed 9-1:



Fig. 9-1 Example for "Commissioning/NC/Safety-Integrated" for 840D sl

View of the axes (horizontal softkey)

Softkey "safe axes"

All of the axes are listed in this screen that were activated for Safety Integrated.

Softkey "All axes"

Here, defined axes are listed independent of whether it involves a safety axis or not.

Softkey "Copy SI data"

When the softkey is pressed, all NC machine data, relevant for the SI functions, is transferred into the corresponding drive parameters.

9.1 HMI screens and softkeys

The SI machine data/parameters to define the encoder mounting arrangement must be separately entered for the NCK and drive by the commissioning engineer. The copy function has no effect for the drive parameters marked in the Table 8-2 "Parameters for SINAMICS S120".

Drive data is automatically saved after data has been copied. The data is saved for all safety axes.

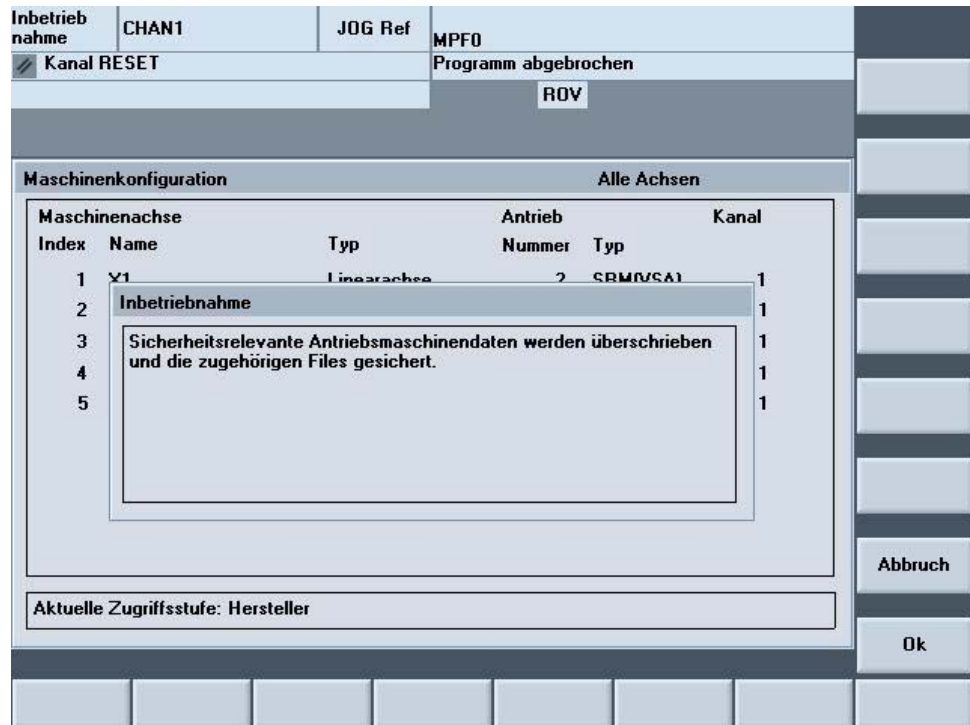


Fig. 9-2 Softkey Copy SI data for 840D sl

Softkey "Confirm SI data"

After an drive/NCK RESET, the actual checksum is saved by pressing the softkey Confirm SI data in the "Commissioning/NC/Safety-Integrated" screen and acknowledging the following dialog box with "OK". From now on, SI data will be monitored for any changes. Drive data is automatically saved after data has been acknowledged.

Note

If the copy or confirm process is initiated in the screen form "Axis MD", the particular operation is only carried out for the currently selected axis.



Fig. 9-3 Softkey "Confirm SI data" for 840D sl

Softkey "Activate drive commissioning"

Value "95" is entered in drive parameter p0010 to commission the SI drives.
Further, the dialog box to pre-assign the drive PROFIsafe address is started.

9.1 HMI screens and softkeys

Pre-assigning the drive PROFIsafe address

The pre-assignment of the SI PROFIsafe addresses is activated if the user presses the softkey "Activate drive commissioning".

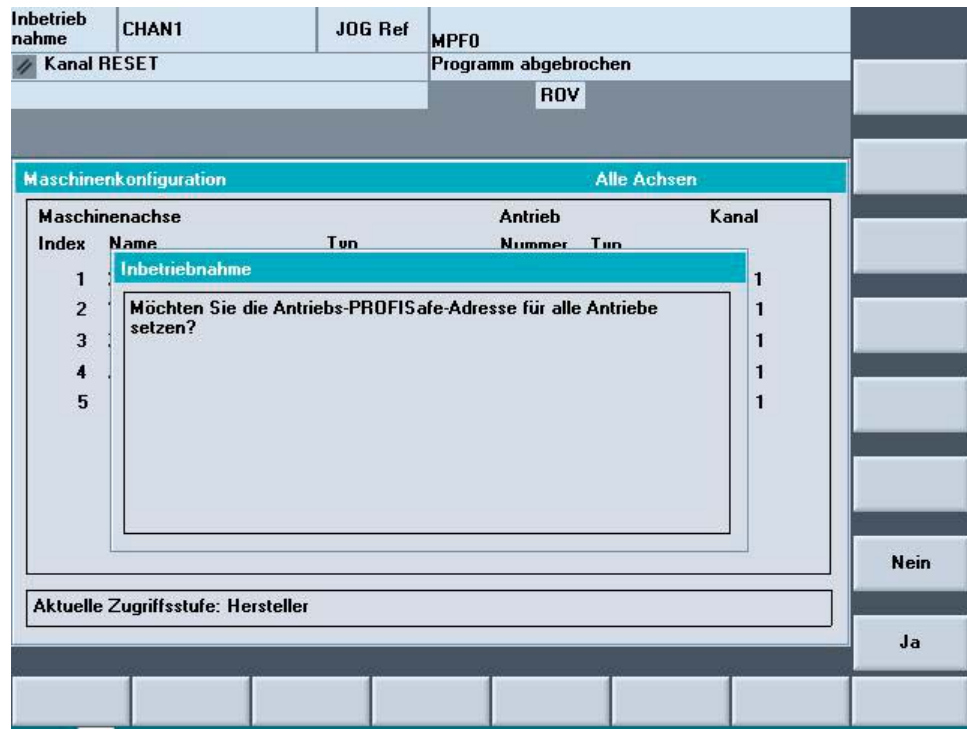


Fig. 9-4 Pre-assigning a drive PROFIsafe address for 840D sl

The operation can be rejected or accepted using the "Yes", "No" softkeys. When agreeing, already existing settings of parameter p9810 are overwritten. When rejected, the existing settings are kept. After this, the system switches to the SI commissioning mode (p0010=95).

Softkey "De-activate drive commissioning"

A value of "0" is entered into drive parameter p0010 to commission SI drives; this exits the drive commissioning state. Using softkeys, the user can select as to whether the drive data should be saved.

"Reset..." softkey

The drives are reset and then a Power On is carried out for the NCK.

Safety-Integrated settings (horizontal softkey: "View settings")

Softkey "Display SBH/SG (starting screen)"

The configured values for SBH and the SG stages are displayed in the Fig. 9-5. You can scroll between the SI axes using the softkeys "Axis+" and "Axis-". The configured values for SE and SN positions can be displayed using the softkeys "Display safe end positions" and "Display safe cams".



Fig. 9-5 Softkey Display SBH/SG for 840D sl

9.1 HMI screens and softkeys

"Display safe cam" softkey

For the safe software cams function (SN) this softkey is used to display the safe cams as well as the cam track.

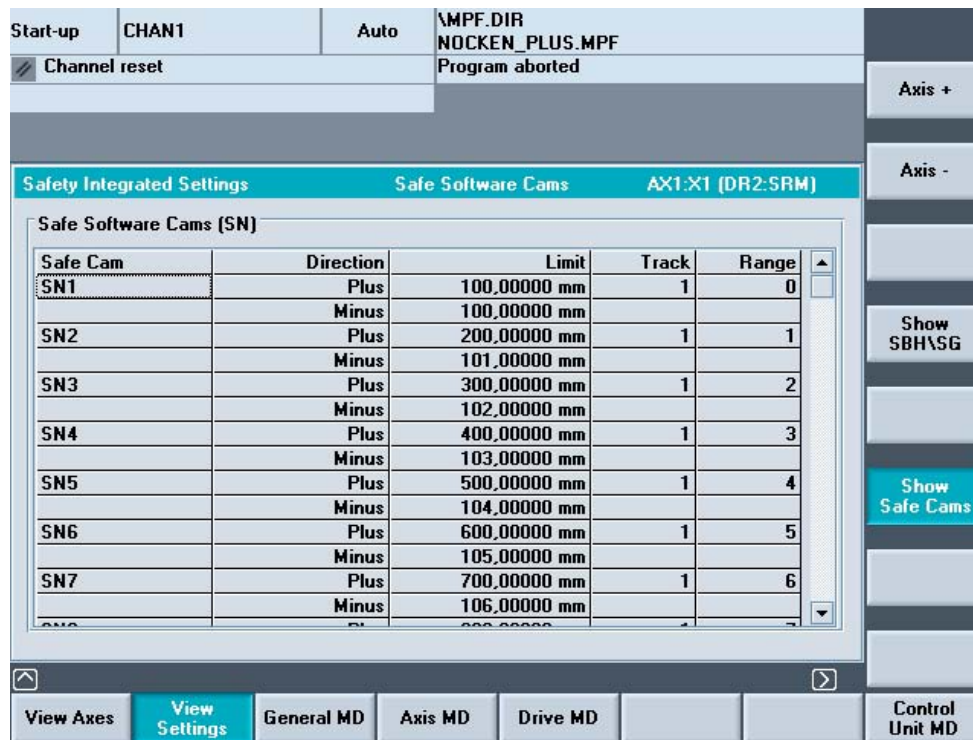


Fig. 9-6 "Display safe cams" softkey for 840D sl

Displaying the Safety MD and selected MD on a split screen

Using the softkey "MD selection", "SI-MD" and "SI + MD selection", it is possible to toggle between selected machine data relevant to SI, SI machine data, and a window split in two – in which both SI data as well as also selected machine data can be displayed.

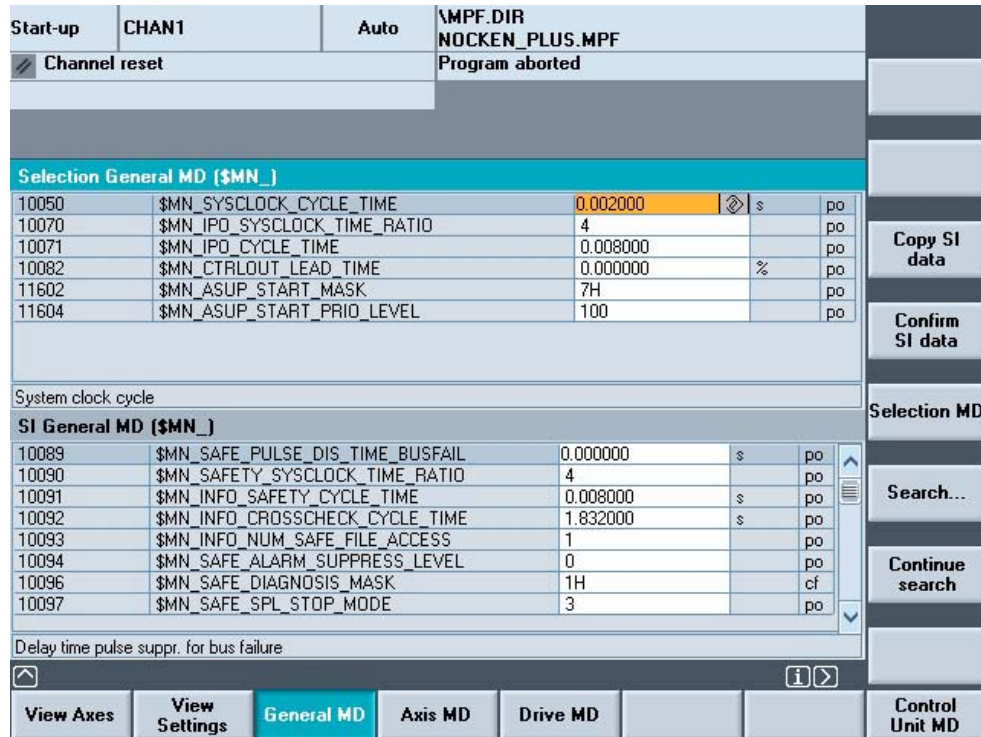


Fig. 9-7 Softkey "General MD" for 840D sl

General MD

The general machine data is listed here and can be changed.

Axis MD

The axis machine data are listed here and can be changed.

Drive parameters

The drive parameters are listed here and can be changed.

Control Unit MD

The Control Unit parameters are listed here and can be changed.

Creating Safety Integrated machine data

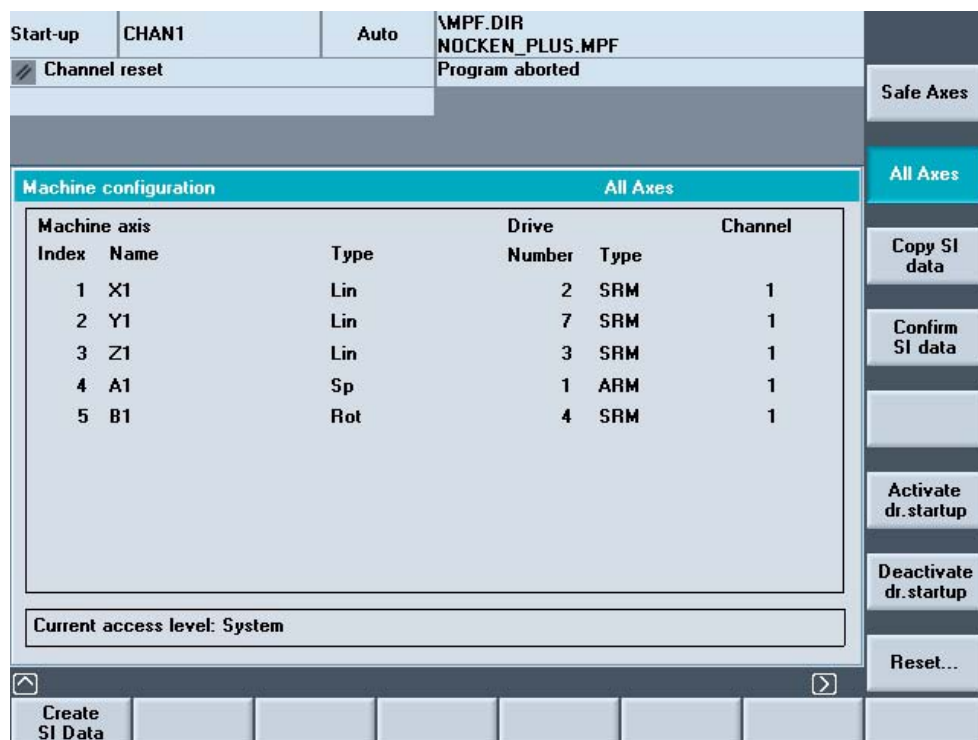


Fig. 9-8 Softkey "Creating SI data" for 840D sl

Using the softkey "Create SI data" it is possible to carry out the following parameterization:

- SI encoder adaptation
- Calculate safe acceleration monitoring (SBR)

SI encoder adaptation

A list is created comparing the actual values of the relevant MD and Safety MD. Using the softkey "SI drive parameters", the display can be changed over to the corresponding drive parameters.

Start-up	CHAN1	Auto	\MPF.DIR NOCKEN_PLUS.MPF		Axis +
Channel reset		Program aborted			
					Axis -
SI Encoder Matching DP3.SLAVE3:SERVO_04 (4) AX1:X1					Direct selection
Standard Machine Data					
Item	MD	Value	Unit		
30110	\$MA_CTRLOUT_MODULE_NR	2			
30120	\$MA_CTRLOUT_NR	1			
30200	\$MA_NUM_ENCS	2			
30220	\$MA_ENC_MODULE_NR	2			
30220	\$MA_ENC_MODULE_NR	2			
30230[0]	\$MA_ENC_INPUT_NR	1			
30230[1]	\$MA_ENC_INPUT_NR	2			
30240[0]	\$MA_ENC_TYPE	1			
SI Machine Data					
Item	MD	Value	Unit		
36902	\$MA_SAFE_IS_ROT_AX	0			
36905	\$MA_SAFE_MODULE_RANGE	0.000000	degree		
36906	\$MA_SAFE_CTRLOUT_MODULE_NR	2			
36912	\$MA_SAFE_ENC_INPUT_NR	1			
36914	\$MA_SAFE_SINGLE_ENC	1			
36916	\$MA_SAFE_ENC_IS_LINEAR	0			
36917	\$MA_SAFE_ENC_GRID_POINT_DIST	0.010000	mm		
36918	\$MA_SAFE_ENC_RESOL	2048			
<div> <div>SI Enc. Matching</div> <div>SI Safe Brake Ramp</div> </div>					Reset...
					SI Drive Parameters
					Calc. SI Enc. Data

Fig. 9-9 Softkey "SI encoder adaptation" for 840D sl

By pressing the softkey "Calculate SI encoder data", a parameterizing recommendation for the safety MD and parameters is determined and displayed. Further, a list that shows the actual values of the corresponding machine data is created.

When configuring two encoders, the following rules apply:

- The first encoder is always the encoder for the drive
- The second encoder is always the encoder for the NCK
- \$MA_ENC_INPUT_NR[0]=1
- \$MA_ENC_INPUT_NR[1]=2

9.1 HMI screens and softkeys

Inbetriebnahme	CHAN1	JOG Ref	MPF0
Kanal RESET		Programm abgebrochen	
		ROV	
SI Geberanpassung		DP3.SLAVE3:SERVO_04 (4) AX1:X1	
SI Maschinendaten			
Element	MD	vorgeschlagen...	Wert
36902	\$MA_SAFE_IS_ROT_AX	0	0
36905	\$MA_SAFE_MODULO_RANGE	0.000000	0.000000 Grad
36906	\$MA_SAFE_CTRLOUT_MODULE_NR	2	2
36914	\$MA_SAFE_SINGLE_ENC	0	1
36916	\$MA_SAFE_ENC_IS_LINEAR	0	0
36917	\$MA_SAFE_ENC_GRID_POINT_DIST	0.010000	0.010000 mm
36918	\$MA_SAFE_ENC_RESOL	512	2048
36920	\$MA_SAFE_ENC_GEAR_PITCH	10.000000	10.000000 mm
SI Antriebsparameter			
Element	Beschreibung	vorgeschlagen...	Wert
p9502	SI Motion Achstyp	[0] Linearachse	[0] Linearachse
p9505	SI Motion SN Modulowert	0	0 Grad
p9516	SI Motion Motorgeberkonfiguration sichere Funk...	0H	0H
p9517	SI Motion Linearmaßstab Gitterteilung	16000.00	16000.00 nm
p9518	SI Motion Geberstriche pro Umdrehung	2048	2048
p9520	SI Motion Spindelsteigung	10.00	10.00 mm
p9521[0]	SI Motion Getriebe Geber/Last Nenner	1	1
p9521[1]	SI Motion Getriebe Geber/Last Nenner	1	1
<div> SI Geber anpassen SI Sichere Bremsrampe </div>			

Standard MD
Abbruch
Übernahme

Fig. 9-10 Defining "SI encoder adaptation" for 840D sl

The list is transferred into the corresponding SI machine data and SINAMICS parameters using the softkey "Accept". They are rejected with "Abort". The user can also adapt the values that have been determined.

The settings must be saved using the softkey "Confirm SI data" (see e.g. Fig.9-8).

The axis assignment is described in Chapter 9.2 "Procedure when commissioning the system for the first time" under Step 3.

SI safe acceleration monitoring (SBR)

Using the softkey "SI safe acceleration monitoring", a window is displayed with the current settings for the axis and the associated drive.

Start-up	CHAN1	Auto	\\MPF.DIR NOCKEN_PLUS.MPF	
Channel reset			Program aborted	
				Axis +
				Axis -
Safe Brake Ramp (SBR) Tolerance				DP3.SLAVE3.SERVO_04 (4) AX1:X1
Safe Braking Ramp Velocity Tolerance				
	Value	Unit		
NC	300.000000	mm/min		
Drive	300.00	mm/min		
				Direct selection
				Reset...
				Calc. SBR Tolerance
SI Enc. Matching	SI Safe Brake Ramp			

Fig. 9-11 SI safe acceleration monitoring for 840D sl

The softkey "Calculate SBR tol." leads to the window where a decision can be made whether the calculation of the tolerance of the safe acceleration monitoring can be agreed ("Accept" softkey) or the operation is cancelled ("Abort" softkey). Also here, the user can adapt the recommendation.

The settings must be saved using the softkey "Confirm SI data" (see e.g. Fig.9-8).

The equations from Chapter 6.4 "Safe acceleration monitoring (SBR)" are used as basis to calculate the SBR tolerance. A tolerance of 20% is added to the value determined in this fashion.

With "Accept" the calculated value for the safe acceleration monitoring is transferred into machine data 36948: \$MA_SAFE_STOP_VELO_TOL and parameter p9548: SI motion SBR.

9.1 HMI screens and softkeys

Inbetriebnahme	CHAN1	JOG Ref	MPFD
Kanal RESET		Programm abgebrochen	
		ROV	
Sichere Bremsrampentoleranz (SBR)		DP3.SLAVE3.SERV0_03 (3) AX4.A1	
Sichere Bremsrampengeschwindigkeitstoleranz			
	vorgeschlagener Wert	Wert	Einheit
NC	576.000000	300.000000	mm/min
Antrieb	576.00	300.00	mm/min
			Abbruch
			Übernahme
SI Geber anpassen	SI Sichere Bremsrampe		

Fig. 9-12 SI safe acceleration monitoring for 840D sl

9.2 Procedure when commissioning the drive for the first time

This Chapter describes the steps that are necessary to commission the safety functions integrated in the system. For the safety functions integrated in the system, the "safe standstill" (SH) safety function integrated in the drive can also be used. This is the reason that a minimum configuration of the safety functions integrated in the drive is always necessary. The SH function itself does not have to be enabled, but possibly a required brake control (SBC) must be parameterized.

Commissioning SH/SBC/SS1 via the terminal control is described in detail in Chapter 4 "Safety functions integrated in the drive".

It is advisable to commission the machine so that at least the axes can be moved. The safety monitoring functions can then be immediately tested after SI data has been entered. This type of test is absolutely essential in order to detect any data entry errors.

The following steps must be taken in the specified sequence to commission SI functions:

Note

If only the SH, SBC and SS1 functions are used, then commissioning is carried out as described in the Chapter 4.6 "Commissioning the SH, SBC and SS1 functions".



Warning

From SINAMICS SW2.5 onwards, the following applies:

In a system configuration, the firmware versions of the DRIVE-CLiQ components can only differ from the versions on the CF card, if either

- a) the automatic upgrade/downgrade (parameter p7826) is deactivated, or
- b) components with a new firmware version can no longer be downgraded to the status of the version available on the CF card.

Scenario a) is not permitted when Safety Integrated is used. The automatic upgrade/downgrade must not be disabled when Safety Integrated is used. (automatic firmware update (p7826) must be equal to 1)

Scenario b) is only permissible if this combination has been explicitly approved by the manufacturer.

Step 1:

Enable option

- Starting screen "Commissioning/NC/Safety-Integrated": Set the password (at least the machine manufacturer password)

9.2 Procedure when commissioning the drive for the first time

- "General machine data" screen:
Set the options

Step 2:

Commissioning PROFIsafe (Chapter 7.2.5 "Parameterizing PROFIsafe communications (NCK)") and the associated PROFIsafe I/O.

Commissioning the safe programmable logic (Chapter 7.3.4 "Starting the SPL").

Step 3:

In the screen "Axis-specific machine data" set the function enable bits (MD 36901: \$MA_SAFE_FUNCTION_ENABLE and MD 36902: \$MA_SAFE_IS_ROT_AX) of all axes for which the safety-related motion monitoring functions are to be used. Enter the monitoring clock cycle and check.

- "General machine data" screen:
Enter the factor for the monitoring clock cycle in data \$MN_SAFETY_SYS-CLOCK_TIME_RATIO (see Chapter 5.1 "Monitoring clock cycle" and Chapter 5.2 "Crosswise data comparison").
- The actual monitoring time is immediately displayed in data \$MN_INFO_SAFETY_CYCLE_TIME.

Note

Before the next NCK RESET is initiated, you must copy the actual monitoring clock cycle to parameter p9500 "SI motion monitoring clock cycle" of the drive using softkey "Copy SI data" in the "Drive configuration" screen.

Note on the axis assignment

Note

The drives must be assigned to the axis due to the degrees of freedom that exist for the PROFIdrive telegram configuring – also in the SI machine data. This is the reason that the recommendations when configuring the drive configuration also apply when configuring Safety Integrated:

- Using the standard configuration and the recommended logical basis addresses in STEP7.
- No re-parameterization of the selected list of drive objects in drive parameter p0978.

Under these prerequisites, the following cases can occur:

- a) If the drive assignment using machine data MD 30110: \$MA_CTRLOUT_MODULE_NR, MD 30220: \$MA_ENC_MODULE_NR[0/1] and MD 13050: \$MN_DRIVE_LOGIC_ADDRESS was left at the standard value, then also the drive assignment in MD 36906: \$MA_SAFE_CTRLOUT_MODULE_NR and MD 10393: \$MN_SAFE_DRIVE_LOGIC_ADDRESS must not be changed.
 - b) If the drive assignment was changed using the machine data MD 30110: \$MA_CTRLOUT_MODULE_NR and MD 30220: \$MA_ENC_MODULE_NR[0/1] then MD 36906: \$MA_SAFE_CTRLOUT_MODULE_NR should be parameterized to the same value as for MD 30110: \$MA_CTRLOUT_MODULE_NR
 - c) If the drive assignment was made by replacing the logical drive addresses in MD 13050: \$MN_DRIVE_LOGIC_ADDRESS, then the same marshalling should also be made in MD 10393: \$MN_SAFE_DRIVE_LOGIC_ADDRESS.
Example: Drive 1 and 2 were exchanged by interchanging index 0 and 1 of MD 13050. MD 13050[0] was parameterized to 4140 and MD 13050[1] was parameterized to 4100. Then, Index 0 and 1 of MD 10393 must also be interchanged, i.e. 10393[0] must be set to 6724 and MD 10393[1] must be set to 6700.
-

The user is provided with support when assigning axes under the HMI path "Commissioning/Drive system/Drive units/PROFIBUS connection".

Step 4:

Commissioning the SH/SBC/SS1 functions integrated in the drive.

Note

The parameters of the safety functions integrated in the drive have their own password protection that is however de-activated before commissioning. In the SINUMERIK environment we recommend that this password protection is not activated as the complete commissioning area is password protected. The procedure to change the SI password is described in Chapter 4.6.2 "Procedure when commissioning SH, SBC and SS1"

- In the drive, the SI commissioning mode must be selected. If an attempt is made to change the SI parameters integrated in the drive without being in the commissioning mode, then the drive rejects this with a message. A prerequisite for the commissioning mode is that the pulses have been cancelled for all of the drives. For all drives, the commissioning mode is selected using the softkey "Activate drive commissioning" in the screen "Safety Integrated". When pressing this softkey, from the HMI, 95 is written into every drive parameter p0010, if:
 - in the associated NC axis in MD 36901: \$MA_SAFE_FUNCTION_ENABLE has a value not equal to 0, or
 - in drive parameter p9501: "SI enable safety-related functions" there is a value not equal to 0.
- The user can pre-assign PROFIsafe addresses by clicking the softkey "Activate drive commissioning" using parameter p9810: SI PROFIsafe address (Motor Module).
- Parameterize the SH/SBC/SS1 functions that are integrated in the drive in the "Drive machine data" screen. These especially include:
 - Function enable, SBC
also possible
 - SH/SS1 function enable signals if the corresponding selection is to be made using terminals (refer to Chapter 4 "Safety Functions Integrated in the Drive")
 - PROFIsafe address, if not already set using the "Activate drive commissioning" softkey
 - CRC via the parameters integrated in the drive (this is also realized using the "Deactivate drive commissioning" softkey, see next point)
- Setting the CRC and saving the parameterization that was just carried out is performed using the "Deactivate drive commissioning" softkey.

Step 5:

Set the monitoring function for all of the axes to be safely monitored.

Enter the following in the specified sequence in the "axis-specific machine data" screen:

1. Axis characteristics (rotary or linear axis)
2. Measuring-circuit assignment, i.e. which encoder will supply the safety actual value, what are the characteristics of this encoder and how it is mechanically mounted.
3. Monitoring limit values and tolerances
4. Changeover and monitoring times
5. Stop responses after a monitoring function has responded
6. Assignment of safety-related inputs and outputs, i.e. which sources are supplying the control signals for the NC monitoring channel and where do the feedback signals go (for the drive monitoring channel, this interlocking/logical assignment must be programmed in the PLC).

Step 6:

Set the monitoring and save the data for all of the associated drives.

Here, almost all data entered under Step 6 are again entered in the "Drive machine data" screen. When the softkey "Copy SI data" in the "Safety Integrated" screen is pressed, the settings from Step 5 are automatically entered, with the exception of Points 2 and 6. Point 2 cannot be copied because the drive always operates with the motor encoder and for a two-encoder system, has other characteristic data than the encoder evaluated from the NC. The 6th point is not applicable on the drive side. The following operating steps are therefore involved:

1. Press the softkey "Copy SI data" in the screen "Safety Integrated".
2. For each drive, enter the encoder configuration using the softkey "Adapt SI encoder". At the same time, the data, copied under Point 1 in Step 6 can be subject to a visual check.
3. Initiate an NCK and drive reset using the appropriate softkey. In this case, component IDs are also transferred from the drive to the NCK.
4. Press the softkey "Acknowledge SI data" in the "Drive configuration" screen. A dialog box describing the function of the softkey then appears: After acknowledging with "OK", the actual checksum of the safety-related data is then saved in both monitoring channels and monitored for changes from this point onwards. Further, drive data is automatically saved in a non-volatile fashion.
5. A dialog box is displayed on the screen requesting you to perform an acceptance test. You must acknowledge this dialog box. Now carry out the NCK reset and drive reset that are listed.
6. Activate SPL protection.

9.2 Procedure when commissioning the drive for the first time

Step 7:

Issue a user agreement (see Chapter 5.4.4, "User agreement")

- The safe limit positions and safe cams are now activated (provided that they have been enabled, refer to Chapter 5.5, "Enabling safety-related functions"). This step can be omitted if you do not wish to use either of these functions.
- The key-operated switch must be set to position 3 in order to issue a user agreement.

Step 8:

Carry out the acceptance test and enter in the logbook.

- A function test must be carried out for all of the enabled safe monitoring functions and for each axis/spindle. For suggestions on how to test activated SI functions, please refer to Chapter 9.5.2, "Acceptance test" and 9.5 "Acceptance report".
- The parameterization of all PROFIsafe I/O components should be checked using a function test and checking the printout of the hardware configuration from SIMATIC Step 7.

Step 9:

- Save all machine data using the "Services" area. This data can be used to commission series equipment.
- Save (back-up) the complete SIMATIC Step 7 project.



Warning

After the acceptance test has been completed, all illegal (old) MD files must be removed from the Flashcard (to avoid confusion between old and new data). Data that corresponds to the acceptance test data must be backed-up (archived).

Step 10:

Delete (clear) the password in order to prevent the unauthorized change of machine data.

9.3 Series commissioning

The setting for the safety monitoring functions is automatically transferred with other data in the course of a normal series commissioning process. The following steps need to be taken in addition to the normal commissioning procedure:

1. Enter a user agreement
2. Carry out an acceptance test
(individual monitoring functions must be randomly tested)

Sequence of operations for series commissioning

The following sequence of operations is recommended when commissioning series equipment:

- Download the data set for the series machine into the control.
- Adjust the absolute encoder.
- Carry out a power on.
This ensures that any errors – i.e. deviations in the data content that may exist between the NCK and drive – will be detected by the checksum check and crosswise data comparison.
Data must be checked if an error is detected. Cross check errors on the hardware-related cross checksums (Alarm 27032 with ID 1) or Alarm 27035 are normal if the series commissioning data come from another machine.
If an error is not detected, then data has not been changed and is identical to the acceptance test data. The copy function may be used if data is subsequently altered.
- Carry out random function tests.
The tests are required for acceptance of the new machine.

Software/hardware upgrade



Warning

Please carefully read the instructions in the relevant Update Manual before updating the software.

**Warning**

From SINAMICS SW2.5 onwards, the following applies:

In a system configuration, the firmware versions of the DRIVE-CLiQ components can only differ from the versions on the CF card, if either

- a) the automatic upgrade/downgrade (parameter p7826) is deactivated, or
- b) components with a new firmware version can no longer be downgraded to the status of the version available on the CF card.

Scenario a) is not permitted when Safety Integrated is used. The automatic upgrade/downgrade must not be disabled when Safety Integrated is used. (automatic firmware update (p7826) must be equal to 1)

Scenario b) is only permissible if this combination has been explicitly approved by the manufacturer.

9.4 Changing data

The user must enter the correct password before he can change the machine data for SI functions to the system. After data for SI functions has been altered, a new acceptance test must be carried out on the SI function(s) involved and then recorded and confirmed in the acceptance report.

Change report

Changes made to NCK machine data important for Safety Integrated are recorded in a display data. The times that these changes were made are displayed in axial MD 36996: \$MA_SAFE_CONFIG_CHANGE_DATE[0...4].

This MD can neither be overwritten by manual entry nor by loading an MD archive. It can only be deleted by booting the control from the general reset mode (switch position 1).

This data is updated when the following changes are made to the NCK machine data:

- When a modified safety MD configuration is activated (NCK safety MD have been changed and acknowledged by correction of \$MA_SAFE_DES_CHECKSUM).
- When MD \$MA_SAFE_FUNCTION_ENABLE is changed from values not equal to zero to zero, or from zero to values not equal to zero. These changes mean that the safety functionality of an axis is completely enabled/disabled. Other changes to MD \$MA_SAFE_FUNCTION_ENABLE always change MD \$MA_SAFE_ACT_CHECKSUM, which themselves have to be acknowledged by changes to MD \$MA_SAFE_DES_CHECKSUM.

- When MD \$MA_SAFE_FUNCTION_ENABLE is changed by reducing the safety option. If the scope of axial safety functions is enabled for more axes than are set in the safety option data, the function enable for the excess number of axes is automatically cancelled again when the control boots.
- Loading an MD archive that is different to the currently active NCK-MD set.
- When upgrading (corresponds to downloading an MD archive)
- Series commissioning (corresponds to downloading an MD archive)

Limitations

Changes to the MD configuration are only noted when the change becomes active, i.e. after altering MD \$MA_SAFE_DES_CHECKSUM and a subsequent Power On. This MD is calculated – also for axes that were not released for Safety Integrated.

9.5 Acceptance test

9.5.1 General information

The requirements associated with an acceptance test can be derived from the EU Machinery Directive. Presently IEC 22G WG 10 is working on a standard for "functional safety". This also includes a specific description of the requirements for an acceptance test. Accordingly, the machine manufacturer (OEM) is responsible for the following:

- to carry out an acceptance test for safety-related functions and machine parts, and
- to issue an "Acceptance certificate" that includes the results of the test.

When using the Safety Integrated function, the acceptance test is used to check the correct configuring of the SI monitoring functions used in the NCK, PLC and drive. The test objective is to verify proper implementation of the defined safety functions and of test mechanisms (forced checking procedure measures) and to examine the response of specific monitoring functions to the explicit input of values outside tolerance limits. This should be carried out for all safety functions, i.e. for the axial monitoring functions, the SPL, the safety-related communication relationships, the safety-related I/O etc.



Warning

The acceptance test is used to check that the safety functions have been correctly parameterized. Using the acceptance test, potential configuring errors are to be identified and the correct configuring documented.

The measured values (e.g. distance, time) and the system behavior determined (e.g. initiating a specific stop) when carrying out the acceptance test are used to check the plausibility of the configured safety functions. The measured values that are determined are typical and are not worst-case values. They represent the behavior of the machine and the instant in time that the measurement is carried out. These measurements cannot be used to derive maximum distances for over-travel.



Warning

If machine data for SI functions is changed, a new acceptance test must be carried out for the modified SI function and recorded in the acceptance report.

Note

The acceptance test should also be carried out for the PROFIsafe I/O.

Information regarding carrying out the acceptance test

- Some of the standard NC monitoring functions, such as zero speed monitoring, software limit switches, etc. must be de-activated (monitoring limits must be made less sensitive) before the acceptance test is carried out.
The function sequences can be acquired and listed using the servo trace function or using the D/A converter output.
- After the SPL has been commissioned the access authorization for the NCK–SPL (SAFE.SPF) via the HMI interface must be reduced to the manufacturer or service level and documented in the acceptance report.
- Please refer to the information in Chapter 9.2, "Procedure when commissioning for the first time".
- The acceptance report comprises checking the alarm displays and including the alarm reports in the overall acceptance report. In order to obtain reproducible and comparable alarm displays, during the acceptance test, MD 10094: \$MN_SAFE_ALARM_SUPPRESS_LEVEL must be set to 0 in order to avoid suppressing alarm outputs.
- For SINUMERIK 840D sl, to document a test stop that has been carried out, it is sufficient to just log the test stop alarms of the NCK (27002); it is not absolutely necessary to log the test stop alarms of the SINAMICS S120 (C01798).

SINAMICS firmware versions

For SINUMERIK software releases 1.3 and 1.4/2.4, different firmware versions of the components involved in the safety functions (NCU, NX, Motor Modules, Sensor Modules, DRIVE–CLiQ motors) may be mixed without having to adapt the firmware versions.

From SINUMERIK software release 1.5/2.5 onwards, the following applies:

The firmware versions of the Motor Modules, Sensor Modules and DRIVE–CLiQ motors involved in the safety functions (these include integrated Sensor Modules) must be adapted to the SINAMICS firmware version of the NCU. This is performed automatically during startup if parameter p9826 (firmware, automatic) is set to 1 (default setting). When Safety Integrated is used, parameter p9826 (firmware, automatic) must be set to 1 – and must not be re-parameterized. During the acceptance test for Safety Integrated, the safety firmware versions of **all** Motor Modules, Sensors Modules and DRIVE–CLiQ motors involved in the safety functions should be read out, logged and checked against the following list.

<http://support.automation.siemens.com/WW/view/de/28554461>

Every line in the table represents a permissible combination of safety firmware versions.

9.5 Acceptance test

Authorized person, acceptance report

All SI functions must be acceptance-tested by an authorized person and the test results recorded in a test report. The report must be signed by the person who carried out the acceptance tests. The acceptance test report must be kept in the log-book of the particular machine.

In this context this is a person who is authorized by the machine manufacturer and who has adequate professional training and knowledge of the safety functions in order to conduct the acceptance test in a proficient manner.

Documentation, data archiving

In addition to the acceptance report, the following SI relevant data must be archived:

- NC machine data
- Drive parameters
- PLC/NCK–SPL program
- S7 configuration

Necessity of an acceptance test

A full acceptance test (as described in this Chapter) must always be carried out when the functionality of Safety Integrated is commissioned for the first time on a machine.

Extended safety-related functionality, transferring the commissioned software to additional series machines, modifications to the hardware, software upgrades etc. make it necessary to carry out the acceptance test – possibly with a reduced test scope.

In order to define a partial acceptance test it is first necessary to describe the individual parts of the acceptance test and then define logical groups that represent the components of the acceptance test.

Contents of the full acceptance test

DOCUMENTATION

Documentation of the machine incl. safety functions

1. Machine description (with overview)
2. Details about the control system
3. Configuration diagram
4. Function table
 - Active monitoring functions depending on the operating mode, the protective doors and other sensors
 - Ideally, this table should be the objective and result of the configuring work.
5. SI functions per axis
6. Information about the safety equipment

FUNCTION TEST PART 1

General function check incl. checking the wiring/programming/configuring

7. Test the shutdown paths
(test the forced checking procedure of the shutdown paths)
8. Test the external stops
9. Test the forced checking procedure of the inputs and outputs
10. Test the Emergency Stop and the safety circuits
11. Test all SPL switching states and associated input/output signals
12. Check the hardware configuration of the PROFIsafe I/O

FUNCTION TEST PART 2

Detailed function test incl. checking the values of the individual SI functions used

13. Test the SI function "safe operating stop" – SBH
(in each case with evaluated measurement diagram and measured values)
14. Test the SI function "safely reduced speed" – SG
(in each case with evaluated measurement diagram and measured values)
15. Test the SI function "safety-related output $n < n_x$ "
(in each case with evaluated measurement diagram and measured values)
16. Test the SI function "safe limit positions" – SE
(in each case with evaluated measurement diagram and measured values)
17. Test the SI function "safe cams" – SN
(check using the diagnostics display or assigned SGAs or with the evaluated measuring diagrams and measured values)
18. If necessary, test the SI function "external stops"
(in each case with evaluated measurement diagram and measured values)
19. Test the SI function "SBC/SBT"
(in each case with evaluated measurement diagram or measured values/
PROFIsafe I/O)

COMPLETION OF THE REPORT

A report of the commissioning status that was checked is generated with the appropriate counter-signatures

20. Check the SI machine data
21. Log the checksums (axis MD/SPL/PROFIsafe I/O)
22. Completing the NCK commissioning (protect synchronous actions)
23. Completing the commissioning of the PLC
24. Verify the data backup
25. Have the report countersigned

9.5 Acceptance test**APPENDIX**

Reports/measurement records for FUNCTION TEST PART 1/2

Printouts of the hardware configuration from SIMATIC Step 7 for the PROFIsafe I/O

Alarm logs/servo trace measurements

Archive the following SI-relevant data:

NC machine data

Drive parameters

PLC/NCK-SPL program

S7 configuration

Note

The template in the toolbox is only a recommendation.

An electronic template for the acceptance report is available:

- in the toolbox for SINUMERIK 840D sl
- on DOConCD for SINUMERIK 840D sl
- on the service CD for SINUMERIK 840D sl

The acceptance report is divided into the following sections:

- Plant/system description
 - Description of the safety functions
 - Test of safety functions
-

Acceptance report of the hardware configuration

For the PROFIsafe I/O, a printout of the hardware configuration from SIMATIC Step 7 is required as acceptance report.

For this purpose, in Step 7:

- Open project
- Open hardware
- Select the station/print preview

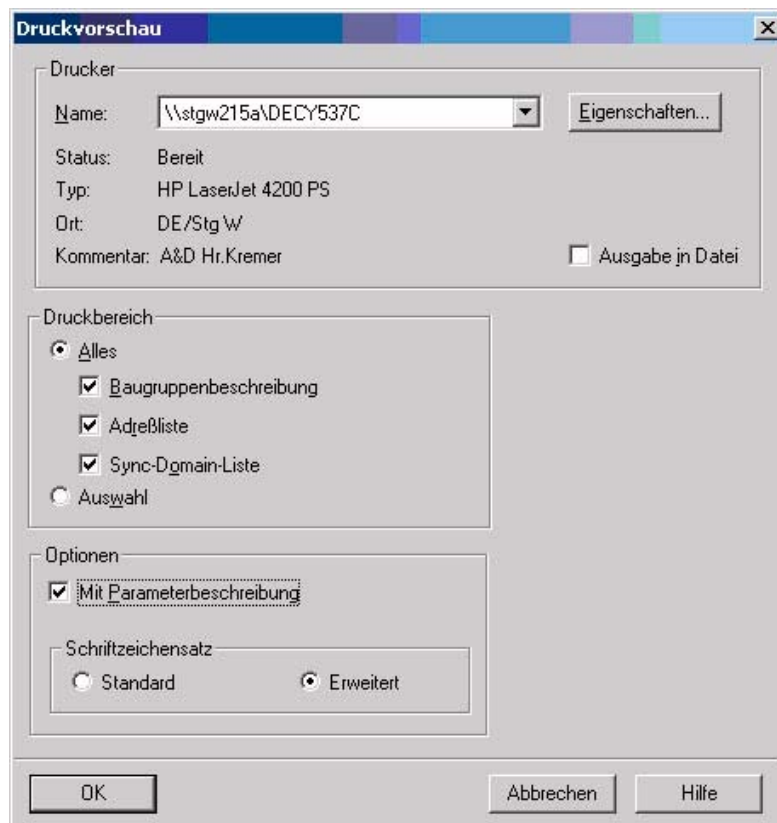


Fig. 9-13 Print preview, Step 7

- Acknowledge with OK

The hardware configuration is now displayed, can be printed and then subsequently checked.

Effect of the acceptance test for specific measures

Table 9-1 Scope of the acceptance test depending on specific measures

Measure	Documentation	Function test Part 1	Function test Part 2	Report completion
The encoder system has been replaced (refer to Chap. 9.6)	No	No	check of safe actual values and function of SE/SN (axis-specific)	Supplement, possibly new checksums and counter-signature
Replace an SMC, SME module (refer to Chap. 9.6)	Supplement, hardware data/ configuration/ software version data	No	check of safe actual values and function of SE/SN (axis-specific)	Supplement, possibly new checksums and counter-signature

9.5 Acceptance test

Table 9-1 Scope of the acceptance test depending on specific measures

Measure	Documentation	Function test Part 1	Function test Part 2	Report completion
Replace a motor with DRIVE-CLiQ (refer to Chap. 9.6)	Supplement, hardware data/ configuration/ software version data	No	check of safe actual values and function of SE/SN (axis-specific)	Supplement, possibly new checksums and counter-signature
Replace the NCU, Nx motor module hardware	Supplement, hardware data/ configuration/ software version data	No	Partially, if the system clock cycles or dynamic response have been changed (axis-specific)	Supplement, possibly new checksums and counter-signature
Replace hardware/update software/reconfigure the PROFIsafe I/O	Supplement, hardware data/ configuration/ software version data	Yes With a comment, limited to replaced components/ changed SW version/changed hardware configuration	No	Supplement, possibly new checksums and counter-signature
The software has been upgraded (NCU/drive/PLC)	Supplement, version data	Yes with note about the new function	Yes if system clock cycles or acceleration characteristics (e.g. also jerk) have been changed or Test the new functionality	Supplement, possibly new checksums and counter-signature
The software has been upgraded (HMI)	Possible supplement, SW version	No	No	No
An individual limit value has been changed (e.g. SG limit)	Supplement, SI functions per axis	No	Partial test of the changed limit value	Supplement, possibly new checksums and counter-signature
Function expanded (e.g. additional actuator, additional SG stage)	Supplement, SI functions per axis or function table	Yes with note if relevant – limited to adapted parts	Partial test of possible additional limit values	Supplement, possibly new checksums and counter-signature
SPL change	Supplement, SI functions per axis or function table	Yes, test the points involved	No	Supplement, possibly new checksums and counter-signature

Table 9-1 Scope of the acceptance test depending on specific measures

Measure	Documentation	Function test Part 1	Function test Part 2	Report completion
Data transferred to additional machines with series commissioning	Possibly supplement, machine description (check the SW version)	Yes with note	No, for identical data	No No, if identical data (check the checksums)

Note: If the results of function test, Part 2 are taken from another identical machine, then this is the sole responsibility of the machine manufacturer and should be appropriately commented in the acceptance report.

9.5.2 Conventional acceptance test

Procedure of the conventional acceptance test

Safety function	Test initiated by	Function checked using	Represented using
Forced checking procedure of the shutdown paths	Test stop initiated e.g. by reducing the test stop time or separate key Switching operations at the SGE/SGA	Alarm log Diagnostics display Servo trace SGE/SGA	27002 axis Test stop running C01798 test stop running (this is not absolutely required) Diagnostics screen SI status Decoded using servo trace bit graphics
Sequence of the test stop routine for external stops	Test stop initiated e.g. by reducing the test stop time or separate key	Servo trace SGE/SGA Diagnostics display Drive interface PLC	De-coded using servo trace bit graphics Diagnostics screen SI status Trace Sinucom NC trace
Forced checking procedure of the input/output peripherals (e.g. Emergency Stop)	Test stop initiated e.g. by reducing the test stop time or separate key	Disconnect the feedback signal contacts or jumper an SPL input	User error message Stop D is initiated
Configuring/hardware configuration of the PROFIsafe I/O	SPL	Diagnostic displays, behavior of the SPL and I/O terminals, printout of the hardware configuration from SIMATIC Step 7	Printout of the hardware configuration from SIMATIC Step 7

9.5 Acceptance test

Safety function	Test initiated by	Function checked using	Represented using
Test the safety-related functions (according to the function table)	Use the safety-related sensors	Diagnostics display	Diagnostics screen SI status
Safe operating stop (SBH)	Exceed the SBH limit by setting MD 36933 to 0% operating mode, JOG traversing keys	Servo trace: (actual speed, active encoder/and actual value, active encoder)	the marker functionality of the servo trace
Safely reduced speed (SG)	Exceed the SG limit by setting MD 36933 to 0% operating mode, JOG traversing keys	Servo trace: (actual speed, active encoder/and actual value, active encoder)	the marker functionality of the servo trace
SGA "n < n _x "	Exceed the speed n _x	Servo trace: (SGE/SGA and actual speed, active encoder)	the marker functionality of the servo trace De-coded using bit graphics Trace Sinucom NC trace
Safe software limit switches (SE)	Pass the positive and negative limit switches Change the SW limit switch	Servo trace: (actual speed, active encoder/and actual value, active encoder)	the marker functionality of the servo trace
Safe software cams (SN)	Pass individual cam positions	Servo trace (SGE/SGA) Diagnostics display Drive interface PLC	the marker functionality of the servo trace De-coding using bit graphics Trace Sinucom NC trace
SBC/SBT	Test stop initiated e.g. by reducing the test stop time or separate key	Servo trace: (actual value active encoder, torque)	

Recommendation to measure the stopping distance/speed increase for the acceptance test

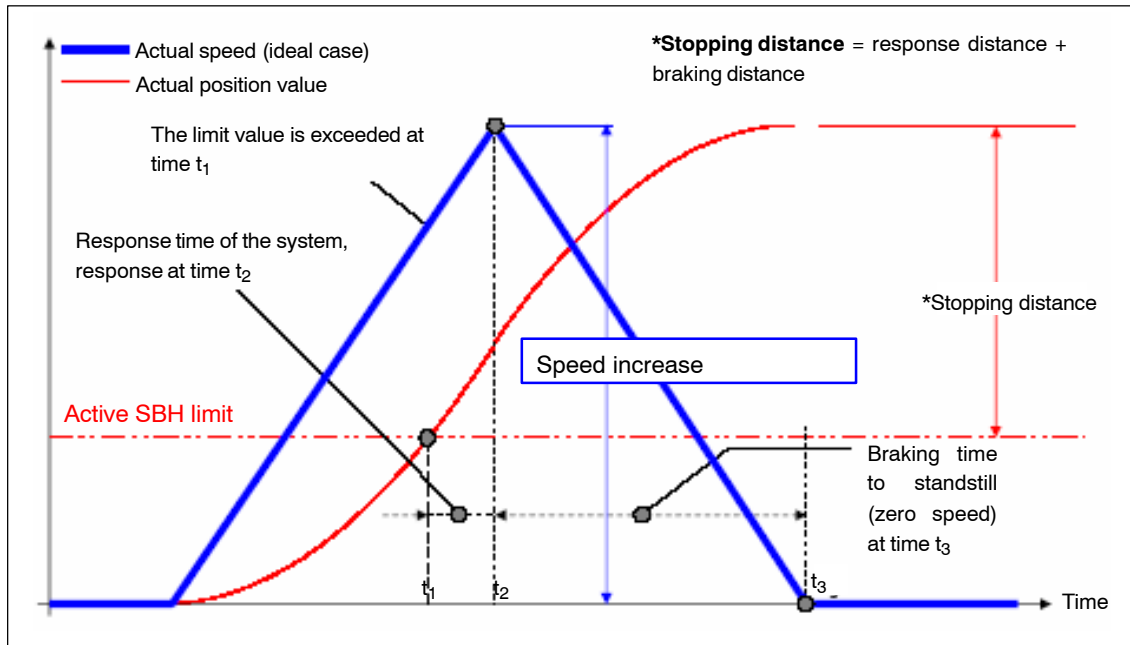


Fig. 9-14 Exceeding SBH

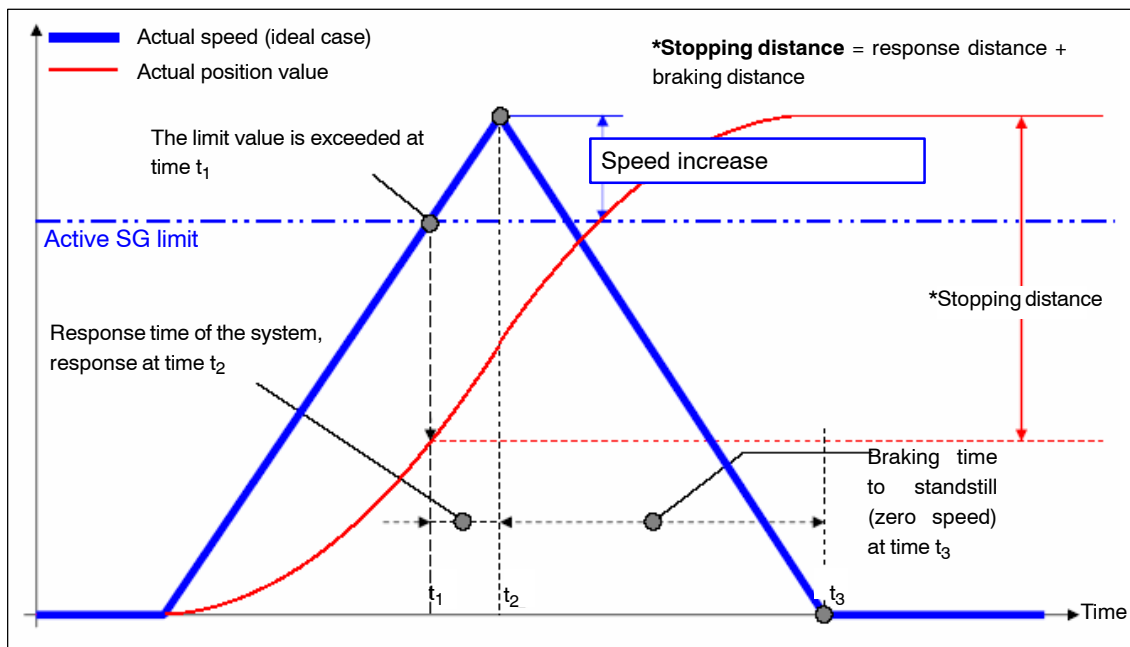


Fig. 9-15 Exceeding SG

9.5 Acceptance test

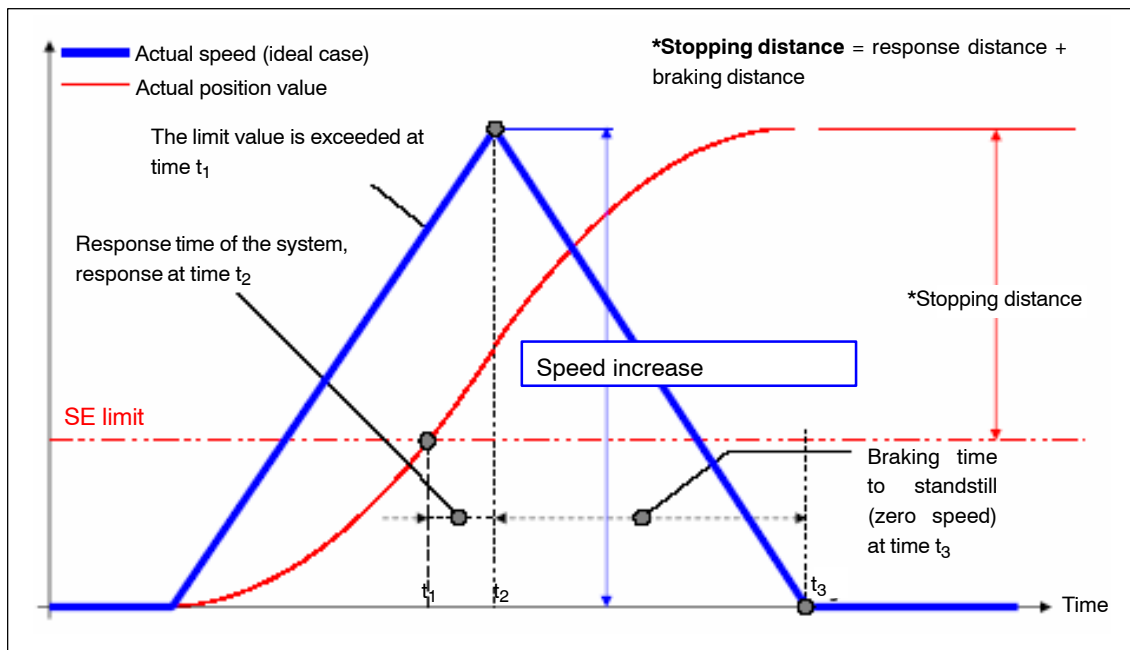


Fig. 9-16 Exceeding SE

9.5.3 Acceptance test support

In order to make it easier to carry out the acceptance test and standardize this, there is the function "Acceptance test support" in the SinuCom NC commissioning tool".

The objective of this acceptance support is to control the creation and administration of an acceptance report and prepare and carry out the required test steps using the appropriate operator actions via the operator interface. The test steps that are required as part of the acceptance test are not completely automatically executed but are controlled by a skilled operator. This operator must carry out the measures, associated with the test step, at the system being tested. The acceptance test support provides the following:

- Support when documenting the active monitoring functions and monitoring limit values by reading out the appropriate machine data.
- Support when documenting the checksum values.
- Standardization of the procedure when carrying out the test, following a pre-defined test list.
- The time and resources required for testing are reduced by preparing test procedures within the system, automatic trace and evaluation techniques and it takes less time to acknowledge SI alarms that are output.

Software requirements

The acceptance test report function is based on the interaction between the NCK/drive and the SinuCom NC operator interface. This means that if this function is used, these components must have a certain minimum software version.

SinuCom NC software	Version 7.2 SP1
NCU system software	Version 1.3

The basic functionality of the SinuCom NC software is explained within the scope of its own documentation. This documentation also provides information about the steps when handling the acceptance test support function, a description of the screen forms and the menu prompting. This is the reason that this is not handled in this documentation.

References: Commissioning/Service Tool SINUMERIK SinuCom NC (INC)

Scope of the test list

The test steps of the SI acceptance test, supported by the system, is based on the previous test execution and comprises the following steps:

Designation	Purpose of the test step
<i>General information</i>	
Overview	Document the machine details (e.g. manufacturer, machine type,...)
<i>Check the forced checking procedure measures</i>	
Shutdown paths	Test the forced checking procedure of the shutdown paths for the NCK and drive. (logging NCK Alarm 27002 is sufficient.)
External stops	Test the forced checking procedure of the (that are being used) external stop responses.
<i>Qualitative function checks</i>	
Emerg. stop	Test the internal Emergency Stop functionality when executed via external stop responses and the response to the external SPL I/O.
Function inter-relationships	Test all of the states relevant for the safety functions that should be first documented within the scope of a function table or similar (inter-dependency of sensor signals, positions, modes). In this case, the following should be taken into account – the active monitoring function for SI-monitored axes (internal safety functions) and the switching state of safety-related external SPL output peripherals (I/O).
<i>Quantitative function checks</i>	
SBH (safe operating stop)	Test the response when provoking that the SBH limit values are violated and define associated characteristic quantities/parameters.
SG (safely reduced speed)	Test the response when provoking that the SG limit values are violated and define associated characteristic quantities/parameters.
SE (safe software limit switches)	Test the response when provoking that the SE limit value is violated and define associated characteristic quantities/parameters.
SBT	When the brake is closed, the drive generates an additional torque that must not result in any axis motion.

9.5 Acceptance test

Designation	Purpose of the test step
<i>Completion</i>	
Done	The test results are saved and downloaded. The acceptance report is generated based on the test results that have been determined.

SI acceptance test

The following rule applies with the start of the SI acceptance test:

- The alarm suppression possibly set in MD 10094 \$MN_SAFE_ALARM_SUPPRESS_LEVEL is not taken into account.

Test step, motion monitoring

With the start of a test step of the motion monitoring (e.g. SBH, SG) the following conditions apply:

- Alarm "Acceptance test mode active" NCK (Alarm No. 27007) and drive (Fault No. C01799) are output.
- The setpoint velocity limiting set using MD 36933 \$MA_SAFE_DES_VELO_LIMIT is de-activated. This allows the axis to be traversed in spite of the fact that the SBH monitoring is active or a traversing speed greater than the actual SG monitoring without having to change the selected reference (setpoint) speed limiting.
- SI power on alarms can be temporarily acknowledged with a reset so that after an SBH response has been tested for an axis, an NCK reset does not have to be initiated for the fault acknowledgement. This involves the acknowledgment criteria for the following alarms:

Alarm No. NCK	Fault No. drive	Alarm text
27010	C01707	Tolerance for safe operating stop exceeded
27023	C01701	STOP B initiated
27024	C01700	STOP A initiated

- Traversing motion is possible in spite of the external Stop C/D. This means that it is also possible to test the active SBH monitoring state that results from an external Stop.
- An active stop in another axis does not result in a traversing inhibit for the axis being tested – also for the setting MD 36964 \$MA_SAFE_IPO_STOP_GROUP = 0 for this axis.
- When traversing the axes using the JOG buttons, then the set speed limits are ignored – such as e.g. MD 32020 \$MA_JOG_VELO – and the G0 value is activated as effective limit value (maximum axis speed).

- The single-channel software limit switches (set positions, refer to MD 36100 to MD 36130) are de-activated when testing SE. This means that an axis can pass these software limit switches without having to change the associated machine data.

Prerequisites for the test step motion monitoring

A test step of the motion monitoring becomes active under the following conditions:

- There is no active SI power on alarm for the axis to be tested.
- The pulses of the axis to be tested are enabled.
- JOG is active as NC operating mode.
- The SI monitoring function selected when carrying out the test step is active, i.e. if for example the SG2 test is selected as test, then if SG1 is active, the acceptance test mode is not active.
- Both monitoring channels (NCK, drive) allow the mode to be activated. The state that is assumed is subject to a crosswise data comparison between the NCK and drive.

A test step is cancelled by the following conditions:

- As a result of an NCK Reset
- When an internal timer value expires, that defines the maximum time that the state can be active.
This timer value is set in the following machine data
MD 36958 \$MA_SAFE_ACCEPTANCE_TST_TIMEOUT (NCK) and parameter
p9558: SI motion, acceptance test mode, time limit.

Trace techniques

A test is carried out prompted step-by-step using the SinuCom NC operator interface. There are various trace techniques, which can be used to confirm and log as to whether the test was successfully completed.

Text entry by the operator

A table or cell for the user documentation is provided for the test. This should then be completed corresponding to the specifications. In addition to how the test is initiated, the text entry includes, e.g. a description of test situations and responses or similar.

Alarms that occur are automatically logged

Specific system and user alarms expected for the test step that are automatically logged after the data trace function has been started. After the appropriate data has been traced, the selection of alarms to be logged can be reduced to those alarms that are relevant for the specific test step.

9.5 Acceptance test

Internal signal trace function

The SinuCom NC internal trace function is started when the data trace is started and the signals, relevant for the specific test step, recorded. The trace is either automatically ended or the user ends it for some tests (external stops, Emergency Stop).

Specific NC machine data must be set in order that the trace function can be used. This prepares the appropriate resources for the function. The values to be set should be taken from the SINUMERIK SinuCom NC start-up tool.

Basic operating information and instructions

- The operator is prompted, step-by-step when carrying out a test. The following limitations/constraints must be observed, especially for those tests that use the internal trace function:

If a traversing direction has been selected, then this must also be taken into account for the subsequent task. The reason for this is that the trigger condition for the automatic data acquisition and evaluation is based on this direction data

A procedure is initiated to activate the trace function using the button <start data acquisition>. This can take several seconds. The signal is only acquired after the appropriate feedback has been received in a message box.

If the trace has to be manually terminated, then this step should, if at all possible, be made directly after the last expected signal change that is relevant for the trace. This ensures that the relevant area is optimally displayed in the subsequent trace display.

- For each test step, the operator must decide as to whether the test was successfully carried out. He should make this decision based on traced and determined data and test situations that have been carried out and documented. This can be confirmed after the test has been carried out by selecting the appropriate results.
- The test list, provided and supported by SinuCom NC includes the basic test steps to be carried out. Depending on the machine configuration, several tests may not be necessary for the particular machine. This can be selected in the basic screen of the test step. Further, there are test cases, that are required for the machine but are not (or still not) included within the scope of the test list, e.g. measuring the braking travel when a light barrier is obstructed, or similar. These tests should still be manually executed.
- When generating the acceptance certificate, for documentation purposes, data is automatically retrieved from some machine data (SI limit values, checksums, hardware information).
Further, the results of the tests that were carried out are incorporated in the document. The report is structured the same as the document that was previously manually created. Some sections, such as for example, the machine overview, function table of the configured safety functions etc., that are not standardized, are still manually incorporated in the document at a later date.

9.6 Replacing a motor or encoder



Warning

After hardware and/or software components have been changed or replaced, it is only permissible to boot the system and activate the drives when the protective devices are closed. Personnel shall not be present within the danger zone.

Depending on the change or replacement, it may be necessary to carry out a new, partial or complete acceptance test (see Chapter 9.5 Acceptance test).

Before persons may re-enter the hazardous area, the drives should be tested to ensure that they exhibit stable behavior by briefly moving them in both the plus and minus directions (+/-).

It is especially important to carefully observe this for high-dynamic linear and torque motors.



Warning

After the measuring system has been replaced – regardless of whether it is a direct or an indirect system – the relevant axis must be re-calibrated.

Description

The following information essentially refers to replacing a motor encoder. The limitations that apply as well as the procedures are essentially the same when replacing a direct measuring system.

When service is required (motor defective or encoder defective), it might be necessary to completely replace the motor or just the motor encoder.

In this case, the motor encoder must be re-calibrated. This influences the behavior of Safety Integrated if the functionality "safe limit positions" or "safe cams" have been activated for the axis in question, i.e. the axis has the status "safely referenced". Depending on which motor measuring system is used, it might be necessary to select a different procedure.

The procedure for replacing a motor with absolute value encoder and to replace a motor with incremental encoder are described in the following text. The end of the Chapter discusses 2-encoder systems and encoder modules.

Limitations

As mentioned above, the functionality "safe limit positions" or "safe cams" is active for the axis in question.

9.6 Replacing a motor or encoder

The user agreement is set for the axis, i.e. the axis has had the status "safely referenced" at least once – the actual position value of the NC and the SI actual values (axis/drive) have been appropriately calibrated.

"Safe limit positions" or "Safe cams" have been able to be used.

A motor or motor encoder has to be replaced under these conditions.

Replacing a motor with absolute value encoder

In order to set-up the encoder, the offset between the machine zero and the zero of the absolute encoder was determined.

The calibrated state is identified by the control using

MD 34210: ENC_REFP_STATE = 2.

The important factor when replacing a motor (also without Safety Integrated) is that a defined position reference can be established with respect to the mechanical parts of the machine. For example, by mounting and removing the motor at a defined mechanical position or appropriately re-calibrating the system after the motor has been replaced.

After the old motor has been removed and the new motor installed, another actual position value is read by the new absolute value encoder (there is no longer a defined reference to the correctly calibrated actual position value).

Therefore the following error profile appears when the control boots:

Alarm 27001 Axis <name of the axis> fault in a monitoring channel, Code **1003**, values: NCK x, drive y.

The comparison between the saved stop position and the actual position indicates a larger deviation than that specified in MD 36944: \$MA_SAFE_REFP_POS_TOL or parameter p9544: "SI motion, actual value comparison tolerance (referencing)"

The alarm results in a STOP B followed by a STOP A (safe pulse cancellation) for the axis involved.

The user agreement is also cancelled. This means that the axis loses the status "safely referenced" in connection with the Alarms 27000/C01797 axis <name of the axis> not safely referenced.

The actual position value supplied by the new motor encoder has no reference to the mechanical system. This means that the absolute value encoder must be re-aligned and set-up at this point.

Note

A safety acceptance report is generally not required after a motor has been replaced.

Re-calibration procedure

1. Carry out an NCK reset



Warning

After the NCK–Reset, the axis can be traversed again. Alarms 27000/C01797 "Axis not safely referenced" are still present and indicate that the functions "safe limit positions" and "safe cams" are not active in this state. For example, if "safe limit positions" is being used as a substitute for hardware limit switches, then it is important to note that at this time, the safe limit positions are not functional!

2. Move the axis to the reference position after first setting MD 34010 REFP_CAM_DIR_IS_MINUS according to the approach direction. (34010 should be set to 1 if the axis is moved in the negative (minus) direction to the reference position.)
3. MD 34100: Set REFP_SET_POS to the actual value of the reference position.
4. MD 34210: Set ENC_REFP_STATE = 1 to activate the calibration.
5. Select the axis that is to be calibrated on the machine control panel and press the RESET key on the machine control panel.
6. Select the JOG/REF mode, enable the axis feed.
7. The calibration process must be initiated with traversing key + or – according to MD 34010: REFP_CAM_DIR_IS_MINUS and the approach direction to the reference position. (Backlash has been moved through).
8. The axis does not traverse. Instead, the offset between the correct actual value (reference position) and the actual value – supplied by the encoder – is entered in MD 34090: REFP_MOVE_DIST_CORR. The actual value appears in the basic screen and the axis signals "referenced". The value 2 is entered in MD 34210 as result.

Example:

MD 34010=1 (minus) and the reference position was approached in the negative (minus) direction. This means that the "–" key must also be pressed on the machine control panel.

9. When the absolute value encoder has been re-calibrated (MD 34210 from 1 → 2), the axis changes over into the "referenced" state. At this time, the new valid actual position is accepted as the safe actual values (axis and drive).
10. Finally, with the JOG/REF machine mode active, on the HMI the "user agreement" softkey must be pressed and the user agreement for the axis involved must be reset. Alarms 27000/C01797 disappear and the functions "safe limit position" and "safe cams" are safely active again.

Replacing a motor with incremental encoder

The same conditions apply as when replacing a motor with absolute encoder.

To calibrate the encoder, a reference point approach has been set up, e.g. with reference point cams. This means that after the zero mark has been passed when leaving the cam, the reference point is approached according to the offsets in 34080 REFP_MOVE_DIST and 34090 REFP_MOVE_DIST_CORR – and the value of the reference point is set in MD 34100: REFP_SET_POS. After the referencing operation, Alarm messages 27000/C01797 "axis not safely referenced" disappear and the functions "safe limit positions" and "safe cams" are safely active.

The important factor when replacing a motor (also without Safety Integrated) is that a defined position reference can be established with respect to the mechanical parts of the machine. For example, by mounting and removing the motor at a defined mechanical position or appropriately re-calibrating the system after the motor has been replaced. At this instant in time, Alarms 27000/C01797 still do not disappear; they only disappear after the user agreement has been set.

After the old motor has been removed and the new motor installed, the following procedure is recommended:

Re-calibration procedure

1. Boot the control or carry out an NCK reset
2. If the JOG/REF machine mode is active on the HMI, the "user agreement" soft-key must be pressed and the user agreement for the axis involved is withdrawn to avoid **Alarm 27001** Axis <name of the axis> fault in a monitoring channel, Code **1003**, values: NCK x, drive y
3. After the system has booted, the JOG/REF mode is selected and the feed enable for the axis is issued. Carry out a reference point approach for the axis involved.

Note

The error at a reference point approach is no more than one revolution of the motor (difference between two zero marks). This offset is usually not critical for the mechanical parts of the machine. If problems arise with the traversing limits because of the type of reference point approach, then for example, set the offset values in MD 34080 /34090 to non-critical values.

Alarms 27000/C01797 "Axis not safely referenced" are still present and indicate that the functions "safe limit positions" and "safe cams" are not active in this state. **For example, if "safe limit positions" is being used as a substitute for hardware limit switches, then it is important to note that at this time, the safe limit positions are not functional!**

After completion of the reference point approach, the axis goes into the "referenced" status. However, because of the zero mark offset between the encoders, the reference position still has to be calibrated, i.e. the position reference with respect to the mechanical system must be re-established. The system is calibrated after measuring the difference – usually in MD 34080 REFP_MOVE_DIST or 34090 REFP_MOVE_DIST_CORR.

4. After the reference point has been re-calibrated, the reference point approach must be re-initiated. The axis changes over into the "referenced" state. At this time, the reference point value is taken over as the safe actual value for the axis and drive.
5. Finally, with the JOG/REF machine mode active, on the HMI the "user agreement" softkey must be pressed and the user agreement for the axis involved must be reset. Alarms 27000/C01797 disappear and the functions "safe limit position" and "safe cams" are safely active again.

Comments about 2–encoder systems**Case A**

1st measuring system: Incremental motor measuring system

2nd measuring system: Absolute direct measuring system

The 2nd position measuring system (DBAx 1.5 = 0, DBAx 1.6 = 1) is selected via the axis interface as the active measuring system.

In this case, motor replacement is straightforward because the NC reference point position is only supplied with values from the 2nd measuring system (DMS).

Case B

1st measuring system: Absolute motor measuring system

2nd measuring system: Incremental direct measuring system

The 1st position measuring system (DBAx1.5 = 1, DBX 1.6 = 0) is selected as the active measuring system via the axis interface when the system boots. This is for monitoring purposes. A changeover is then made to the 2nd position measuring system (DBAx 1.5 = 0, DBX 1.6 = 1).

9.6 Replacing a motor or encoder

In this case, the motor must be replaced carefully observing the **Description, motor with absolute value encoder**. This is because it is necessary to re-calibrate the absolute value encoder. When re-calibrating the system, we recommend that you permanently select the 1st position measuring system and the axis is only traversed using the motor measuring system.

Replacing the encoder modules

When replacing the encoder modules (SMC, SME) or when replacing motors with integrated encoders (motor with DRIVE-CLiQ), a change to the configuration of the safety-related components is detected, and a request is made that a service person acknowledges this.

After at least one of these components has been replaced, Alarm 27035 "Axis %1 new HW component, acknowledgement and function test required" is output (changed CRC in index 1 of \$MA_SAFE_ACT_CHECKSUM[], i.e. hardware IDs have changed). The term "function test" designates a partial acceptance test that is described in detail in the alarm description.

If Alarm 27035 is output, a new softkey "Acknowledge SI HW" is displayed in the alarm screen. This can only be actually selected with key switch setting 3 (the same as for the user agreement).

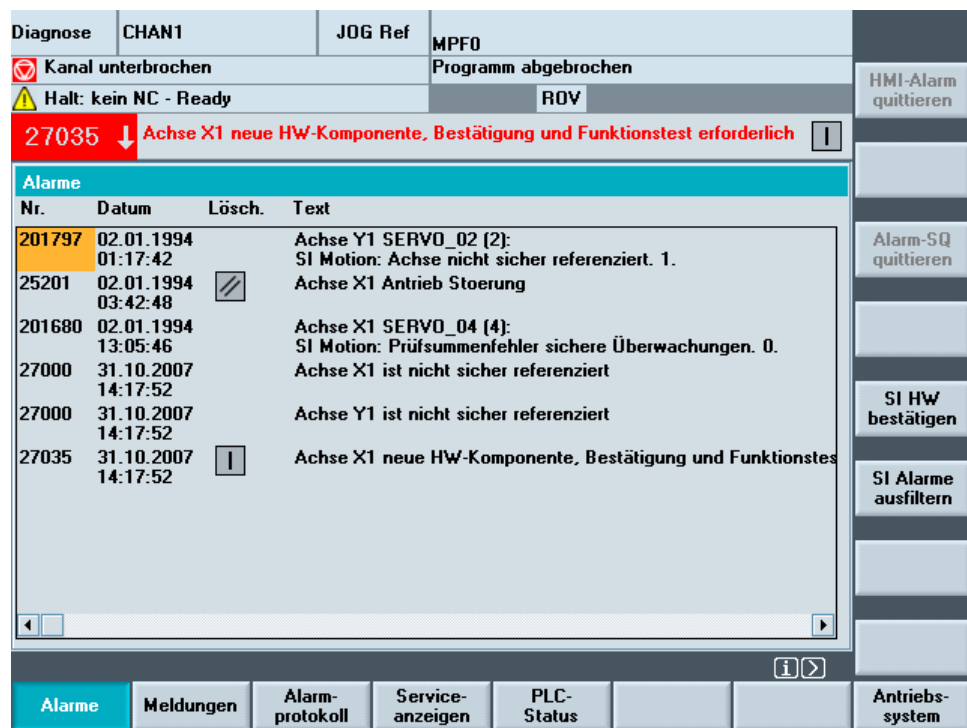


Fig. 9-17 Acknowledge SI HW

After the softkey is selected, the following message is displayed on the HMI:

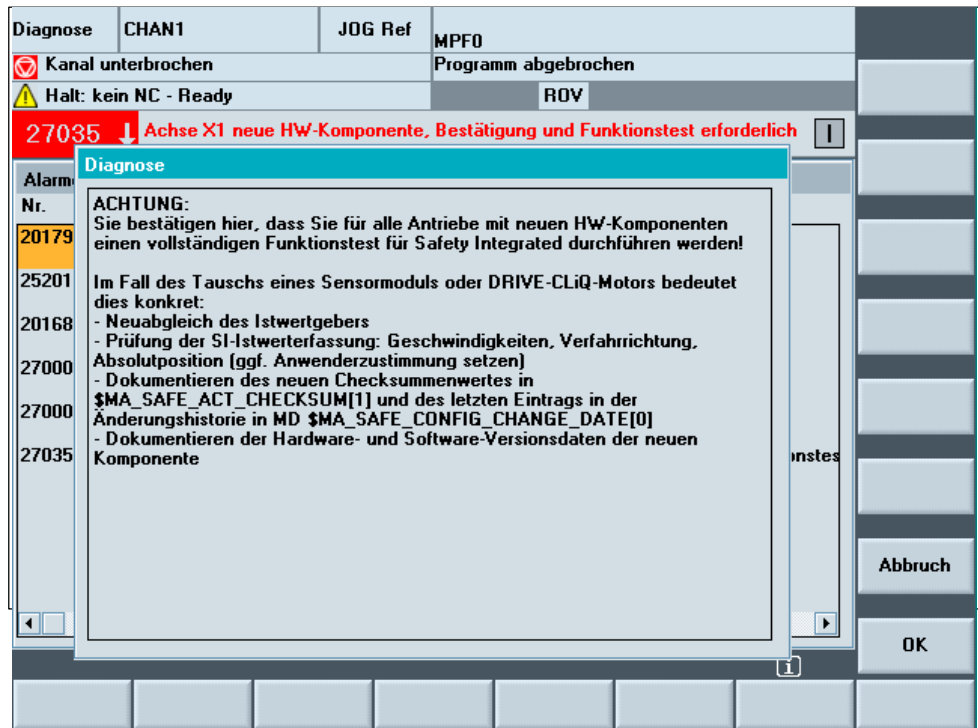


Fig. 9-18 Acknowledge SI HW, step 2

After acknowledging with OK, the actual checksums `SAFE_ACT_CHECKSUM[1]` for all of the axes are copied to the reference checksum `SAFE_DES_CHECKSUM[1]` and a recommendation is given to power on the control. This is carried out by pressing OK.

After the system has successfully booted, the user must carry out the measures of the function test just acknowledged in the HMI messages or in Alarm 27035, i.e.

- Re-calibration of the actual value encoder
- Check the SI actual value acquisition: Speeds, traversing direction, absolute position (if required, set the user agreement)
- Document the new checksum value in `SAFE_ACT_CHECKSUM[1]` and the last entry in the change history in `MD SAFE_CONFIG_CHANGE_DATE[0]`
- Document the hardware and software version data of the new component

Alternatively, Alarm 27035 can be acknowledged using the softkey "Acknowledge SI data" and the softkey "Reset...".

The user can suppress the automated internal actual value check by resetting the "user agreement" – therefore requesting that the axis is re-calibrated with the appropriate user agreement.

[illegible]

Note

Not all of the HMI functions shown are available in all of the HMI versions (HMI Embedded, HMI sl, HMI Advanced).

10.1 Troubleshooting procedure

- The alarms that have been activated in response to an error are output in the "DIAGNOSIS – ALARMS" display. When required, the safety alarms can be suppressed in the diagnostics display using the "Filter out SI alarms" softkey.
- For Alarm 27090 "Error for crosswise data comparison NCK–PLC", the cause of the error (the incorrect SPL variable) is displayed in the alarm output.
- For Alarm 27254 "PROFIsafe: F module, error on channel", the input/output channel with error for modules belonging to the ET 200 series, is displayed in the alarm output.
- For Alarm 27001 "Defect in a monitoring channel", the fine error code is also displayed in the alarm output.
- For Alarm C01711 "SI motion defect in a monitoring channel" the fine error code is displayed in the alarm output. In the screen "Commissioning – machine data – drive MD", using parameter r9725: "SI motion diagnostics STOP F", the cause of the alarm can be read out.
- The current crosswise data comparison error code of the drive monitoring channel is displayed in the diagnostics screen "Status SI" in line "Stop F code value".
- For Alarms F01611/F30611 "Defect in a monitoring channel", the fine error code is displayed in the alarm output. The current error search of this alarm is additionally displayed in parameters r9795/r9895.

Note

Different error codes may be displayed for the NCK and drive monitoring channels.

10.1.1 Service displays

- Upon activation of the "Service SI" softkey, the following information blocks about SI-related data are displayed on the HMI for the selected axis:
 - Status SI (selected per default)
 - SI configuration
 - Cam SGA
 - SGE/SGA
 - SPL

Status SI

Diagnosis	CHAN1	Auto	\MPF.DIR NOCKEN_PLUS.MPF		Axis +																																																																																
Channel reset		Program aborted																																																																																			
Status SI					Axis -																																																																																
<div> <div>X1</div> <div>1</div> </div> <table> <tr> <th>Signal</th><th colspan="2">AX1.X1 (DR2-SRM)</th><th></th><th></th></tr> <tr> <td>Safe actual position</td><td>0.000</td><td>0.000</td><td>mm</td><td></td></tr> <tr> <td>Position difference NCK/drive</td><td>0.000</td><td>-</td><td>mm</td><td></td></tr> <tr> <td>Monitoring "Safe operational stop" is active</td><td>No</td><td>No</td><td></td><td></td></tr> <tr> <td>Monitoring "Safe velocity" is active</td><td>No</td><td>No</td><td></td><td></td></tr> <tr> <td>Active SG level</td><td>None</td><td>None</td><td></td><td></td></tr> <tr> <td>Active SG correction factor</td><td>None</td><td>-</td><td>%</td><td></td></tr> <tr> <td>Safe actual velocity limit</td><td>Inactive</td><td>-</td><td>mm/min</td><td></td></tr> <tr> <td>Set velocity limitation</td><td>Inactive</td><td>-</td><td>mm/min</td><td></td></tr> <tr> <td>Current velocity difference</td><td>0.000</td><td>-</td><td>mm/min</td><td></td></tr> <tr> <td>Max. velocity difference</td><td>0.000</td><td>-</td><td>mm/min</td><td></td></tr> <tr> <td>Active safe software limit switch</td><td>not assignable</td><td>not assignable</td><td></td><td></td></tr> <tr> <td>Axis safely referenced</td><td>Yes</td><td>Yes</td><td></td><td></td></tr> <tr> <td>Active gear ration (stage)</td><td>1</td><td>1</td><td></td><td></td></tr> <tr> <td>Active stop</td><td>None</td><td>None</td><td></td><td></td></tr> <tr> <td>Currently requested external stop</td><td>None</td><td>None</td><td></td><td></td></tr> </table>					Signal	AX1.X1 (DR2-SRM)				Safe actual position	0.000	0.000	mm		Position difference NCK/drive	0.000	-	mm		Monitoring "Safe operational stop" is active	No	No			Monitoring "Safe velocity" is active	No	No			Active SG level	None	None			Active SG correction factor	None	-	%		Safe actual velocity limit	Inactive	-	mm/min		Set velocity limitation	Inactive	-	mm/min		Current velocity difference	0.000	-	mm/min		Max. velocity difference	0.000	-	mm/min		Active safe software limit switch	not assignable	not assignable			Axis safely referenced	Yes	Yes			Active gear ration (stage)	1	1			Active stop	None	None			Currently requested external stop	None	None			Direct selection
Signal	AX1.X1 (DR2-SRM)																																																																																				
Safe actual position	0.000	0.000	mm																																																																																		
Position difference NCK/drive	0.000	-	mm																																																																																		
Monitoring "Safe operational stop" is active	No	No																																																																																			
Monitoring "Safe velocity" is active	No	No																																																																																			
Active SG level	None	None																																																																																			
Active SG correction factor	None	-	%																																																																																		
Safe actual velocity limit	Inactive	-	mm/min																																																																																		
Set velocity limitation	Inactive	-	mm/min																																																																																		
Current velocity difference	0.000	-	mm/min																																																																																		
Max. velocity difference	0.000	-	mm/min																																																																																		
Active safe software limit switch	not assignable	not assignable																																																																																			
Axis safely referenced	Yes	Yes																																																																																			
Active gear ration (stage)	1	1																																																																																			
Active stop	None	None																																																																																			
Currently requested external stop	None	None																																																																																			
Status SI	Cam-SGA	SGE/SGA	SPL	SI communication	SI configuration																																																																																

Fig. 10-1 Status SI

The axis+, axis– vertical softkeys or direct selection are used to set the desired axis. The current axis is displayed in the top right half of the table.

Various states for both channels are displayed separately in the diagnostics screen.

SI configuration

You can go to the SI configuration window by pressing the softkey "SI configuration".

Diagnosis	CHAN1	Auto	\MPF.DIR NOCKEN_PLUS.MPF			
Channel reset			Program aborted			
SI Configuration						
Overview of Safety Options:						
Number of Safety Axes:			5			
SI Basic (4 inputs 4 outputs)			No			
SI Comfort (64 inputs 64 outputs)			Yes			
Overview of Safety Checksums:						
NCK SPL			Checksum 001ed0ce			
Axis	Checksum NCK		Checksum DRIVE			
	SI Motion MD	SI Motion MD	SI Motion Parameter r9728[0]	SI Motion Parameter r9728[1]	CU Parameter r9798	MM Parameter r9898
AX1:X1	B456F2E9	6D279334	1345C48E	A07DF496	5ED1358C	E9FDD802
AX2:Y1	50709C6F	256359D5	D8EA9170	FCDC982	E1AC2AA5	8876C5BF
AX3:Z1	E32D9352	D82C472F	98387CDB	FCDC982	2C207E10	47517F8
AX4:A1	E7E621E	9519AA00	F11FED8	A07DF496	CB56E8FF	B22DC47A
AX5:B1	DA1C5381	F9B1D946	77C8BB45	FCDC982	4507EA75	8AC55014
<div> <div>Status SI</div> <div>Cam-SGA</div> <div>SGE/SGA</div> <div>SPL</div> <div>SI communication</div> <div></div> <div></div> <div>SI configuration</div> </div>						

Fig. 10-2 SI configuration

An overview of the safety options that have been set is displayed in the upper section of this diagnostics screen.

The safety checksums for the NCK–SPL and for the PROFIsafe I/O are displayed in the lower section of the window; further, the axial checksums from the NCK and drive.

SGE/SGA

The SGE/SGA window is reached by pressing the softkey SGE/SGA".

Diagnosis	CHAN1	Auto	\MPF.DIR NOCKEN_PLUS.MPF
Channel reset		Program aborted	
SGE/SGA			X1 1
		AX1:X1 (DR2:SRM)	
SGE			
Safe input signals NCK bit 0...15		0000 0000 0000 0011	
Safe input signals drive bit 0...15		0000 0000 0000 0011	
Safe input signals NCK bit 16...31		0000 0000 0011 1100	
Safe input signals drive bit 16...31		0000 0000 0011 1100	
SGA			
Safe output signals NCK bit 0...15		0000 0000 1000 0100	
Safe output signals drive bit 0...15		0000 0000 1000 0000	
Safe output signals NCK bit 16...31		0000 0000 0010 0000	
Safe output signals drive bit 16...31		0000 0000 0010 0000	
Safe cam signals NCK bit 0...31		0000 0000 0000 0000 0000 0000 0000 0000	
Safe cam signals drive bit 0...31		0000 0000 0000 0000 0000 0000 0000 0000	

Fig. 10-3 Status display of SGE/SGA

The available signals are shown in the diagram above.

Fig. 10-4 shows the detailed status display of the safety-related input/output signals.

10.1 Troubleshooting procedure

Cam SGA

You can reach the corresponding windows for safe cam (Fig. 10-5) or safe cam track (Fig. 10-6) using the "Cam SGA" softkey.

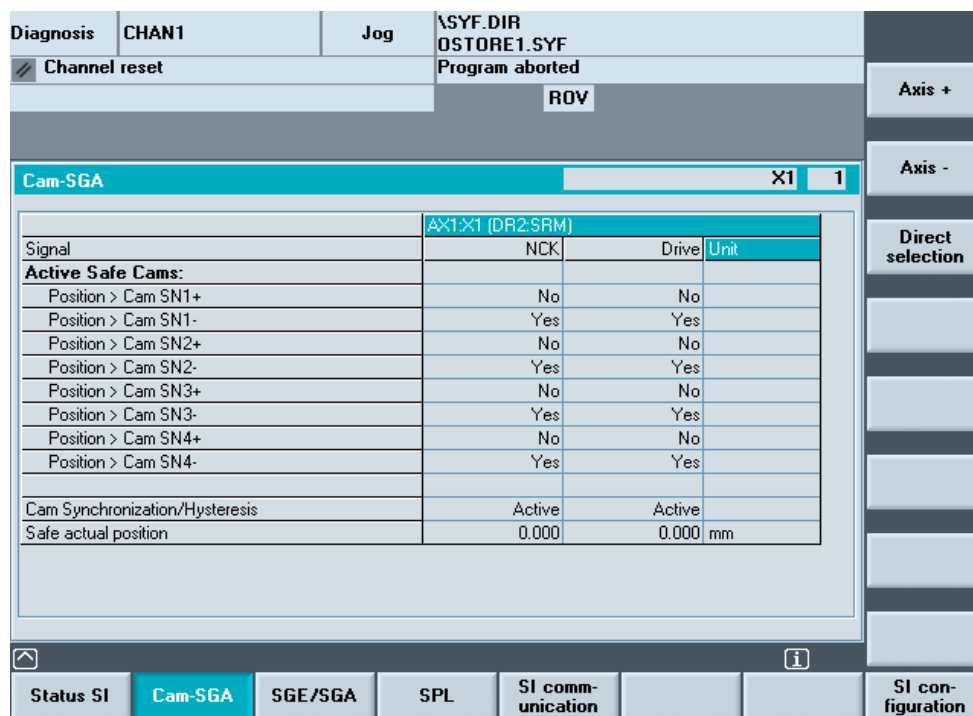


Fig. 10-5 Cam SGA

Diagnosis	CHAN1	Jog	\MPF.DIR NOCKEN_PLUS.MPF Program aborted	
Channel reset				

Cam-SGA		X1	1
Signal	AX1:AX1 (DR2:SRM)		
	NCK	Drive	Unit
Active Safe Cam Tracks:			
Track 1: Position on Cam	Yes	Yes	
Active Cam Range	2	2	
Track 2: Position on Cam	No	No	
Active Cam Range	12	12	
Track 3: Position on Cam	No	No	
Active Cam Range	10	10	
Track 4: Position on Cam	No	No	
Active Cam Range	4	4	
Safe actual position	884.619	884.618	mm

Status SI	Cam-SGA	SGE/SGA	SPL	SI comm- unication	SI con- figuration
-----------	---------	---------	-----	-----------------------	-----------------------

Fig. 10-6 Cam SGA

SPL

The SPL window is reached by pressing the softkey "SPL".

Variable	Bit	Current values	Format
\$A_INSE(P)	08...01	NCK PLC 0000 0011 0000 0011	B
\$A_OUTSE(P)	32...25	NCK PLC 0000 0000 0000 0000	B
\$A_PLCSIOUT	24...17	0000 0000	B
\$A_OUTSI(P)	32...25	NCK PLC 1111 0011 1111 0011	B
\$A_MARKERSI(P)	64...57	NCK PLC 0000 0000 0000 0000	B

Signal	Value
DCC fill level	0
DCC status	No errors occurred
DCC control word	DCC tolerance time 1s
SPL booting state	0011 1111 0000 1111

Buttons at the bottom: Status SI, Cam-SGA, SGE/SGA, **SPL**, SI comm-unication, SI con-figuration

Fig. 10-7 Status display SPL

In the "Variable" selection box, you can select:

\$A_INSE(P) corresponds to simultaneous selection of

\$A_INSE upper line, origin of the NCK and

\$A_INSEP lower line, origin of the PLC

and effectively the same for the other variables:

\$A_OUTSE (P)

\$A_INSI (P)

\$A_OUTSI (P)

\$A_MARKERSI (P)

\$A_PLCSIIN

\$A_PLCSIOUT

The variables that have been selected and the associated bit areas are saved and are taken into account when subsequently selecting the screen.

Using the select key, the following formats can be selected in the variable rows

B Binary

H Hexadecimal

D Decimal, can be selected.

The selected format is applicable for the particular variable, as each variable can be assigned an individual display format.

Further, various SPL states are displayed.

10.1.2 Diagnostics support by configuring your own extended alarm text

In order to upgrade the level of diagnostics information when an error occurs, certain Safety Integrated system alarms can be supplemented by a freely-definable user text. For instance, for hardware-related faults, supplementary information such as input designation, circuit diagram identification number or similar can be included in the system alarm that is output.

This extended alarm text is based on the interaction between the NCK system software (that specifies the parameter that addresses the supplementary information for the alarm text) and the HMI software (that has to appropriately process this parameter).

Dedicated extended alarm texts can be defined for the following Safety Integrated system alarms:

- General SPL crosswise data comparison errors (different status of the SPL variables) Alarm 27090, error for crosswise data comparison, NCK-PLC
- Channel-related errors on the PROFIsafe module (only when using the ET 200 PROFIsafe I/O)
Alarm 27254 PROFIsafe: F module, error on channel

Prerequisites, HMI Advanced

The following entry is in the configuration file for the alarm server (file MBDDE.INI) in the section [Text files]:

File excerpt: mbdde.ini

```
[Textfiles]
```

```
NCK=f:\dh\mb.dir\aln_      ; Example : Standard entry
```

This means that all of the NCK alarms are defined in the file referenced after the NCK entry. The processing of an extended alarm text for the above specified alarms is prepared as part of this definition.

File excerpt: aln_gr.com

```
027090 0 0 "Error for crosswise data comparison NCK-PLC, %1[%2], NCK:
%3; %4<ALSI>"
```

```
027254 0 0 "PROFIsafe: F module %1, error in channel %2; %3<ALSI>"
```

Using the supplement %4<ALSI> (Alarm 27090) and %3<ALSI> (Alarm 27254), the possibility of providing an alarm text extension is defined for the alarm.

Principle of operation – extended alarm text

If Alarm 27090 or Alarm 27254 occurs, the NCK transfers an additional parameter value to the HMI software (27090: %4; 27254: %3). This parameter has a defined value range. Each value can be uniquely assigned an extended alarm text.

10.1 Troubleshooting procedure

Value range of the transfer parameter

000

Parameterizing error detected when booting (different state active)

Crosswise data comparison error, SPL protective mechanism: MD 11500 – DB18.DBX36.0

Crosswise data comparison error, stop response for SPL error: MD 10097 – DB18.DBX36.1

001...064

Error in system variables \$A_INSE(P)[01...64] (Alarm 27090/Alarm 27254)

The index value then results from a channel error signaled from the PROFIsafe module

(Alarm 27254), that is assigned the appropriate \$A_INSE(P) variable (e.g. discrepancy error)

065...128

Error in the system variables \$A_OUTSE(P)[01...64] (Alarm 27090/Alarm 27254).

This means, Alarm 27090 signals an internal logic error (\$A_OUTSE(P) variables differ) and Alarm 27254 signals a channel error signaled from the PROFIsafe module that is assigned to the appropriate \$A_OUTSE(P) variable (e.g. short-circuit fault).

129...192

Error in system variables \$A_INSI(P)[01...64] (only alarm 27090)

193...256

Error in system variables \$A_OUTSI(P)[01...64] (only alarm 27090)

257...320

Error in system variables \$A_MARKERSI(P)[01...64] (only alarm 27090)

Definition of the extended text

The file, in which the extended texts are defined, is also declared in the configuration file for the alarm server (file MBDDE.INI) in the section [IndexTextFiles].

File excerpt: mbdde.ini

```
[IndexTextfiles]
```

```
ALSI=f:\dh\mb.dir\alsi_ ; Example : Standard entry
```

We recommend that this file for the extended text is located in the HMI user directory.

Every parameter can be assigned a dedicated text in this file, whereby the text entry is located in front of the associated parameter value (refer to the following file excerpt).

File excerpt: alsigr.com

```
000000 0 0 "Parameterizing error MD11500/DB18.DBX36.0 or
MD10097/DB18.DBX36.1"
```

```
000001 0 0 "User text $A_INSE(P)[01]"
```

```
..
```

```

000064 0 0    "User text $A_INSE(P)[64]"
000065 0 0    "User text $A_OUTSE(P)[01]"
..
000128 0 0    "User text $A_OUTSE(P)[64]"
000129 0 0    "User text $A_INSI(P)[01]"

000192 0 0    "User text $A_INSI(P)[64]"
000193 0 0    "User text $A_OUTSI(P)[01]"

000256 0 0    "User text $A_OUTSI(P)[64]"
000257 0 0    "User text $A_OUTSI(P)[01]"
000320 0 0    "User text $A_OUTSI(P)[64]"

```

The assigned user text is then displayed when Alarms 27090 or 27254 occur, referred to the associated SPL variable.

10.1.3 Servo trace bit graphics for Safety Integrated

General

The servo trace function is one of the measuring functions in the start-up area. Using the servo trace, for drive signals and NCK signals, measurements can be started by entering a measuring time and trigger conditions. The results of the measurements are then graphically displayed. Two curves can be displayed in 2 graphics. The results of the measurements can be saved in files. Further, the graphics can be saved as bitmap file in the HMI data manager – or directly printed out.

Starting the servo trace

The servo trace is called in the operator area "Commissioning/Optimization test/ Servo trace".

Inbetriebnahme	CHAN1	JOG Ref	\MPF.DIR SG_X_ACHSE_SG3.MPF		Achse + Achse - Start Stop Physikal. Adresse... Datei-funktionen
Kanal RESET		Programm abgebrochen			
		ROV			

Servo-Trace-Messung				
Signalauswahl				
Trace:	Achs-/Spindelname:	Signalauswahl:	Status:	
Trace 1:	X1	SGE-NCK	inaktiv	
Trace 2:	X1	SGA-NCK	inaktiv	
Trace 3:	X1	SGE Antrieb (von PLC)	inaktiv	
Trace 4:	X1	ext. NCK-SPL-SST Eing. Bit 0...31	inaktiv	

Messparameter			
Messdauer:	6000	ms	Trigger: Kein Trigger
Triggerzeit:	0	ms	Schwelle: 0.000 -

Messung	Service Achse	Achs-MD	Antriebs-MD	Anwender-sichten	Anzeige	Datei-funktionen
---------	---------------	---------	-------------	------------------	---------	------------------

Signal selection

When selecting signals, axes and signal names can be selected from the appropriate lists for a maximum of 4 trace channels (trace 1 to trace 4). Trace 1 has a special significance – a signal must be selected in trace 1 otherwise when the PI service is started using the vertical "start" softkey, this is negatively acknowledged from the NCK.

Measuring parameters

For the measuring parameters, the measuring time, the trigger time, specific thresholds and various trigger signals can be set (e.g. a trigger from the part program). These settings are used to parameterize the PI services at the NCK using the vertical "start" softkey. A measurement that has already been started can be interrupted using the vertical "stop" softkey. In this case, the NCK does not supply any measured values.

Physical address

If the physical address entry is selected in the signal selection list, the vertical softkey having the same name is activated. Using the input masks under this softkey, segment values and offset values of NCK system variables etc. can be specified and then measured.

It is possible to scroll through the axes and spindles in the application using the vertical "Axis +" and "Axis –" softkeys. The axis name or spindle name is included in the selected selection list for the axis/spindle names.

Selecting SGE drive

The selection of the SI signal SGE drive (from the PLC) is shown in the following:

Inbetriebnahme	CHAN1	JOG Ref	\MPF.DIR SG_X_ACHSE_SG3.MPF		Achse + Achse - Start Stop Physikal. Adresse...
Kanal RESET		Programm abgebrochen			
		ROV			

Servo-Trace-Messung			
Trace:	Achs-/Spindelname:	Signalauswahl:	Status:
Trace 1:	X1	SGE-NCK	inaktiv
Trace 2:	X1	SGA-NCK	inaktiv
Trace 3:	X1	SGE Antrieb (von PLC)	inaktiv
Trace 4:	X1	SGE Antrieb (von PLC)	inaktiv
		SGA Antrieb (an PLC)	
		Reaktionskennung für NCK	
		Reaktionskennung für NCK/Antrieb	
		Ergebnisliste 1 NCK	
		Ergebnisliste 1 Antrieb	
		Ergebnisliste 2 NCK	
		Ergebnisliste 2 Antrieb	

Messparameter			
Messdauer:	6000		
Triggerzeit:	0	ms	Schwelle: 0.000 -

Messung	Service Achse	Achs-MD	Antriebs-MD	Anwendersichten	Anzeige	Dateifunktionen
---------	---------------	---------	-------------	-----------------	---------	-----------------

10.1 Troubleshooting procedure

After the vertical "start" softkey is pressed, the measurement is started on the NCK side. An appropriate note is output in the message line.

If the measurement cannot be started, appropriate error information is output. This information can be used to pinpoint the problem.

Display

Once the measurement has been completed, the results of the measurement can be graphically displayed using the horizontal "display" softkey:



Graphics

Two graphics (graphic 1 and graphic 2) are displayed. Each graphic can include up to two measured value curves that are color-coded (trace 1 in graphic 1: green, trace 2 in graphic 1: blue, trace 3 in graphic 2: green, trace 4 in graphic 2: blue)

Trace 1 and trace 2 are displayed in graphic 1, trace 3 and trace 4 in graphic 2. The X axis of the graphics is the time axis and the Y axis is scaled in the physical units of the particular signal.

File functions

Measurement settings and the measured values of the servo trace functions can be saved, downloaded or deleted using the horizontal softkey "File functions".

10.1.4 Bit graphics for SI signals in the servo trace

Using the servo trace, individual bits can be selected from bit-coded SI signals and the characteristic over time can be graphically displayed similar to a logic analyzer. Bit characteristics can be displayed as a function of time for 10 character channels (tracks).

10.1 Troubleshooting procedure

Bit-coded SI signals

The bit-coded SI signals are principally sub-divided into two groups:

- SI signals where the system allocates the names of the bits (signals: SGE-NCK, SGA-NCK, SGE-PLC and SGA-PLC)
- SI signals where the user can freely select their names and default names are entered into an Ini file (F:\hmi_adv\ibsvtsi.ini). If the user wishes to change the default assignment, he can do this in the file hmi_adv\ibsvtsi.ini or using the appropriate forms in the operator interface.

These different bit-coded SI signals are parameterized on the operator interface.


The settings do not modify the measurement but only how the results of the measurement are actually displayed in the graphic.

No bit graphics are generated for SI signals that are not bit-coded.

The setting options are accessed using the vertical "bit selection..." softkey:



The following screen appears after pressing the vertical "Bit selection..." softkey:

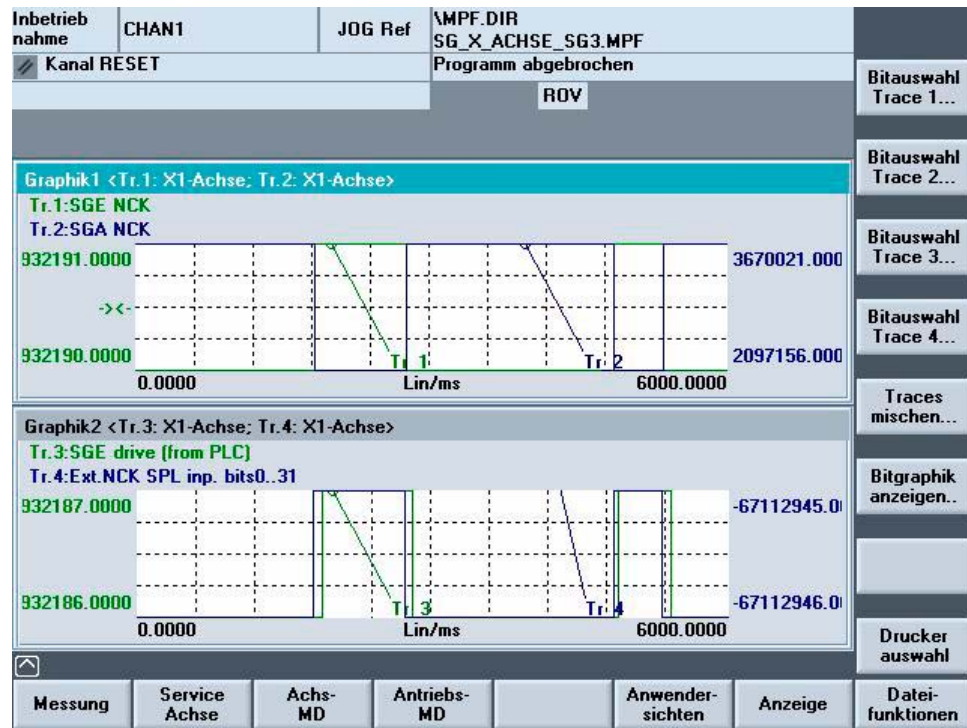

The vertical "Bit selection trace 1...", "Bit selection trace 2...", "Bit selection trace 3..." and "Bit selection trace 4..." softkeys provided allow, for the SI signals selected in trace channels trace 1 to trace 4, bit names of these SI signals to be assigned a possible 10 character channels (tracks) in the bit graphics for these signals. A dedicated graphic is displayed for trace 1, trace 2, trace 3 and trace 4.

If a bit-coded SI signal is not selected in a trace channel, then when the corresponding softkey is pressed, it has no effect; information is output in the dialog line to signal that it does not involve a bit-coded SI signal.

10.1 Troubleshooting procedure

Bit selection, trace 1...

In the example, the signal **SGE–NCK** has been read-in to graphic 1 for trace 1. The following screen is displayed when the vertical "Bit selection trace 1..." softkey is pressed:

Spur:	Bit:	Signalauswahl:	Spur:	Bit:	Signalauswahl:
0	Bit 0	SBH/SG-Abwahl NCK	16	Bit 16	reserviert
1	Bit 1	SBH-Abwahl NCK	17	Bit 17	frei
	Bit 2	Impulse gelöscht NCK	18	Bit 18	Abwahl ext. Stop A NCK
	Bit 3	SG-Auswahl Bit 0 NCK	9	Bit 19	Abwahl ext. Stop C NCK
	Bit 4	SG-Auswahl Bit 1 NCK	8	Bit 20	Abwahl ext. Stop D NCK
	Bit 5	frei	21	Bit 21	frei
	Bit 6	reserviert	22	Bit 22	frei
	Bit 7	reserviert	23	Bit 23	frei
2	Bit 8	Übers.-Anwahl Bit 0 NCK	24	Bit 24	reserviert
3	Bit 9	Übers.-Anwahl Bit 1 NCK	25	Bit 25	reserviert

The bits of this signal are consecutively numbered. Every bit is permanently assigned an associated bit name. In the input box "track", by assigning a value in the range between 0..9 it is possible to define in which of the 10 character channels (tracks) the bit should be graphically displayed. In the example, for trace 1, *bit 0 SBH/SD deselection NCK* is displayed in track 0 of the bit graphic. *Bit 19 deselection ext. Stop C NCK* is displayed in track 9 of the bit graphic for trace 1.

The user is shown which track numbers have already been allocated (in the label "track number:" they have a blue background) If a track number is allocated twice, an error message is displayed. All of the signal bits are listed; bits that are not available are either designated as free or reserved. Using the scrollbar, it is possible to scroll over the bit range from 0 to bit 31.

Starting values for the track assignments have been entered into the file F:\hmi_adv\ibsvtsi.ini. If the user does not like these, then he can make the appropriate changes. These changes to the bit graphics become effective by pressing the vertical "Accept" softkey and are also transferred into the file hmi_adv\ibsvtsi.ini as new starting values. This means that they also apply for new measurements with this signal as default settings.

Using the vertical "Abort" softkey, the screen is exited without accepting possible changes made to values.

Bit selection, trace 2... to trace 4...

A similar procedure is also obtained for trace 2.. to trace 4 that, in this particular example, contains the following signals:


Trace 2 SGE drive (from PLC)
Trace 3 SGA-NCK
Trace 4 SG drive (from PLC)

The handling is the same as described under bit selection, trace 1.

Mixing traces...

Using the vertical softkey "Mix traces...", the user can select individual bits of SI signals from 4 traces and display these in the tracks as bit graphics for comparison purposes. This means that especially inputs and outputs of various SI signals can be combined.

Result of the bit selection

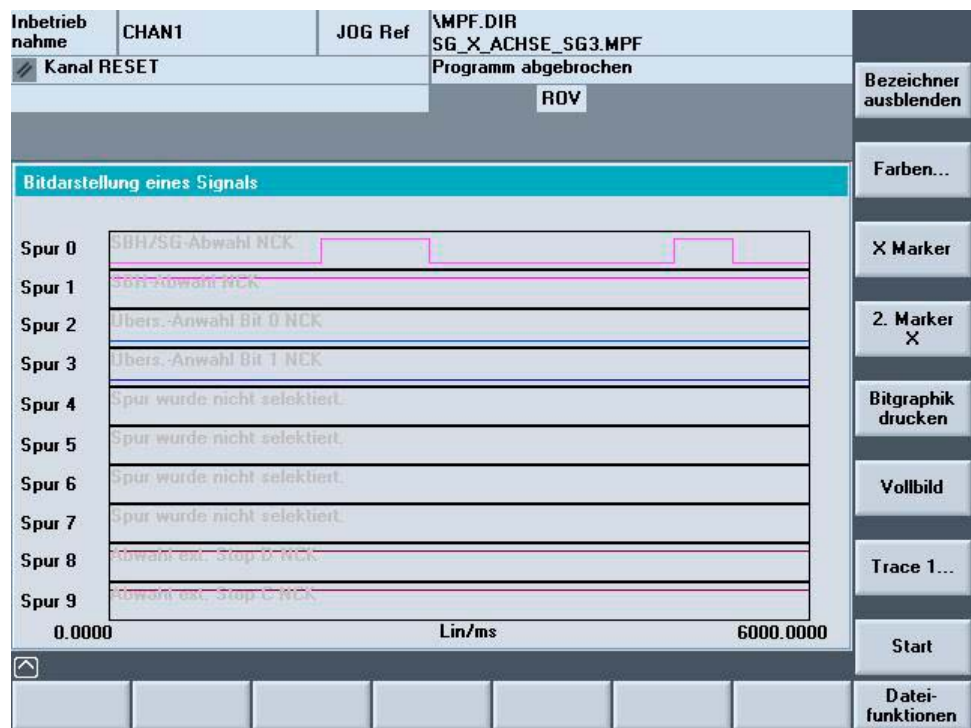

10.1 Troubleshooting procedure

10.1.5 Servo trace signals

The following states are made accessible via the trace functionality:

Table 10-1 Servo trace signals

System quantity	Associated system variable	Updating
Safe actual position	\$VA_IS[axis]	Monitoring clock cycle
Safe actual drive position	—	Axis CDC clock cycle
Axial SGE NCK	—	Monitoring clock cycle
Axial SGA NCK	—	Monitoring clock cycle
Axial SGE drive	—	OB1 clock cycle
Axial SGA drive	—	Monitoring clock cycle
Response ID for IPO 0 = no STOP active 1 = STOP F active 2 = STOP E active 3 = STOP D active 4 = STOP C, B or A active Please note! The values returned can deviate from this rule for the duration of the acceptance test mode.	—	Monitoring clock cycle
Response ID for servo/drive 0 = no STOP or STOP F, E, D active 1 = STOP B active 2 = STOP C active 4 = STOP A active Please note! The returned values can deviate from this rule for the duration of the acceptance test mode and the boot phase.	—	Monitoring clock cycle
Result list 1 NCK	—	Monitoring clock cycle
Result list 1 drive	—	Axis CDC clock cycle
Result list 2 NCK	—	Monitoring clock cycle
Result list 2 drive	—	Monitoring clock cycle
Safety partial actual value Position change per monitoring clock cycle	—	Monitoring clock cycle
Actual speed limit	—	Monitoring clock cycle

Table 10-1 Servo trace signals

System quantity	Associated system variable	Updating
Setpoint speed limit	—	Monitoring clock cycle
Actual value difference NCK drive	—	Axis CDC clock cycle
Current slip speed NCK drive	—	Axis CDC clock cycle
Current SBR limit value	—	Monitoring clock cycle
Ext. NCK–SPL interface inputs	\$A_INSED[1]	IPO cycle
Ext. NCK–SPL interface inputs	\$A_INSED[2]	IPO cycle
Ext. NCK–SPL interface outputs	\$A_OUTSED[1]	IPO cycle
Ext. NCK–SPL interface outputs	\$A_OUTSED[2]	IPO cycle
Int. NCK–SPL interface inputs	\$A_INSID[1]	IPO cycle
Int. NCK–SPL interface inputs	\$A_INSID[2]	IPO cycle
Int. NCK–SPL interface outputs	\$A_OUTSID[1]	IPO cycle
Int. NCK–SPL interface outputs	\$A_OUTSID[2]	IPO cycle
NCK–SPL markers	\$A_MARKERSID[1]	IPO cycle
NCK–SPL markers	\$A_MARKERSID[2]	IPO cycle
SPL timer 1	\$A_TIMERSI[1]	IPO cycle
SPL timer 2	\$A_TIMERSI[2]	IPO cycle
SPL timer 3	\$A_TIMERSI[3]	IPO cycle
SPL timer 4	\$A_TIMERSI[4]	IPO cycle
SPL timer 5	\$A_TIMERSI[5]	IPO cycle
SPL timer 6	\$A_TIMERSI[6]	IPO cycle
SPL timer 7	\$A_TIMERSI[7]	IPO cycle
SPL timer 8	\$A_TIMERSI[8]	IPO cycle
Ext. PLC–SPL interface inputs	\$A_INSEPD[1]	SPL–CDC clock cycle
Ext. PLC–SPL interface inputs	\$A_INSEPD[2]	SPL–CDC clock cycle
Ext. PLC–SPL interface outputs	\$A_OUTSEPD[1]	SPL–CDC clock cycle
Ext. PLC–SPL interface outputs	\$A_OUTSEPD[2]	SPL–CDC clock cycle
Int. PLC–SPL interface inputs	\$A_INSIPD[1]	SPL–CDC clock cycle
Int. PLC–SPL interface inputs	\$A_INSIPD[2]	SPL–CDC clock cycle
Int. PLC–SPL interface outputs	\$A_OUTSIPD[1]	SPL–CDC clock cycle

10.1 Troubleshooting procedure

Table 10-1 Servo trace signals

System quantity	Associated system variable	Updating
Int. PLC–SPL interface outputs	\$A_OUTSIPD[2]	SPL–CDC clock cycle
NCK–SPL markers	\$A_MARKERSIPD[1]	SPL–CDC clock cycle
NCK–SPL markers	\$A_MARKERSIPD[2]	SPL–CDC clock cycle
SPL timer 9	\$A_TIMERSI[9]	IPO cycle
SPL timer 10	\$A_TIMERSI[10]	IPO cycle
SPL timer 11	\$A_TIMERSI[11]	IPO cycle
SPL timer 12	\$A_TIMERSI[12]	IPO cycle
SPL timer 13	\$A_TIMERSI[13]	IPO cycle
SPL timer 14	\$A_TIMERSI[14]	IPO cycle
SPL timer 15	\$A_TIMERSI[15]	IPO cycle
SPL timer 16	\$A_TIMERSI[16]	IPO cycle
Cam SGA NCK	–	Monitoring clock cycle
SGA drive 16 bit SGA from the drive	–	Monitoring clock cycle
Cam SGA drive	–	Monitoring clock cycle
Actual value difference fine position – redundant coarse position	–	Monitoring clock cycle
Result list 3 NCK	–	Monitoring clock cycle
Result list 3, (drive)	–	Axis CDC clock cycle
Result list 4 NCK	–	Monitoring clock cycle
Result list 4, (drive)	–	Axis CDC clock cycle
Result list 5 NCK	–	Monitoring clock cycle
Result list 5, (drive)	–	Axis CDC clock cycle
Result list 6 NCK	–	Monitoring clock cycle
Result list 6, (drive)	–	Axis CDC clock cycle
Result list 7 NCK	–	Monitoring clock cycle
Result list 7, (drive)	–	Axis CDC clock cycle

10.2 NCK safety alarms for SINUMERIK 840D sl

Alarms for SINUMERIK 840D/SINAMICS S120

Detailed explanations of all alarms that are not described here can be found in the following references for the SINUMERIK 840D system with SINAMICS S120:

References: /DA/ Diagnostics instructions SINUMERIK 840D
 /LH1/ SINAMICS S List Manual

Alarms for SINUMERIK Safety Integrated

The alarms that can occur in connection with the SI option are listed below:

14751	Channel %1 block%2 resources for motion synchronizing actions not sufficient (identifier: %3)
Parameter	%1 = channel number %2 = block number %3 = identifier
Explanation	To process motion synchronizing actions resources are required. They are configured via the machine data \$MC_MM_IPO_BUFFER_SIZE, \$MC_MM_NUM_BLOCKS_IN_PREP, \$MC_MM_NUM_SAFE_SYNC_ELEMENTS, \$MC_MM_NUM_SYNC_ELEMENTS. If these resources are insufficient for executing the part program, then this alarm is issued. The parameter %3 shows which resource has run out: Increase identifier <= 2: \$MC_MM_IPO_BUFFER_SIZE or \$MC_MM_NUM_BLOCKS_IN_PREP. Increase identifier > 2: \$MC_MM_NUM_SYNC_ELEMENTS, \$MC_MM_NUM_SAFE_SYNC_ELEMENTS.
Response	Alarm display Interface signals are set
Remedy	Correct the part program or increase the resources.
20095	Axis %1 illegal torque, current torque %2
Parameter	%1 = axis name, spindle number %2 = measured holding torque when selecting the brake test
Explanation	The actually measured holding torque cannot be provided with the existing parameterization of the brake test.
Response	Alarm display The function test of the mechanical brake system is aborted The PLC block FB11 for the sequence control to test the mechanical brake system is exited with a fault (fault detection = 2). This means that the request – "start brake test" – isn't even effective for the axis.

10.2 NCK safety alarms for SINUMERIK 840D sl

Remedy	Check the parameterization for the brake test function: The torque for weight equalization in drive parameter p1532 should be approximately the same as the actual holding torque. The specified torque for the brake test in MD \$MA_SAFE_BRAKETEST_TORQUE must be set higher than the actual holding torque.
Program continuation	Clear the alarm with the Clear key or with NC-START.
20096	Axis %1 brake test aborted, additional info %2
Parameter	%1 = axis name, spindle number %2 = fault information, based on \$VA_FXS_INFO
Explanation	The brake test has detected a problem. The additional information provides details of the cause of the alarm. An explanation is provided in the documentation about the system variables \$VA_FXS_INFO Supplementary info: 0: No additional information available 1: Axis type is neither a PLC nor a command axis 2: Limit position reached, motion stopped 3: Abort using NC-RESET (key reset) 4: Monitoring window exited 5: Torque reduction rejected by drive 6: PLC has withdrawn the enable signal
Response	Alarm display Interface signals are set.
Remedy	Note the supplementary conditions of the brake test, refer to supplementary information.
Program continuation	Clear the alarm with the Clear key or with NC-START.
20097	Axis %1 incorrect traversing direction brake test
Parameter	%1 = axis name, spindle number
Explanation	As a result of the selected traversing direction, the brake test is carried out for the existing load torque with an incorrect torque.
Response	Alarm display
Remedy	<ul style="list-style-type: none"> – Carry out the brake test in the other traversing direction – Adapt drive parameter p1532 more precisely to the actual situation. This alarm only occurs – with the brake open – if the actual torque deviates by more than 5% of parameter p1532 – Using MD \$MA_SAFE_BRAKETEST_CONTROL, bit 0 = 1, activate the automatic load torque determination at the beginning of the brake test.
Program continuation	Clear the alarm with the Clear key or with NC-START.

20149	Channel %1 block%2 motion synchronous action: Index invalid
Parameter	%1 = channel number %2 = block number
Explanation	<p>When accessing a variable in the motion synchronous action, an invalid index was used.</p> <p>Example: ...DO \$R[\$AC_MARKER[1]] = 100</p> <p>The error occurs if marker 1 has a higher value than the maximum permissible R parameter number.</p>
Response	<p>NC start inhibit in this channel</p> <p>Interface signals are set</p> <p>Alarm display</p> <p>NC stop for alarm</p>
Remedy	Use a valid index.
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27000	Axis %1 is not safely referenced
Parameter	%1 axis number
Explanation	<p>There are two reasons for this alarm:</p> <ul style="list-style-type: none"> – the user has still not acknowledged the machine position, – the machine position has not yet been verified through follow-up referencing. <p>Even if the axis is already referenced there is no acknowledgement that referencing has supplied the correct result. For example, incorrect results can occur if the axis was moved after the control was powered-down – with the result that the stop position saved prior to powering-down is no longer correct. To ensure that this does not happen, the user must acknowledge the displayed actual position after the first referencing operation.</p> <p>After the user agreement has been set for the first time, the axis must be subsequently referenced each time that the control is booted (with absolute encoders, this subsequent referencing is automatically executed). This procedure is carried out to verify the stop position saved prior to powering-down the control.</p> <p>The alarm display can be set using MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL (MD>=3) so that the group alarm 27100 is displayed for all SI axes.</p>

10.2 NCK safety alarms for SINUMERIK 840D sl

Response	<p>Alarm display</p> <p>The SGA "axis safely referenced" is not set. SE is disabled if the safety actual position has not yet been acknowledged by the user agreement. If the user agreement is set, SE remains active. The safe cams are calculated and output, but their significance is limited because referencing has not been acknowledged.</p>
Remedy	<p>Move the axis to a known position, change to the "referencing" mode and press the softkey "Agreement". Check the positions in the agreement screen at the machine. If these correspond to those expected at the known position, confirm this using the toggle key. If the user agreement has already been set, re-reference the axis.</p> <p>The user agreement can only be changed in key-actuated switch setting 3 or after entering a password.</p>
Program continuation	<p>The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required</p>

**Warning**

If the axis has not been safely referenced and the user has not issued a user agreement, then the following applies:

- the safe cams are still not safe
- the safe limit positions are still not active

27001

**Axis %1 error in a monitoring channel, Code %2, values:
NCK %3, drive %4**

Parameter	<p>%1 = axis number</p> <p>%2 = supplementary information, crosswise data comparison index</p> <p>%3 = supplementary information, comparison value, NCK</p> <p>%4 = supplementary information, comparison value, drive</p>
Explanation	<p>The status of the safety-related monitoring functions are cyclically and mutually compared between the two monitoring channels (NCK and drive). The comparison is carried out separately for each NCK/drive combination.</p> <p>A criterion in a comparison list is compared between the NCK and drive in each monitoring clock cycle (MD 10091); the next criterion is compared in the next monitoring clock cycle etc. Once the complete comparison list has been processed, the comparisons are processed again from the start. The total comparison time to process the list is displayed in MD 10092 (factor x MD 10091 – the factor can differ depending on the SW version).</p>

The "Error in a monitoring channel" Alarm is only output if the mutual comparison of the two monitoring channels detects a difference between the input data or results of the monitoring. One of the monitoring functions no longer operates reliably.

The crosswise comparison index, output under %2, is also known as STOP F code. The STOP F code is also output in Alarm 27001 where the NCK detected a crosswise comparison error for the first time.

The STOP F code of the drive (belonging to Alarm F30611) can be taken from the diagnostics screen or the drive parameter r9795. If a difference is detected at several comparison steps, then also several STOP F code values can be displayed, alternating, at these positions. There are fault profiles that are identified as a result of several comparison operations of the comparison list. This means that the displayed STOP F code value does not always provide a clear statement regarding the cause of the fault. The associated procedure is then explained for each of the individual fault codes.

The following fault codes are possible:

0

No fault/error has been detected in this monitoring channel.

For alarm 27001 this means that it was one of the subsequent alarms (follow-on alarms) of alarm F01711 – and the valid STOP F code value is to be determined using the diagnostics display or the drive MD.

1

For the monitoring functions SBH, SG, SBR or SE, a different state has occurred between the NCK and drive. The actual status image (result list 1) is output from the NCK as supplementary input %3 (comparison value, NCK) and the actual status image from the drive is output as supplementary info %4 (comparison value, drive). The two supplementary infos are also saved in drive parameters r9710[0] and r9710[1]. An example for evaluating the bit-coded result list is provided in the description of the drive machine data.

Remedy

The difference in the states between the drive and NCK should be determined and the function involved should be investigated in more detail.

Example:

State, NCK: SBH is active and ok

State, drive: SG1 is active and ok

The fault is caused due to the fact that the SGE "SBH deselection" is controlled differently. The signal source should be checked on both the NCK and drive sides. Generally, the different control (in operation) is a result of a hardware failure associated with the sensor signal involved. In the commissioning phase, the cause can also be parameterization or programming errors.

2

For the monitoring function SN or $n < n_x$, a different state has occurred between the NCK and drive.

The actual status image of the NCK (result list 2) is output as supplementary info %3 (comparison value NCK) and the actual status image

from the drive is output as supplementary info %4 (comparison value, drive). The two result lists are also written into as parameter r9711[0] and r9711[1]. An example for evaluating the bit-coded result list is provided in the description of the drive parameter.

Remedy

The difference in the states between the drive and NCK should be determined and the function involved should be investigated in more detail.

3

The difference between the safe actual value NCK and drive is greater than that set in MD 36942 \$MA_SAFE_POS_TOL.

When using the actual value synchronization, the difference of the speed (determined based on the safety actual values) is greater than that set in MD 36949 \$MA_SAFE_SLIP_VELO_TOL.

Remedy

Commissioning phase:

The encoder evaluation for the NCK and drive is not correctly set → correct the encoder evaluation.

In operation:

The actual values differ due to mechanical faults (transmission belts, traversing to mechanical limit, wear and tolerance windows that have been set too narrow, encoder faults...)

→ check the mechanical design and the encoder signals

4

Not assigned.

5

The setting in MD 36901 \$MA_SAFE_FUNCTION_ENABLE does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data

6

The setting in MD 36931 \$MA_SAFE_VELO_LIMIT[0] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data

7

The setting in MD 36931 \$MA_SAFE_VELO_LIMIT[1] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

8

The setting in MD 36931 \$MA_SAFE_VELO_LIMIT[2] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

9

The setting in MD 36931 \$MA_SAFE_VELO_LIMIT[3] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

10

The setting in MD 36930 \$MA_SAFE_STANDSTILL_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

11

The setting in MD 36934 \$MA_SAFE_POS_LIMIT_PLUS[0] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

12

The setting in MD 36935 \$MA_SAFE_POS_LIMIT_MINUS[0] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

13

The setting in MD 36934 \$MA_SAFE_POS_LIMIT_PLUS[1] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

14

The setting in MD 36935 \$MA_SAFE_POS_LIMIT_MINUS[1] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

15

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[0] + MD 36940 \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

16

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[0] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

17

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[0] + MD 36940 \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

18

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[0] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

19

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[1] + MD 36940 \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

20

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[1] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

21

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[1] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

22

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[1] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

23

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[2] + MD 36940 \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

24

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[2] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

25

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[2] + MD 36940 \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

26

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[2] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

27

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[3] + MD 36940 \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

28

The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[3] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

29

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[3] + MD 36940 \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

30

The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[3] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

31

The settings in MD 36942 \$MA_SAFE_POS_TOL. and MD 36949 \$MA_SAFE_SLIP_VELO_TOL do not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

32

The setting in MD 36944 \$MA_SAFE_REFP_POS_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

33

The setting in MD 36951 \$MA_SAFE_VELO_SWITCH_DELAY does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

34

The setting in MD 36950 \$MA_SAFE_MODE_SWITCH_TIME does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

35

The setting in MD 36956 \$MA_SAFE_PULSE_DISABLE_DELAY does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

36

The setting in MD 36957 \$MA_SAFE_PULSE_DIS_CHECK_TIME does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

37

The setting in MD 36952 \$MA_SAFE_STOP_SWITCH_TIME_C does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

38

The setting in MD 36953 \$MA_SAFE_STOP_SWITCH_TIME_D does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

39

The setting in MD 36954 \$MA_SAFE_STOP_SWITCH_TIME_E does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

40

The setting in MD 36961 \$MA_SAFE_VELO_STOP_MODE does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

41

The setting in MD 36962 \$MA_SAFE_POS_STOP_MODE does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

42

The setting in MD 36960 \$MA_SAFE_STANDSTILL_VELO_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

43

Stop response, memory test.

44 – 57**Explanation**

Fault codes 44–57 cannot be clearly assigned to a fault cause. For the monitoring functions that run internally (e.g. SG), monitoring limits are internally generated that are referred to a monitoring clock cycle.

Example:

SG1 = 2000 mm/min, monitoring clock cycle = 12 ms

If SG1 is active, then a check is made in every monitoring clock cycle (MCC) as to whether SG1 was exceeded.

This means that in MCC[n], based on the actual value, a positive and negative actual value limit is defined that may not be exceeded in MCC[n+1] in order to still comply with SG1.

$SG1 = 2000 \text{ mm/min} = 33.33 \text{ mm/s} = 0.4 \text{ mm/MCC}$ (for each 12 ms)

If the axis moves more than 0.4 mm in a monitoring clock cycle, then SG1 would be violated.

The limit values, specified above, in MCC[n+1] are then

Positive: Position actual value (MCC[n]) + 0.4 mm

Negative: position actual value (MCC[n]) - 0.4 mm

The resulting monitoring limits (positive and negative) that are, in turn determined independently for both monitoring channels (NCK and drive) are also compared just like the safe actual positions (refer to fault code 3). The comparison is for a difference < MD 36942

\$MA_SAFE_POS_TOL.

If the difference is greater than MD 36942 \$MA_SAFE_POS_TOL, then the appropriate fault code is output.

The limit values are then re-generated and compared in every monitoring cycle independently of whether the associated monitoring function is active or not.

This means that there are three possible causes for this fault code group.

Causes and remedy

Possible cause 1 (only when commissioning or changing the MD)

The tolerance value for the monitoring function is set differently for the NCK and drive. This situation actually only occurs when commissioning the system or making changes and is generally already covered by the previous fault codes.

Remedy: Set the relevant machine data the same.

Possible cause 2 (in operation)

The limit values are determined based on the actual value. This means that when the safe actual values of the NCK and drive differ then the limit values are also different by the defined clearance → i.e. the fault code corresponds to the fault image of fault code 3. This can be determined by checking the safe actual positions.

Remedy: Refer to fault code 3.

Possible cause 3 (in operation)

The associated monitoring function is already active in a monitoring channel – while in the other monitoring channel another monitoring function is still active. This is the case if the safe actual positions of the NCK and drive do not differ but instead there is an entry in drive parameters r9710/r9711 (and the 1 appears in parameter r9725) → i.e. the fault code corresponds to the fault profile of fault code 1. This can also be identified using the fault message if for %3 = supplementary info comparison value NCK or %4 = supplementary info comparison value drive no real limit value is output but only the value of the calculated tolerance (refer to the example above ($SG1 = 2000 \text{ mm/min} = 0.4 \text{ mm/monitoring clock cycle}$), a value of 400 would be displayed as 4%).

Remedy: Refer to fault code 1.

44

Upper limit value for SG1 = position actual value + MD 36931
\$MA_SAFE_VELO_LIMIT[0] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

45

Lower limit value for SG1 = position actual value – MD 36931
\$MA_SAFE_VELO_LIMIT[0] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

46

Upper limit value for SG2 = position actual value + MD 36931
\$MA_SAFE_VELO_LIMIT[1] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

47

Lower limit value for SG2 = position actual value – MD 36931
\$MA_SAFE_VELO_LIMIT[1] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

48

Upper limit value for SG3 = position actual value + MD 36931
\$MA_SAFE_VELO_LIMIT[2] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

49

Lower limit value for SG3 = position actual value – MD 36931
\$MA_SAFE_VELO_LIMIT[2] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

50

Upper limit value for SG4 = position actual value + MD 36931
\$MA_SAFE_VELO_LIMIT[3] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

51

Lower limit value for SG4 = position actual value – MD 36931
\$MA_SAFE_VELO_LIMIT[3] referred to a monitoring clock cycle

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

52

Upper limit value for SBH
Position actual value (when SBH is activated) + MD 36930
\$MA_SAFE_STANDSTILL_TOL.

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

53

Lower limit value for SBH

Position actual value (when SBH is activated) – MD 36930

\$MA_SAFE_STANDSTILL_TOL.

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

54

Upper limit value for $n < n_x$ (plus tolerance)

Position actual value + MD 36946 \$MA_SAFE_VELO_X (referred to a monitoring clock cycle) + MD 36942 \$MA_SAFE_POS_TOL.

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

55

Upper limit value for $n < n_x$

Position actual value + MD 36946 \$MA_SAFE_VELO_X (referred to a monitoring clock cycle).

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

56

Lower limit value for $n < n_x$

Position actual value – MD 36946 \$MA_SAFE_VELO_X (referred to a monitoring clock cycle).

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

57

Upper limit value for $n < n_x$ (plus tolerance)

Position actual value + MD 36946 \$MA_SAFE_VELO_X – (referred to a monitoring clock cycle) – MD 36942 \$MA_SAFE_POS_TOL.

Remedy

Refer to Section 44–57 (hidden fault code 3 or 1)

58

There is a difference in the active request for an external STOP. Two factors determine the resulting external STOP request for a monitoring channel.

- The STOP requested via the SGE interface
- The STOP passed-through from the other monitoring channel

The STOP of the active request is specified as detailed fault code for the NCK and drive.

The following values are possible:

0 = No Stop

2 = Stop E

3 = Stop D

4 = Stop C

7 = Stop A

59

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[0] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

60

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[1] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

61

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[2] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

62

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[3] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

63

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[4] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

64

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[5] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

65

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[6] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

66

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[7] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

67

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[8] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

68

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[9] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

69

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[10] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

70

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[11] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

71

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[12] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

72

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[13] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

73

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[14] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

74

The setting in MD 36932 \$MA_SAFE_VELO_OVR_FACTOR[15] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

75

The setting in MD 36946 \$MA_SAFE_VELO_X does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

76

The setting in MD 36963 \$MA_SAFE_VELO_STOP_REACTION[0] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

77

The setting in MD 36963 \$MA_SAFE_VELO_STOP_REACTION[1] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

78

The setting in MD 36963 \$MA_SAFE_VELO_STOP_REACTION[2] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

79

The setting in MD 36963 \$MA_SAFE_VELO_STOP_REACTION[3] does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

80

Modulo value, safe cam \$MA_SAFE_MODULO_RANGE

Remedy

Copy SI data.

81

The setting in MD 36948 \$MA_SAFE_STOP_VELO_TOL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

82

When controlling the SG correction factor–SGEs[0..3] to select the SG correction factor a difference has occurred. If, as supplementary info for a monitoring channel, –1 is output this means that the SG–override function isn't even active.

- SG2 and SG4 are not active.
- Function hasn't even been enabled using the function enable MD 36901/parameter p9501.

Remedy

Control the SG stage and check the SG–override signals and align the control.

83

The setting in MD 36958 \$MA_SAFE_ACCEPTANCE_TST_TIMEOUT does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

84

The setting in MD 36955 \$MA_SAFE_STOP_SWITCH_TIME_F does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

85

The setting in MD 10089 \$MN_SAFE_PULSE_DIS_TIME_BUSFAIL does not correspond with the associated drive parameter assignment.

Remedy

Copy SI data.

86

Single-encoder system \$MA_SAFE_SINGLE_ENC.

Remedy

Align machine data \$MA_SAFE_SINGLE_ENC and drive parameter p9526.

87

Encoder assignment \$MA_SAFE_ENC_INPUT_NR.

Remedy

Align \$MA_SAFE_ENC_INPUT_NR and drive parameter p9526.

88

Cam enable: The setting in MD 36903 \$MA_SAFE_CAM_ENABLE does not correspond with the drive parameter assignment.

Remedy

Align \$MA_SAFE_CAM_ENABLE and drive parameter p9503.

89

The settings for the encoder limit frequency do not match in the two monitoring channels.

Remedy

Replace the hardware.

90

Cam SGA outside tolerance differ

Remedy

Cam positions, check \$MA_SAFE_CAM_TOL

91

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[4] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 5+ (+ tolerance). Enter the same MDs.

92

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[4] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 5+. Enter the same MDs.

93

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_

MINUS[4] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 5- (+ tolerance). Enter the same MDs.

94

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_

MINUS[4] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 5-. Enter the same MDs.

95

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[5] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 6+ (+ tolerance). Enter the same MDs.

96

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[5] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 6+. Enter the same MDs.

97

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[5] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 6– (+ tolerance). Enter the same MDs.

98

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[5] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 6–. Enter the same MDs.

99

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[6] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 7+ (+ tolerance). Enter the same MDs.

100

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[6] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 7+. Enter the same MDs.

101

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[6] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 7– (+ tolerance). Enter the same MDs.

102

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[6] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 7–. Enter the same MDs.

103

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[7] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 8+ (+ tolerance). Enter the same MDs.

104

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[7] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 8+. Enter the same MDs.

105

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[7] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 8– (+ tolerance). Enter the same MDs.

106

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[7] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 8–. Enter the same MDs.

107

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[8] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 9+ (+ tolerance). Enter the same MDs.

108

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[8] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 9+. Enter the same MDs.

109

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[8] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 9– (+ tolerance). Enter the same MDs.

110

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[8] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 9–. Enter the same MDs.

111

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[9] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 10+ (+ tolerance). Enter the same MDs.

112

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[9] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 10+. Enter the same MDs.

113

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[9] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 10– (+ tolerance). Enter the same MDs.

114

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[9] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 10–. Enter the same MDs.

115

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[10] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 11+ (+ tolerance). Enter the same MDs.

116

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[10] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 11+. Enter the same MDs.

117

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[10] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 11– (+ tolerance). Enter the same MDs.

118

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[10] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 11–. Enter the same MDs.

119

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[11] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 12+ (+ tolerance). Enter the same MDs.

120

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[11] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 12+. Enter the same MDs.

121

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[11] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 12– (+ tolerance). Enter the same MDs.

122

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[11] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 12–. Enter the same MDs.

123

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[12] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 13+ (+ tolerance). Enter the same MDs.

124

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[12] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 13+. Enter the same MDs.

125

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[12] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 13– (+ tolerance). Enter the same MDs.

126

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[12] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 13–. Enter the same MDs.

127

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[13] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 14+ (+ tolerance). Enter the same MDs.

128

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[13] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 14+. Enter the same MDs.

129

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[13] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 14– (+ tolerance). Enter the same MDs.

130

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[13] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 14–. Enter the same MDs.

131

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[14] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 15+ (+ tolerance). Enter the same MDs.

132

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[14] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 15+. Enter the same MDs.

133

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[14] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 15– (+ tolerance). Enter the same MDs.

134

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[14] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 15–. Enter the same MDs.

135

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[15] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 16+ (+ tolerance). Enter the same MDs.

136

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[15] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 16+. Enter the same MDs.

137

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[15] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 16– (+ tolerance). Enter the same MDs.

138

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[15] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 16–. Enter the same MDs.

139

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[16] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 17+ (+ tolerance). Enter the same MDs.

140

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[16] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 17+. Enter the same MDs.

141

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[16] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 17– (+ tolerance). Enter the same MDs.

142

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[16] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 17–. Enter the same MDs.

143

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[17] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 18+ (+ tolerance). Enter the same MDs.

144

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[17] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 18+. Enter the same MDs.

145

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[17] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 18– (+ tolerance). Enter the same MDs.

146

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[17] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 18–. Enter the same MDs.

147

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[18] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 19+ (+ tolerance). Enter the same MDs.

148

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[18] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 19+. Enter the same MDs.

149

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[18] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 19– (+ tolerance). Enter the same MDs.

150

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[18] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 19–. Enter the same MDs.

151

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[19] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 20+ (+ tolerance). Enter the same MDs.

152

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[19] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 20+. Enter the same MDs.

153

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[19] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 20– (+ tolerance). Enter the same MDs.

154

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[19] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 20–. Enter the same MDs.

155

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[20] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 21+ (+ tolerance). Enter the same MDs.

156

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[20] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 21+. Enter the same MDs.

157

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[20] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 21– (+ tolerance). Enter the same MDs.

158

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[20] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 21–. Enter the same MDs.

159

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[21] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 22+ (+ tolerance). Enter the same MDs.

160

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[21] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 22+. Enter the same MDs.

161

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[21] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 22– (+ tolerance). Enter the same MDs.

162

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[21] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 22–. Enter the same MDs.

163

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[22] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 23+ (+ tolerance). Enter the same MDs.

164

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[22] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 23+. Enter the same MDs.

165

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[22] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 23– (+ tolerance). Enter the same MDs.

166

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[22] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 23–. Enter the same MDs.

167

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[23] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 24+ (+ tolerance). Enter the same MDs.

168

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[23] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 24+. Enter the same MDs.

169

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[23] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 24– (+ tolerance). Enter the same MDs.

170

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[23] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 24–. Enter the same MDs.

171

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[24] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 25+ (+ tolerance). Enter the same MDs.

172

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[24] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 25+. Enter the same MDs.

173

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[24] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 25– (+ tolerance). Enter the same MDs.

174

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[24] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 25–. Enter the same MDs.

175

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[25] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 26+ (+ tolerance). Enter the same MDs.

176

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[25] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 26+. Enter the same MDs.

177

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[25] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 26– (+ tolerance). Enter the same MDs.

178

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[25] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 26–. Enter the same MDs.

179

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[26] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 27+ (+ tolerance). Enter the same MDs.

180

Cam position: The setting in MD 36936 \$MA_SAFE_CAM_POS_PLUS[26] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 27+. Enter the same MDs.

181

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[26] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 27– (+ tolerance). Enter the same MDs.

182

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[26] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 27–. Enter the same MDs.

183

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[27] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 28+ (+ tolerance). Enter the same MDs.

184

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[27] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 28+. Enter the same MDs.

185

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[27] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 28– (+ tolerance). Enter the same MDs.

186

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[27] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 28–. Enter the same MDs.

187

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[28] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 29+ (+ tolerance). Enter the same MDs.

188

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[28] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 29+. Enter the same MDs.

189

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[28] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 29– (+ tolerance). Enter the same MDs.

190

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[28] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 29–. Enter the same MDs.

191

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[29] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 30+ (+ tolerance). Enter the same MDs.

192

Cam position: The setting in MD 36936

\$MA_SAFE_CAM_POS_PLUS[29] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 30+. Enter the same MDs.

193

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[29] + \$MA_SAFE_CAM_TOL does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 30– (+ tolerance). Enter the same MDs.

194

Cam position: The setting in MD 36937 \$MA_SAFE_CAM_POS_MINUS[29] does not correspond with the associated drive parameter assignment.

Remedy

Safe cam 30–. Enter the same MDs.

195

Cam track assignment: The setting in MD 36938

\$MA_SAFE_CAM_TRACK_ASSIGN[0] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN1. Enter the same MDs and check the cam enable and cam parameterization

196

Cam track assignment: The setting in MD 36938

\$MA_SAFE_CAM_TRACK_ASSIGN[1] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN2. Enter the same MDs and check the cam enable and cam parameterization

197

Cam track assignment: The setting in MD 36938

\$MA_SAFE_CAM_TRACK_ASSIGN[2] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN3. Enter the same MDs and check the cam enable and cam parameterization

198

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[3] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN4. Enter the same MDs and check the cam enable and cam parameterization

199

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[4] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN5. Enter the same MDs and check the cam enable and cam parameterization

200

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[5] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN6. Enter the same MDs and check the cam enable and cam parameterization

201

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[6] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN7. Enter the same MDs and check the cam enable and cam parameterization

202

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[7] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN8. Enter the same MDs and check the cam enable and cam parameterization

203

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[8] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN9. Enter the same MDs and check the cam enable and cam parameterization

204

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[9] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN10. Enter the same MDs and check the cam enable and cam parameterization

205

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[10] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN11. Enter the same MDs and check the cam enable and cam parameterization

206

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[11] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN12. Enter the same MDs and check the cam enable and cam parameterization

207

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[12] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN13. Enter the same MDs and check the cam enable and cam parameterization

208

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[13] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN14. Enter the same MDs and check the cam enable and cam parameterization

209

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[14] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN15. Enter the same MDs and check the cam enable and cam parameterization

210

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[15] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN16. Enter the same MDs and check the cam enable and cam parameterization

211

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[16] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN17. Enter the same MDs and check the cam enable and cam parameterization

212

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[17] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN18. Enter the same MDs and check the cam enable and cam parameterization

213

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[18] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN19. Enter the same MDs and check the cam enable and cam parameterization

214

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[19] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN20. Enter the same MDs and check the cam enable and cam parameterization

215

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[20] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN21. Enter the same MDs and check the cam enable and cam parameterization

216

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[21] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN22. Enter the same MDs and check the cam enable and cam parameterization

217

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[22] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN23. Enter the same MDs and check the cam enable and cam parameterization

218

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[23] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN24. Enter the same MDs and check the cam enable and cam parameterization

219

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[24] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN25. Enter the same MDs and check the cam enable and cam parameterization

220

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[25] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN26. Enter the same MDs and check the cam enable and cam parameterization

221

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[26] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN27. Enter the same MDs and check the cam enable and cam parameterization

222

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[27] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN28. Enter the same MDs and check the cam enable and cam parameterization

223

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[28] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN29. Enter the same MDs and check the cam enable and cam parameterization

224

Cam track assignment: The setting in MD 36938 \$MA_SAFE_CAM_TRACK_ASSIGN[29] does not correspond with the associated drive parameter assignment.

Remedy

Cam track assignment SN30. Enter the same MDs and check the cam enable and cam parameterization

225

For the "Safe cam track" monitoring function there is a different status between the NCK and drive for cams SN1 to SN6. The current status image of the NCK (result list 3) is output as supplementary info %3 (comparison value NCK) and the current status image from the drive is output as %4.

Supplementary infos %3 and %4 are also saved in drive parameters r9735[0] (NCK) and r9735[1] (drive).

Remedy

Result list 3. Check the tolerance of the cams, evaluate the fault code in drive parameter r9735[0,1].

226

For the "Safe cam track" monitoring function there is a different status between the NCK and drive for cams SN7 to SN12. The actual status image of the NCK (result list 4) is output as supplementary info %3 (comparison value NCK) and the actual status image from the drive is output as %4.

Supplementary infos %3 and %4 are also saved in drive parameters r9736[0] (NCK) and r9736[1] (drive).

Remedy

Result list 4. Check the tolerance of the cams, evaluate the fault code in drive parameter r9736[0,1].

227

For the "Safe cam track" monitoring function there is a different status between the NCK and drive for cams SN13 to SN18. The actual status image of the NCK (result list 5) is output as supplementary info %3 (comparison value NCK) and the actual status image from the drive is output as %4.

Supplementary infos %3 and %4 are also saved in drive parameters r9737[0] (NCK) and r9737[1] (drive).

Remedy

Result list 5. Check the tolerance of the cams, evaluate the fault code in drive parameter r9737[0,1].

228

For the "Safe cam track" monitoring function there is a different status between the NCK and drive for cams SN19 to SN24. The actual status image of the NCK (result list 6) is output as supplementary info %3 (comparison value NCK) and the actual status image from the drive is output as %4.

Supplementary infos %3 and %4 are also saved in drive parameters r9738[0] (NCK) and r9738[1] (drive).

Remedy

Result list 6. Check the tolerance of the cams, evaluate the fault code in drive parameter r9738[0,1].

229

For the "Safe cam track" monitoring function there is a different status between the NCK and drive for cams SN25 to SN30. The actual status image of the NCK (result list 7) is output as supplementary info %3 (comparison value NCK) and the actual status image from the drive is output as %4.

Supplementary infos %3 and %4 are also saved in drive parameters r9739[0] (NCK) and r9739[1] (drive).

Remedy

Result list 7. Check the tolerance of the cams, evaluate the fault code in drive parameter r9739[0,1].

Fault fine codes that do not come from the crosswise data comparison**1000**

The check timer has expired while the change timer has still not ex-

10.2 NCK safety alarms for SINUMERIK 840D sl

pired. If, in a monitoring channel, an SGE change (e.g. SBH is selected), then the so-called change timer is started (timer value = MD 36950/p9550).

In addition, a so-called checking timer is started in the other channel (timer value = 10xMD 36950).

While the change timer is running, if the same SGE is changed again, the timer value is extended and the check timer in the other channel only runs once.

If the change timer is extended so often that the run time is greater than for the check timer then the fault is output.

Too many signal changes were detected during the checking timer run-time.

Remedy

Determine the SGE involved and the associated hardware signal and investigate the situation. There may be contact problems at the sensor (e.g. poor contact) or there were too many switching operations. If necessary, the behavior can be improved by changing the timer setting.

1001

Only in the drive: Initialization error of the check timer, refer to F01711.

1002

The user agreement is not consistent: The status of the user agreement is, after 2 s has expired, different for both monitoring channels.

%3 = status of the user agreement, NCK.

%4 = status of the user agreement, drive.

This effect can occur if the user agreement is only set or reset through one channel.

An additional fault cause is that if the F code 1003 only occurs in one monitoring channel and then the user agreement is only withdrawn through one channel. This means that code 1002 is then the result of a code 1003 only in one channel.

1003

With the user agreement is set, the difference between the newly determined reference point (NC actual value) after booting (absolute value encoder) or reference point approach [homing] (distance-coded or incremental measuring system) and the safe actual position (saved value + traversing distance) is greater than the reference tolerance MD 36944/p9544. In this case, the user agreement is withdrawn.

Remedy

Check the mechanical system of the axis – it is possible that the axis was moved when powered-down and the actual value last saved by the control no longer corresponds with the new value the next time the system is booted. It is also possible that the tolerance window for the check has been set too narrow. The cause should be determined and after checking the actual values the user agreement can be again reset after an NCK-RESET.

1004

Violated plausibility, user agreement

- Although the user agreement was already set, an attempt was made to set it again.
- The user agreement is set although the axis has still not been referenced.

1005

When activating the SGEs test stop selection, the shutdown path test cannot be carried out because the pulses have already been cancelled.

Remedy

Check the starting conditions for carrying out the test and if required, correct. In the commissioning phase, it is also possible that there is incorrect parameterization (or wiring) for the feedback signal regarding pulse cancellation (MD 36975).

1007

Only in the drive: see F01711

Cyclic communications between the PLC and drive have failed.

Remedy

If required, replace the hardware, drive control.

Check the drive bus and PLC

1008

Only in the drive: see F01711

Data transfer error between the PLC and drive.

Remedy

If required, replace the hardware, drive control.

Check the drive bus and PLC

1009

After activating the SGEs test stop selection, the pulses have still not been cancelled after timer MD 36957/p9557 has elapsed.

Remedy

Check the parameterization for the timer – it is possible that the value has been selected too low.

1011

The internal status "acceptance test status" when using the acceptance test support indicates different states for the NCK/drive for at least 2 seconds.

1012

Only in the drive: see F01711

The actual value has violated the plausibility for the higher-level control. The redundant coarse position does not match the actual value.

Remedy

Upgrade the Sensor Module software.

1014

NCK axis number from the PLC-SRAM and NCK axis number from the boot operation are different.

Remedy

Re-establish data consistency using a Power On.

10.2 NCK safety alarms for SINUMERIK 840D sl

1016

Only in the drive: see F01711

Telegram has failed several times with the same crosswise data comparison data.

In the crosswise comparison clock cycle (= monitoring clock cycle * number of crosswise comparison data) the comparison of the same list data was not carried out several times in a row due to telegram failures.

Remedy

Check communications between the drive and control.

1020

Cyclic communications between the NCK and drive no longer functions.

Remedy

Analyze the other fault/error messages. Restart using power on.

1021

Only in the drive: see F01711

The telegram failed several times in the DRIVE-CLiQ communications between the Sensor Module and drive. A sign-of-life error in the status word of the Sensor Module was detected several times in a row.

Remedy

Check communications between the Sensor Module and the drive.

1025

The drive or encoder signaled "parking active" – however the control had not requested "parking axis".

Remedy

Check the control signals to select the "parking" state.

1026

Plausibility error for cam synchronization between NCK and PLC.

Remedy

Check communications between the PLC, NCK and drive.

Response

NC start inhibit in this channel

Alarm display

If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is necessary to power-down the control and power it up again (power on).

Program
continuation

Clear the alarm with the RESET key. Restart the part program.

If a STOP B was initiated, then the control must be power-down/powered-up (power on).

27002**Axis %1 Test stop in progress**

Parameter

%1 = axis number

Explanation

The proper and correct functioning of the shutdown path is presently being tested by setting the SGE "test stop selection".

Response

Alarm display

Remedy

This message only provides information for the user.

10.2 NCK safety alarms for SINUMERIK 840D sl

Program continuation The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required.
 The alarm automatically disappears after the delay time has expired that is defined in MD \$MA_SAFE_PULSE_DIS_CHECK_TIME – and the withdrawal of the SGE "test stop selection" if the control detects that the drive pulses have been cancelled – i.e. the test has been successfully completed. An unsuccessful test can be recognized as a result of Alarm 27001 with fault code 1005 or Alarm 27024.

27003**Checksum error occurred %1 %2**

Parameter %1 = reference to the code section or table
 %2 = table number

Explanation Checksum error in safety-related code or safety-related data.
 The safety monitoring functions (Safety Integrated) in the NCK could be corrupted.

Response Alarm display

Remedy Please take extreme caution when continuing with any work. Re-load code and data as soon as possible (power on). If this fault occurs again, contact the service department.

Program continuation Power-down the control system and power-up again.

27004**Axis %1 difference safe input %2, NCK %3, drive %4**

Parameter %1 = axis number
 %2 = monitoring function involved
 %3 = interface identifier, NCK input
 %4 = interface identifier, drive input

Explanation A difference has been detected at the specified safe input. The state of the specified input signal differs in the two monitoring channels NCK and drive during the time set in \$MA_SAFE_MODE_SWITCH_TIME.
 Monitoring function involved (%2):

SS/SV	Difference in SGE "deselect safe operating stop/ safely reduced speed"
SS	Difference in SGE "deselect safe operating stop"
SV	Difference in SGE "select safely reduced speed"
SP	Difference in SGE "select safe limit positions"
SVOVR	Difference in SGEs "select SG correction"

For the case that SGE is parameterized at the SPL interface
 <io> = parameterized system variable range (01=\$A_INSID,
 02=\$A_INSED)
 <dword> = system variable – double word (1,2)
 <bit> = bit number in the system variable – double word (1...32)
 <value> = value of the NCK-SGE (0,1)

10.2 NCK safety alarms for SINUMERIK 840D sl

	<p>Interface identifier, drive input (%4): DBX<byte><bit>=<value> <byte> = byte number in the axial DB (22, 23, 32, 33) <bit> = bit number in the byte (0...7) <value> = value of the drive SGE (0,1) This alarm can be suppressed using the MD \$MN_SAFE_DIAGNO- SIS_MASK, bit 0=0.</p>
Response	Alarm display
Remedy	Check the interface of the safety-related input signals (SPL parameter- ization, PLC-DB supply).
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27005	Axis %1 error for crosswise data comparison: Static actual value difference
Parameter	%1 = axis number
Explanation	<p>A difference in the actual values was detected using the crosswise data comparison between NCK and drive monitoring channel. This differ- ence is greater than the maximum tolerance defined in MD \$MA_SAFE_POS_TOL. This can be checked using the safe position actual values of the two monitoring channels displayed in the service screen.</p> <p>The alarm is only displayed, if monitoring with absolute reference (SE/SN) has been enabled for the specified axis and if the user agree- ment has been set. As soon as the user agreement is deleted or the actual difference between the two monitoring channels again drops be- low the maximum permissible difference, the alarm is cleared.</p>
Response	Alarm display
Remedy	<p>The user agreement must be deleted if the alarm is present as a steady-state alarm. When the control is then rebooted, the machine can be brought into the safe state again and operation resumed by a new referencing process and setting the user agreement. Prior to set- ting the user agreement, the actual position of the axis displayed in the "User enable" screen must be compared with the current machine posi- tion. This is absolutely necessary to ensure proper functioning of the safe limit positions (SE) and safe cams (SN).</p> <p>The user agreement can only be changed in key-actuated switch set- ting 3 or after entering a password.</p>
Program continuation	The alarm is no longer displayed when the alarm cause has been re- moved. No other operator actions are required.

27007 Axis %1 acceptance test mode is active

Parameter %1 = axis number

Explanation An SI acceptance test has been started with the acceptance test wizard at the operator panel. The acceptance test mode is activated for the NCK and drive for the duration of this acceptance test. In the acceptance test mode, SI power on alarms can be acknowledged with the reset key.

Response Alarm display

Remedy Deselect the acceptance test, e.g. using the acceptance test Wizard or wait until it has been completed (the duration of the acceptance test can be parameterized using MD \$MA_SAFE_ACCEPTANCE_TST_TIMEOUT).

Program continuation The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required.

27008 Axis %1 SW limit switch deactivated

Parameter %1 = axis number

Explanation An SI acceptance test "safe limit positions" has been started with the acceptance test wizard at the operator panel. For these acceptance tests, the single-channel SW limit switches are deactivated for the axis/spindle in order to ensure that the safe limit positions can be approached.

Response Alarm display

Remedy Deselect the acceptance test, e.g. using the acceptance test Wizard or wait for the end of the test.

Program continuation The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required.

27010 Axis %1 tolerance for safe operating stop exceeded

Parameter %1 = axis number

Explanation The axis has moved too far away from the reference position. It has moved farther away than permitted in MD \$MA_SAFE_STANDSTILL_TOL. The alarm can be re-configured in the MD \$MN_ALARM_REACTION_CHAN_NOREADY (channel not ready). Stop the axis with speed setpoint = 0 (STOP B). As soon as the speed actual value is less than that defined in the MD \$MA_SAFE_STANDSTILL_VELO_TOL, at the latest however, after the time in MD \$MA_SAFE_PULSE_DISABLE_DELAY expires, the pulses are cancelled (STOP A).

10.2 NCK safety alarms for SINUMERIK 840D sl

Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm Channel not ready
Remedy	Check the tolerance for the standstill monitoring: does the value match the precision and control dynamic performance of the axis? If not, increase the tolerance. If yes, check the machine for damage and repair it.
Program continuation	Power-down the control and power-up again

27011 Axis %1 safely reduced speed exceeded

Parameter	%1 = axis number
Explanation	The axis has moved too quickly and faster than that specified in MD \$MA_SAFE_VELO_LIMIT. When SBH/SG is active in a configuration with a 1-encoder system, the speed that corresponds to the encoder limit frequency was exceeded. The axis is stopped with STOP A, C, D or E, depending on what has been configured in MD \$MA_SAFE_VELO_STOP_MODE or MD \$MA_SAFE_VELO_STOP_REACTION.
Response	NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	If no obvious operator error has occurred: Check the value entered into the MDs, check the SGEs: Was the correct safely reduced speed selected? If the MDs and SGEs are o.k., check the machine for any damage and rectify.
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27012 Axis %1 safe limit position exceeded

Parameter	%1 = axis number
Explanation	The axis has passed the limit position entered in MD \$MA_SAFE_POS_LIMIT_PLUS or MD \$MA_SAFE_POS_LIMIT_MINUS. This axis is stopped with STOP C,D or E, according to the configuration in MD \$MA_SAFE_POS_STOP_MODE.
Response	NC start inhibit in this channel NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm

Remedy	If no obvious operator error has occurred: Check the value entered in the machine data, check the SGEs: Was the correct one of 2 limit positions selected? If the MDs and SGEs are o.k., check the machine for any damage and repair.
Program continuation	Clear the alarm with the RESET key. Restart the part program. Withdraw the user agreement for this axis. Then press the RESET key. The program is aborted and the alarm reset. Move the axis – in the JOG mode – to the valid traversing range. After the NC program error has been eliminated and the position of this axis carefully checked, the user agreement can be re-issued and the program can be restarted.

27013 Axis %1 Safe acceleration monitoring exceeded

Parameter	%1 = axis number
Explanation	After the initiation of STOP B or C, the speed exceeded the tolerance value entered in MD \$MA_SAFE_STOP_VELO_TOL. The pulses are locked by initiating a STOP A.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the MD \$MA_SAFE_STOP_VELO_TOL. Check the braking characteristics of the drive involved.
Program continuation	Power-down the control and power-up again

27020 Axis %1 STOP E activated

Parameter	%1 = axis number
Explanation	This alarm comes with Alarms 27011 "Safely reduced speed exceeded" or 27012 "Safe limit position exceeded" (according to the configuration in MD 36961: \$MA_SAFE_VELO_STOP_MODE, MD 36963: \$MA_SAFE_VELO_STOP_REACTION or MD 36962: \$MA_SAFE_POS_STOP_MODE) or Alarm 27090 after an SPL crosswise data comparison error occurs. A LIFTFAST-ASUB (sub-routine) is initiated and the safe operating stop (SBH) is internally activated after the time set in MD 36954: \$MA_SAFE_STOP_SWITCH_TIME_E has expired.
Response	NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Remove the causes for "safely reduced speed exceeded" or "safe limit position exceeded" alarm (refer to a description of the alarms).
Program continuation	Clear the alarm with the RESET key. Restart the part program.

10.2 NCK safety alarms for SINUMERIK 840D sl

27021 Axis %1 STOP D activated

Parameter	%1 = axis number
Explanation	<p>This alarm comes with Alarms 27011 "Safely reduced speed exceeded" or 27012 "Safe limit position exceeded" (according to the configuration in MD 36961: \$MA_SAFE_VELO_STOP_MODE, MD 36963: \$MA_SAFE_VELO_STOP_REACTION or MD 36962: \$MA_SAFE_POS_STOP_MODE).</p> <p>"Braking along the path" is initiated and the safe operating stop (SBH) is internally activated after the time set in MD 36953 \$MA_SAFE_STOP_SWITCH_TIME_D has expired.</p>
Response	<p>NC start inhibit in this channel</p> <p>Interface signals are set</p> <p>Alarm display</p> <p>NC stop for alarm</p>
Remedy	Remove the causes for "safely reduced speed exceeded" or "safe limit position exceeded" alarm (refer to a description of the alarms).
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27022 Axis %1 STOP C activated

Parameter	%1 = axis number
Explanation	<p>This alarm comes with alarms 27011 "Safely reduced speed exceeded" or 27012 "Safe limit position exceeded" (according to the configuration in MD 36961: \$MA_SAFE_VELO_STOP_MODE, MD 36963: \$MA_SAFE_VELO_STOP_REACTION or MD 36962: \$MA_SAFE_POS_STOP_MODE).</p> <p>"Braking at the current limit" is initiated and the safe operating stop (SBH) is internally activated after the time, set in MD 36952: \$MA_SAFE_STOP_SWITCH_TIME_C has expired.</p>
Response	<p>NC start inhibit in this channel</p> <p>Interface signals are set</p> <p>Alarm display</p> <p>NC stop for alarm</p>
Remedy	Remove the causes for "safely reduced speed exceeded" or "safe limit position exceeded" alarm (refer to a description of the alarms).
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27023 Axis %1: STOP B activated

Parameter	%1 = axis number
Explanation	This alarm comes with the alarm 27010 "Tolerance for safe operating stop exceeded" or after the alarm 27001 "STOP F initiated". The alarm can be re-configured in the MD ALARM_REACTION_CHAN_NOREADY (channel not ready).
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm "Braking at the current limit" is initiated and the timer for changeover to STOP A is activated (refer to MD \$MA_SAFE_PULSE_DISABLE_DELAY).
Remedy	Remove the cause for "tolerance for safe standstill exceeded" or for "STOP F initiated" (refer to the description of the alarms).
Program continuation	Power-down the control and power-up again

27024 Axis %1 STOP A activated

Parameter	%1 = axis number
Explanation	This alarm is output as a result of <ul style="list-style-type: none"> – Alarm 27011 "safely reduced speed exceeded" (for the appropriate configuring in \$MA_SAFE_VELO_STOP_MODE, \$MA_SAFE_VELO_STOP_REACTION), – Axis 27013 "Safe acceleration monitoring exceeded" – Alarm 27023 "Stop B initiated" – Unsuccessful test stop. The alarm can be re-configured in the MD ALARM_REACTION_CHAN_NOREADY (channel not ready).
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm "Pulse cancellation" initiated.
Remedy	Remove the causes of <ul style="list-style-type: none"> – Alarm "safely reduced speed exceeded", – Alarm "Safe acceleration monitoring exceeded" – Alarm "Stop B initiated" – Unsuccessful test stop. (refer to the description of the alarms).
Program continuation	Power-down the control and power-up again

27032 **Axis %1 safety-related monitoring functions. Acknowledgement and acceptance test required!**

Parameter	%1 = axis number
Explanation	The relevant MDs \$MN_SAFE_..., \$MN_PROFISAFE_..., \$MA_SAFE ... are protected by a checksum. The alarm indicates that the current checksum is no longer the same as the reference checksum that has been saved, i.e. this means that an MD value has either been changed illegally or data is corrupted.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	The actions that are necessary depend on which checksum entry in SAFE_ACT_CHECKSUM deviates from the expected checksum in SAFE_DES_CHECKSUM: <ul style="list-style-type: none"> – SAFE_ACT_CHECKSUM[0] Check MDs. Have the checksum re-calculated. Re-accept the safety functions (motion monitoring functions, SPL, safety communications). – SAFE_ACT_CHECKSUM[1] Check the hardware related parameterization. Have the checksum re-calculated. Check the safety functions (motion monitoring functions). – SAFE_ACT_CHECKSUM[2] Check the PROFIsafe parameterization on the S7 side. Have the checksum re-calculated. Re-accept the safety functions (PROFIsafe I/O).
Program continuation	Power-down the control and power-up again

27033 **Axis %1 parameterization of the MD %2[%3] not valid**

Parameter	%1 = axis number %2 = machine data identifier %3 = machine data index
Explanation	The parameterization of machine data %2 is incorrect. An additional indication is the field index of the machine data. If the machine data is a single machine data, a zero is specified as array index. This alarm occurs in the following contexts: <ul style="list-style-type: none"> – The conversion of the specified MD into the internal computation format resulted in an overflow.

- Error when parameterizing the input/output assignments for the SGEs/SGAs.
- One of the activated cam positions is outside the actual value modulo range.
- The function "actual value synchronization 2–encoder system" (slip) is selected for a single–encoder system or a function with absolute reference (SE/SN) is simultaneously selected .
- \$MA_SAFE_FUNCTION_ENABLE
A safety function was enabled without the safety function SBH/SG having been enabled.
An axial SGE/SGA was parameterized at the SPL interface (segment number = 4) and the function enable for the external stops (bit 6) is missing.
The cam synchronization was activated via bit 7 without the cams having been enabled via bit 8 ... bit 15 or via \$MA_SAFE_CAM_ENABLE.
When enabling the "Safe cam track" function, it is not permitted to set bit 7. The cam synchronization is implicitly enabled.
- \$MA_SAFE_STANDSTILL_VELO_TOL
For a linear axis, a value greater than 1000 mm/min was entered.
- MD \$MA_SAFE_STOP_VELO_TOL
For a linear axis, a value greater than 20000 mm/min was entered.
- MD \$MA_SAFE_SLIP_VELO_TOL
For a linear axis, a value greater than 1000 mm/min was entered.
- MD \$MA_SAFE_POS_TOL
For a linear axis, a value greater than 10 mm was entered.
- MD \$MA_SAFE_REFP_POS_TOL
For a linear axis, a value greater than 1 mm was entered.
- \$MA_SAFE_VELO_X
For a linear axis, a value greater than 1000 mm/min was entered.
- \$MA_SAFE_ENC_GRID_POINT_DIST
A zero was entered.
- MD \$MA_SAFE_ENC_RESOL
A zero was entered.
- \$MA_SAFE_MODULO_RANGE
The parameterized cam modulo range is not an integral multiple of 360 Degrees.
- \$MA_SAFE_EXT_STOP_INPUT[0]
An axial SGE/SGA was parameterized at the SPL interface (segment number = 4) and the SGE "Deselect ext. Stop A" was parameterized inverted (bit 31 = 1) or the SGE "Deselect ext. Stop A" was not parameterized at the SPL interface \$A_OUTSI.

10.2 NCK safety alarms for SINUMERIK 840D sl

- `$MN_SAFE_SPL_STOP_MODE`
Value 4 (Stop E) was parameterized without the external Stop E having been enabled in all axes where the SI function was enabled (MD `$MA_SAFE_FUNCTION_ENABLE` not equal to 0).
Remedy: Parameterize `$MN_SAFE_SPL_STOP_MODE` to another stop or in the specified axes, enable the external stop E (set bits 4 and 6 in `$MA_SAFE_FUNCTION_ENABLE`).
- `$MA_SAFE_DRIVE_PS_ADDRESS`
An invalid value (drive parameter p9810 is saved there when booting) was read or the same address was assigned to several axes.
- `$MA_SAFE_ENC_PULSE_SHIFT`
It was not possible to internally pre-assign from the drive parameterization as the values must have been entered outside the permissible range. Adapt the encoder parameterization in the drive.
- `$MA_SAFE_VELO_OVR_FACTOR`
It was parameterized with decimal places.
- `$MA_SAFE_POS_LIMIT_PLUS/$MA_SAFE_POS_LIMIT_MINUS` –
the entered values have been interchanged. The upper limit is less than or equal to the lower limit.
- `$MA_IS_ROT_AX/$MA_SAFE_IS_ROT_AX`
Different settings were made in both MD.
- The limit values for the "n<n_x" monitoring function, calculated from MD `$MA_SAFE_VELO_X` and MD `$MA_SAFE_POS_TOL` are the same magnitude.
- The parameterized cam modulo range MD `$MA_SAFE_MODULO_RANGE` and the modulo range in MD `$MA_MODULO_RANGE` cannot be divided by one another to result in an integral number.
- The mechanical brake system test was enabled in MD `$MA_FIXED_STOP_MODE` (bit 1 = 1), without safe operation having been enabled for this axis in MD `$MA_SAFE_FUNCTION_ENABLE`. The mechanical brake system test is only permissible in this axis with safety functions.
- An illegal value was parameterized in MD `$MA_SAFE_VELO_STOP_MODE` or MD `$MA_SAFE_VELO_STOP_REACTION`.
- The function "Save actual value with incremental encoder" is enabled in MD `$MA_ENC_REFP_STATE` for the parameterizable incremental encoder, and a monitoring function with absolute reference (SE/SN) is enabled in MD `$MA_SAFE_FUNCTION_ENABLE`. This combination of functions is not permitted.
- The alarms 27000/C01797 should be suppressed when parking (MD `$MA_SAFE_PARK_ALARM_SUPPRESS1=0`). In this case, the SGA "axis safely referenced" must be parameterized using the MD `$MA_SAFE_REFP_STATUS_OUTPUT`.

- The logical basis address configured in HW config and that addressed via MD \$MA_SAFE_CTRL_OUT_NR, \$MN_SAFE_DRIVE_LOGIC_ADDRESS do not match or the slot that is addressed has the incorrect length.
- Cam position \$MA_SAFE_CAM_POS_PLUS[n] or \$MA_SAFE_CAM_POS_MINUS[n] has been parameterized too close to the modulo limit.
- "Safe cams" have been enabled in \$MA_SAFE_FUNCTION_ENABLE in bits 8 to 15, while the "Safe cam track" function was enabled at the same time in \$MA_SAFE_CAM_ENABLE.
- The assignment of the logical I/O address of this SI telegram of this drive via \$MA_SAFE_DRIVE_LOGIC_ADDRESS does not match the configured telegram (Step 7).
- Minus cam position \$MA_SAFE_CAM_POS_MINUS[n] is greater than the plus cam position \$MA_SAFE_CAM_POS_PLUS[n]. This is not permitted for the "safe cam track" function.
- The distance between 2 cams on a cam track (\$MA_SAFE_CAM_POS_MINUS[n] and \$MA_SAFE_CAM_POS_PLUS[n]) is too short.
- The cam length, i.e. the distance between the plus cam position (\$MA_SAFE_CAM_POS_PLUS[n]) and minus cam position (\$MA_SAFE_CAM_POS_MINUS[n]) is too short.
- For at least 2 cams enabled in \$MA_SAFE_CAM_ENABLE, identical values have been entered into \$MA_SAFE_CAM_TRACK_ASSIGN[n].
- The value parameterized in \$MA_SAFE_CAM_TRACK_ASSIGN[n] for a cam enabled in \$MA_SAFE_CAM_ENABLE is invalid.
- The cam modulo functionality in \$MA_SAFE_MODULO_RANGE is selected but is presently still not supported for the "safe cam track" function.

Response	<p>Mode group not ready</p> <p>Channel not ready</p> <p>NC start inhibit in this channel</p> <p>Interface signals are set</p> <p>Alarm display</p> <p>NC stop for alarm</p>
Remedy	<p>Check and modify the MD named in the alarm text. Have the checksum re-calculated. Safety functions should be subject to a new acceptance test.</p>
Program continuation	<p>Power-down the control and power-up again</p>

27034	Parameterization of MD %1[%2] invalid
Parameter	%1 = machine data identifier %2 = machine data index for \$MN_SAFE_RDP_SYSVAR_INDEX, \$MN_SAFE_SDP_SYSVAR_INDEX
Explanation	The parameterization of machine data %1 is incorrect. This alarm occurs in conjunction with the following: <ul style="list-style-type: none"> – An invalid value was set for MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL. – An invalid value was set for MD \$MN_SAFE_RDP_SYSVAR_INDEX. – An invalid value was set for MD \$MN_SAFE_SDP_SYSVAR_INDEX.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check and correct the specified machine data.
Program continuation	Power-down the control and power-up again
27035	Axis %1 new HW component, acknowledgement and function test required
Parameter	%1 = axis number
Explanation	The IDs for the associated HW components (encoder, motor, module) read out of the drive do not match the NCK parameterization.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	If the alarm occurs while commissioning, then the following should be done: <ul style="list-style-type: none"> – Acknowledge the checksum SAFE_ACT_CHECKSUM[1] (key switch setting 3 or password must be entered), continue with commissioning. If the alarm occurs after the replacement of an encoder module or DRIVE-CLiQ motor, then the following should be done: <ul style="list-style-type: none"> – In the Diagnostics operator area, acknowledge the hardware checksum SAFE_ACT_CHECKSUM[1] via softkey (key switch setting 3 or password must be entered) – Re-calibration of the actual value encoder – Check the SI actual value acquisition: Speeds, traversing direction, absolute position (if required, set the user agreement)

- Document the new checksum value in SAFE_ACT_CHECKSUM[1] and the last entry in the change history in MD SAFE_CONFIG_CHANGE_DATE[0]
- Document the hardware and software version data of the new component

Program continuation Clear the alarm with the RESET key. Restart the part program.

27036 Axis %1 encoder parameterization MD %2[%3] was adapted

Parameter %1 = axis number
%2 = machine data identifier
%3 = machine data index

Explanation The encoder parameterization for the SI monitoring functions, read out of the drive, does not match the NCK parameterization displayed in the MD. The appropriate NCK–MD was adapted.

Response Mode group not ready
Channel not ready
NC start inhibit in this channel
Interface signals are set
Alarm display
NC stop for alarm
In addition, a STOP F is initiated, that can result in the subsequent Alarm 27001 with fault IDs 0, 27023 and 27024. Alarm 27001 with fault ID 0 can be prevented using the alarm reduction (\$MA_SAFE_ALARM_SUPPRESS_LEVEL greater than or equal to 1).

Remedy Continue commissioning, correct checksums.

Program continuation Power-up and power-down the control

27037 Axis %1 and %2 with the same PROFIsafe address %3

Parameter %1 = axis number
%2 = axis number
%3 = PROFIsafe address

Explanation The PROFIsafe address read out from the drive is identical for these two axes.

Response Mode group not ready
Channel not ready
NC start inhibit in this channel
Interface signals are set
Alarm display
NC stop for alarm

Remedy Correctly set the PROFIsafe address of the drive.

Program continuation Power-up and power-down the control

27038	Axis %1 value %2 in drive parameter %3 violates the limits of NCK MD %4
Parameter	%1 = axis number %2 = value in the drive parameter %3 = number of the drive parameter %4 = name of the NCK machine data
Explanation	Values that violate the min/max value for an NCK machine data are supplied in a parameter from a Sinamics drive.
Response	Alarm display
Remedy	Investigate as to why incorrect values were entered into the specified drive parameter (e.g. for internal software errors in the drive, refer to the drive documentation).
Program continuation	Power-up and power-down the control
27039	Axis %1 parameterization MD %2[%3] was changed, acknowledge and acceptance required
Parameter	%1 = axis number %2 = machine data identifier %3 = machine data index
Explanation	The parameterization for the SI monitoring functions, read out of the drive, does not match the NCK parameterization displayed in the MD. The appropriate NCK-MD was adapted. The following relationship exists between NCK MDs and drive parameters: \$MA_SAFE_BRAKETEST_TORQUE_NORM corresponds to p2003
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Continue commissioning, correct checksums. – for the display of MD \$MA_SAFE_BRAKETEST_TORQUE_NORM: Changes to p2003 must be taken into account when parameterizing MD \$MA_SAFE_BRAKETEST_TORQUE. The holding torque to be parameterized for the brake test must be reselected: $\$MA_SAFE_BRAKETEST_TORQUE = \text{required test torque of the brake} / p2003 * 100$ An acceptance test must then be performed to ensure that the brake test functions correctly.
Program continuation	Power-up and power-down the control

27040	Axis %1 waiting for the Motor Module
Parameter	%1 = axis name, spindle number
Explanation	Alarm when booting as long as the Motor Module is still not ready for SI. When booting, communications to the Motor Module have still not been established as the safety functions are still not available. MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL can be used to set the alarm display so that only one alarm is displayed for all axes.
Response	Alarm display Interface signals are set
Remedy	The alarm is continuously active when booting if the drive does not communicate. Otherwise, the alarm is only briefly present and is then automatically cleared again. Possible causes that the alarm is permanently present: <ul style="list-style-type: none"> – The safety motion monitoring functions are only activated in \$MA_SAFE_FUNCTION_ENABLE, however, not in the corresponding parameter of the associated drive (p9501). – The axis → drive assignment via MD \$MA_SAFE_CTRLOUT_MODULE_NR, \$MN_SAFE_DRIVE_LOGIC_ADDRESS or p0978 is incorrect – PROFIBUS connector fallen out.
Program continuation	The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required.
27050	Axis %1 failure SI communications
Parameter	%1 = axis number
Explanation	Communications with the drive for the Safety Integrated motion monitoring functions is additionally monitored. This monitoring function has detected an error.
Response	Alarm display Interface signals are set NC start inhibit in this channel NC stop for alarm In addition, a STOP F is initiated, that can result in the subsequent Alarm 27001 with fault IDs 0, 27023 and 27024. Alarm 27001 with fault ID 0 can be prevented using the alarm reduction (\$MA_SAFE_ALARM_SUPPRESS_LEVEL greater than or equal to 1).
Remedy	Check the connections between the NCK and drive. Check the configuring of a PROFIBUS telegram (e.g. SI slot configured). Check the assignment between the NCK SI axis and SI slot (\$MA_SAFE_CTRLOUT_MODULE_NR, \$MN_SAFE_DRIVE_LOGIC_ADDRESS).

	<p>Check the assignment of the telegram configuration for the slave OM</p> <p>Check and ensure that the EMC conditions are complied with.</p>
Program continuation	<p>Clear the alarm with the RESET key. Restart the part program.</p>
27090	<p>Error in crosswise data comparison NCK–PLC %1 [%2], NCK: %3; %4<ALSI></p>
Parameter	<p>%1 = name of the system variable in which the error was detected</p> <p>%2 = supplementary info, system variables – field index</p> <p>%3 = supplementary information, comparison value, NCK</p> <p>%4 = supplementary information, crosswise data comparison – field index</p>
Explanation	<p>For the cyclic crosswise data comparison between NCK and PLC, differences have occurred in the data being compared. Parameter %1 specifies the incorrect system variable (\$A_INSI, \$A_OUTSI, \$A_INSE, \$A_OUTSE or \$A_MARKERSI) with field index %2.</p> <p>Special situations:</p> <ul style="list-style-type: none"> – Display "Error for crosswise data comparison NCK–PLC, \$MN_PREVENT_SYNACT_LOCK[0], ..." means that the SPL commissioning status is set differently in the NCK and PLC. – Display "Error for crosswise data comparison NCK–PLC, \$MN_SPL_STOP_MODE[0], ..." means that the SPL stop response (Stop D or E) is set differently in the NCK and PLC. – Display "Error for crosswise data comparison NCK–PLC, TIME-OUT[0], NCK: 0" means that there is a critical communications error between the NCK and PLC and no crosswise data comparison can be carried out. <p>Using parameter %4, a specific alarm message can be configured on the HMI for each of the listed system variables:</p> <p>%4 = 0: Error SPL commissioning status (\$MN_PREVENT_SYNACT_LOCK[0,1] – DB18.DBX36.0) or different stop response \$MN_SAFE_SPL_STOP_MODE – DB18.DBX36.1)</p> <p>%4 = 1... 64: Error in system variables \$A_INSE[1...64]</p> <p>%4 = 65...128: Error in system variables \$A_OUTSE[1...64]</p> <p>%4 = 129...192: Error in system variables \$A_INSI[1...64]</p> <p>%4 = 193...256: Error in system variables \$A_OUTSI[1...64]</p> <p>%4 = 257...320: Error in system variables \$A_MARKERSI[1...64]</p> <p>In order to parameterize Alarm 27090, file ALSI_xx.com must be incorporated in the data management and communicated to the HMI via MBDDE.INI in Section [IndexTextFiles] ALNX=f:\dh\mb.dir\alsi_. The machine manufacturer can re-define this file in order to incorporate sensible supplementary texts in the alarm for his particular machine/system. If the file is to be re-defined, the new file to be created must be made known to the system via MBDDE.INI.</p>

	<p>The display of Alarm 27090 can be influenced using the MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL: MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL = 2 : Alarm 27090 is only displayed for the first data difference found.</p>
Response	<p>Alarm display A STOP D/E is initiated (this can be set using MD \$MN_SPL_STOP_MODE) on all of the axes with safety functionality if the SPL commissioning phase (MD \$MN_PREVENT_SYN- ACT_LOCK[0,1] not equal to 0) has been completed.</p>
Remedy	<p>Analyze the displayed value and evaluate DB18: SPL_DELTA on the PLC side. Find the difference between the monitoring channels. Possible causes:</p> <ul style="list-style-type: none"> – Incorrect wiring – Incorrect SPL – The axial SGEs have been incorrectly assigned to the internal inter- face \$A_OUTSI – The axial SGAs have been incorrectly assigned to the internal inter- face \$A_INSI – Different SPL commissioning status has been set in the NCK and PLC – Different SPL stop response has been set in the NCK and PLC
Program continuation	<p>Clear the alarm with the RESET key. Restart the part program.</p>
27091	<p>Error in crosswise data comparison, NCK–PLC, STOP of %1</p>
Parameter	<p>%1 = supplementary information about the monitoring channel that has initiated the stop</p>
Explanation	<p>The monitoring channel specified in %1 (NCK or PLC) has initiated a STOP D or E (depending on the parameterization in MD \$MN_SAFE_SPL_STOP_MODE). Alarm 27090 provides additional information about the reason for the Stop D/E.</p>
Response	<p>Alarm display A STOP D/E is initiated (this can be set using MD \$MN_SPL_STOP_MODE) on all of the axes with safety functionality if the SPL commissioning phase (MD \$MN_PREVENT_SYN- ACT_LOCK[0,1] not equal to 0) has been completed.</p>
Remedy	<p>Evaluate the alarm parameters of Alarm 27090 and correct the SPL, or check the I/O modules/wiring or the internal SPL interfaces to the safety monitoring channels in the NCK and drive.</p>
Program continuation	<p>Clear the alarm with the RESET key. Restart the part program.</p>

27092	Communications interrupted for crosswise data comparison NCK–PLC, error detected by %1
Parameter	%1 = supplementary information about the detecting monitoring channel
Explanation	The delay stage (1 s) for the communication monitoring has been exceeded in the monitoring channel specified in %1 (NCK or PLC). The other monitoring channel did not send new data within this time.
Response	Alarm display A STOP D/E is initiated (this can be set using MD \$MN_SPL_STOP_MODE) on all of the axes with safety functionality if the SPL commissioning phase (MD \$MN_PREVENT_SYN-ACT_LOCK[0,1] not equal to 0) has been completed. A timer of 5 s is started – after it has expired <ul style="list-style-type: none"> – The external NCK–SPL outputs are deleted (cleared) – the PLC goes to stop.
Remedy	Do not start the SPL anymore. Check the system components (PLC must have the correct version of FB15 and have DB18).
Program continuation	Power–down the control and power–up again
27093	Checksum error NCK–SPL, %1, %2, %3
Parameter	%1 = supplementary information about the type of error %2 = supplementary information about the reference size %3 = supplementary information about the current size
Explanation	The checksum error in the NCK SPL. The file /_N_CST_DIR/_N_SAFE_SPF was subsequently modified. The safe programmable logic (SPL) in the NCK may be corrupted. Parameter %1 provides further information about the type of change: %1 = FILE_LENGTH: The file length has changed. %1 = FILE_CONTENT: The file contents have changed. %2 specifies the variable calculated as the reference (file length, checksum over file contents), %3 specifies the current size calculated cyclically.
Response	Alarm display
Remedy	Check the file and when the file was last changed. Reload the original file and start the monitoring system again with a power on.
Program continuation	Power–down the control and power–up again

27094 Write access to system variable %1 only allowed from NCK–SPL

Parameter	%1 = name of the safety system variable involved
Explanation	It is only possible to write access one of the safety system variables from the part program /_N_CST_DIR/_N_SAFE_SPF. If this error occurs, an instruction from another part program was detected.
Response	Alarm display
Remedy	Check the part program used to write access safety system variables.
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27095 %1 SPL protection not activated

Parameter	%1 = name of the component for which the protection is not activated (NCK or PLC)
Explanation	The protective mechanisms for the SPL have not been activated. The commissioning phase of the SPL has not yet been completed. For an error in the crosswise data comparison between NCK and PLC, a stop response (Stop D or E) is not initiated.
Response	Alarm display
Remedy	Remedy for NCK: Activate the protective mechanisms by writing to MD \$MN_PREVENT_SYNACT_LOCK [0,1]. The number range of the synchronous action IDs used in the SPL must be entered in this MD. Remedy for the PLC: Activate the protective mechanisms by setting the appropriate data bit in DB18.
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27096 SPL start not allowed

Explanation	To start the SPL in the protected state (\$MN_PREVENT_SYNACT_LOCK[0,1] not equal to 0), at least one axis must have Safety Integrated functionality activated (via MD \$MA_SAFE_FUNCTION_ENABLE) beforehand. Without this functionality it is only possible to operate the SPL in the commissioning state.
Response	Mode group not ready Channel not ready NC start inhibit in this channel NC stop for alarm Alarm display Interface signals are set
Remedy	Commissioning the axial Safety Integrated functionality or cancellation of the SPL protection using MD \$MN_PREVENT_SYNACT_LOCK[0,1]
Program continuation	Power-down the control and power-up again

10.2 NCK safety alarms for SINUMERIK 840D sl

27097	SPL not started
Explanation	After the time defined in MD SAFE_SPL_START_TIMEOUT expired, the SPL had not started. Please note MDs 13310: \$MN_SAFE_SPL_START_TIMEOUT and 10096 \$MN_SAFE_DIAGNOSIS_MASK, bit 1.
Response	Alarm display
Remedy	Find the reason why SPL did not start. Possible causes could be: <ul style="list-style-type: none"> – There is either an NC or drive fault (e.g. after replacing an encoder, Emergency Stop, PROFIsafe alarms) – There is a syntax error in the SPL itself – A safety alarm is present (e.g. "safe end position exceeded") – At PROG_EVENT start, the name or path of the SPL was not correctly written to; observe upper and lower case letters – Simultaneous start of an ASUB and PROG_EVENT, parameterizing MD 11602 (stop reasons, read-in inhibit) – Problems when calling FB4/FC9
Program continuation	Clear the alarm with the reset key. Restart the part program
27099	Double allocation in the SPL assignment MD %1[%2] – MD %3[%4]
Parameter	%1 = \$MN_PROFISAFE_IN_ASSIGN %2 = Machine data index %3 = \$MN_PROFISAFE_IN_ASSIGN %4 = Machine data
Explanation	SPL inputs (\$A_INSE) have been assigned twice in the displayed machine data by various applications. This can be: <ul style="list-style-type: none"> – PROFIsafe communication
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display
Remedy	Correct the displayed MD
Program continuation	Switch control system OFF and ON again.

27100	At least one axis is not safely referenced
Explanation	<p>There are two reasons for this alarm:</p> <ul style="list-style-type: none"> – the machine position of at least one of the axes monitored with SI has not been acknowledged by the user or – the machine position of at least one of the axes monitored with SI has still not been verified by subsequent referencing <p>Even if the axis is already referenced there is no acknowledgement that referencing has supplied the correct result. For example, incorrect results can occur if the axis was moved after the control was powered-down – with the result that the stop position saved prior to powering-down is no longer correct.</p> <p>To ensure that this does not happen, the user must acknowledge the displayed actual position after the first referencing process.</p> <p>When the user agreement has been set for the first time, the axis must be subsequently referenced each time that the control is booted (when absolute encoders are used, this subsequent referencing is automatically executed). This procedure is carried out to verify the stop position saved prior to powering-down the control.</p> <p>The alarm display can be set in MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL (MD<3) in such a way that incorrect referencing is displayed separately for each axis.</p>
Response	<p>Alarm display</p> <p>The SGA "axis safely referenced" is not set. SE is disabled if the safe actual position has not yet been acknowledged by the user agreement. If the user agreement is set, SE remains active. The safe cams are calculated and output, but their significance is limited because referencing has not been acknowledged.</p>
Remedy	<p>Move all of the SI axes to the known positions and change into the "Referencing" mode. Check the positions on the machine displayed in the user agreement screen and set the "User agreement" using the selection/toggle key.</p> <p>If the user agreement has already been set for the axis, then re-reference the axes. It is only possible to change the user agreement in the key-operated switch position 3 or after entering a password.</p>
Program continuation	<p>The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required.</p>

27101	Axis %1, difference in function safe operating stop, NCK: %2, drive: %3
Parameter	%1 = axis number %2 = monitoring status, safe operating stop %3 = monitoring status, safe operating stop
Explanation	In the crosswise data comparison of result list 1 between the NCK and drive monitoring channels, a difference was detected in the state of the safe operating stop monitoring. Safe operating stop: Bit 0,1 in result list 1 Monitoring state (%2, %3): <ul style="list-style-type: none"> – OFF = monitoring inactive in this monitoring channel – OK = monitoring active in this monitoring channel, limit values not violated – L+ = monitoring active in this monitoring channel, upper limit value violated – L– = monitoring active in this monitoring channel, lower limit value violated
Response	Alarm display If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is necessary to power–down the control and power it up again (power on).
Remedy	Check that the safe inputs in both monitoring channels have switched into the same state within the permissible time tolerance. For further diagnostics refer to the drive parameters r9710[0], r9710[1] and the servo–trace signals "result list 1 NCK" and "result list 1 drive".
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27102	Axis %1, difference in function safely reduced speed %2, NCK: %3, drive: %4
Parameter	%1 = axis number %2 = SG stage for which the difference was detected %3 = monitoring status, safely reduced speed %4 = monitoring status, safely reduced speed
Explanation	In the crosswise data comparison of result list 1 between the NCK and drive monitoring channels, a difference in the monitoring state of the safely reduced speed monitoring was detected. <ul style="list-style-type: none"> – Safely reduced speed 1: Bits 6, 7 in result list 1 – Safely reduced speed 2: Bits 8, 9 in result list 1 – Safely reduced speed 3: Bits 10, 11 in result list 1 – Safely reduced speed 4: Bits 12, 13 in result list 1

	<p>Monitoring state (%3, %4):</p> <ul style="list-style-type: none"> – OFF = monitoring inactive in this monitoring channel – OK = monitoring active in this monitoring channel, limit values not violated – L+ = monitoring active in this monitoring channel, upper limit value violated – L– = monitoring active in this monitoring channel, lower limit value violated
Response	<p>Alarm display</p> <p>If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is necessary to power–down the control and power it up again (power on).</p>
Remedy	<p>Check that the safe inputs in both monitoring channels have switched into the same state within the permissible time tolerance.</p> <p>For further diagnostics refer to the drive parameters r9710[0], r9710[1] and the servo–trace signals "result list 1 NCK" and "result list 1 drive".</p>
Program continuation	<p>Clear the alarm with the RESET key. Restart the part program.</p>
27103	<p>Axis %1, difference in function safe limit position %2, NCK: %3, drive: %4</p>
Parameter	<p>%1 = axis number</p> <p>%2 = number of the SE limit</p> <p>%3 = monitoring status, safe limit position</p> <p>%4 = monitoring status, safe limit position</p>
Explanation	<p>In the crosswise data comparison of result list 1 between the NCK and drive monitoring channels, a difference was detected in the monitoring state of the safe limit position monitoring.</p> <ul style="list-style-type: none"> – Safe limit position 1: Bits 2, 3 in result list 1 – Safe limit position 2: Bits 4, 5 in result list 1 <p>Monitoring state (%3, %4):</p> <ul style="list-style-type: none"> – OFF = monitoring inactive in this monitoring channel – OK = monitoring active in this monitoring channel, limit values not violated – L+ = monitoring active in this monitoring channel, upper limit value violated – L– = monitoring active in this monitoring channel, lower limit value violated
Response	<p>Alarm display</p> <p>If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is then necessary to power–down/power–up the control (power on).</p>
Remedy	<p>Check that the safe inputs in both monitoring channels have switched into the same state within the permissible time tolerance.</p>

10.2 NCK safety alarms for SINUMERIK 840D sl

	For further diagnostics refer to the drive parameters r9710[0], r9710[1] and the servo-trace signals "result list 1 NCK" and "result list 1 drive".
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27104	Axis %1, difference in function safe cam plus %2, NCK: %3, drive: %4
Parameter	%1 = axis number %2 = number of the cam %3 = monitoring status, safe cam plus %4 = monitoring status, safe cam plus
Explanation	<p>In the crosswise comparison of result list 2 ("Safe cams" function) or result list 3/4/5/6/7 ("Safe cam track" function) a difference was identified between the NCK and drive monitoring channels in the monitoring state of the safe cam plus monitoring function.</p> <p><u>The following applies to the "Safe cams" function:</u></p> <p>Safe cam 1+: Bits 0, 1 in result list 2 Safe cam 2+: Bits 4, 5 in result list 2 Safe cam 3+: Bits 8, 9 in result list 2 Safe cam 4+: Bits 12, 13 in result list 2</p> <p><u>The following applies to the "Safe cam track" function:</u> (each of the result lists 3–7 includes 6 cam results)</p> <p>Safe cam 1+: Bits 0, 1 in result list 3 Safe cam 2+: Bits 4, 5 in result list 3 Safe cam 3+: Bits 8, 9 in result list 3 Safe cam 4+: Bits 12, 13 in result list 3 Safe cam 5+: Bits 16, 17 in result list 3 Safe cam 6+: Bits 20, 21 in result list 3</p> <p>Safe cam 7+: Bits 0, 1 in result list 4 Safe cam 8+: Bits 4, 5 in result list 4 Safe cam 9+: Bits 8, 9 in result list 4 Safe cam 10+: Bits 12, 13 in result list 4 Safe cam 11+: Bits 16, 17 in result list 4 Safe cam 12+: Bits 20, 21 in result list 4</p> <p>Safe cam 13+: Bits 0, 1 in result list 5 Safe cam 14+: Bits 4, 5 in result list 5 Safe cam 15+: Bits 8, 9 in result list 5 Safe cam 16+: Bits 12, 13 in result list 5 Safe cam 17+: Bits 16, 17 in result list 5 Safe cam 18+: Bits 20, 21 in result list 5</p> <p>Safe cam 19+: Bits 0, 1 in result list 6 Safe cam 20+: Bits 4, 5 in result list 6</p>

10.2 NCK safety alarms for SINUMERIK 840D sl

Safe cam 21+: Bits 8, 9 in result list 6
 Safe cam 22+: Bit 12,13 in result list 6
 Safe cam 23+: Bits 16, 17 in result list 6
 Safe cam 24+: Bit 20, 21 in result list 6

Safe cam 25+: Bits 0, 1 in result list 7
 Safe cam 26+: Bits 4, 5 in result list 7
 Safe cam 27+: Bits 8, 9 in result list 7
 Safe cam 28+: Bit 12, 13 in result list 7
 Safe cam 29+: Bits 16, 17 in result list 7
 Safe cam 30+: Bits 20, 21 in result list 7

Monitoring state (%3, %4):

- OFF = monitoring inactive in this monitoring channel
- OK = monitoring active in this monitoring channel, limit values not violated
- L+ = monitoring active in this monitoring channel, upper limit value violated
- L– = monitoring active in this monitoring channel, lower limit value violated

Response

Alarm display

Remedy

If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is necessary to power-down the control and power it up again (power on).
 Check that the safe actual values in both monitoring channels match.
 Drive parameters r9711[0,1] (diagnostics, result list 2 [NCK, drive]) or r9735[0,1] / r9736[0,1] / r9737[0,1] / r9738[0,1] / r9739[0,1] (diagnostics, result list 3/4/5/6/7 [NCK, drive]) can be used for further diagnostics.
 Further, diagnostics is possible using the servo trace signals "Result list 2/3/4/5/6/7 NCK" and "Result list 2/3/4/5/6/7 drive".

Program continuation

Clear the alarm with the RESET key. Restart the part program.

27105

Axis %1, difference in function safe cam minus %2, NCK: %3, drive: %4

Parameter

%1 = axis number
 %2 = number of the cam
 %3 = monitoring status, safe cam minus
 %4 = monitoring status, safe cam minus

Explanation

In the crosswise comparison of result list 2 ("Safe cams" function) or result list 3/4/5/6/7 ("Safe cam track" function) a difference was identified between the NCK and drive monitoring channels in the monitoring state of the safe cam minus monitoring function.

10.2 NCK safety alarms for SINUMERIK 840D sl

The following applies to the "Safe cams" function:

Safe cam 1–: Bits 2, 3 in result list 2
Safe cam 2–: Bits 6, 7 in result list 2
Safe cam 3–: Bits 10,11 in result list 2
Safe cam 4–: Bits 14,15 in result list 2

The following applies to the "Safe cam track" function: (each of the result lists 3–7 includes 6 cam results)

Safe cam 1–: Bits 2, 3 in result list 3
Safe cam 2–: Bits 6, 7 in result list 3
Safe cam 3–: Bits 10, 11 in result list 3
Safe cam 4–: Bits 14, 15 in result list 3
Safe cam 5–: Bits 18, 19 in result list 3
Safe cam 6–: Bits 22, 23 in result list 3

Safe cam 7–: Bits 2, 3 in result list 4
Safe cam 8–: Bits 6, 7 in result list 4
Safe cam 9–: Bits 10, 11 in result list 4
Safe cam 10–: Bits 14, 15 in result list 4
Safe cam 11–: Bits 18, 19 in result list 4
Safe cam 12–: Bits 22, 23 in result list 4

Safe cam 13–: Bits 2, 3 in result list 5
Safe cam 14–: Bits 6, 7 in result list 5
Safe cam 15–: Bits 10, 11 in result list 5
Safe cam 16–: Bits 14, 15 in result list 5
Safe cam 17–: Bits 18, 19 in result list 5
Safe cam 18–: Bits 22, 23 in result list 5

Safe cam 19–: Bits 2, 3 in result list 6
Safe cam 20–: Bits 6, 7 in result list 6
Safe cam 21–: Bits 10, 11 in result list 6
Safe cam 22–: Bits 14, 15 in result list 6
Safe cam 23–: Bits 18, 19 in result list 6
Safe cam 24–: Bits 22, 23 in result list 6

Safe cam 25–: Bits 2, 3 in result list 7
Safe cam 26–: Bits 6, 7 in result list 7
Safe cam 27–: Bits 10, 11 in result list 7
Safe cam 28–: Bits 14, 15 in result list 7
Safe cam 29–: Bits 18, 19 in result list 7
Safe cam 30–: Bits 22, 23 in result list 7

Monitoring state (%3, %4):

- OFF = monitoring inactive in this monitoring channel
- OK = monitoring active in this monitoring channel, limit values not violated
- L+ = monitoring active in this monitoring channel, upper limit value violated

	<ul style="list-style-type: none"> – L– = monitoring active in this monitoring channel, lower limit value violated
Response	Alarm display
Remedy	<p>If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is necessary to power–down the control and power it up again (power on).</p> <p>Check that the safe actual values in both monitoring channels match. Drive parameters r9711[0,1] (diagnostics, result list 2 [NCK, drive]) or r9735[0,1] / r9736[0,1] / r9737[0,1] / r9738[0,1] / r9739[0,1] (diagnostics, result list 3/4/5/6/7 [NCK, drive]) can be used for further diagnostics. Further, diagnostics is possible using the servo trace signals "Result list 2/3/4/5/6/7 NCK" and "Result list 2/3/4/5/6/7 drive".</p>
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27106	Axis %1, difference for the function safely reduced speed n_x, NCK: %2, drive: %3
Parameter	<p>%1 = axis number</p> <p>%2 = monitoring status, safely reduced speed n_x</p> <p>%3 = monitoring status, safely reduced speed n_x</p>
Explanation	<p>In the crosswise data comparison of result list 2 between the NCK and drive monitoring channels, a difference was detected in the monitoring state of the safely reduced speed n_x monitoring.</p> <ul style="list-style-type: none"> – Safely reduced speed n_{x+}: Bits 16, 17 in result list 2 – Safely reduced speed n_{x-}: Bits 18, 19 in result list 2 <p>Monitoring state (%2, %3):</p> <ul style="list-style-type: none"> – OFF = monitoring inactive in this monitoring channel – OK = monitoring active in this monitoring channel, limit values not violated – L+ = monitoring active in this monitoring channel, upper limit value violated – L– = monitoring active in this monitoring channel, lower limit value violated
Response	Alarm display
Remedy	<p>If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is necessary to power–down the control and power it up again (power on).</p> <p>Check that the safe actual values in both monitoring channels match. For further diagnostics refer to the drive parameters r9711[0], r9711[1] and the servo–trace signals "result list 2 NCK" and "result list 2 drive".</p>
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27107 Axis %1, difference with cam modulo monitoring function, NCK: %2, drive: %3

Parameter	%1 = axis number %2 = monitoring status, safe cam modulo range %3 = monitoring status, safe cam modulo range
Explanation	In the crosswise data comparison of result list 2 between the NCK and drive monitoring channels, a difference was detected in the monitoring status of the cam modulo range monitoring. Safe cam modulo range: Bits 20, 21 in result list 2 Monitoring state (%2, %3): <ul style="list-style-type: none"> – OFF = monitoring inactive in this monitoring channel – OK = monitoring active in this monitoring channel, limit values not violated – L+ = monitoring active in this monitoring channel, upper limit value violated – L– = monitoring active in this monitoring channel, lower limit value violated
Response	Alarm display
Remedy	If a safety monitoring function was active (SBH, SG, SE, SN), then a STOP B was also automatically initiated. It is necessary to power–down the control and power it up again (power on). Check that the safe actual values in both monitoring channels match. For further diagnostics refer to the drive parameters r9711[0], r9711[1] and the servo–trace signals "result list 2 NCK" and "result list 2 drive".
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27110 Axis %1 data transfer error, index %2

Parameter	%1 = axis number %2 = index in the crosswise data comparison
Explanation	Communication errors between the NCK and drive have meant that for three times in a row, the crosswise data comparison of the data with the specified index was not able to be carried out.
Response	Alarm display In addition, a STOP F is initiated, that can result in the subsequent Alarm 27001 with fault IDs 0, 27023 and 27024. Alarm 27001 with fault ID 0 can be prevented using the alarm reduction (\$MA_SAFE_ALARM_SUPPRESS_LEVEL greater than or equal to 1).

Remedy	<p>Check the connections between the NCK and drive</p> <p>Check the configuring of a PROFIBUS telegram (e.g. SI slot configured).</p> <p>Check the assignment between the NCK SI axis and SI slot (\$MA_SAFE_CTRL_OUT_MODULE_NR, \$MN_SAFE_DRIVE_LOGIC_ADDRESS).</p> <p>Check the assignment of the telegram configuration for the OM slave.</p> <p>Replace the hardware</p> <p>Check and ensure that the EMC conditions are complied with.</p>
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27111	Axis %1 encoder evaluation error of the safety-related actual value
Parameter	%1 = axis number
Explanation	The redundantly determined safety-related actual value does not match the actual value – with fine resolution – of the same encoder.
Response	<p>Alarm display</p> <p>In addition, a STOP F is initiated, that can result in the subsequent Alarm 27001 with fault IDs 0, 27023 and 27024. Alarm 27001 with fault ID 0 can be prevented using the alarm reduction (\$MA_SAFE_ALARM_SUPPRESS_LEVEL greater than or equal to 1).</p>
Remedy	<p>Check the encoder mounting</p> <p>Check the encoder parameterization</p> <p>Check the NCK_MD (\$MA_SAFE_ENC_IS_LINEAR, \$MA_SAFE_ENC_GRID_POINT_DIST, \$MA_SAFE_ENC_RESOL and the drive parameter field r0979)</p> <p>Replace the hardware</p> <p>Check and ensure that the EMC conditions are complied with.</p>
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27112	Axis %1 CRC error of the safety-related actual value
Parameter	%1 = axis number
Explanation	When checking the data consistency of the safety-related actual value (CRC), an error was detected.
Response	<p>Alarm display</p> <p>In addition, a STOP F is initiated, that can result in the subsequent Alarm 27001 with fault IDs 0, 27023 and 27024. Alarm 27001 with fault ID 0 can be prevented using the alarm reduction (\$MA_SAFE_ALARM_SUPPRESS_LEVEL greater than or equal to 1).</p>

10.2 NCK safety alarms for SINUMERIK 840D sl

Remedy	<p>Check the encoder mounting</p> <p>Check the encoder parameterization</p> <p>Check the NCK_MD (\$MA_SAFE_ENC_IS_LINEAR, \$MA_SAFE_ENC_GRID_POINT_DIST, \$MA_SAFE_ENC_RESOL and the drive parameter field r0979)</p> <p>Check whether the encoder evaluation was replaced (SMI, SMC, SME)</p> <p>Check the encoder ID in the MD \$MA_SAFE_ENC_IDENT</p> <p>Possible causes that the alarm is permanently present:</p> <ul style="list-style-type: none"> – The NCK monitoring channel for safety motion monitoring does not communicate with the monitoring channel of the assigned drive, but that of another axis. Check the assignment of the drive via HW Config, \$MA_SAFE_CTRLOUT_MODULE_NR, \$MN_SAFE_DRIVE_LOGIC_ADDRESS and p0978 for correctness. – Communication errors between the NCK and drive. <p>Replace the hardware</p> <p>Check and ensure that the EMC conditions are complied with.</p>
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27113	Axis %1 hardware encoder fault of the safety-related actual value
Parameter	%1 = axis number
Explanation	The encoder evaluation signals a hardware fault. Causes could be dirt in the optical encoder evaluation or problems associated with the signal transfer.
Response	<p>Alarm display</p> <p>In addition, a STOP F is initiated, that can result in the subsequent Alarm 27001 with fault IDs 0, 27023 and 27024. Alarm 27001 with fault ID 0 can be prevented using the alarm reduction (\$MA_SAFE_ALARM_SUPPRESS_LEVEL greater than or equal to 1).</p>
Remedy	<p>Replace the encoder hardware</p> <p>Check and ensure that the EMC conditions are complied with.</p>
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27124	Stop A initiated for at least one axis
Explanation	This alarm only indicates that Stop A has been initiated in at least one axis and power on is required to acknowledge the alarm. The alarm is output if the alarm priority function was activated in MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL.
Response	<p>Alarm display</p> <p>Interface signals are set</p> <p>"Pulse cancellation" is initiated for the axis involved.</p>
Remedy	Locate the cause of the error by evaluating additional alarm messages
Program continuation	Power-down the control and power-up again

27140	Wait for Motor Module for at least one axis
Explanation	<p>Alarm when booting as long as the Motor Module of at least one axis is still not ready for SI. When booting, communications to the Motor Module have still not been established as the safety functions for at least one axis are still not available.</p> <p>The alarm display can be set in MD \$MN_SAFE_ALARM_SUPPRESS_LEVEL (MD < 3) in such a way that it can be individually displayed as to whether communications have already been established for each axis.</p>
Response	<p>Alarm display</p> <p>Interface signals are set</p>
Remedy	<p>The alarm is continuously active when booting if at least one drive does not communicate. Otherwise, the alarm is only briefly present and is then automatically cleared again.</p> <p>Possible causes that the alarm is permanently present:</p> <ul style="list-style-type: none"> – The safety motion monitoring functions are only activated in \$MA_SAFE_FUNCTION_ENABLE, however, not in the corresponding parameter of the associated drive (p9501). – The axis → drive assignment via MD \$MA_SAFE_CTRL_OUT_MODULE_NR, \$MN_SAFE_DRIVE_LOGIC_ADDRESS or p0978 is incorrect. – PROFIBUS connector fallen out.
Program continuation	<p>The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required.</p>
27200	PROFIsafe: Cycle time %1 [ms] is too long
Parameter	%1 = parameterized cycle time
Explanation	<p>The PROFIsafe communication cycle time resulting from MD \$MN_PROFISAFE_IPO_TIME_RATIO and \$MN_IPO_CYCLE_TIME exceeds the permissible limit value of 25 ms.</p>
Response	<p>Mode group not ready</p> <p>Channel not ready</p> <p>NC start inhibit in this channel</p> <p>Interface signals are set</p> <p>Alarm display</p> <p>NC stop for alarm</p>
Remedy	Correct the cycle time.
Program continuation	<p>The alarm is initiated when booting if parameterized too long. No program can be started. Only delete the alarm with a power on.</p>

27201	PROFIsafe: MD %1[%2]: Bus segment %3 error
Parameter	%1 = MD name %2 = MD field index %3 = parameterized bus segment
Explanation	An incorrect bus segment was entered in the specified machine data. The value must be 5.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Correct the specified MD.
Program continuation	The alarm is initiated when booting. No program can be started. Only delete the alarm with a power on.
27202	PROFIsafe: MD %1[%2]: Address %3 error
Parameter	%1 = MD name %2 = MD field index %3 = parameterized PROFIsafe address
Explanation	The PROFIsafe address, parameterized in the specified MD is incorrect.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Correct the MD.
Program continuation	The alarm is initiated when booting. No program can be started. Only delete the alarm with a power on.
27203	PROFIsafe: MD %1[%2]: Incorrect SPL assignment
Parameter	%1 = MD name %2 = MD field index
Explanation	The parameterization in the specified MD for the connection between the SPL interface and a PROFIsafe module is incorrect. The reasons for this are as follows: <ul style="list-style-type: none"> – Bit limits interchanged (upper bit value < lower bit value) – Bit values greater than in the definition of the SPL interface (bit value > 64) – Number of bits too high for this PROFIsafe module (upper bit value – lower bit value > 8) – No SPL assignment was parameterized (both bit values are equal to zero) – Incorrect SPL assignment (bit value equal to zero)

Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Correct the displayed MD.
Program continuation	The alarm is initiated when booting. No program can be started. Only delete the alarm with a power on.
27204	PROFIsafe: Double assignment MD %1[%2] – MD %3[%4]
Parameter	%1 = MD name 1 %2 = MD field index for MD name 1 %3 = MD name 2 %4 = MD field index for MD name 2
Explanation	A double assignment has been illegally parameterized in the specified machine data. \$A_INSE are parameterized on several PROFIsafe modules. MDs involved: – MD \$MN_PROFISAFE_IN_ASSIGN
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Correct the displayed MD.
Program continuation	The alarm is initiated when booting. No program can be started. Only delete the alarm with a power on.
27205	PROFIsafe: Number of signals in MD %1[%2] < > MD %3[%4]
Parameter	%1 MD name 1 %2 MD field index to the MD name 1 %3 MD name 2 %4 MD field index to the MD name 2
Explanation	The parameterized number of signals used must be the same in both machine data.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Correct the MD.
Program continuation	The alarm is initiated when booting. No program can be started. Only delete the alarm with a power on.

27206	PROFIsafe: MD %1[%2] max. number of F net data (%3 bits) exceeded
Parameter	%1 MD name %2 MD field index to the MD name %3 F net data bits
Explanation	Data parameterized in the specified machine data lie outside the F net (useful) data area of the F module. Note: When displaying machine data PROFISAFE_IN/OUT_ADDRESS, the sub-slot address parameterized in the machine data exceeds the F net data area of the F module.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Correct the MD.
Program continuation	Switch control system OFF and ON again.
27207	PROFIsafe: MD %1[%2] max. sub-slot number: %3 exceeded
Parameter	%1 MD name %2 MD field index to the MD name %3 max. number of sub-slots
Explanation	The sub-slot parameterized in the specified machine data exceeds the max. permissible number of sub slots per PROFIsafe module.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Reduce the number of sub-slots by changing the F net (useful) data distribution of the PROFIsafe module.
Program continuation	Switch control system OFF and ON again.

27208	PROFIsafe: MD %1[%2] max. sub-slot address %3 exceeded
Parameter	%1 MD name %2 MD field index to the MD name %3 address, sub-slots
Explanation	An excessively high sub-slot address was entered in the specified MD. The entered value may not exceed the displayed maximum sub-slot address.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Correct the MD
Program continuation	Switch control system OFF and ON again.
27220	PROFIsafe: Number of NCK F modules (%1) <> number of S7-F modules (%2)
Parameter	%1 = number of parameterized NCK-F modules %2 = number of parameterized S7-F modules
Explanation	The number of F modules parameterized using the NCK machine data \$MN_PROFISAFE_IN/OUT_ADDRESS is: <ul style="list-style-type: none"> – greater than the number of PROFIBUS slaves in the configured S7 PROFIBUS – less than the number of F modules in the configured S7 PROFIBUS – greater than the number of F modules in the configured S7 PROFIBUS <p>If the alarm parameter %2 = 0, then none of the F modules, configured in the S7-PROFIBUS configuration were found.</p> <p>Generally, the cause of this alarm is an error in the parameterization of the PROFIsafe master address.</p>
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the F parameterization in the MD \$MN_PROFISAFE_IN/OUT_ADDRESS. Check the F configuration in the S7 PROFIBUS configuration. Check the parameterized PROFIsafe master address in MD \$MN_PROFISAFE_MASTER_ADDRESS and S7 PROFIBUS configuration.
Program continuation	Switch the control OFF – ON.

27221 PROFIsafe: NCK F module MD %1[%2] unknown

Parameter	%1 = MD name %2 = MD field index
Explanation	The F module parameterized in the specified machine data is unknown under this PROFIsafe address in the S7 configuration.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the PROFIsafe addresses in the NCK-MD and S7-DP configuration
Program continuation	Switch control system OFF and ON again.

27222 PROFIsafe: S7 F module PROFIsafe address %1 unknown

Parameter	%1 = PROFIsafe address
Explanation	The F module with the specified PROFIsafe address has not been parameterized as an F module in the NCK MD
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the S7 PROFIBUS configuration. Register the module in the NCK MD
Program continuation	Switch control system OFF and ON again.

27223 PROFIsafe: NCK F module MD %1[%2] is not a %3 module

Parameter	%1 = MD name %2 = MD field index %3 = module type
Explanation	The F module parameterized in the specified NCK MD has not been designated as an appropriate input/output module in the S7 PROFIBUS configuration. <ul style="list-style-type: none"> – %3 = INPUT: NCK F parameterization expects an INPUT module – %3 = OUTPUT: NCK F parameterization expects an OUTPUT module – %3 = IN/OUT: NCK F parameterization expects an INPUT/OUTPUT module

Response	<p>Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm</p>
Remedy	Check the module in the S7 PROFIBUS configuration
Program continuation	Switch control system OFF and ON again.
27224	PROFIsafe: F module MD %1[%2] – MD %3[%4]: Double assignment of the PROFIsafe address
Parameter	<p>%1 = MD name 1 %2 = MD field index 1 %3 = MD name 2 %4 = MD field index 2</p>
Explanation	In the NCK MD or in the S7 F parameters, the same PROFIsafe address has been parameterized for the F modules parameterized in the specific machine data. This means that a clear communications relationship between the F master and F slave is not possible.
Response	<p>Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm</p>
Remedy	Check and correct the S7 F parameterization and NCK–MD.
Program continuation	Switch control system OFF and ON again.
27225	PROFIsafe: Slave %1, configuration error, %2
Parameter	<p>%1 = PROFIBUS slave address %2 = configuration error</p>
Explanation	<p>An error has occurred during the evaluation of the S7 PROFIBUS configuration for the specific slave. This is further specified in alarm parameter %2. %2 = PRM header: The PRM telegram for this slave could not clearly be interpreted.</p>
Response	<p>Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm</p>
Remedy	Check the S7 PROFIBUS configuration and correct.
Program continuation	Switch control system OFF and ON again.

10.2 NCK safety alarms for SINUMERIK 840D sl

27240	PROFIsafe: DP M has not run-up, DP info: %1
Parameter	%1 = actual information from the DP interface NCK–PLC
Explanation	There is no DP configuration available to the NCK after the time specified using the MD \$MN_PLC_RUNNINGUP_TIMEOUT.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Increase MD \$MN_PLC_RUNNINGUP_TIMEOUT Check the PLC operating state Check the PLC operating system software release Delete the F parameterization in the NCK–MD
Program continuation	Switch control system OFF and ON again.
27241	PROFIsafe: DP M version different, NCK: %1, PLC: %2
Parameter	%1 = version of the DP interface on the NCK side %2 = version of the DP interface on the PLC side
Explanation	The DP interface has been implemented differently for the NCK and PLC components. The F communications cannot be initialized
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the PLC operating system and correct NCK software versions. Upgrade the PLC operating system. Delete NCK F parameterization.
Program continuation	Switch control system OFF and ON again.

27242	PROFIsafe: F module %1, %2 faulty
Parameter	%1 = PROFIsafe address %2 = F parameter error
Explanation	An error was detected while evaluating F parameters. %2 = CRC1: CRC error, F parameters. %2 = F_WD_Timeout: The monitoring time parameterized in Step 7 is too short for the PROFIsafe cycle time defined by the NCK-MD \$MN_PROFISAFE_IPO_TIME_RATIO. %2 = CRC2_Len: Incorrect length of the telegram CRC. %2 = F_Data_Len: Incorrect telegram length has been defined for the stated module.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	%2 = CRC1: General PLC reset, reload the S7 F configuration. %2 = F_WD_Timeout: Re-parameterize the PROFIsafe clock cycle time or F monitoring time. %2 = CRC2_Len: General PLC reset, reload the S7 F configuration.
Program continuation	Switch control system OFF and ON again.
27250	PROFIsafe: Configuration in DP-M changed; error code %1 – %2
Parameter	%1 = NCK project number %2 = current PLC project number
Explanation	The DP master indicates a modified S7 PROFIBUS configuration. Error-free operation can no longer be guaranteed.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Restart the PLC/NCK
Program continuation	Switch control system OFF and ON again.

27251	PROFIsafe: F module %1, %2 reports error %3
Parameter	%1 = PROFIsafe address %2 = signaling components (master/slave) %3 = error detection
Explanation	An error has occurred in the PROFIsafe communications between the F master and the specified F module which was detected by the component (master/slave) displayed in parameter %2. The error code specifies the error type: <ul style="list-style-type: none"> – %3 = TO: The parameterized communications timeout has been exceeded – %3 = CRC: A CRC error was detected – %3 = CN: An error was detected in the sequence (timing) of the F telegrams – %3 = SF: F master error, NCK/PLC are no longer in synchronism – %3 = EA: Communications error, slave sends empty telegrams
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the DP wiring. Restart the F slave modules. Restart the NCK/PLC.
Program continuation	Clear the alarm with the RESET key. Restart the part program.
27252	PROFIsafe: Slave %1, sign-of-live error
Parameter	%1 = DP slave address
Explanation	The specified DP slave no longer communicates with the master.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the DP wiring. Restart the F slave modules. Restart the NCK/PLC.
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27253 PROFIsafe: Communications fault F master component %1, error %2

Parameter	%1 = faulty components (NCK/PLC) %2 = error detection
Explanation	<p>The F master signals a communications error between the NCK and PLC.</p> <p>The cause of the error is indicated in error code %1:</p> <ul style="list-style-type: none"> – %1 = NCK: Link between PROFIsafe and SPL interface is interrupted. – %1 = PLC: The PLC no longer executes the OB40 request. – %1 = PLC–DPM: DP master is no longer in the OPERATE state. <p>Parameter %2 provides additional information about the reason for the error:</p> <ul style="list-style-type: none"> – %2 = 0: NCK–internal sequence error (refer to %1=NCK). – %2 = 1,2,4: PLC processing of the OB40 not finished.
Response	<p>Mode group not ready</p> <p>Channel not ready</p> <p>NC start inhibit in this channel</p> <p>Interface signals are set</p> <p>Alarm display</p> <p>NC stop for alarm</p>
Remedy	Extend the PROFIsafe cycle time using MD \$MN_PROFISAFE_IPO_TIME_RATIO.
Program continuation	Clear the alarm with the RESET key. Restart the part program.

27254 PROFIsafe: F module %1, error on channel %2; %3<ALSI>

Parameter	%1 = PROFIsafe address %2 = channel number %3 = supplementary info, system variables – field index
Explanation	<p>The F module signals that an error has occurred in the interface of the specified channel. This alarm is only initiated for ET200 F modules.</p> <p>The type of channel (input or output channel is displayed in %2 using the IN and OUT abbreviation).</p> <p>Using parameter %3, a specific alarm message can be configured on the HMI for each of the listed system variables:</p> <ul style="list-style-type: none"> – %3 = 1...64: Error in system variables \$A_INSE[1...64] – %3 = 65...128: Error in system variables \$A_OUTSE[1...64] – %3 = –1: Error in the input or output channel for which there is no SPL assignment.
Response	<p>Mode group not ready</p> <p>Channel not ready</p> <p>NC start inhibit in this channel</p> <p>Interface signals are set</p> <p>Alarm display</p> <p>NC stop for alarm</p>
Remedy	Check the wiring. Wiring OK: Replace the F module.
Program continuation	Remove the error and press RESET.

27255	PROFIsafe: F module %1, general error
Parameter	%1 = PROFIsafe address
Explanation	The specified PROFIsafe module signals an error: Additional information on the cause of the error cannot be made without further resources. This alarm is initiated for all types of PROFIsafe slaves.
Response	Mode group not ready Channel not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Check the wiring
Program continuation	Remove the error and press RESET.
27256	PROFIsafe: Actual cycle time %1 [ms] > parameterized cycle time
Parameter	%1 = actual PROFIsafe communications cycle time
Explanation	The actual PROFIsafe communication cycle time is greater than the value set using MD \$MN_PROFISAFE_IPO_TIME_RATIO. The parameterized PROFIsafe communication cycle time is continually exceeded on the PLC side.
Response	Mode group not ready NC start inhibit in this channel Interface signals are set Alarm display NC stop for alarm
Remedy	Adapt the cycle time using MD \$MN_PROFISAFE_IPO_TIME_RATIO. At least the value, displayed in %1 must be set. The selected cycle time has an effect on the runtime utilization of the PLC module. This must be taken into account in the setting.
Program continuation	Remove the error and press RESET
27299	PROFIsafe: Diagnostics %1 %2 %3 %4
Parameter	%1 error ID 1 %2 error ID 2 %3 error ID 3 %4 error ID 4
Explanation	Internal error in the NCK PROFIsafe implementation.
Response	Alarm display

Remedy	Please contact the Siemens I DT MC Hotline with the error text <ul style="list-style-type: none"> – Tel. 0180 / 5050 – 222 (Germany) – Fax 0180 / 5050 – 223 – Tel. +49–180 / 5050 – 222 (outside Germany) – Fax +49–180 / 5050 – 223 – mailto:techsupport@ad.siemens.de
Program continuation	Power-down the control and power-up again
27900	Profibus-DP: SI fault, axis %1, code %2, value %3, time %4
Parameter	%1 axis number %2 fault code of the drive (p9747) %3 fault value of the drive (p9749) %4 fault time of the drive (p9748)
Explanation	SINAMICS drive fault.
Response	Alarm display
Remedy	Fault codes/fault values, refer to the drive documentation.
Program continuation	The alarm is no longer displayed when the alarm cause has been removed. No other operator actions are required.
27901	Profibus-DP: SI fault, axis %1, code %2, value %3, time %4
Parameter	%1 axis number %2 fault code of the drive (p9747) %3 fault value of the drive (p9749) %4 fault time of the drive (p9748)
Explanation	SINAMICS drive fault.
Response	Alarm display
Remedy	Fault codes/fault values, refer to the drive documentation.
Program continuation	Remove the error and press RESET.

10.3 Safety messages for SINAMICS S120

10.3.1 General information

Note

In the HMI environment, faults and alarms are displayed specifying a six-digit number that always starts with 2. This means, e.g. F01600 then 201600. In this Chapter, faults and alarms are described with numbers from the SINAMICS environment.

In the HMI environment, faults and alarms are treated like alarms.

Differences between faults and alarms

Table 10-2 Differences between faults and alarms

Type	Description
Faults	<p>What happens when a fault occurs?</p> <ul style="list-style-type: none"> • The appropriate fault response is initiated. • Status signal ZSW1.3 is set. • The fault is entered in the fault buffer. <p>How are the faults eliminated?</p> <ul style="list-style-type: none"> • Remove the cause of the fault. • Acknowledge the fault.
Warnings	<p>What happens when an alarm occurs?</p> <ul style="list-style-type: none"> • Status signal ZSW1.7 is set. • The warning is entered in the warning buffer. <p>How are alarms removed?</p> <ul style="list-style-type: none"> • Alarms are self acknowledging, that is, they are reset automatically when the cause of the alarm has been eliminated.

Fault responses

The standard fault responses according to PROFIdrive, that are used for safety, are described in the Table 10-3. The OFF 2 fault response is used as additional stopping measure while the pulses are safely cancelled via the safety-related shut-down paths.

10.3 Safety messages for SINAMICS S120

Table 10-3 Fault responses

Fault response	Response	Description	Safety stop response
OFF 2 (OFF 2)	Internal/external pulse disable	<ul style="list-style-type: none"> Instantaneous pulse cancellation, the drive "coasts" to a standstill. The motor holding brake (if parameterized) is closed immediately. Power-on disable is activated. 	STOP A, Test stop
OFF 3	Brakes along the OFF 3 down ramp and then the pulses are cancelled	<ul style="list-style-type: none"> The drive is braked along the OFF3 down ramp (p1135) by immediately entering n_set = 0. When zero speed is detected, the motor holding brake (if parameterized) is closed. The pulses are cancelled when the brake application time (p1217) expires. Zero speed is detected if the actual speed drops below the threshold in p1226 or if the monitoring time (p1227) started when speed setpoint <= speed threshold (p1226) has expired. 	STOP B (after r9556 has expired or p9560 is fallen below, STOP A is initiated)
STOP 2 (Halt 2)	n_set = 0	<ul style="list-style-type: none"> The drive is braked along the OFF 3 down ramp (p1135) by immediately entering n_set = 0. The drive remains in closed-loop speed control mode. 	STOP C

10.3 Safety messages for SINAMICS S120

Acknowledging faults

The list of faults and alarms specifies how to acknowledge each fault after the cause has been removed.

Table 10-4 Acknowledging faults

List	Description
POWER ON	The fault is acknowledged by a POWER ON process (switch drive unit off and on again). Note: If the fault cause has still not been resolved, then the fault is immediately displayed again after booting.
IMMEDIATELY	Starting from a drive object, the fault can be acknowledged by the following methods: <ol style="list-style-type: none"> 1. Acknowledging by setting a parameter: p3981 = 0 → 1 2. Acknowledging via binector inputs: p2103 BI: 1. Acknowledge faults p2104 BI: 2. Acknowledge faults p2105 BI: 3. Acknowledge faults 3. Acknowledging via a PROFIBUS control signal: STW1.7 = 0 → 1 (edge) Note: <ul style="list-style-type: none"> • This fault can also be acknowledged using POWER ON. • If the cause of the fault has not been removed the fault is not cleared after acknowledgement. • Faults from SH/SBC The safe standstill (SH) function must be deselected
READY TO OPERATE	The fault can only be acknowledged in the READY state. In this state, the DC link is charged and the pulses are inhibited.

How faults and alarms are represented

Axxxxx	Alarm xxxxx
Axxxxx (F, N)	Alarm xxxxx (message type can be changed into F or N)
Fxxxxx	Fault xxxxx
Fxxxxx (A, N)	Fault xxxxx (message type can be changed to A or N)
Nxxxxx	No message
Nxxxxx (A)	No message (message type can be changed to A)
Cxxxxx	Safety message (dedicated message buffer)

A message comprises a letter as suffix followed by the number.

The letters have the following meanings:

- A means "Alarm"
- F means "Fault"
- N means "No message" or "Internal message" or "No report"
- C means "safety message"

The optional brackets indicates whether the type specified for this message can be changed and which message types can be selected via parameter.

Information about the response and acknowledgement are independently specified for a message with adjustable message type (e.g. response to F, acknowledgement for F).

10.3.2 List of faults and alarms

Note

- In the HMI environment, faults and alarms are displayed specifying a six-digit number that always starts with 2. This means, e.g. F01600 then 201600. In this Chapter, faults and alarms are described with numbers from the SINAMICS environment.
 - In the HMI environment, faults and alarms are treated like alarms.
-

List of faults (Control Unit)

F01600	SI CU: STOP A initiated
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive on the Control Unit has detected a fault and initiated a STOP A (pulse cancellation via the safety shutdown path of the Control Unit).</p> <ul style="list-style-type: none"> – Forced checking procedure of the safety shutdown path of the Control Unit unsuccessful. – Subsequent response to fault F01611 (defect in a monitoring channel). <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 0: Stop request from the Motor Module 1005: Pulses cancelled although SH not selected and there is not internal STOP A present. 1010: Pulses enabled although SH is selected or an internal STOP A is present. 1015: Feedback of the safe pulse cancellation for Motor Modules connected in parallel are different. 9999: Subsequent response to fault F01611.

10.3 Safety messages for SINAMICS S120

Remedy	<p>Select safe standstill and then deselect again.</p> <ul style="list-style-type: none"> – Replace the Motor Module involved. <p>Re fault value = 9999:</p> <ul style="list-style-type: none"> – Carry out diagnostics for fault F01611 that is present.
--------	---

F01611**SI CU: Defect in a monitoring channel**

Response NONE (OFF1, OFF2, OFF3)

Acknowledgement IMMEDIATELY (POWER ON)

Explanation The "Safety Integrated" function integrated in the drive on the Control Unit has detected a fault in the crosswise data comparison between CU and Motor Module (MM) and has initiated a STOP F. As a result of this fault, after the parameterized transition has expired (p9658), fault F01600 (SI CU: STOP A initiated) is output. Fault value (r0949, decimal):

- 0: Stop request from the Motor Module
- 1 to 999: Number of the crosswise compared data that resulted in this fault. This number is also displayed in r9795.
 - 1: SI monitoring clock cycle (r9780, r9880).
 - 2: SI enable safety functions (p9601, p9801).
 - 3: SI SGE changeover, tolerance time (p9650, p9850).
 - 4: SI transition time STOP F to STOP A (p9658, p9858).
 - 5: SI enable safe brake control (p9602, p9802).
 - 6: SI motion, enable safety functions (p9501, internal value).
 - 7: SI delay time of the pulse cancellation for Safe Stop 1 (p9652, p9852).
 - 8: PROFIsafe address (p9610, p9810).
- 1000: Check (watchdog) timer has expired. Within the time of approx. 5 * p9650 too many switching operations have occurred at terminal EP of the Motor Module.
- 1001, 1002: Initialization error, change timer/check timer.
- 2000: Status of the SH terminals on the Control Unit and Motor Module are different.
- 2001: Feedback signal for safe pulse cancellation on the Control Unit and Motor Module are different.
- 2002: Status of the delay timer SS1 on the Control Unit and Motor Module are different.
- 2004: Status of the SH selection for modules connected in parallel are different.
- 2005: Feedback signal of the safe pulse cancellation on the Control Unit and Motor Modules connected in parallel are different.

Remedy	<p>Re fault value = 1 to 999:</p> <ul style="list-style-type: none"> – Check the crosswise compared data that resulted in a STOP F. – Carry out a POWER ON (power off/on) for all components. – Upgrade the Motor Module software. – Upgrade the Control Unit software. <p>Re fault value = 1000:</p> <ul style="list-style-type: none"> – Check the EP terminal at the Motor Module (contact problems). <p>Re fault value = 1001, 1002:</p> <ul style="list-style-type: none"> – Carry out a POWER ON (power off/on) for all components. – Upgrade the Motor Module software. – Upgrade the Control Unit software. <p>Re fault value = 2000, 2001, 2002, 2004, 2005:</p> <ul style="list-style-type: none"> – Check the tolerance time SGE changeover and if required, increase the value (p9650/p9850, p9652/p9852). – Check the wiring of the safety-related inputs (SGE) (contact problems). – Replace the Motor Module involved.
F01612	SI CU: STO inputs for power units connected in parallel different
Response	NONE
Acknowledgement	IMMEDIATELY
Explanation	<p>The drive-autonomous function "Safety Integrated" on the Control Unit (CU) has identified different states of the AND'ed STO inputs for power units connected in parallel and has initiated a STOP F.</p> <p>As a result of this fault, after the parameterized transition has expired (p9658), fault F01600 (SI CU: STOP A initiated) is output.</p> <p>Fault value (r0949, interpret as binary):</p> <p>Binary image of the Control Unit digital inputs that are used as signal source for the "Safe Torque Off" function.</p>
Remedy	<ul style="list-style-type: none"> – Check the tolerance time SGE changeover and if required, increase the value (p9650). <p>Check the wiring of the safety-related inputs (SGE) (contact problems).</p>

10.3 Safety messages for SINAMICS S120

N01620 (F, A)	SI CU: Safe standstill active
Response	NONE
Acknowledgement	NONE
Explanation	The "safe standstill" function has been selected on the Control Unit (CU) and is active. Note: This message does not result in a safety stop response.
Remedy	None necessary.
Response as for F	OFF2
Acknowledgement for F	IMMEDIATELY (POWER ON)
Response for A	NONE
Acknowledgement for A	NONE
N01621 (F, A)	SI CU: Safe Stop 1 active
Response	NONE
Acknowledgement	NONE
Explanation	The "Safe Stop 1" (SS1) function has been selected on the Control Unit (CU) and is active. Note: This message does not result in a safety stop response.
Remedy	None necessary.
F01625	SI CU: Sign-of-life error in safety data
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The "Safety Integrated" function integrated in the drive on the Control Unit (CU) has detected an error in the sign-of-life of the safety data between the CU and Motor Module (MM) and initiated a STOP A. – There is either a DRIVE-CLiQ communications error or communications have failed. – A time slice overflow of the safety software has occurred. Fault value (r0949, decimal): Only for internal Siemens troubleshooting.

Remedy	<p>Select safe standstill and then deselect again.</p> <ul style="list-style-type: none"> – Carry out a POWER ON (power off/on) for all components. – Check whether there is a DRIVE–CLiQ communications error between the Control Unit and the Motor Module involved and if required, carry out a diagnostics routine for the faults identified. – Deselect all drive functions that are not absolutely necessary. – Reduce the number of drives. – Check the electrical cabinet design and cable routing for EMC compliance.
--------	---

F01630**SI CU: Brake control defective**

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive on the Control Unit (CU) has detected a brake control fault and initiated a STOP A.</p> <ul style="list-style-type: none"> – No motor holding brake connected. – The motor holding brake control on the Motor Module is faulty. – A DRIVE–CLiQ communications error has occurred between the Control Unit and the Motor Module involved. <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 10: No brake connected or fault in the Motor Module brake control circuit ("open brake" operation). 11: Defect in the brake control circuit of the Motor Module ("brake open" operation). 20: Short-circuit in the brake winding or fault in the brake control circuit of the Motor Module ("brake open" state). 30: No brake connected, short-circuit in the brake winding or fault in the Motor Module brake control circuit ("close brake" operation). 31: Defect in the brake control circuit of the Motor Module ("close brake" operation). 40: Defect in the brake control circuit of the Motor Module ("brake closed" state). 50: Defect in the brake control circuit of the Motor Module or communications fault between the Control Unit and the Motor Module (brake control diagnostics).

10.3 Safety messages for SINAMICS S120

Remedy	<p>Select safe standstill and then deselect again</p> <ul style="list-style-type: none"> – Check the motor holding brake connection. – Check the function of the motor holding brake. – Check whether there is a DRIVE–CLiQ communications error between the Control Unit and the Motor Module involved and if required, carry out a diagnostics routine for the faults identified. – Check the electrical cabinet design and cable routing for EMC compliance. – Replace the Motor Module involved.
--------	---

F01649**SI CU: Internal software error**

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>An internal error in the Safety Integrated software on the Control Unit has occurred.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, interpret as hexadecimal):</p> <p>Only for internal Siemens troubleshooting.</p>
Remedy	<p>Carry out a POWER ON (power off/on) for all components</p> <ul style="list-style-type: none"> – Re–commission the "Safety Integrated" function and carry out a power on. – Upgrade the Control Unit software. – Contact the Hotline. – Replace the Control Unit.

F01650**SI CU: Acceptance test required**

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive on the Control Unit requires an acceptance test.</p> <p>Note:</p> <p>This fault results in a STOP A that can be acknowledged.</p> <p>Fault value (r0949, decimal)</p> <p>130: No safety parameters available for the Motor Module.</p> <p>1000: Reference and actual checksum on the Control Unit are not identical (when booting).</p> <ul style="list-style-type: none"> – At least one checksum–checked piece of data is defective. <p>2000: Reference and actual checksum on the Control Unit are not identical (commissioning mode).</p> <ul style="list-style-type: none"> – Reference checksum incorrectly entered into the Control Unit (p9799 not equal to r9798).

10.3 Safety messages for SINAMICS S120

- 2001: Reference and actual checksum on the Motor Module are not identical (commissioning mode).
 - Reference checksum incorrectly entered into the Motor Module (p9899 not equal to r9898).
- 2002: Enable of safety-related functions between the Control Unit and Motor Module differ (p9601 not equal to p9801).
- 2003: Acceptance test is required as a safety parameter has been changed.
- 2004: Acceptance test required due to a project download with enabled safety functions.
- 2005: The safety logbook has identified that a functional checksum has changed. An acceptance test must be carried out.
- 2010: Safe brake control is enabled differently the Control Unit and Motor Module (p9602 not equal to p9802).
- 2020: Error when saving the safety parameters for the Motor Module.
- 9999: Subsequent response of another safety-related fault that occurred when booting that requires an acceptance test.

Remedy

- Re fault value = 130:
 - Carry out safety commissioning routine.
- Re fault value = 1000:
 - Repeat safety commissioning.
 - Replace the CompactFlash Card.
- Re fault value = 2000:
 - Check the safety parameters in the Control Unit and adapt the reference checksum (p9799).
- Re fault value = 2001:
 - Check the safety parameters on the Motor Module and adapt the reference checksum (p9899).
- Re fault value = 2002:
 - Safety-related functions on the Control Unit and on the Motor Module are enabled differently (p9601 not equal to p9801).
- Re fault value = 2003, 2004, 2005:
 - Carry out acceptance test and prepare acceptance report. The procedure when carrying out the acceptance test and an example for the acceptance report are provided in the documentation for SINAMICS Safety Integrated. For fault value 2005 the alarm can be acknowledged if the "Safe Torque Off" (STO) is deselected.
- Re fault value = 2010:
 - Enable the safe brake control in the Control Unit and check on the Motor Module (p9602 = p9802).
- Re fault value = 2020:
 - Repeat safety commissioning.
 - Replace the CompactFlash Card.
- Re fault value = 9999:
 - Carry out diagnostics for the other safety-related fault that is present.

F01651	SI CU: Synchronization, safety time slices unsuccessful
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function requires synchronization of the safety time slices between the Control Unit (CU) and the Motor Module (MM) and between the Control Unit and the higher-level control. This synchronization routine was not successful.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <p>Only for internal Siemens troubleshooting.</p>
Remedy	<p>Carry out a POWER ON (power off/on) for all components</p> <ul style="list-style-type: none"> – Upgrade the Motor Module software. – Upgrade the Control Unit software. – Upgrade the software of the higher-level control.
F01652	SI CU: Monitoring clock cycle not permissible
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The Safety Integrated monitoring clock cycle is not permissible:</p> <ul style="list-style-type: none"> – The monitoring clock cycle integrated in the drive cannot be maintained due to the communication conditions requested in the system. – The monitoring clock cycle for the safety-related motion monitoring functions with the higher-level control is not permissible (p9500). <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> – When the SI monitoring, integrated in the drive is enabled (p9601/p9801 > 0): Minimum setting for the monitoring clock cycle (in µs). – When the motion monitoring is enabled (p9501 > 0): <ul style="list-style-type: none"> 100: It was not possible to find an appropriate monitoring clock cycle. 101: The monitoring clock cycle is not an integer multiple of the position controller clock cycle. 102: An error has occurred when transferring the DP clock cycle to the Motor Module (MM). 103: An error has occurred when transferring the DP clock cycle to the Sensor Module.
Remedy	<p>When the SI monitoring, integrated in the drive is enabled (p9601/p9801 > 0).</p> <ul style="list-style-type: none"> – Upgrade the Control Unit software. <p>When the motion monitoring is enabled (p9501 > 0):</p> <ul style="list-style-type: none"> – Correct the monitoring clock cycle (p9500) and carry out a POWER ON.

F01653	SI CU: PROFIBUS configuration error
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The PROFIBUS configuration for operating Safety Integrated monitoring functions with a higher-level control (SINUMERIK or F-PLC) is incorrect.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, interpret as decimal):</p> <p>200: A safety slot has not been configured for the receive data from the control.</p> <p>210, 220: The configured safety slot for the receive data from the control has an unknown format.</p> <p>230: The configured safety slot for the receive data from the F-PLC has the incorrect length.</p> <p>240: The configured safety slot for the receive data from SINUMERIK has the incorrect length.</p> <p>300: A safety slot has not been configured for the send data to the control.</p> <p>310, 320: The configured safety slot for the send data to the control has an unknown format.</p> <p>330: The configured safety slot for the send data to the F-PLC has the incorrect length.</p> <p>340: The configured safety slot for the send data to the SINUMERIK has the incorrect length.</p>
Remedy	<p>Check the PROFIBUS configuring of the safety slot on the master side and, if required, correct.</p> <ul style="list-style-type: none"> – Upgrade the Control Unit software.

F01655	SI CU: Align the monitoring functions
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>An error has occurred when aligning the Safety Integrated monitoring functions on the Control Unit (CU) and Motor Module (MM). Control Unit and Motor Module were not able to determine a common set of supported SI monitoring functions.</p> <ul style="list-style-type: none"> – DRIVE-CLiQ communications has an error or failed. – Safety Integrated software releases on the Control Unit and the Motor Module are not compatible with one another. <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, interpret as hexadecimal):</p> <p>Only for internal Siemens troubleshooting.</p>

10.3 Safety messages for SINAMICS S120

Remedy	<p>Carry out a POWER ON (power off/on) for all components</p> <ul style="list-style-type: none"> – Upgrade the Motor Module software. – Upgrade the Control Unit software. – Check the electrical cabinet design and cable routing for EMC compliance.
--------	---

F01656 SI CU: Incorrect Motor Module parameter

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>When accessing the Safety Integrated parameters for the Motor Module (MM) on the CompactFlash Card, an error has occurred.</p> <p>Note:</p> <p>This fault results in a STOP A that can be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 129: Safety parameters for the Motor Module corrupted. 131: Internal Motor Module software error. 132: Communication errors when uploading or downloading the safety parameters for the Motor Module. 255: Internal software error on the Control Unit.
Remedy	<p>Re-commission the safety functions.</p> <ul style="list-style-type: none"> – Upgrade the Control Unit software. – Upgrade the Motor Module software. – Replace the CompactFlash Card. <p>Re fault value = 132:</p> <ul style="list-style-type: none"> – Check the electrical cabinet design and cable routing for EMC compliance.

F01659 SI CU: Write task for parameter rejected

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The write task for one or several Safety Integrated parameters on the Control Unit (CU) was rejected.</p> <p>Note:</p> <p>This fault does not result in a safety stop response.</p> <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 1: The Safety Integrated password is not set. 2: A drive parameter reset was selected. However, the Safety Integrated parameters cannot be reset as Safety Integrated is presently enabled. 3: The interlocked SH input is in the simulation mode. 10: An attempt was made to enable the SH function although this cannot be supported. 11: An attempt was made to enable the SBC function although this cannot be supported.

10.3 Safety messages for SINAMICS S120

- 12: An attempt was made to enable the SBC function although this cannot be supported for a parallel circuit configuration.
- 13: An attempt was made to enable the SS1 function although this cannot be supported.
- 14: An attempt was made to enable the PROFIsafe communication function although this cannot be supported.
- 15: An attempt was made to enable the motion monitoring function integrated in the drive although this cannot be supported.
- 16: An attempt was made to enable the SH function although this cannot be supported when the internal voltage protection (p1231) is enabled.

See also: p0970 (reset infeed parameters), p3900 (complete fast commissioning), r9771 (SI common functions (Control Unit)), r9871 (SI common functions (Motor Module))

Remedy

Re fault value = 1:

- Set the Safety Integrated password (p9761).

Re fault value = 2:

- Inhibit Safety Integrated and again reset the drive parameters.

Re fault value = 3:

- Simulation mode for the digital input ended (p0795).

Re fault value = 10, 11, 12, 13, 14, 15:

- Check whether there are faults in the safety function alignment between the Control Unit and the Motor Module involved (F01655, F30655) and if required, carry out diagnostics for the faults involved.
- Use a Motor Module that supports the functions "Safe standstill", "Safe brake control", "PROFIsafe", "Drive-integrated motion monitoring functions".
- Upgrade the Motor Module software.
- Upgrade the Control Unit software.

Re fault value = 16:

- Inhibit the internal voltage protection (p1231).

See also: p9501 (SI motion enable safe functions), p9601 (SI enable functions integrated in the drive (Control Unit)), p9620 (SI signal source for SH/SBC/SS1 (Control Unit)), p9761 (SI password input), p9801 (SI enable functions integrated in the drive (Motor Module))

10.3 Safety messages for SINAMICS S120

F01660	SI CU: Safety-related functions not supported
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The Motor Module (MM) does not support the safety-related functions (e.g. the Motor Module version is not the correct one). Safety Integrated cannot be commissioned.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p>
Remedy	<p>Use a Motor Module that supports the safety-related functions.</p> <ul style="list-style-type: none"> – Upgrade the Motor Module software.
F01670	SI motion: Invalid Sensor Module parameterization
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The parameterization of a Sensor Module used for Safety Integrated is not permissible.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <ol style="list-style-type: none"> 1: No encoder was parameterized for Safety Integrated. 2: An encoder was parameterized for Safety Integrated that does not have an A/B (sine/cosine) track. 3: The encoder data set selected for Safety Integrated is still not valid. 4: The communications error with the encoder has occurred. 10: For an encoder used for Safety Integrated, not all of the drive data sets (DDS) are assigned to the same encoder data set (EDS) (p0187 ...p0189).
Remedy	<p>Re fault value = 1, 2:</p> <ul style="list-style-type: none"> – Use and parameterize an encoder that Safety Integrated supports (encoder with A/B track, sinusoidal, p0404.4 = 1) <p>Re fault value = 3:</p> <ul style="list-style-type: none"> – Check whether the device or drive commissioning is active and if required, initiate this (p0009 = p0010 = 0), save the parameters (p0971 = 1) and carry out a power on. <p>Re fault value = 4:</p> <ul style="list-style-type: none"> – Check whether there is a DRIVE-CLiQ communications error between the Control Unit and the Sensor Module involved and if required, carry out a diagnostics routine for the faults identified. <p>Re fault value = 10:</p> <ul style="list-style-type: none"> – Align the EDS assignment for all encoders used for Safety Integrated (p0187 ...p0189).

F01671	SI motion: Encoder parameterization error
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The parameterization of the encoder used for Safety Integrated is not the same as the parameterization of the standard encoder.</p> <p>Fault value (r0949, decimal):</p> <p>Parameter number of the non-corresponding safety parameter.</p>
Remedy	Align the encoder parameterization between the safety encoder and the standard encoder.
F01672	SI motion: Motor Module software not compatible
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The existing Motor Module software does not support the safety-related motion monitoring with the higher-level control.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <p>Only for internal Siemens troubleshooting.</p>
Remedy	<p>Check whether there are errors in the safety function alignment between the Control Unit and the Motor Module involved (F01655, F30655) and if required, carry out diagnostics for the errors involved.</p> <ul style="list-style-type: none"> – Use a Motor Module that supports the safety-related motion monitoring functions. – Upgrade the Motor Module software.
F01673	SI motion: Sensor Module software not compatible
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The existing Sensor Module software does not support the safety-related motion monitoring with the higher-level control.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <p>Only for internal Siemens troubleshooting.</p>
Remedy	<p>Use a Sensor Module that supports the safety-related motion monitoring functions.</p> <ul style="list-style-type: none"> – Upgrade the Sensor Module software.

10.3 Safety messages for SINAMICS S120

F01680	SI motion: Checksum error, safety-related monitoring functions
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The actual checksum calculated by the drive and entered into r9728 over the safety-related parameters does not match the reference checksum in p9729 saved when the machine was accepted the last time. The safety-related parameters have been changed or there is an error.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 0: Checksum error for SI parameters for motion monitoring 1: Checksum error for SI parameters for actual values
Remedy	<p>Check the safety-related parameters and if required correct.</p> <ul style="list-style-type: none"> – Carry out a POWER ON – Carry out an acceptance test.
C01681	SI motion: Incorrect parameter value
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The parameter value may not be parameterized with this value.</p> <p>Fault value (r0949, decimal):</p> <p>Parameter number with the incorrect value</p>
Remedy	Correct the parameter value.
F01682	SI motion: Monitoring function is not supported
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The monitoring function enabled in p9501, p9601 or p9801 is not supported in this firmware version.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 1: SLP monitoring function is not supported (p9501.1) 2: Monitoring function SCA is not supported (pp9501.7 and p9501.8 – 15 and p9503) 3: Monitoring function SLS override is not supported (p9501.5) 10: Only the servo drive object supports monitoring functions.

- 20: Motion monitoring functions integrated in the drive only supported in conjunction with PROFIsafe (p9501 and p9601.1 – 2 and p9801.1 –2)
- 21: PROFIsafe only supported in conjunction with motion monitoring functions integrated in the drive (p9501 and p9601.1 – 2 and p9801.1 –2)

Remedy Deselect monitoring function involved (p9501, p9503, p9601, p9801).

F01683**SI motion: SOS/SLS enable missing**

Response

OFF2

Acknowledgement

IMMEDIATELY (POWER ON)

Explanation

In p9501, the safety-related basic function SOS/SLS has not been enabled although other safety-related monitoring functions have been enabled.

Note:

This fault results in a STOP A that cannot be acknowledged.

Remedy

Enable the function "SOS/SLS" (p9501.0) and carry out a POWER ON.

F01684**SI motion: Safely limited position limit values interchanged**

Response

OFF2

Acknowledgement

IMMEDIATELY (POWER ON)

Explanation

For the function "Safely limited position" (SLP), in p9534 there is a value less than that in p9535.

Note:

This fault results in a STOP A that cannot be acknowledged.

Fault value (r0949, decimal):

1:	Limit values SLP1 interchanged
2:	Limit values SLP2 interchanged

Remedy

Correct the limit values in p9534 and p9535 and carry out a POWER ON.

F01685**SI motion: Safely limited speed limit value too high**

Response

OFF2

Acknowledgement

IMMEDIATELY (POWER ON)

Explanation

The limit value for the function "Safely limited speed" (SLS) is greater than the speed that corresponds to an encoder limit frequency of 500 kHz.

Fault value (r0949, decimal):

Maximum permissible speed

Remedy

Correct the limit values for SLS and carry out a POWER ON.

10.3 Safety messages for SINAMICS S120

F01686	SI motion: Cam position parameterization not permissible
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>Parameterization error of the safe cam positions in p9536 or p9537. The fault value indicates the number of the "Safe cam" with the illegal position.</p> <p>Causes of the fault:</p> <ul style="list-style-type: none"> – The safe cam that is enabled has been parameterized too close to the tolerance range around the modulo position. – The distance between the individual cams on a cam track is not sufficient. – The cam length of a "safe cam" on a cam track (= p9536[x] – p9537[x]) is less than the required minimum length. <p>Fault value (r0949, interpret as decimal): Number of the "safe cam" with an illegal position. See also: p9501 (SI motion enable safety functions (Control Unit), p9503 (SI motion SCA (SN) enable (Control Unit))</p>
Remedy	Correct the cam position and carry out a POWER ON.
F01687	SI motion: Illegal parameterization of modulo value SCA (SN)
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The parameterized modulo value for the function "safe cams" (SCA) is not a multiple of 360 000 mDegree.
Remedy	Correct the modulo value for SCA and carry out a POWER ON.
F01688	SI motion: Actual value synchronization not permissible
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	It is not permissible to enable the actual value synchronization and simultaneously a monitoring function with absolute reference (SE/SN).
Remedy	Either deselect the monitoring functions with absolute reference (SE/SN) or the function "actual value synchronization" and carry out a power on.

C01689	SI motion: Axis re-configured
Response	OFF2
Acknowledgement	POWER ON
Explanation	The axis configuration was changed. Parameter p0108. 13 is internally set to the corrected value. Fault value (r0949, decimal): Parameter number that initiated the change. See also: p9502 (SI motion axis type)
Remedy	Initiate data save on the complete Control Unit and carry out a POWER ON.

A01698 (F)	SI CU: Commissioning mode active
Response	NONE
Acknowledgement	NONE
Explanation	The commissioning of the "Safety Integrated" function is selected. This message is withdrawn after the safety functions have been commissioned. Note: This message does not result in a safety stop response. See also: p0010 (infeed commissioning, parameter filter)
Remedy	None necessary
Response	NONE (OFF1, OFF2, OFF3)
Acknowledgement for F	IMMEDIATELY (POWER ON)

A01699 (F)	SI CU: Shutdown paths must be tested
Response	NONE
Acknowledgement	NONE
Explanation	The time set in p9659 for the forced checking procedure of the safety shutdown paths has been exceeded. The safety shutdown paths must be re-tested. After the next time that the function "safe standstill" (SH) is deselected, the message is withdrawn and the monitoring time is reset. Note: This message does not result in a safety stop response. See also: p9659 (SI forced checking procedure, timer)
Remedy	Select safe standstill and then deselect again
Response	NONE (OFF1, OFF2, OFF3)
Acknowledgement for F	IMMEDIATELY (POWER ON)

10.3 Safety messages for SINAMICS S120

C01700	SI motion: STOP A initiated
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The drive is stopped using a STOP A (the pulses are cancelled via the safety shutdown path of the Control Unit).</p> <p>Possible causes:</p> <ul style="list-style-type: none"> – Stop request from the higher-level control. – Pulses have not been cancelled after a parameterized time (p9557) after the test stop was selected. – Subsequent response of message C01706 "SI motion: Safe acceleration monitoring exceeded". – Subsequent response of message C01714 "SI motion: Safely reduced speed exceeded". – Subsequent response of message C01701 "SI motion: STOP B initiated".
Remedy	<p>Remove the cause of the fault on the control and carry out a power on.</p> <ul style="list-style-type: none"> – Check the value in p9557 – if required increase the value and carry out a power on. – Check the shutdown path of the Control Unit (check DRIVE-CLiQ communications). – Carry out diagnostics for message C01706. – Carry out diagnostics for message C01714. – Carry out diagnostics for message C01701. – Replace the module. – Replace the Control Unit
C01701	SI motion: STOP B activated
Response	OFF3
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The drive is stopped using STOP B (braking along the OFF3 ramp). As a result of this fault, after the time parameterized in p9556 has expired or the speed threshold parameterized in p9560 has been fallen below, message C01700 "STOP A initiated" is output.</p> <p>Possible causes</p> <ul style="list-style-type: none"> – Stop request from the higher-level control. – Subsequent response of message C01714 "SI motion: Safely reduced speed exceeded". – Subsequent response of message C01711 "SI motion: Defect in a monitoring channel".
Remedy	<p>Remove the cause of the fault on the control and carry out a power on.</p> <ul style="list-style-type: none"> – Carry out diagnostics for message C01714. – Carry out diagnostics for message C01711.

C01706	SI motion: Safe acceleration monitoring limit exceeded.
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	After the initiation of STOP B or STOP C, the speed exceeded the selected tolerance value. The drive is stopped by the message C01700 "STOP A initiated".
Remedy	Check the braking behavior and if required adapt the tolerance for "safe acceleration monitoring" (SBR).
C01707	SI motion: Tolerance for safe operating stop exceeded
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The actual position has moved further away from the setpoint position than permitted in the stop tolerance. The drive is stopped with the message C01701 "SI motion: STOP B initiated".
Remedy	Check whether additional safety faults are present and if required, carry out the diagnostics for the faults involved. <ul style="list-style-type: none"> – Check whether the stop tolerance matches the accuracy and dynamic performance of the axis. – Carry out a power on.
C01708	SI motion: STOP C activated
Response	STOP2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The drive is stopped using STOP C (braking along the OFF3 deceleration ramp). "Safe operating stop" (SBH) is activated after the parameterized timer has expired. Possible causes: <ul style="list-style-type: none"> – Stop request from the higher-level control – Subsequent response of message C01714 "SI motion: Safely reduced speed exceeded". – Subsequent response of message C01715 "SI motion: Safe limit position exceeded". See also: p9552 (SI motion, transition time STOP C to SBH)
Remedy	Remove the cause of the fault on the control and carry out a power on. <ul style="list-style-type: none"> – Carry out diagnostics for message C01714.

10.3 Safety messages for SINAMICS S120

C01709	SI motion: STOP D is activated
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The drive is stopped using STOP D (braking along the path). "Safe operating stop" (SBH) is activated after the parameterized timer has expired.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> – Stop request from the higher-level control – Subsequent response of message C01714 "SI motion: Safely reduced speed exceeded". – Subsequent response of message C01715 "SI motion: Safe limit position exceeded". <p>See also: p9553 (SI motion, transition time STOP D to SBH)</p>
Remedy	<p>Remove the cause of the fault on the control and carry out a power on.</p> <ul style="list-style-type: none"> – Carry out diagnostics for message C01714.
C01710	SI motion: STOP E activated
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The drive is stopped using STOP E (retraction motion). "Safe operating stop" (SBH) is activated after the parameterized timer has expired.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> – Stop request from the higher-level control – Subsequent response of message C01714 "SI motion: Safely reduced speed exceeded". – Subsequent response of message C01715 "SI motion: Safe limit position exceeded". <p>See also: p9554 (SI motion, transition time STOP E to SBH)</p>
Remedy	<p>Remove the cause of the fault on the control and carry out a power on.</p> <ul style="list-style-type: none"> – Carry out diagnostics for message C01714.
C01711	SI motion: Defect in a monitoring channel
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>For a crosswise comparison, the drive found a difference between input data or results of the monitoring functions and initiated a STOP F. One of the monitoring functions no longer functions reliably, i.e. safe operation is no longer possible.</p>

If at least one monitoring function is active, then after the parameterized timer has expired, message C01701 "SI motion: STOP B initiated" is output.

The message value that resulted in a STOP F is displayed in r9725.

Message value: (r9749, decimal):

Value that resulted in the STOP F.

See also: p9555 (SI motion, transition time STOP F to STOP B), r9725 (SI motion diagnostics STOP F)

Remedy The message value contained in r9725 is described in message 27001 of the higher-level control.

C01714 SI motion: Safely limited speed exceeded

Response NONE

Acknowledgement IMMEDIATELY (POWER ON)

Explanation The drive has moved faster than that specified by the speed limit value (p9531). The drive is stopped by the configured stop response (p9563).
 Message value: (r9749, decimal):
 100: SLS1 exceeded
 200: SLS2 exceeded
 300: SLS3 exceeded
 400: SLS4 exceeded
 1000: Encoder limit frequency exceeded.

Remedy Check the traversing program on the control.
 – Check the limits for "Safely limited speed" (SLS) and if required adapt (p9531).

C01715 SI motion: Safe end position exceeded

Response NONE

Acknowledgement IMMEDIATELY (POWER ON)

Explanation The axis has passed a parameterized end position that is monitored by the function "safe software limit switch" (SE).
 Message value: (r9749, decimal):
 10: SE1– fallen below
 11: SE1+ exceeded
 20: SE2– fallen below
 21: SE2+ exceeded

Remedy Check the traversing program on the control.
 – Check the limits for "safe software limit switch" (SE) and if required adapt (p9534, p9535).

10.3 Safety messages for SINAMICS S120

C01745	SI motion: Check the braking torque for the brake test
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	Parameter 2003 was used to change the normalization of the braking torque for the braking test. An acceptance test must be again be carried out for the braking test in order to define whether the braking test is still carried out with the correct braking torque.
Remedy	Carry out a POWER ON/OFF. – Repeat the acceptance test for the safe brake test if the braking test is used.
A01796 (F, N)	SI motion: Wait for communication with the control
Response	NONE
Acknowledgement	NONE
Explanation	The drive waits for communications to be established with the higher-level control to execute the safety motion monitoring functions. Note: In this state, the pulses are safely cancelled.
Remedy	If the message is not automatically withdrawn after a longer period of time then the following checks should be made: – Correct assignment of the axes on the higher-level control to the drives in the drive unit. – The safety motion monitoring functions for the corresponding axis on the higher-level control are enabled.
Response for F	NONE (OFF1, OFF2, OFF3)
Acknowledgement for F	IMMEDIATELY (POWER ON)
Response for N	NONE
Acknowledgement for N	NONE
C01797	SI motion: Axis not safely referenced
Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The stop position saved before powering-down does not coincide with the actual position that is determined when powering-up. Message value: (r9749, decimal): 1: Axis not referenced 2: User agreement missing
Remedy	If the axis cannot be automatically and safely referenced, then the user must enter a user agreement for the new position using the appropriate softkey. This therefore designates this position as being a safety-related position.

C01798 SI motion: Test stop running

Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The test stop is active. Message value: (r9749, decimal):
Remedy	None necessary. The message is withdrawn when the test stop is completed.

C01799 SI motion: Acceptance test mode is active

Response	NONE
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The acceptance test mode is active. The POWER ON messages of the safe motion monitoring functions can be acknowledged during the acceptance test using the RESET key of the higher-level control.
Remedy	None necessary. The message is withdrawn when exiting the acceptance test mode.

List of faults and alarms (Motor Module)**F30600 SI MM: STOP A initiated**

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive on the Motor Module (MM) has detected a fault and initiated STOP A (pulse cancellation via the safety shutdown path of the Motor Module).</p> <ul style="list-style-type: none"> – Forced checking procedure of the safety shutdown path of the Motor Module unsuccessful. – Subsequent response to fault F30611 (defect in a monitoring channel). <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 0: Stop request from the Control Unit 1005: Pulses cancelled although SH not selected and there is not internal STOP A present. 1010: Pulses enabled although SH is selected or an internal STOP A is present. 9999: Subsequent response to fault F30611
Remedy	<p>Select safe standstill and then deselect again.</p> <ul style="list-style-type: none"> – Replace the Motor Module involved. <p>Re fault value = 9999:</p> <ul style="list-style-type: none"> – Carry out diagnostics for fault F30611.

10.3 Safety messages for SINAMICS S120

F30611	SI MM: Defect in a monitoring channel
Response	NONE (OFF1, OFF2, OFF3)
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive on the Motor Module (MM) has detected a fault in the crosswise data comparison between the Control Unit (CU) and MM and initiated a STOP F. As a result of this fault, after the parameterized transition has expired (p9858), fault F30600 (SI MM: STOP A initiated) is output.</p> <p>Fault value (r0949, decimal):</p> <p>0: Stop request from the Control Unit</p> <p>1 to 999:</p> <p>Number of the crosswise compared data that resulted in this fault.</p> <p>1: SI monitoring clock cycle (r9780, r9880)</p> <p>2: SI enable safety functions (p9601, p9801)</p> <p>3: SI SGE changeover, tolerance time (p9650, p9850)</p> <p>4: SI transition time STOP F to STOP A (p9658, p9858)</p> <p>5: SI enable safe brake control (p9602, p9802)</p> <p>6: SI motion, enable safety functions (p9501, internal value). This number is also displayed in r9895.</p> <p>7: SI delay time of the pulse cancellation for Safe Stop1 on the Control Unit and Motor Module are different.</p> <p>1000: Check (watchdog) timer has expired. Within the time of approx. 5 * p9850 too many switching operations have occurred at the safety-related inputs of the Control Unit.</p> <p>1001, Initialization error, change timer/check timer.</p> <p>1002:</p> <p>2000: Status of the SH terminals on the Control Unit and Motor Module are different.</p> <p>2001: Feedback signal for safe pulse cancellation on the Control Unit and Motor Module are different.</p> <p>2002: Status of the delay timer SS1 on the Control Unit and Motor Module are different.</p>
Remedy	<p>Re fault value = 1 to 999:</p> <ul style="list-style-type: none"> – Check the crosswise compared data that resulted in a STOP F. – Carry out a POWER ON (power off/on) for all components. – Upgrade the Motor Module software. – Upgrade the Control Unit software. <p>Re fault value = 1000:</p> <ul style="list-style-type: none"> – Check the wiring of the safety-related inputs (SGE) on the Control Unit (contact problems). <p>Re fault value = 1001, 1002:</p> <ul style="list-style-type: none"> – Carry out a POWER ON (power off/on) for all components. – Upgrade the Motor Module software. – Upgrade the Control Unit software.

Re fault value = 2000, 2001, 2002:

- Check the tolerance time SGE changeover and if required, increase the value (p9650, p9850).
- Check the wiring of the safety-related inputs (SGE) (contact problems).
- Replace the Motor Module involved.

N30620 (F, A)**SI MM: Safe torque off active**

Response NONE

Acknowledgement NONE

Explanation The "Safe torque off active" function was selected on the Motor Module (MM) and is active.

Note:

This message does not result in a safety stop response.

Remedy None necessary.

Response as for F OFF2

Acknowledgement for F IMMEDIATELY (POWER ON)

Response NONE

Acknowledgement for A NONE

N30621 (F, A)**SI MM: Safe Stop 1 active**

Response NONE

Acknowledgement NONE

Explanation The "Safe Stop 1" (SS1) function has been selected on the Motor Module (MM) and is active.

Note:

This message does not result in a safety stop response.

Remedy None necessary.

Response as for F OFF2

Acknowledgement for F IMMEDIATELY (POWER ON)

Response NONE

Acknowledgement for A NONE

10.3 Safety messages for SINAMICS S120

F30625	SI MM: Sign-of-life error in safety data
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive on the Motor Module (MM) has detected an error in the sign-of-life of the safety data between the Control Unit (CU) and MM and initiated a STOP A.</p> <ul style="list-style-type: none"> – There is either a DRIVE-CLiQ communications error or communications have failed. – A time slice overflow of the safety software has occurred. <p>Fault value (r0949, decimal): Only for internal Siemens troubleshooting.</p>
Remedy	<p>Select safe standstill and then deselect again.</p> <ul style="list-style-type: none"> – Carry out a POWER ON (power off/on) for all components. – Check whether there is a DRIVE-CLiQ communications error between the Control Unit and the Motor Module involved and if required, carry out a diagnostics routine for the faults identified. – Deselect all drive functions that are not absolutely necessary. – Reduce the number of drives. – Check the electrical cabinet design and cable routing for EMC compliance.
F30630	SI MM: Brake control defective
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive on the Motor Module ((MM) has detected a brake control fault and initiated a STOP A.</p> <ul style="list-style-type: none"> – No motor holding brake connected. – The motor holding brake control on the Motor Module or the Control Unit is faulty. – A DRIVE-CLiQ communications error has occurred between the Control Unit and the Motor Module. <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 10: No brake connected or fault in the Motor Module brake control circuit ("open brake" operation). 30: Short-circuit in the brake winding or fault in the Motor Module brake control circuit ("close brake" operation). 40: Defect in the brake control circuit of the Motor Module ("brake closed" state). 60, 70: Fault in the brake control of the Control Unit or communications fault between the Control Unit and Motor Module (brake control).

Remedy	<p>Select safe standstill and then deselect again.</p> <ul style="list-style-type: none"> – Check the motor holding brake connection. – Check the function of the motor holding brake. – Check whether there is a DRIVE–CLiQ communications error between the Control Unit and the Motor Module involved and if required, carry out a diagnostics routine for the faults identified. – Check the electrical cabinet design and cable routing for EMC compliance. – Replace the Motor Module involved.
--------	--

F30640**SI MM: Fault in the shutdown path of the control**

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The Motor Module has detected a communications error with the higher–level control to transfer information to shutdown.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <p>Only for internal Siemens troubleshooting.</p>
Remedy	<p>Check the PROFIsafe address in the higher–level control and Motor Module.</p> <ul style="list-style-type: none"> – Carry out a POWER ON for all components. – Upgrade the Motor Module software.

F30649**SI MM: Internal software error**

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>An internal error in the Safety Integrated software on the Motor Module has occurred.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, hexadecimal):</p> <p>Only for internal Siemens troubleshooting.</p>
Remedy	<p>Carry out a POWER ON (power off/on) for all components.</p> <ul style="list-style-type: none"> – Re–commission the Safety Integrated function and carry out a power on. – Upgrade the Motor Module software. – Contact the Hotline. – Replace the Motor Module.

10.3 Safety messages for SINAMICS S120

F30650	SI MM: Acceptance test required
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function on the Motor Module requires an acceptance test.</p> <p>Note:</p> <p>This fault results in a STOP A that can be acknowledged.</p> <p>Fault value (r0949, decimal)</p> <p>130: No safety parameters available for the Motor Module.</p> <p>1000: Reference and actual checksum in the Motor Module are not identical (boot).</p> <ul style="list-style-type: none"> – At least one checksum—checked piece of data is defective. <p>2000: Reference and actual checksum on the Motor Module are not identical (commissioning mode).</p> <ul style="list-style-type: none"> – Reference checksum incorrectly entered into the Motor Module (p9899 not equal to r9898). <p>2003: Acceptance test is required as a safety parameter has been changed.</p> <p>9999: Subsequent response of another safety-related fault that occurred when booting that requires an acceptance test.</p>
Remedy	<p>Re fault value = 130:</p> <ul style="list-style-type: none"> – Carry out safety commissioning routine. <p>Re fault value = 1000:</p> <ul style="list-style-type: none"> – Repeat safety commissioning. – Replace the CompactFlash Card. <p>Re fault value = 2000:</p> <ul style="list-style-type: none"> – Check the safety parameters on the Motor Module and adapt the reference checksum (p9899). <p>Re fault value = 2003:</p> <ul style="list-style-type: none"> – Carry out an acceptance test. <p>Re fault value = 9999:</p> <ul style="list-style-type: none"> – Carry out diagnostics for the other safety-related fault that is present. <p>See also: p9799 (SI reference checksum SI parameters (Control Unit)), p9899 (SI reference checksum, SI parameters (Motor Module)).</p>
F30651	SI MM: Synchronization with the Control Unit unsuccessful
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The "Safety Integrated" function integrated in the drive is requesting synchronization of the safety time slices on the Control Unit and Motor Module. This synchronization routine was not successful.</p> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p> <p>Fault value (r0949, decimal):</p> <p>Only for internal Siemens troubleshooting.</p>

Remedy	Carry out a POWER ON (power off/on) for all components <ul style="list-style-type: none"> – Upgrade the Motor Module software. – Upgrade the Control Unit software.
F30652	SSI MM: Monitoring clock cycle not permissible
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	The Safety Integrated monitoring clock cycle cannot be maintained due to the communication conditions requested in the system. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, decimal): Only for internal Siemens troubleshooting.
Remedy	Upgrade the Motor Module software.
F30655	SI MM: Align the monitoring functions
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	An error has occurred when aligning the Safety Integrated monitoring functions on the Control Unit (CU) and Motor Module (MM). Control Unit and Motor Module were not able to determine a common set of supported SI monitoring functions. <ul style="list-style-type: none"> – DRIVE–CLiQ communications has an error or failed. – Safety Integrated software releases on the Control Unit and the Motor Module are not compatible with one another. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, hexadecimal): Only for internal Siemens troubleshooting.
Remedy	Carry out a POWER ON (power off/on) for all components <ul style="list-style-type: none"> – Upgrade the Motor Module software. – Upgrade the Control Unit software. – Check the electrical cabinet design and cable routing for EMC compliance.
F30656	SI MM: Incorrect Motor Module parameter
Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	When accessing the Safety Integrated parameters for the Motor Module (MM) on the CompactFlash Card, an error has occurred. Note: This fault results in a STOP A that can be acknowledged. Fault value (r0949, decimal):

10.3 Safety messages for SINAMICS S120

- 129: Safety parameters for the Motor Module corrupted.
- 131: Internal software error on the Control Unit.
- 255: Internal Motor Module software error.

Remedy	Re-commission the safety functions. <ul style="list-style-type: none"> – Upgrade the Control Unit software. – Upgrade the Motor Module software. – Replace the CompactFlash Card.
--------	--

F30659**SI MM: Write task for parameter rejected**

Response	OFF2
Acknowledgement	IMMEDIATELY (POWER ON)
Explanation	<p>The write task for one or several Safety Integrated parameters on the Motor Module (MM) was rejected.</p> <p>Note:</p> <p>This fault does not result in a safety stop response.</p> <p>Fault value (r0949, decimal):</p> <ul style="list-style-type: none"> 10: An attempt was made to enable the SH function although this cannot be supported. 11: An attempt was made to enable the SBC function although this cannot be supported. 13: An attempt was made to enable the SS1 function although this cannot be supported. 14: An attempt was made to enable the safe motion monitoring with the higher-level control although this cannot be supported. <p>See also: r9771 (SI common functions (Control Unit)), r9871 (SI common functions (Motor Module))</p>
Remedy	<p>Re fault value = 10, 11:</p> <ul style="list-style-type: none"> – Check whether there are faults in the safety function alignment between the Control Unit and the Motor Module involved (F01655, F30655) and if required, carry out diagnostics for the faults involved. – Use a Motor Module that supports the function safe standstill or safe brake control. – Upgrade the Motor Module software. – Upgrade the Control Unit software.

10.4 Safety PLC alarms

400253	PLC–STOP due to an SPL system error
Explanation	After an interruption in the communications between NCK and PLC regarding the SPL crosswise data comparison, the PLC was switched into the STOP state with a delay of 5 s.
Response	Alarm display
Remedy	Do not start the SPL anymore. Check the system components (the PLC must have the correct version of the FB 15 and have DB18).
Program continuation	Remove the fault. Power–down the control and power–up again
411101	FB11, illegal axis number
Explanation	Parameter axis not in the permissible range
Response	Alarm display PLC STOP
Remedy	PLC general reset, use the basic program with the correct version.
Program continuation	Remove the fault. Power–down the control and power–up again

10.5 Reducing the number of alarms

In some cases, alarms having the same significance are initiated by the NCK, PLC and SINAMICS S120 monitoring channels. In order to make the alarm screen more transparent, the alarms that were initiated sometime later – but have the same significance – are suppressed or even an alarm that occurred earlier is cleared again if it apparently involves a subsequent (follow-on) fault/error.

Alarm suppression and alarm priority are not involved when it comes to initiating a stop through two channels. This functionality is implemented independently of the alarm being initiated and is still maintained.

10.5.1 Alarm suppression

When the alarm suppression function is active, the alarm of the monitoring channel is displayed that first detected the fault/error that initiated the alarm.

This only applies to some of the alarms. Alarms whose information content differs depending on the monitoring channels are still separately displayed.

All of the NCK and SINAMICS S120 safety alarms are shown in the following table, that can be suppressed with the appropriate parameterization of \$MN_SAFE_ALARM_SUPPRESS_LEVEL.

Table 10-5 Comparison of the NCK and SINAMICS S120 safety alarms

NCK alarm number	SINAMICS S120 alarm number	Alarm suppression using the following values n \$MN_SAFE_ALARM_SUPPRESS_LEVEL, several values are alternatively possible.
27000	C01797	3, 13, replaced by Alarm 27100
27010	C01707	1, 2, 3, 12, 13
27011	C01714	1, 2, 3, 12, 13
27012	C01715	1, 2, 3, 12, 13
27013	C01706	1, 2, 3, 12, 13
27020	C01710	1, 2, 3, 12, 13
27021	C01709	1, 2, 3, 12, 13
27022	C01708	1, 2, 3, 12, 13
27023	C01701	1, 2, 3, 12, 13
27024	C01700	1, 2, 3, 12, 13

All of the NCK alarms are listed in the following table which can be prevented from being initiated twice due to a PLC request.

Table 10-6 NCK alarms initiated twice

NCK alarm number	Alarm suppression using the following values n \$MN_SAFE_ALARM_SUPPRESS_LEVEL, several values are alternatively possible.
27090	2, 3, 12, 13
27091	2, 3, 12, 13
27092	2, 3, 12, 13
27095	2, 3, 12, 13
27250	2, 3, 12, 13
27251	2, 3, 12, 13
27252	2, 3, 12, 13
27253	2, 3, 12, 13
27254	2, 3, 12, 13
27255	2, 3, 12, 13
27256	2, 3, 12, 13

Activating

The alarm is suppressed using MD 10094 \$MN_SAFE_ALARM_SUPPRESS_LEVEL. When standard data is loaded, the function is already active. This means that a reduced number/scope of alarms is displayed. Alarms 27000 and C01797 can be replaced by Alarm 27100 using MD 10094.

Supplementary condition

The MD is not incorporated in the axial safety MD checksum. This means that the function can be enabled/disabled at any time by changing the MD. In the acceptance test, the alarm suppression should be internally deactivated so that the two-channel fault/error detection can be checked. It can then be subsequently activated in order to reduce the number of alarms that end users have to cope with.

10.5.2 Assigning priorities to alarms

Especially for machines with an extremely high number of axes, the previously described alarm suppression function is not adequate in order to obtain a display of the real fault/error codes.

Just one single destructured input signal can cause alarm 27001 (or 27101 to 27107) to occur for many axes if this input signal has been configured as SGE on several axes. The cause of the fault/error can be hidden as a result of the large alarm list.

10.5 Reducing the number of alarms

This is the reason that priorities are assigned to Alarms 27090, 27004, 27001 and 27101 to 27107. For these alarms

- a subsequent (follow-on) alarm that occurs afterwards is no longer displayed. This alarm is also not visible in the alarm log.
- a subsequent alarm that already occurred beforehand is cleared again. This alarm is then visible in the alarm log.

Assigning priorities to Alarm 27090 only becomes effective if it occurs due to differences in the \$A_INSE system variables. Only then will this alarm be initiated as a result of different input signals. For Alarms 27004, 27001 and 27101 to 27107, no additional condition is required, as

- Alarms 27001 and 27101 to 27107 cannot occur if a STOP B or a STOP A is already present. When the SI functionality is active, STOP B and STOP A always occur as subsequent error and do not provide the user with any additional information about the cause of the fault or error.
- Alarm 27004 only occurs if differences are determined in the input signals.

Subsequent alarm for Alarm 27090

If Alarm 27090 is output, the following alarms are no longer displayed:

- 27001 defect in a monitoring channel
- 27004 difference, safety inputs
- 27020 STOP E initiated
- 27021 STOP D initiated
- 27022 STOP C initiated
- 27023 STOP B initiated
- 27024 STOP A initiated
- 27091 error for crosswise data comparison, NCK-PLC
- 27101 difference for the function, safe operating stop
- 27102 difference for the function, safely reduced speed
- 27103 difference for the function, safe end position
- 27104 difference for the function, safe cam plus
- 27105 difference for the function, safe cam minus
- 27106 difference for the function, safely reduced speed n_x
- 27107 difference for the function, cam modulo monitoring

Subsequent alarm for Alarm 27004

- 27001 defect in a monitoring channel
- 27023 STOP B initiated
- 27024 STOP A initiated
- 27101 difference for the function, safe operating stop
- 27102 difference for the function, safely reduced speed
- 27103 difference for the function, safe end position
- 27104 difference for the function, safe cam plus
- 27105 difference for the function, safe cam minus
- 27106 difference for the function, safely reduced speed n_x
- 27107 difference for the function, cam modulo monitoring

Subsequent alarms for Alarms 27001 and 27101 to 27107

- 27023 STOP B initiated
- 27024 STOP A initiated

Activating

Priorities are assigned to alarms by appropriately parameterizing MD 10094 \$MN_SAFE_ALARM_SUPPRESS_LEVEL. When this MD is set to either 12 or 13, in addition to the alarm suppression, set with values 2 and 3, the function that assigns priorities to alarms is also activated.

Alarm 27124

By assigning priorities to alarms, alarms with the power on clear criterion are also cleared or no longer displayed. In spite of this, the system is in a state in which a power on is required. If alarm 27024 "Stop A initiated" has occurred, but is no longer displayed, then at least group alarm 27124 "Stop A for at least 1 axis" is displayed.

[illegible]

Interaction with Other Functions

11.1 Limiting the speed setpoint

The setpoint speed is parameterized as a function of the active safety monitoring in MD 36933: \$MA_SAFE_DES_VELO_LIMIT. This machine data is not included in the axial checksum MD 36998: \$MA_SAFE_ACT_CHECKSUM, so that changes can be made to the MD for the acceptance test without having to again change the checksum.

MD = 0%:

Setpoint limiting not active

MD > 0%:

Setpoint limiting = active SG limit multiplied by the MD value

For SBH, setpoint limit = 0

MD = 100%:

Setpoint limit = active SG limit

For SBH, setpoint limit = 0

- The function is effective in one channel in the NCK interpolator. The safety monitoring channel provides a limit value that corresponds to the selected safety monitoring type.
- This function influences both axes and spindles.
- The active setpoint limit can be viewed in the safety service screen:
 Display value = -1. corresponds to "setpoint limiting not active"
 Display value >= 0. corresponds to "setpoint limiting active"
- The setpoint limit is changed-over when the SGE is changed-over:

SGE	"SBH/SG deselection"
SGE	"SBH deselection"
SGEs	"Active SG stage, bit 0,1"
SGEs	"SG override, bit 0, 1, 2, 3"

 Further, internal changeover operations in SBH have an effect as a result of a stop response (STOP D, C, E).

11.1 Limiting the speed setpoint

- For the changeover via SGEs, the states from **both** monitoring channels are taken into consideration to take into account differences in the times. This results in the following rules:
 1. Changing-over from non-safe operation in SG/SBH
There is no delay (VELO_SWITCH_DELAY), so that this changeover must always be performed at zero speed or below the enabled SG limit.
 2. Changing-over from SGx to SGy
 - A) $SGx > SGy$ (braking): A lower setpoint is entered as soon as changeover is detected in one of the two channels.
 - B) $SGx < SGy$ (acceleration): A higher setpoint is only entered if both channels have changed-over.
 3. Changing-over from SG to SBH (braking)
A lower setpoint (= 0) is entered as soon as the changeover has been detected in one of the two channels.
 4. Changing-over from SBH to SG (accelerating)
A higher setpoint is only entered if both channels have changed-over.
 5. Changing-over from SBH/SG into non-safe operation (accelerating)
A higher setpoint is only entered if both channels have changed-over.
- Effect of the function in the NCK interpolator:
 - Setpoint limiting is active in both the AUTO as well as in the JOG modes.
 - When changing-over while moving to higher safely reduced speeds, the position control loop should be set so that it does not overshoot. This means that a sudden setpoint limit change does not cause the monitoring to respond on the actual value side.
 - When transformation is active, safety setpoint limits, axially effective in the interpolator are reduced by the transformation itself depending on the actual position.

Note

There are no restrictions for motion from synchronous actions.

11.2 Measuring system changeover

When measuring systems are changed-over (selected) via interface signals

"Position measuring system 1" (DB 31..., DBX1.5)

"Position measuring system 2" (DB 31..., DBX1.6) the following applies:

The encoder used by the position controller is changed-over.

Note

SI continues to work with the configured encoder.

11.3 Gantry axes

Stop responses Stop A, B, C for gantry axes are initiated as fast as possible for all of the axes in the group. However, if unacceptable offsets result because of the differing braking behavior of the axes, then stop response Stop D should be configured.

11.4 Parking axis

When the park state is activated (using the interface signal "parking"), then the system automatically cancels the pulses using an external STOP A. After the park state has been removed, the external STOP A is automatically deactivated again.



Warning

When the "parking" function is selected, actual value acquisition and the position measuring system monitoring are deactivated for an axis/spindle. The NCK actual value is frozen and mechanical actual value changes are no longer detected. This also applies to the actual value acquisition of the two safety monitoring channels NCK and SINAMICS S120. This means that all of the actual value related safety motion monitoring functions (SBH, SG, n<nx, SBR, SE, SN) are ineffective.

The user can align the actual value acquisition of the safety monitoring channels after re-selecting parking by again referencing/synchronizing to the machine position.

11.5 OEM applications**Parking an axis with absolute reference (SE/SN)**

As a result of the fact that the actual value sensing of the two safety monitoring channels NCK and SINAMICS S120 has been disabled, then the absolute reference of the axis is no longer detected in a safety-related fashion. The safety monitoring channels then respond as follows:

- Alarms 27000/C01797 are displayed "Axis no longer safely referenced"
- SGA "Axis safely referenced" cancelled on NCK and drive side

These alarms are only displayed for axes for which safety monitoring functions with absolute reference are activated, i.e. for SE and SN. Alarms are not displayed for axes that do not have these monitoring functions.

Machine data SAFE_PARK_ALARM_SUPPRESS can be used to suppress Alarms 27000/C01797 until parking has been withdrawn.

Note

If "parking axis" was not requested, however "parking active" is signaled from the drive or encoder, then Alarm 27001 is output with fine code 1025.

11.5 OEM applications

Information for HMI–OEM users

If SINUMERIK Safety Integrated) (SI) and OEM applications (for HMI) are used at the same time, the following points must be observed.



Warning

1. The PLC interface signals (DB31, ...) with safety-related drive inputs and outputs may not be written into using the variable service (utility) of the NCDDE/CAP server.
 2. Write machine data using variable service
An acceptance test must be carried if the SI machine data were changed using the variable service of the NCDDE/CAP server.
 3. Changing alarm priorities
The alarm priorities selected for SI must be retained.
 4. Changing alarm tests
The alarm texts of the SI alarms can be modified: This must be clearly documented for the user.
 5. Carry out "acceptance test" message box
The "carry out acceptance test" may not be modified!
 6. User acknowledgement
Functions relating to the user agreement (e.g. call, protective mechanism) may not be altered.
-

Information for NCK–OEM users

SINUMERIK Safety Integrated can also be used for NCK–OEM applications.

Note

System memory change
System memory changes caused by the OEM application result in Alarm 27003 "Checksum error occurred".

11.6 Behavior of Safety Integrated when Profibus fails

When the drive bus fails, then communications between the drive and NCK required for SI also fail. The pulses are immediately cancelled from both channels.

[illegible]

Appendix

A

A.1 Customer Support

The Centre of Competence Service (CoCS) – SINUMERIK Safety Integrated® offers users a wide range of services.

Contact addresses

Hotline: Tel.: +49 (0)180–5050–222
 Fax: +49 (0)180–5050–223
 E-mail: <mailto:ad.support@siemens.com>
 Enquiry with subject 840D Safety Integrated

Contact: Tel.: +49 (0)9131 98 4386
 Fax: +49 (0) 9131 98 1359

Table A-1 Range of services for machine manufacturers and end customers

Portfolio	Description of services
Concept development	<p>The safety functions are adapted to the machine based on the hazard analysis and the customer's operating philosophy. This includes e.g.:</p> <ul style="list-style-type: none"> • Planned operating modes • Safety functions when the protective doors are closed • Safety functions when the protective doors are open • Emergency stop concept • A study of the safety-related external signals and elements
Standard engineering	<p>Based on the concept developed, the standard functions</p> <ul style="list-style-type: none"> • Safe standstill (SH), safe operating stop (SBH) • Safely reduced speed (SG) <p>are integrated into the circuit diagram of the machine. External safety elements (e.g. door interlocking, Emergency Stop button, ...) are either configured conventionally or logically combined using the "safe programmable logic" (SPL) function.</p>
SPL configuration	<p>Based on the standard configuration, the following SPL objects are created:</p> <ul style="list-style-type: none"> • Function Block Diagram • Logic program for the PLC area • Logic program for the NC area • Data blocks required (e.g. DB 18) <p>These objects are incorporated/linked into the complete system.</p>

A.2 References

Table A-1 Range of services for machine manufacturers and end customers

Portfolio	Description of services
Commissioning	The safety functions are commissioned based on the configuration that has been created. The customer provides the machine so that the drives can be traversed and the control cabinet is wired according to the configuration.
Acceptance report	Based on the submitted configuration documentation and commissioning, an acceptance report for the safety functions is drawn-up. This includes: <ul style="list-style-type: none"> • Description of the machine (name, type, ...) • Description of the safety and operator concept • Description of the axis-specific safety functions • All of the safety functions are tested including the SPL logic • The test results are recorded The customer receives the acceptance report as hard copy and on an electronic data medium.
Approval procedure	Support with processing and line of argument for the approval procedure by certified bodies (e.g. regulatory bodies) or large end customers.
Workshop	Workshops are held on the subject of machine safety adapted to customer-specific requirements; if required, these workshops can be held at the customer's site. Possible contents: <ul style="list-style-type: none"> • Machinery Directive, Standards in general • C Standards (machine-specific) • Hazard analysis, risk analysis • Control categories (acc. to EN 954-1) • SINUMERIK Safety Integrated[®] – function and system description • Configuration, machine data • Commissioning • Acceptance report
Hotline	An expert for "SINUMERIK Safety Integrated [®] " can be reached at the Hotline number should errors or problems occur during installation and commissioning (start-up).
On-site service (local)	Experts analyze problems that are encountered on-site. The causes are eliminated or counter-measures are drawn-up and implemented where necessary.

A.2 References

/ASI/

Low-Voltage Switchgear and Systems
Catalog
Siemens Drives and Standard Products
Order No.: E20002-K1002-A101-A6

/1/

Directive 89/392/EEC (Machinery Directive) Bundesanzeiger Verlag.

/2/

Positionspapier des AK 226.03 im DKE: Sicherheitsgerichtete Funktionen elektrischer Antriebssysteme in Maschinen.

/3/

Schäfer, M./Umbreit, M.: Antriebssysteme und CNC-Steuerungen mit integrierter Sicherheit, BIA-Report Nr. 4/97.

/4/

Kategorien für sicherheitsbezogene Steuerungen nach EN 954-1, BIA-Report 6/97.

/5/

ZH1/419. Prüf- und Zertifizierungsordnung der Prüf- und Zertifizierungsstellen im BG-Prüfzert. (Prüf- und Zertifizierungsordnung), Ausgabe 10/97.

/6/

Reinert, D./Schäfer, M./Umbreit, M.: Antriebe und CNC-Steuerungen mit integrierter Sicherheit (Antriebe und CNC-Steuerungen), in: ETZ-Heft 11/98.

/7/

Johannknecht, A./Warlich, H.-J.: Maschinenschutz in Europa – BG (Maschinenschutz).

/SHB/

Safety Integrated: The Safety System for Industry,
Application Manual, 5th Edition
Order No.: 6ZB5 000-0AA01-0BA1

Documentation

An overview of publications that is updated monthly is provided in a number of languages in the Internet at:

<http://www.siemens.com/motioncontrol>

Follow menu items —> "Support" —> "Technical Documentation" —> "Overview of Documents" or "DOConWEB".

A.3 Abbreviations

1v1	1 from 1 evaluation: Encoder signal is available through one channel, is read once
2v2	2 from 2 evaluation: Encoder signal is available through one channel, is read twice and compared
A...	Alarm
ACX	A ccess description C ompressed and eX tensible, binary format to describe data
ASIC	Application Specific Integrated Circuit (semiconductor module developed for special applications)
ASUB	Asynchronous subroutine
β	Susceptibility to common cause failure
BAG	Mode group
BAG–STOP	Stop in corresponding mode group
BG	Professional association (in Germany)
BGIA	German statutory industrial accident insurance institution
BiCo	Binector–Connector (technology)
BO	Binector Output
CCF	Common Cause Failure
CDC	Crosswise Data Comparison
CFG	Configuration telegram
Channel_1 reset	Channel reset in the 1st channel of the NCU
CO	Connector Output
CPU	Central Processing Unit
CRC	Cyclic Redundancy Check
CU	Control Unit
DAC	Digital–to–Analog Converter
DB	Data Block
DC	Diagnostic Coverage
DDS	DRIVE DATA SET (drive parameters that can be changed over together as a set)
DI	Digital Input
DKE–AK	German Electrotechnical Working Committee
DL	Data Left
DMS	Direct Measuring System
DP	Distributed Peripherals (I/O)

A.3 Abbreviations

DPM	DP master
DPR	Dual Port RAM
DO	Digital Output
DR	Data Right
DRIVE–CLiQ	”DRIVE Component Link with IQ” (official name for DSA–Link or SA–Link: Serial bus to connect A&D drive components)
DW	Data Word
EMF	Electromagnetic force
EN	European Standard
ENDAT	Encoder Data (interface for absolute encoder)
EP	Pulse enable
EQN/ERN	Part of an order code for absolute/incremental encoders made by Heidenhain
ESD	ElectroStatic Discharge
ESR	Extended Stop and Retract
F...	Fault (F)
F–...	Failsafe...
FDD	Feed Drive
F–DI	Failsafe input module
F–DO	Failsafe output module
FOC	Travel with limited torque/force (force control)
FV	Failsafe Values
FXS	Travel to fixed stop
GSTR	Number of encoder pulses
HHU	Handheld Unit
HMS	High–resolution Measuring System
HW	Hardware
IB	Input Byte
IBN	Commissioning
IEC	International Electrotechnical Commission
IMP	Pulse inhibit
IMS	Indirect Measuring System
INSE	Input data of the safe programmable logic (SPL) from the I/O
INSI	Input data of the safe programmable logic (SPL) from the output data of the axial monitoring functions
I/O	Input/Output
IPO	Interpolator

I/RF	Infeed/Regenerative Feedback unit
IS	Interface Signal
λ	Failure rate
LIFTFAST	Fast retraction from contour
LL	Lower Limit
LSB	Least Significant Bit
MAKSIP	Machine Coordinate System Actual Position
MCP	Machine Control Panel
MD	Machine Data or Marker Doubleword
MDD	Machine Data Dialog
MDIR	Machinery directive
Mixed-IO	I/O module with analog and digital signals
MLFB	Machine-readable product designation
MM	Motor Module (power unit/power module)
MMC	Man Machine Communication (operator interface for man-machine communication)
Mod.	Module
MSB	Most Significant Bit
MSD	Main Spindle Drive
MT	Machine Tool
MTTFd	Mean time to dangerous failure
N...	No message or internal message
NC	Normally closed contact
NC	Numerical Control
NCK	NC Kernel
NE	Line infeed
Node Id	Node-Identification Code (unique ID of each DRIVE-CLiQ node)
OA	Operator Acknowledge
OB	Organization Block
OB	Output Byte
OP	Operator Panel
p...	Adjustable parameters
PFH _D	Probability of dangerous failure per hour
PL	Performance Level
PLC	Programmable Logic Controller
PM-E F	Power Module Electronic Failsafe

A.3 Abbreviations

PNO	PROFIBUS User Organization
PROFIBUS	Bus system for communications between automation components
PROFIsafe	Communications profile based on PROFIBUS for safety-related communications
PS	Power supply
PSC	PROFIsafe clock cycle
QVK	Peer-to-peer data transfer
RPM	Revolutions Per Minute
SA link	Sensor-Actuator link
SBC	Safe Brake Control
SBH	Safe operating stop
SBM	Safe Brake Management
SBR	Safe acceleration monitoring
SBT	Safe Brake Test
SCA	Safe cams
SG	Safely reduced speed
SGA	Safety-related output
SGE	Safety-related input
SH	Safe standstill
SI	SINUMERIK Safety Integrated® (integrated safety technology)
SIL	Safety Integrity Level
SILCL	SIL claim limit
SK	Softkey
SLP	Safely Limited Position
SLS	Safely Limited Speed
SMC	Sensor Module Cabinet Mounted: External adapter box to connect an encoder to DRIVE-CLiQ
SME	Sensor Module Externally Mounted: Sensor Module with a high degree of protection for mounting outside the electrical/control cabinet
SMI	Sensor Module Integrated: External adapter box to connect an encoder to DRIVE-CLiQ, integrated in the motor
SMM	Safe Motion Monitoring
SN	Safe cam, safe cam track
SOS	Safe Operating Stop
SPL	Safe Programmable Logic
SS1	Safe Stop 1 (corresponds to Stop Category 1 acc. to EN 60204)

SS1	Safe Stop 1
SS2	Safe Stop 2
SSFK	Leadscrew Error Compensation
SSM	Safe Speed Monitor
STO	Safe Torque Off
STOP A, B, C, D, E, F	Stop response: In the event of a fault, the system responds corresponding to the configured stop response
SW	Software
T1	Lifetime
T2	Diagnostic test interval
TCP	Tool Center Point
TEA	Testing Data Active
\ddot{U}	Gear Ratio
UI	User Interface
UL	Upper Limit

A.4 Terms

Category

Used in EN 954–1 to "Classify safety–related parts of control with reference to their immunity to faults and their behavior when a fault condition exists as a result of the structural arrangement of the parts/components and/or their reliability".

Channel

Element or group of elements that execute function(s) independently of one another.

2–channel structure

This is a structure that is used to achieve fault tolerance.

For instance, a 2–channel protective door control can only be implemented if at least two enable circuits are available and the main circuit is redundantly shut down or a sensor (e.g. Emergency Stop switch) with two contacts is interrogated and these are separately routed to the evaluation unit.

Fail–safe

The ability of a control system, also when faults occur (failure), to maintain a safe condition of the controlled equipment (e.g. machine, process), or to bring the equipment into a safe condition.

Failure/Fault

Failure

A piece of equipment or device can no longer execute the demanded function.

Fault

Undesirable condition of a piece of equipment or a device, characterized by the fact that it is unable to execute the demanded function.

Note: "Failure" is an event and "fault" is a condition.

Fault tolerance

Fault tolerance N means that a piece of equipment can still execute the required task even if N faults are present. For N+1 faults, the equipment can no longer execute the required function.

Final controlling element

Converter that converts electrical signals into mechanical or other non–electrical quantities.

Performance Level (PL)

The revision of ISO 13849–1 (with EN designation EN 954–1) includes guidelines to simply develop, test and certify safety–related machine controls. Deterministic and probability requirements are combined with one another in a practical fashion. The control category (defined e.g. using redundancy and testing) and probability aspects (failure rate of the components and quality of the tests, expressed in the form of MTTFd and DC, as well as common cause faults) are used as basis to define the so–called "Performance Levels" (PL). Markov models, based on typical

control architectures, were used to derive the average, hazardous probability of failure per hour.

Redundancy

Availability of more than the necessary equipment to execute the required tasks.

Risk

Combination of the probability of damage occurring and the extent of the damage.

Safety

Free from any unacceptable risk.

Functional safety

The part of the safety of a piece of equipment (e.g. machine, plant) that depends on the correct function.

Safety function

Function, (e.g. of a machine or a control) whose failure can increase the risk/risks.

Safety functions of controls (EN 954)

A function "initiated by an input signal and processed by the safety-related parts of controls, that allows the machine (as system) to reach a safe condition".

Safety goal

To keep the potential hazards for personnel and the environment as low as possible without restricting more than absolutely necessary, industrial production, the use of machines or the manufacture of chemical products.

Safety Integrity Level (SIL)

Measure, defined in IEC 61508, for the safety-related performance of an electrical or electronic control device.

Stop Category

Term used in EN 60204–1 to designate three different stopping functions.

Stopping

Function that is intended to avoid or reduce impending or existing hazards for personnel, damage to the machine or the execution of work. This has priority over all operating modes.

Space for your notes

[illegible]

Index

Symbols

\$A_STOPESI, 6-138
\$MN_INFO_PROFISAFE_CYCLE_TIME,
7-210
\$VA_STOPSI, 6-138

Numbers

3–terminal concept, 7-190

A

Absolute encoders, 5-96
Acceptance report, 4-80
Acceptance test, 4-79, 9-408
Actual value synchronization, 5-107
Adjusting the motor encoder, 5-99
Alarms, for 840D, 10-457
Assigning priorities to alarms, 10-573
Axis not referenced, 5-100
Axis referenced (homed), 5-101
Axis safely referenced, 5-101

B

Basic Standards, 1-20
Brake test, 7-250

C

Calibrating the machine, 5-100
Cam range bit, 8-367
Cam signals, 6-167
Cam track, 6-172
Category, A-592
Changing SI data, 9-410
Changing–over the speed limit values, 6-151
Channel, A-592
Clock cycle overruns, 7-210
CNC controls, 2-35
Commissioning 840D sl
 First commissioning, 9-403
 Series commissioning, 9-409
Communication, NCK and PLC–SPL, 7-249
Comparison clock cycle, for 840D, 8-267
Control gears, 5-105
Correction factor, safely reduced speed, 8-362
Crosswise data comparison, 4-54, 5-93, 7-224

D

D/A converter output, 9-413
Dark period, 4-65
Data, changing, 9-410
Defining the cam positions, 6-169
Delete password, 9-408
Different channel run times, 7-187
Diverse structure, 2-38, 2-40
Downloading standard motor data, 8-317

E

Electrical safety, 1-27
EMC Directive, 1-18
EN 61508, 1-25
Enable, functions, 8-276
Enable option, for 840D, 9-403
Enabling functions, 5-109
Encoder limit frequency, 6-149
Encoder limit frequency, parameterizable,
6-149
Encoder type combinations, 5-96
Encoder types, 5-96
 2–encoder system, 5-98
ESR, 6-137

F

F master, 7-211
F net data filter, 7-212, 7-215
Fail–safe, A-592
Failure/Fault, A-592
Fault tolerance, A-592
Final controlling element, A-592
Forced checking procedure, 4-58, 7-188
 Safety relay, 7-241

G

Gantry axis, 11-579
Group Standards, 1-20

I

Incremental encoder, 5-96
Initialization, Safety relay, 7-238

Interface signals
from the drive, 8-366
to the drive, 8-361

L

Limiting frequency, 6-149
Limiting the speed setpoint, 11-577
Logbook, 9-408

M

Machine data for 840D
Description, 8-266
Overview, 8-261
Measuring system changeover, 11-579
Modulo display, 6-171
Modulo value, safe cams, 8-278
Monitoring channel, 7-181
Monitoring cycle, 5-91
for 840D, 8-266
Motor encoder, 5-96
Multiple assignment, 7-196
Multiple distribution, 7-195

N

NCK–SPL programming, 7-228
NCK–SPL SGEs/SGAs, 7-185

O

OEM applications, 11-580

P

Parking an axis, 11-579
Parking an axis with absolute reference,
11-579
Password for Safety Integrated, 4-57
Password Set, 9-403
PDS, 3-47
Power Drive Systems, 3-47
Powering-up, 5-112
Probability of failure, 3-46
Product Standards, 1-20
PROFIBUS–DP, 7-198
PROFIsafe clock cycle overruns, 7-210
PROG_EVENT mechanism, 7-231
PROG_EVENT.SPF, 7-231

Protective mechanisms, 7-228

R

Redundancy, A-593
Reference point reached, 5-100, 5-101
Replacing a motor, 9-427
Replacing an encoder, 9-427
Risk, A-593
Risk analysis, 1-26
Risk assessment, 1-27
Rotary axis, 8-276
Cam actual value range, 6-171
Endlessly turning, 6-171
Modulo display, 6-171
Safe software cams, 6-171

S

Safe Brake Management, 7-250
Safe acceleration monitoring, 6-144
Safe cam track, 6-168, 6-172
Safe cams, 6-167
Safe limit switches, 6-163
Safe operating stop, 6-118
Deselection, 6-121
Features, 6-118
Prerequisites, 6-119
Selection, 6-119
Safe software cams
Features, 6-167
Prerequisites, 6-169
Special case, 6-169
Tolerance, 6-167
Hysteresis, 6-170
Safe software limit switches
Configurable stop responses, 6-164
Features, 6-163
Limit values, 6-163
Prerequisites, 6-164
Safe standstill
Features, 6-114
Selecting/deselecting, 6-114
Safe Stop 1, 4-61
Safely reduced speed, 6-148
Changing-over the limit values, 6-151
Override for, 6-156, 8-362

- Safely reduced speed (safely limited speed)
 - Configured stop responses, 6-153
 - Features, 6-148
 - Prerequisites, 6-148
 - Selection, 6-150
 - Safety, A-593
 - Safety function, A-593
 - Safety goal, A-593
 - Safety Integrated
 - Acknowledging faults, 4-76
 - Function diagram overview, 4-78
 - Parameter overview, 4-77
 - Password, 4-57
 - Stop responses, 4-74
 - Safety Integrity Level (SIL), A-593
 - Safety relay, 7-236
 - Safety relay, test, 7-241
 - Save machine data, with 840D sl, 9-392
 - Save stop position, 5-102
 - Saved stop position, 5-102
 - SBH, 6-118
 - SBR, 6-144
 - SBT, 7-250
 - SE, 6-163
 - Selecting speed limit values, 6-150
 - Series startup, 9-409
 - Service display, 7-183
 - Service displays for 840D sl, 10-436
 - Servo trace, 9-413, 10-446
 - Servo trace signals, 10-454
 - Set axis monitor, 9-407
 - Setpoint speed, 11-577
 - SG, 6-148
 - SG override, 6-156, 8-362
 - SG specific STOPs, 6-155
 - SGA, SBH active, 6-122
 - SGE/SGA
 - Signal propagation delays, 7-187
 - How many are required as a minimum?, 7-186
 - SGEs, Standstill via STOP, 6-129
 - Shutdown paths
 - Stop responses, 6-125
 - Test, 6-117
 - SI relay, 7-236
 - SIRELAY, 7-240
 - Slip for 2–encoder system, 5-107
 - SN, 6-168
 - Softkey
 - Acknowledge SI data, 9-392
 - Copy SI data, 9-391
 - Speed/standstill monitoring, 2-35
 - SPL data on the PLC side, 7-247
 - SPL start without axial safety enable, 7-231
 - SPL system errors, 7-225
 - SPL–SGA, PROFIsafe, 7-216
 - SPL–SGE, PROFIsafe, 7-213
 - SS1, 4-61
 - Standstill via SGEs, 6-129
 - Start SPL, 7-234
 - STO, 4-59
 - STOP A, Description, 6-132
 - STOP C, Description, 6-135
 - Stop Category, A-593
 - STOP D, Description, 6-136
 - STOP E, Description, 6-137
 - STOP F, Description, 6-139
 - Stop response
 - SG specific, 6-155
 - STOP A, 4-75
 - STOP F, 4-75
 - Stop responses
 - Assignment table, 6-128
 - Priority, 6-128
 - Procedure, 6-129
 - Stop responses, configurable, 6-127
 - Stopping, A-593
 - Sub–slot, 7-211, 7-214
 - Synchronized action, 7-227
 - Synchronizing cam signals, Enable, 6-169
 - System variable, 7-244
 - System variable \$VA_IS, 8-381
 - System variables \$A_XFAULTSI, \$VA_XFAULTSI, 8-382
- T**
- Test stop
 - Time, 6-117
 - for external STOPs, 6-142
 - Testing the shutdown paths, 4-58
 - Tolerance for SN, 6-167
 - Troubleshooting, with 840D sl, 10-435
 - Two–channel structure, 2-38, 2-40
 - Two–encoder system, 5-98
- U**
- User acknowledgement, 5-103, 9-408
 - User agreement: Interlock, 5-105
- V**
- Velocities and speeds, 6-149

Z

Zero speed tolerance, 6-118

To
SIEMENS AG
I DT MC MS1
Postfach 3180
D–91050 Erlangen

Fax: +49 (0) 9131 / 98 – 63315 [Documentation]
mailto:docu.motioncontrol@siemens.com
<http://www.siemens.com/automation/service&support>

From	Suggestions
Name	Corrections
Address of your Company/Dept.	For Publication/Manual:
Address	SINUMERIK 840D sl/ SINAMICS S120 SINUMERIK Safety Integrated (FBSI sl)
Postal code City:	Order No. 6FC5397–4BP10–2BA0
Phone: /	Edition: 05/2008
Fax: /	Should you come across any printing errors when reading this publication, please notify us on this sheet. Suggestions for improvement are also welcome.

Suggestions and/or corrections

