

CAVI COLLEGAMENTO "QE" → "PU"


M 1) 20001

B 2) 20002

Q 3) 20003

N 4) 20004

5x1

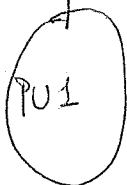

M 1) 20303

B 2) 20304

Q 3) 20305

N 4) 20306

5x1



M) 20301

B) 20302

3x2,5



SCHEMA PULPITO

"PU"